



M2800

USB Bar Code and Magnetic Card Reader



User's Manual

© 2005 American Microsystems LTD.

Last Revision: May 10, 2005

Website: www.amltd.com

Regulatory Information

All American Microsystems, Ltd. devices are designed to be compliant with rules and regulations in locations they are sold and will be labeled as required. Any changes or modifications to American Microsystems, Ltd. equipment, not expressly approved by American Microsystems, Ltd., could void the user's authority to operate the equipment.

Disclaimer

American Microsystems, Ltd. reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult American Microsystems, Ltd. to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of American Microsystems, Ltd.

American Microsystems, Ltd. shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All trademarks or registered trademarks of other companies are used only for explanation without intent to infringe. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of American Microsystems, Ltd.



FCC Declaration of Conformity
Product Name: M2800 USB Bar Code and Magnetic Card Reader
Model Number: M2800

Radio Frequency Interference Requirements

This equipment complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This equipment may not cause harmful interference, and (2) this equipment must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you determine the equipment does cause harmful interference to radio or television reception (this may be determined by monitoring the interference while turning the equipment off and on), you are encouraged to try to correct the interference by one of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio or TV technician for help.**

Radio Frequency Interference Requirements - Canada

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Marking and European Economic Area (EEA)



Products intended for sale within the European Union are marked with the CE mark that indicates compliance to applicable Directives and European Normes (EN), as follows. Amendments to these Directives or EN's are included.

- Electromagnetic Compatibility Directive 89/336/EEC
- Low Voltage Directive 73/23/EEC

TABLE OF CONTENTS

Introduction	4
Features	4
Installation Instructions.....	5
Default Settings.....	6
Changing the Default Settings.....	8
Programming Guide	9
Code 39.....	10
UPC.....	10
EAN.....	11
UPC/EAN Supplements.....	11
Interleaved 2 of 5.....	11
Codabar.....	12
Code 128/EAN-128	12
Code 93.....	12
Code 11.....	13
MSI/Plessey.....	13
RSS Symbolologies	13
Serial Port Menu #1	14
Serial Port Menu #2	15
Mag. Stripe Menu #1	15
Mag. Stripe Menu #2	16
Preamble	17
Postamble.....	18
Termination Character.....	19
Scan Beep Tone	19
Bar Code Edit.....	19
Bar Code Options.....	20
Laser / CCD Options.....	20
Transmit Speed.....	21
Diagnostics.....	21
RS-232C Serial Port	21
Connecting an Electronic Scale to the M2800.....	22
Specifications.....	23
Signal Definition.....	24
Function/Special Keys.....	25
Transaction Card Data Format.....	26

INTRODUCTION

The Model 2800 USB bar code and magnetic stripe reader combines features found in a variety of readers into one compact, easy to use system. The M2800's USB interface functions as a USB HID keyboard emulator, and will appear on the connected PC as an HID keyboard device. No custom USB drivers are required, as all USB HID drivers are included with Microsoft Windows®. Input data is sent to the PC as though it was typed in directly from the keyboard.

The M2800 accepts a wide variety of input devices such as laser, CCD, wand, magnetic stripe reader, slot reader, and RS-232 serial input. The RS232 interface is mainly used as an input, but resembles a serial port found on a standard PC. The RS232 port is meant to connect serial input devices using a null-modem cable. The M2800 functions well as an RS232 serial to keyboard converter.

Custom bar code decoding algorithms are used, imbuing the M2800 with the ability to read the most poorly printed barcodes, even ones not typically readable by other systems. The M2800 is capable of reading EAN, UPC, and all RSS symbologies and so is compliant with Global Tracking Identification Number (GTIN) requirements. The magnetic card reader performance exceeds that of the typical reader, supporting bi-directional swipes, and is tolerant of either very rapid or extremely slow swipes.

The M2800 system is pre-configured to meet the needs of most users, but you may customize the M2800 to your individual application by changing the default settings using the M2800 setup menu barcode sheet. Robust construction, ease of use, and the quality of features make the Model 2800 an ideal data collection device for retail, industrial, or any data tracking application.

FEATURES

- Bar Code, Magnetic Card, and Serial Data appear as Keyboard Input to the PC.
- Decoder automatically recognizes and reads the following bar code types:
 - Code 39
 - Extended Code 39 (Full ASCII)
 - UPC-A, UPC-E(0), UPC-E(1)
 - EAN-8, EAN-13
 - UPC & EAN Supplements (2 and 5 character)
 - Interleaved 2 of 5
 - Codabar
 - Code 128 / EAN-128
 - Code 93
 - Code 11
 - MSI/Plessey
 - RSS14 (Both Linear and Stackable Types)
 - RSS Limited
 - RSS Expanded (Both Linear and Stackable Types)
- Power/Ready Light Indicates Scanner Status
- Reads Single/Dual Track Magnetic Cards of all Standard Track Formats (Credit Cards, ID Cards, etc.)
- Supports Practically Any 5 Volt Undecoded Bar Code Input Device (Laser, CCD, Wand, Slot Reader)
- Accepts Data from the RS-232 Input Port (Electronic Scales, Portable Terminals, etc.)


INSTALLATION INSTRUCTIONS

M2800 installation requires connecting the USB cable to your computer and connecting the necessary input devices.

Step 1: Before plugging the M2800 into your PC's USB port, if using Windows 98/98SE®, make sure you have your Microsoft Windows® installation CD available (needed for the first time only). For Windows 2000/ME/XP®, the system already has all needed USB HID drivers pre-installed.

Step 2: With Windows® running, connect the USB cable to the PC and to the M2800 USB interface. Follow any instructions Windows® asks you to, if needed.

Step 3: If the M2800 has been “enumerated” you will hear a series of beeps and the LED will be GREEN. Repeat Step 2 for every USB port on your computer, as Windows® treats every USB port in the system individually. This also applies if using a USB hub device. The use of a self-powered USB hub is also recommended, but not required.

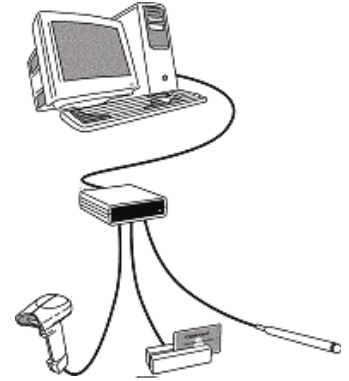

NOTE: DO NOT USE USB EXTENSION CABLES with the M2800. The USB standard was designed for keyboard cables with a length of 3 meters maximum. Use of a long USB extension cable may cause improper operation. If extra cable length is needed, the use of a USB hub device is required.

Step 4: **Connecting Input Devices:**

Installing a wand:

Plug the end of the 5-pin wand cable into the circular connector labeled WAND on the front panel of the reader. If using a 9-pin wand, connect it to the 9-pin laser input on the front panel.

Installing a laser scanner:

Plug the end of the laser cable into the 9-pin connector labeled LASER located on the front panel of the reader.

Installing a CCD scanner:

Plug the end of the CCD cable into the connector labeled LASER located on the front panel of the reader.



Installing a Magnetic Card/Stripe Reader:

For a magnetic stripe reader with an 8-pin DIN connector, plug the connector into the circular connector labeled MSR on the front panel of the M2800. Single or dual-track magnetic readers can be used.

Installing a Slot Reader (Badge Reader):

Plug the end of the slot reader cable into the circular connector labeled WAND on the front panel of the M2800.

Installing an RS232 serial device:

Connect the RS232 plug into the M2800 RS232 port located on the rear panel. The connector is a standard RS232 9-pin. The RS232 cable of the connected device should implement null-modem, and should not be a straight pass-through cable.

DEFAULT SETTINGS

The M2800 is shipped from the factory with the following default settings:

Code 39

Code 39 Decoder	ON
Full ASCII	OFF
Mod 43 Check Digit	OFF
Send Check Digit	OFF
Concatenate Mode	OFF

UPC

UPC Decoder	ON
Convert UPC-E to UPC-A	OFF
Convert UPC-A to EAN-13	OFF
Send UPC-A Number System	ON
Send UPC-E Number System	ON
Send UPC-A Check Digit	ON
Send UPC-E Check Digit	ON

EAN

EAN Decoder	ON
Zero Fill EAN-8 to EAN-13	OFF
Send EAN-13 Country Code	ON
Send EAN-8 Country Code	ON
Send EAN-13 Check Digit	ON
Send EAN-8 Check Digit	ON
ISBN Conversion	OFF

UPC/EAN SUPPLEMENTS

Supplements Decoder	OFF
Allow 2 Digit Supplements	ON
Allow 5 Digit Supplements	ON
Require Supplements	None
Send Separator Space	OFF

INTERLEAVED 2 of 5

I 2 of 5 Decoder	ON
Check Digit	None
Send Check Digit	OFF
Fixed Length	OFF
Set Fixed Length #1	06
Set Fixed Length #2	00

CODABAR

Codabar Decoder	ON
Send Start/Stop	OFF
CLSI Formatting	OFF
CLSI Check Digit	OFF

CODE 93

Code 93 Decoder	ON
Concatenate Mode	OFF

RSS SYMBOLOGIES

RSS14 Decoder	ON
RSS Limited Decoder	OFF
RSS Expanded	OFF
Send EAN Type Identifier	OFF
Send Application ID (AI)	ON
Send Linkage ID	OFF
Send Check Digit	ON

CODE 128 / EAN-128

Code 128 Decoder	ON
UCC-128 Verification	OFF
Send Mod 10 Check Digit	ON
Send EAN-128 ID	OFF
EAN-128 GS Character	GS

MSI/PLESSEY

MSI/Plessey Decoder	OFF
Two Check Digits Required	OFF
First Check Digit Mod 11	OFF
Send 1 st Check Digit	OFF
Send 2 nd Check Digit	OFF
ISBN Plessey	OFF

CODE 11

Code 11 Decoder	OFF
Two Check Digits Required	OFF
Send 1 st Check Digit	OFF
Send 2 nd Check Digit	OFF

PREAMBLE

Enter Preamble	OFF
Preamble Send Delay	0.0 sec
Active Types	ALL

POSTAMBLE

Enter Preamble	OFF
Postamble Send Delay	0.0 sec
Active Types	ALL

BAR CODE OPTIONS

Send Bar Code Type ID OFF
 Duplicate Reads Allowed ON
 Bar Code Function Keys OFF
 Bar Code Special Keys ON
 Term Char Override OFF

SERIAL PORT #1

Mode 0=Batch
 Protocol (Flow Control) 0=None
 Use Record Term. Char. OFF
 Send Record Term Char. OFF
 Enter Record Term Char. CR (ASCII 13)
 Timeout Delay 0.0
 Serial Command String OFF
 Serial Special/Function Keys ON

MAG STRIPE #1

Send Account Number ON
 Send Name (Track 1 only) ON
 Send Expiration Date ON
 Send All Track Data ON
 Enter Track 1 Sep. Char. “^”
 Format Exp. Date MMY Y OFF
 Enter Track 2&3 Sep. Char. “=”

SCAN BEEP

Length: 1) Medium Short
 Tone: 6) Medium High

TRANSMIT SPEED

3) Fast

BAR CODE EDIT

Bar Code Editing OFF
 Enter # of Leading Chars to Strip 0
 Enter # of Trailing Chars to Strip 0
 Enter Bar Code Type to Edit ALL
 Strip Leading and Trailing Spaces OFF

LASER/CCD OPTIONS

Laser Trigger Mode 0
 Laser/CCD Timeout 3 sec
 Read Delay 0.0 sec
 Read Verification 0

SERIAL PORT #2

Baud Rate (9600 baud) 3
 Parity/Data Size (None, 8, 1) 5

MAG STRIPE #2

Output 2=Both
 Require Two Tracks OFF
 Send Start & End Sentinels OFF
 Between Track/Field Term. Char OFF
 Send Ending Term. Char. ON
 Strip Spaces ON
 Mag Stripe Code Special Keys OFF

TERMINATION CHARACTER

2) Carriage Return CR (ASCII 13)

CHANGING THE DEFAULT SETTINGS

You can easily change the default settings by simply scanning the bar code options located on the *M2800 Setup Menu*. The *M2800 Setup Menu* is a sheet of bar codes supplied for use with the M2800. If a replacement is needed, both the M2800 User's Manual and M2800 Setup Menu are available at www.amltd.com in Adobe Acrobat® PDF format. A full description of each customizable option can be found in the Programming Guide, under its respective menu heading.

The basic programming sequence is:

START / CATEGORY / OPTION (0-9) / ON/OFF (or) NUMBER(s) ONLY / EXIT

Follow the instructions below to change the settings.

- Step 1: Scan the START label at the top left corner of the M2800 Setup Menu. This puts the M2800 into the program mode.
- Step 2: Scan one of the Category labels (i.e. Code 39, UPC, Baud Rate).
- Step 3: Select the desired option by scanning one of the numeric labels (0 - 9).
- Step 4: If there is an (ON/OFF) next to the description, scan the ON label to enable or the OFF label to disable the option.
Example: To enable the MOD 43 check digit on Code 39, perform the following:
1) Scan the Code 39 category label.
2) Scan the option (2) label to select the MOD 43 check digit option.
3) Scan the ON label to enable option (2).
If there is a range of numbers next to the option, then scan one of the numeric labels (0 - 9).
Example: To select the OPCC check digit for Interleaved 2 of 5, perform the following:
1) Scan the Int. 2 of 5 category label.
2) Scan the (1) label to select the check digit option.
3) Scan the numeric 2 label to select OPCC.
- Step 5: If you want to make another change within the same category, you can scan another option number (i.e., return to step 3 above). If you want to make a change in a different category you must scan the new category (i.e., return to step 2 above and repeat the steps).
- Step 6: When you have finished making all of the changes, you can either:
1) Scan the EXIT (Save Changes) label to save all the changes or
2) Scan the EXIT (Ignore Changes) label to exit without saving any changes.
NOTE: You can reset the M2800 to the default setting by performing the following:
1) Scan the START label.
2) Scan the RESET ALL DEFAULTS label.
3) Scan the EXIT (Save Changes) label.

PROGRAMMING GUIDE

START

The START bar code places the M2800 into the program mode. After scanning this label, the M2800 will emit three short beeps to indicate that it is in the program mode.

EXIT (SAVE CHANGES)

Scan this bar code to EXIT the program mode and save all of the changes. After scanning this label, the M2800 will beep twice then delay approximately one second and emit three short beeps to indicate that it accepted the changes.

EXIT (IGNORE CHANGES)

Scan this bar code to EXIT the program mode and discard all of the current changes. The M2800 will use the settings that were in effect before entering the program mode.

RESET ALL DEFAULTS

Scan this bar code to reset all options to their default settings.

NOTE: Defaults are marked with an asterisk (*).

0-9 BAR CODES

These bar codes are scanned to select various options and enter programmable data into the M2800.

NOTE: Scan option 9 to reset all of the options within the current category back to their defaults.

ON

If the OPTION has an (ON/OFF) beside the description, scan the ON bar code to turn on the current option.

OFF

If the OPTION has an (ON/OFF) beside the description, scan the OFF bar code to turn off the current option.

FULL ASCII CHART

The Full ASCII Chart is located on the back of the M2800 Setup Menu. This chart contains the entire ASCII character set (128 characters). Use this chart to enter Preamble and Postamble character strings as well as the Record Terminator and Separator characters.

ADDITIONAL NOTES:

If the description beside the option contains:

(ON/OFF) Scan either an ON or OFF label to set the option.

(CHART) Scan one or more characters from the Full ASCII Chart.

(0 – 9) Scan the desired character from the 0-9 labels.

(0.0 – 9.9) Scan two characters from the 0-9 labels to set the time from 0 to 9.9 seconds.

CODE 39

0) CODE 39 DECODER

- ON* Enable reading Code 39 labels.
- OFF Disable reading Code 39 labels.

1) FULL ASCII

- ON Enable the Full ASCII Extension to Code 39. Option #0 above must be set on.
- OFF* Disable the Full ASCII Extension to Code 39. This sets the M2800 to the standard Code 39 mode.

2) MOD 43 CHECK DIGIT

- ON Enable the Mod 43 Check Digit for Code 39. When this option is enabled, only Code 39 labels that contain a valid check digit will be read.
- OFF* Disable the Mod 43 Check Digit. Check digit verification will not be performed.

3) SEND CHECK DIGIT

- ON Transmit the Mod 43 Check Digit with the bar code data. Requires option #2 above to be set on.
- OFF* Do not transmit the Mod 43 Check Digit.

4) CONCATENATE MODE

- ON Enable Concatenate Mode. The concatenate mode allows the M2800 to accumulate multiple bar codes in its buffer, and then sends them to the computer just like they were a single bar code. When a Code 39 label containing a leading space is read, the M2800 emits two short beeps and buffers the data without transmission. This process continues until a Code 39 label without a leading space is read or 128 characters are buffered. A Code 39 bar code label that only contains a single or multiple dashes (minus sign) will clear the buffer.
- OFF* Disable Concatenate Mode.

UPC

0) UPC DECODER

- ON* Enable reading UPC-A and UPC-E labels.
- OFF Disable reading UPC-A and UPC-E labels.

1) CONVERT UPC-E TO UPC-A

- ON Convert all UPC-E labels to their UPC-A equivalents (zero-fill) before transmission. After conversion, the M2800 will follow the UPC-A programming options.
- OFF* No conversions will be performed.

2) CONVERT UPC-A TO EAN-13

- ON Convert all UPC-A labels to an equivalent EAN-13 format by inserting a leading zero. After conversion, the M2800 will follow the EAN-13 programming options.
- OFF* No conversions will be performed.

3) SEND UPC-A NUMBER SYSTEM

- ON* Transmit the UPC-A Number System character.
- OFF Do not transmit the UPC-A Number System character.

4) SEND UPC-E NUMBER SYSTEM

- ON* Transmit the UPC-E Number System character.
- OFF Do not transmit the UPC-E Number System character.

5) SEND UPC-A CHECK DIGIT

- ON* Transmit the UPC-A Check Digit character.
- OFF Do not transmit the UPC-A Check Digit character.

6) SEND UPC-E CHECK DIGIT

- ON* Transmit the UPC-E Check Digit character.
- OFF Do not transmit the UPC-E Check Digit character.

EAN

0) EAN DECODER

- ON* Enable reading EAN-8 and EAN-13 labels.
- OFF Disable reading EAN-8 and EAN-13 labels.

1) ZERO FILL EAN-8 TO EAN-13

- ON Add five leading zeroes to EAN-8 labels. After conversion, the M2800 will follow the EAN-13 programming options.
- OFF* No conversion is performed.

2) SEND EAN-13 COUNTRY CODE

- ON* Transmit the EAN-13 Country Code.
- OFF Do not transmit the EAN-13 Country Code.

3) SEND EAN-8 COUNTRY CODE

- ON* Transmit the EAN-8 Country Code.
- OFF Do not transmit the EAN-8 Country Code.

4) SEND EAN-13 CHECK DIGIT

- ON* Transmit the EAN-13 Check Digit character.
- OFF Do not transmit the EAN-13 Check Digit character.

5) SEND EAN-8 CHECK DIGIT

- ON* Transmit the EAN-8 Check Digit character.
- OFF Do not transmit the EAN-8 Check Digit character.

6) ISBN CONVERSION

- ON Convert 13 digit Bookland/EAN (978 prefix) to its corresponding 10 digit ISBN number.
EXAMPLE: BAR CODE DATA = 9780806957906
ISBN OUTPUT DATA = 0806957905
- OFF* Do not convert Bookland/EAN to an ISBN number.

UPC/EAN SUPPLEMENTS

0) SUPPLEMENTS DECODER

- ON Enable reading UPC & EAN supplements.
- OFF* Disable reading UPC & EAN supplements.

1) ALLOW 2 DIGIT

- ON* Enable reading 2 digit supplements. Option 0 above must be set on.
- OFF Disable reading 2 digit supplements.

2) ALLOW 5 DIGIT

- ON* Enable reading 5 digit supplements. Option 0 above must be set on.
- OFF Disable reading 5 digit supplements.

3) REQUIRE SUPPLEMENTS

Specifies how the M2800 will handle various supplements.

- 0)* None: UPC/EAN bar codes will be read with or without valid supplements.
- 1) UPC bar codes will not be read unless they are accompanied by a valid supplement.
- 2) EAN bar codes will not be read unless they are accompanied by a valid supplement.
- 3) Bookland EAN bar codes will not be read unless they are accompanied by a valid supplement.
- 4) All UPC/EAN bar codes will not be read unless they are accompanied by a valid supplement.

4) SEND SEPARATOR SPACE

- ON Insert a space between the standard bar code data and the supplemental data.
- OFF* No separator space is inserted.

INTERLEAVED 2 OF 5

0) 1 2 OF 5 DECODER

- ON* Enable reading Interleaved 2 of 5 labels.
- OFF Disable reading Interleaved 2 of 5 labels.

1) Check Digit: 0=None, 1=USS, 2=OPCC

Specifies which type of check digit will be used with Interleaved 2 of 5:

- 0)* None (no check digit required)
- 1) Uniform Symbology Specification (USS) (3-1-3 Mod 10)
- 2) Optical Product Code Council (OPCC) (2-1-2 Mod 10)

2) SEND CHECK DIGIT

- ON Transmit the Interleaved 2 of 5 check digit with the bar code data.
- OFF* The check digit is not transmitted.

3) FIXED LENGTH

- ON Read only fixed length Interleaved 2 of 5 bar code labels that match the lengths defined in options 4 & 5 below. The check digit can be on or off.
- OFF* Disable Fixed Length mode. Read all Interleaved 2 of 5 labels without regard to length.

4) SET FIXED LENGTH #1 (02-60)

Sets the first valid fixed length for Interleaved 2 of 5. Scan a two digit value to enter the length. Valid lengths are 02 to 60 characters. By definition, the length of Interleaved 2 of 5 labels are an even number of characters. The default fixed length is 6 characters.

5) SET FIXED LENGTH #2 (02-60)

Sets a second valid fixed length for Interleaved 2 of 5. Scan a two digit value to enter the length. The default length is set to 0 characters (i.e. the second fixed length is disabled).

CODABAR

0) CODABAR DECODER

- ON * Enable reading Codabar labels.
- OFF Disable reading Codabar labels.

1) SEND START/STOP

- ON Transmit the Codabar start/stop characters.
- OFF * Do not transmit the Codabar start/stop characters.

2) CLSI FORMATTING

- ON The M2800 will insert a blank after the 1st, 5th, and 10th characters of a 14-character Codabar label. The label length does not include the start and stop characters.
- OFF* Disable CLSI formatting.

3) CLSI CHECK DIGIT

- ON Enable the CLSI check digit. When this option is enabled, all fourteen digit numeric bar codes must contain a valid check digit.
- OFF* Disable the CLSI check digit. Check digit verification will not be performed.

CODE 128 / EAN-128

0) CODE 128 DECODER

- ON * Enable reading Code 128 labels.
- OFF Disable reading Code 128 labels.

1) UCC-128 VERIFICATION

- ON A valid mod 10 check digit is required on UCC-MOD 10 bar codes. (Applies to 20-digit serial shipping container bar codes.)
- OFF * UCC-MOD 10 bar codes are accepted without valid mod check digit.

2) SEND MOD 10 CHECK DIGIT

- ON * Transmit the mod 10 check digit with the bar code entry.
- OFF Do not transmit the mod 10 check digit.

4) SEND EAN-128 ID

- ON Send EAN-128 EAN type identifier J C1
- OFF * Do not send EAN-128 EAN type identifier

5) EAN-128 GS CHARACTER (CHART)

The group separator (<GS>, ASCII 29) is used by EAN-128 to separate sub-strings within a larger bar code, and is most commonly used on postal shipping labels. This character can be mapped to any ASCII character using the chart. (Default = GS)

CODE 93

0) CODE 93 DECODER

- ON* Enable reading Code 93 labels.
- OFF Disable reading Code 93 labels.

1) CONCATENATE MODE

- ON Enable Concatenate Mode. The concatenate mode allows the M2800 to concatenate multiple bar codes in its buffer, then send them to the computer just like they were a single bar code. When a Code 93 label with a leading space is read, the M2800 emits two short beeps and buffers the data without transmission. This process continues until a Code 93 label without a leading space is read or 128 characters are buffered. A Code 93 bar code label that only contains a single or multiple dashes (minus sign) will clear the buffer.
- OFF* Disable Concatenate Mode.

CODE 11

0) CODE 11 DECODER

- ON Enable reading Code 11 labels.
- OFF * Disable reading Code 11 labels.

1) TWO CHECK DIGITS REQUIRED

- ON Two valid check digits are required for each label.
- OFF * One valid check digit is required for each label.

2) SEND FIRST CHECK DIGIT

- ON Transmit the first check digit.
- OFF * Do not transmit the first check digit.

3) SEND SECOND CHECK DIGIT

- ON Transmit the second check digit.
- OFF * Do not transmit the second check digit.

MSI/PLESSEY

0) MSI/PLESSEY DECODER

- ON Enable reading MSI/Plessey labels.
- OFF * Disable reading MSI/Plessey labels.

1) TWO CHECK DIGITS REQUIRED

- ON Two valid check digits are required for each label. The first check digit is defined by option 2 below. The second check digit is always mod 10.
- OFF * One valid check digit is required for each label. The check digit must be mod 10.

2) FIRST CHECK DIGIT MOD 11

- ON The first check digit must be mod 11.
- OFF * The first check digit must be mod 10.

3) SEND FIRST CHECK DIGIT

- ON Transmit the first check digit.
- OFF * Do not transmit the first check digit.

4) SEND SECOND CHECK DIGIT

- ON Transmit the second check digit.
- OFF * Do not transmit the second check digit.

5) ISBN PLESSEY

- ON Enable reading of Modified Plessey ISBN bar codes. Only eleven digit ISBN bar codes will be read.
- OFF* Do not read Modified Plessey ISBN bar codes.

RSS SYMBOLOGIES

- 0) RSS14 Decoder (both Linear and Stackable types)
 - ON* Enable reading RSS14 labels.
 - OFF Disable reading RSS14 labels.
- 1) RSS Limited Decoder
 - ON Enable reading RSS Limited labels.
 - OFF* Disable reading RSS Limited labels.
- 2) RSS Expanded Decoder (both Linear and Stackable types)
 - ON Enable reading RSS Expanded labels.
 - OFF* Disable reading RSS Expanded labels.
- 3) Send EAN Type Identifier (applies to all: RSS14, RSS Limited, RSS Expanded)
 - ON Send EAN type identifier ([e0] before barcode)
 - OFF* Do not send EAN type identifier
- 4) Send Application Id (AI) (applies to all: RSS14, RSS Limited, RSS Expanded)
 - ON* Send Application ID (01) before barcode
 - OFF Do not send Application ID
- 5) Send Linkage Digit (applies to all: RSS14, RSS Limited, RSS Expanded)
 - Note: This feature is not officially part of the RSS spec. It allows a flag (yes=1 or no=0) to be sent if the RSS bar code is part of a composite 2D bar code. Does not decode the 2D composite portion of the bar code.
 - ON Send the Linkage Digit
 - OFF* Do not send the Linkage Digit
- 6) Send Check Digit (applies to all: RSS14, RSS Limited, RSS Expanded)
 - ON* Send the Check Digit
 - OFF Do not send the Check Digit

SERIAL PORT #1

The M2800's RS-232 serial port accepts serial input data and re-transmits it to the computer through the keyboard interface.

- 0) MODE: 0=BATCH, 1=PASS THROUGH
 - This option selects the mode of operation for serial input port.
 - 0)* Selects the Batch Mode of operation. The M2800 buffers the data until it finds a valid record terminator character or a timeout occurs. The serial buffer can contain a maximum of 256 characters. The serial Preamble and Postamble can be used. (See options 2, 3, 4, and 5 for more information on Record Terminator and Timeout Delay.)
 - 1) Selects the Pass Through Mode of operation. The M2800 simply transmits each character that it receives from the serial port to the computer. Note that with MODE 1, the Preamble, Postamble, record terminator character, and timeout delay are not used.
- 1) PROTOCOL: 0=NONE, 1=XON/XOFF
 - 0)* No flow control protocol is used. The serial buffer can contain a maximum of 256 characters.
 - 1) XON/XOFF Protocol is selected. In this mode, the M2800 will transmit an XOFF (control S) character to stop incoming serial data. This prevents the serial buffer from overflowing. Once the M2800 has finished typing and is ready to accept more data, an XON (control Q) character will be transmitted to enable reception of more serial data. The XOFF will be transmitted when the buffer fills to 128 characters.

2) RECORD TERMINATOR CHAR

- ON Valid only if option 0 is set for Batch Mode. The M2800 will search for the record terminator character, defined with option 4, which indicates the end of the data. There are two ways to trigger the transmission of the serial data buffer: (1) the M2800 detects the record terminator character or, (2) a timeout occurs.
- OFF* The M2800 will wait for a timeout before sending the serial data buffer out the keyboard interface. No check will be made for a record terminator character.

3) SEND RECORD TERMINATOR CHAR

- ON Transmit the record terminator character along with the serial data buffer.
- OFF* Do not transmit the record terminator character. Send only the serial data buffer.

4) ENTER RECORD TERMINATOR CHAR

This option valid only if option 0 is set to Batch Mode and option 2 is enabled. The record terminator character can be scanned from the Full ASCII Chart on the back of the menu. This character is used to identify the end of the serial data stream. Once the M2800 detects this character, the buffered data is transmitted in a block to the computer through the keyboard interface. The default is a Carriage Return.

5) TIMEOUT DELAY (0.0 - 9.9 SEC)

This parameter defines the maximum period allowed to elapse before the M2800 assumes the transmission has ended. The timer is activated on receipt of the first character from the serial input port. Any incoming character that arrives before the timeout occurs will reset the timer. The timeout delay can be programmed from 0.0 to 9.9 seconds in increments of 0.1 seconds. The default setting is 0.0 seconds. (To select a value, for example, 2.0, scan the 2 label, then the "0" label.)

NOTE: Timeout Delay is used as a host response timeout delay when host response mode is enabled, at which point, the delay is from 0-99 seconds.

6) ENTER SERIAL COMMAND STRING

This option allows bar code data to be redirected out the serial port instead of the keyboard interface. When the start of the bar code data matches the Command String, the M2800 will strip the Command String from the bar code data and then transmit the remaining data out the serial port instead of the keyboard interface. This feature is especially useful for interrogating electronic scales with RS-232C serial interfaces.

To define this Command String, scan up to 5 characters from the Full ASCII Chart on the M2800 Setup Menu and then scan the ON bar code when finished, or scan OFF to erase or disable the string.

7) Serial Data Special/Function Keys

- ON* This option allows some non-printable ASCII data to be sent as PC keyboard keys. See Special/Function keys for a description of implementation. For example: converts ASCII 13 (CR) to USB Enter Key.
- OFF No conversion, key sent as CTRL-Shift-ASCII (i.e. Ctrl-Shift-M for CR)

SERIAL PORT #2

BAUD RATE

The baud rate sets the data transmission speed for the serial input port on the M2800. The M2800's baud rate must match the serial input device (electronic scale, portable terminal, etc.). Select one of the following:

- 0) 1200
- 1) 2400
- 2) 4800
- 3)* 9600
- 4) 19,200

PARITY

Sets the parity for the incoming serial data. This setting must match the serial input device (electronic scale, portable terminal, etc.). Select one of the following:

- 5)* N,8,1: None, 8 data bits, 1 Stop bit
- 6) E,7,1: Even, 7 data bits, 1 Stop bit
- 7) O,7,1: Odd, 7 data bits, 1 Stop bit
- 8) M,7,1: Mark, 7 data bits, 1 Stop bit

MAG STRIPE OPTIONS #1

0) Send Account Number (valid only if option 3 is OFF)

- ON* Transmit the Account Number data from the magnetic card. On major credit cards, the account number is available on tracks 1 and 2.
- OFF Do not send the account information

1) Send name (valid only if option 3 is OFF)

- ON* Transmit the Name data on the magnetic card. The name is available only on Track 1.
- OFF Do not transmit name

2) Send Expiration Date (valid only if option 3 is OFF)

- ON* Send expiration date
- OFF Do not send expiration date.

3) Send All Track Data

- ON* Transmit ALL the data from each enabled track. The data is transmitted as it appears on the card with NO formatting; however, separator characters will be inserted between the fields. See options 4 and 6 for information on separator characters.
- OFF Disables this option

4) Enter the Track 1 Separator Character (valid only with option 3 ON)

- Chart Send the Separator Character. This separates the fields found when decoding a track in the Track 1 format. It is selectable from the full-ASCII menu chart. The default is “^”.

5) Format Expiration Date MMY (valid only with option 3 OFF)

- ON Expiration date sent as MMY
- OFF* Expiration date sent as YMM

6) Enter Tracks 2 and 3 Separator Characters

- Chart Send the Separator Character. This separates the fields found when decoding a track in the Track 2 or 3 formats. It is selectable from the full-ASCII menu chart. The default is “=”.

MAG STRIPE OPTIONS #2

0) Output

This option designates which track(s) will be output, and in what order. You may use a dual-track decoder in a single-track application by selecting FIRST TRACK (only) or SECOND TRACK (only). Select one of the following:

- 0) First Track (only)
- 1) Second Track (only)
- 2)* Both Tracks (output in order)
- 3) Both Tracks (reverse order)

Note: The M2800 can auto-discriminate track data formats. It can read Track 1, Track 2, or Track 3 formats on the FIRST TRACK. It can also read Track 2 and Track 3 formats on the SECOND TRACK.

This would mean, for example, that a track 2 and 3 card would be read by the FIRST TRACK and SECOND TRACK, respectively.

1) Require Two Tracks

- ON Both tracks must decode successfully for a “good read” to occur. (Only valid for dual track readers)
- OFF* M2800 will accept one or more valid tracks as a “good read”. If OFF in a dual track application, it may allow a decode, even if only one track is successfully decoded. Use this setting for single-track applications.

2) Send Start and End Sentinels (valid only if SEND ALL TRACK DATA is ON)

- ON* The Start/End sentinel characters for each enabled track will be transmitted. The characters for each enabled track will be transmitted. The characters for each type of sentinel are listed below:
 - 1.) Track 1 start: “%”
 - 2.) Track 2 and 3 start: “,”
 - 3.) Track 1, 2, and 3 stop: “?”
- OFF Do not transmit the Start/End Sentinel characters.

3) Between Track/Fields Termination Character

The Character to be output is defined from the Terminator Character option. The default is a carriage return (USB Enter Key).

- ON Transmit the Termination Character between each track/field that is read. The insertion location is according to the following:
 - a) If the Send All Track Data option is ON, the character will be inserted between Tracks.
 - b) If the Send All Track Data option is OFF, the character will be inserted between Fields.
- OFF * Do not transmit the Between Tracks/Fields Termination Character.

4) SEND ENDING TERMINATION CHARACTER

The character to be output is defined from the Termination Character option. The default is a carriage return (ENTER).

- ON * Transmit the Termination Character after all data has been sent.
- OFF Do not transmit the Ending Termination Character.

5) STRIP SPACES (This option valid only if Send All Track Data is off.)

- ON * All spaces will be stripped from the Account Number Field, and any leading or trailing spaces will be stripped from the Name Field.
- OFF Do not strip any spaces from the mag stripe data.

6) Mag Stripe Data Special/Function Keys

- ON* This option allows some non-printable ASCII data to be sent as PC keyboard keys. See Special/Function keys for a description of implementation. For example: converts ASCII 13 (CR) to USB Enter Key.
- OFF No conversion, key sent as CTRL-Shift-ASCII (i.e. Ctrl-Shift-M for CR)

PREAMBLE

Preamble refers to a user-defined set of characters transmitted at the beginning of each type of input data. There are three different preambles with one set each for bar code data, magnetic stripe data, and serial input port data.

0) ENTER BAR CODE PREAMBLE

This set of user-defined characters is transmitted at the beginning of bar code data. To define this preamble, scan up to 15 characters from the Full ASCII Chart on the reverse side of the M2800 Setup Menu. Scan the ON bar code when complete. Scan OFF to completely erase or disable the preamble.

1) ENTER MAG STRIPE PREAMBLE

This set of user-defined characters is transmitted at the beginning of mag stripe data. To define this preamble, scan up to 15 characters from the Full ASCII Chart on the reverse side of the M2800 Setup Menu. Scan the ON bar code when complete. Scan OFF to completely erase or disable the preamble.

2) ENTER SERIAL PORT PREAMBLE

This set of user-defined characters is transmitted at the beginning of serial port data. To define this preamble, scan up to 15 characters from the Full ASCII Chart on the reverse side of the M2800 Setup Menu. Scan the ON bar code when complete. Scan OFF to completely erase or disable the preamble.

3) BAR CODE SEND DELAY (0.0 - 9.9 SEC)

This option specifies the amount of delay to occur after the bar code preamble is transmitted. The delay period is programmable from 0.0 to 9.9 seconds.

4) MAG SEND DELAY (0.0 - 9.9 SEC)

This option specifies the amount of delay to occur after the mag stripe preamble is transmitted. The delay period is programmable from 0.0 to 9.9 seconds.

5) SERIAL SEND DELAY (0.0 - 9.9 SEC)

This option specifies the amount of delay to occur after the serial port preamble is transmitted. The delay period is programmable from 0.0 to 9.9 seconds.

6) ACTIVE TYPES

Specifies the types of bar codes that use preambles. Select one of the following:

- | | | | |
|-----------|------------|---------------|------------------|
| A Code 39 | E EAN-8 | I Code 93 | M RSS14 |
| B UPC-A | F 1 2 of 5 | J MSI/Plessey | N RSS Limited |
| C UPC-E | G Codabar | K Code 11 | O RSS Expanded |
| D EAN-13 | H Code 128 | L ISBN | X* All Bar Codes |

POSTAMBLE

Postamble refers to a user-defined set of characters transmitted at the end of each type of input data. There are three different postambles with one set each for bar code data, magnetic stripe data, and serial input port data.

0) ENTER BAR CODE POSTAMBLE

This set of user-defined characters is transmitted at the end of bar code data. To define this postamble, scan up to 15 characters from the Full ASCII Chart on the reverse side of the M2800 Setup Menu. Scan the ON bar code when complete. Scan OFF to completely erase or disable the postamble.

1) ENTER MAG STRIPE POSTAMBLE

This set of user-defined characters is transmitted at the end of magnetic stripe code data. To define this postamble, scan up to 15 characters from the Full ASCII Chart on the reverse side of the M2800 Setup Menu. Scan the ON bar code when complete. Scan OFF to completely erase or disable the postamble.

2) ENTER SERIAL PORT POSTAMBLE

This set of user-defined characters is transmitted at the end of serial port data. To define this postamble, scan up to 15 characters from the Full ASCII Chart on the reverse side of the M2800 Setup Menu. Scan the ON bar code when complete. Scan OFF to completely erase or disable the postamble.

3) BAR CODE SEND DELAY (0.0 - 9.9 SEC)

This option specifies the amount of delay to occur after the bar code postamble is transmitted. The delay period is programmable from 0.0 to 9.9 seconds.

4) MAG SEND DELAY (0.0 - 9.9 SEC)

This option specifies the amount of delay to occur after the mag stripe postamble is transmitted. The delay period is programmable from 0.0 to 9.9 seconds.

5) SERIAL SEND DELAY (0.0 - 9.9 SEC)

This option specifies the amount of delay to occur after the serial port postamble is transmitted. The delay period is programmable from 0.0 to 9.9 seconds.

6) ACTIVE TYPES

Specifies the types of bar codes that use postambles. Select one of the following:

A Code 39	E EAN-8	I Code 93	M RSS14
B UPC-A	F 1 2 of 5	J MSI/Plessey	N RSS Limited
C UPC-E	G Codabar	K Code 11	O RSS Expanded
D EAN-13	H Code 128	L ISBN	X* All Bar Codes

TERMINATION CHARACTER

The optional Termination Character is transmitted at the end of the data. If a user defined Termination Character is desired select option 4 below, then scan a single character from the Full ASCII section of the Setup Menu.

- 0) None
- 1) Horizontal Tab (ASCII 09) or (Special Keys On: USB Tab Key)
- 2)* Carriage Return (ASCII 13) or (Special Keys On: USB Enter Key)
- 3) USB Numeric Keypad Enter
- 4) User Defined Termination Character (from ASCII chart)

SCAN BEEP

Settings (0-3) set the length of the beep. Settings (4-7) set the tone (pitch) of the beep. Setting (8), when selected will override the other beep selections and shut the beep off.

- | <u>Length</u> | <u>Tone</u> |
|-------------------|-----------------|
| 0) Short | 4) Low |
| 1) * Medium Short | 5) Medium Low |
| 2) Medium Long | 6)* Medium High |
| 3) Long | 7) High |
| 8) No Beep | |

BAR CODE EDIT

This option allows data editing (modification) before transmission.

0) DATA EDITING

Must be on for any of the editing options below to be valid.

ON: Enable Data Editing.

OFF*: Disable Data Editing.

1) ENTER # OF LEADING CHAR TO STRIP (0-9, A-F)

Refers to the number (0-15) of characters to be stripped or removed from the beginning of the bar code data.

2) ENTER # OF TRAILING CHAR TO STRIP (0-9, A-F)

Refers to the number (0-15) of characters to be stripped or removed from the end of the bar code data.

NOTE: If the total number of strip characters (both Leading and Trailing) is greater than the number of characters of the bar code, no characters will be stripped.

3) ENTER DATA TYPE TO EDIT

Refers to the type of bar codes for which editing can be enabled, allowing editing to be specific to a type of bar code. The choices are listed below:

A Code 39	E EAN-8	I Code 93	M RSS14
B UPC-A	F 1 2 of 5	J MSI/Plessey	N RSS Limited
C UPC-E	G Codabar	K Code 11	O RSS Expanded
D EAN-13	H Code 128	L ISBN	X* All Bar Codes

4) STRIP LEADING & TRAILING SPACES

ON: Any Leading and Trailing Spaces will be stripped from the data.

OFF*: No spaces will be stripped.

BAR CODE OPTIONS

0) SEND BAR CODE TYPE ID: (ON/OFF)

ON: Sends a letter preceding the data, indicating the symbology type of the bar code. The letter corresponds to the types:

A Code 39	E EAN-8	I Code 93	M RSS14
B UPC-A	F 1 2 of 5	J MSI/Plessey	N RSS Limited
C UPC-E	G Codabar	K Code 11	O RSS Expanded
D EAN-13	H Code 128	L ISBN	X* All Bar Codes

OFF*: Do not transmit Bar Code Type ID

1) DUPLICATE READS ALLOWED (ON/OFF)

ON*: Enable reading the same bar code multiple times.

OFF: Disable reading the same bar code twice in a row.

2) BAR CODE FUNCTION KEYS (ON/OFF)

ON: Function Keys F1 through F10 will be transmitted in place of the ASCII characters DC1 (17) through SUB (26). See Special/Function keys for a description of implementation.

OFF*: Disable Function Keys. (Standard ASCII characters are transmitted.)

3) BAR CODE SPECIAL KEYS

ON* This option allows some non-printable ASCII data to be sent as PC keyboard keys. See Special/Function keys for a description of implementation. For example: converts ASCII 13 (CR) to USB Enter Key.

OFF No conversion, key sent as CTRL-Shift-ASCII (i.e. Ctrl-Shift-M for CR)

4) BAR CODE TERM CHAR OVERRIDE: (ON/OFF)

ON: If any control character or special character (i.e., function key, arrow key, etc.) is embedded in the bar code data, the Termination Character, the Bar Code Preamble, and the Bar Code Postamble will not be transmitted.

OFF*: Special characters do not affect transmission of the Termination Character, the Bar Code Preamble, and the Bar Code Postamble.

LASER/CCD OPTIONS

These options are used to configure the laser device behavior and the trigger mode for the M2800

0) LASER TRIGGER MODE (0-3)

0)* TRIGGER MODE: Trigger activates scanning device for one scan only. (Recommended)

1) PULSE MODE: Continuous scanning method for non-reflective backgrounds; for use with MS-941 triggerless scanner only.

2) CONTINUOUS Scans bar codes all the time, continuously. Not recommended for laser use. Use only with CCD input devices.

3) BLINK MODE Continuous scanning with no time-out. Laser/CCD turns on and off allowing safe operation.

1) LASER/CCD TIMEOUT: Turns off Laser/CCD after (1 – 9) seconds. Scan number in seconds

2) READ DELAY:

Allows re-reads. Continuous scanning read delay (0.0 – 9.9) seconds is used to allow a new re-read of a bar code, after the read delay expires.

3) READ VERIFICATION:

Performs re-reads the number of times (0 – 9) required for accuracy critical applications.

TRANSMIT SPEED

This option sets the speed at which keyboard data will be transmitted to the PC. Some computer systems may require the transmission speed set to a slower speed. The default setting is 3, Fast.

- 0) SLOW
- 1) MEDIUM SLOW
- 2) MEDIUM FAST
- 3) * FAST

DIAGNOSTICS

Open any text entry editor, such as Notepad®, before running this test. This option executes a self-test program that performs the following tests on the M2800:

- Report Firmware Version Number
- Report Serial Number
- Internal Ram Test
- EPROM Checksum Test
- EEPROM Test
- LED Test
- Beeper Test
- ASCII Character Set Test, with backspace (erases X at last character of test)
- Report Copyright

The above tests are performed and their status is displayed on the PC. If there are problems related to the test results, please contact American Microsystems' technical support at (800) 648-4452 during the hours 8:30 A.M. to 5:30 P.M. Monday through Thursday and 8:30 A.M. to 5:00 P.M Friday.

RS-232C SERIAL PORT

The RS-232C serial port located on the rear panel of the M2800 accepts serial ASCII data and re-transmits it to the computer through the USB port. The serial input data appears as though it was typed in from the computer keyboard.

The connector pin assignments for the serial port interface are listed below:

<u>PIN</u>	<u>SIGNAL</u>	<u>DIRECTION</u>
1	DCD	Input, Not Used
2	Receive Data	Input
3	Transmit Data	Output
4	DTR	Output, Not Used
5	Ground	Both
6	DSR	Input, Not Used
7	RTS	Output, connected to CTS
8	CTS	Input, connected to RTS
9	RI	Input, Not Used

The serial input port will accept almost any type of RS-232C serial device such as:

- Electronic scales
- Table top laser scanners
- Side scan laser scanners
- Portable & fixed terminals

CONNECTING AN ELECTRONIC SCALE TO THE M2000

The M2800 reader interfaces with almost any electronic scale that has an RS-232C serial interface port. To connect an electronic scale to the M2800 perform the following steps:

Connect a serial cable between the scale and the M2800's serial input port. Verify that the wiring of the serial cable is correct.

Program the M2800's serial port setting for Pass Through Mode (see Programming Guide section in this manual).

Program the M2800's serial port parameters (baud rate, parity, data bits) to match the configuration of the scale.

There are two basic types of scale interfaces:

INTERFACE TYPE #1: With this type of scale interface the user presses a button (usually located on the scale's front panel) to transmit the scale data through the serial port. The M2800 will receive this data from its serial input port, and then transmit the data to the computer through the USB HID keyboard interface. To the computer, the data appears to have come from the keyboard.

INTERFACE TYPE #2: With this type of scale interface, a command must be sent to the scale to initiate data transfer. The M2800 must be programmed with a Serial Command String, as defined under Serial Port, in the *Programming Guide* section. Once the scale receives a command, data is transmitted out through the USB HID keyboard interface. To the computer, the data appears to have come from the keyboard.

EXAMPLE: Toledo 8213 BENCH SCALE (Interface Type #2)

PROBLEM: To obtain weight data from the 8213 scale's serial port, which is to be sent to the computer appearing as keyboard input.

SOLUTION: The 8213 sends the current weight reading if it receives an ASCII "W" through its serial port.

First, program the M2800 to recognize a unique Serial Command String, i.e., "%A5A%" (5 characters maximum). Next, print a bar code that contains this Serial Command String followed by a "W". Scan this bar code by the usual means (wand, CCD, or laser). The M2800 beeps, indicating a successful read. It recognizes the Serial Command String at the beginning of the bar code data. Instead of transmitting the bar code data through the keyboard interface, as the M2800 would normally do, it strips off the Serial Command String and transmits only the "W", which will be directed through the serial port to the scale. The scale receives the "W", recognizes it as a request, and transmits its weight data through its serial port. The M2800 receives the scale data and transmits it to the PC through the USB HID keyboard interface. To the computer, the data appears to have come from the keyboard. (This entire process takes only a fraction of a second.)

Scale Command to Transmit Weight = W
Serial Command String (unique) = %A5A%

The sample bar code:



SPECIFICATIONS

BAR CODES SUPPORTED

Auto-discriminates between all of the following codes:

Code 39, Extended Code 39 (Full ASCII), Interleaved 2 of 5 (variable and fixed length, check digit), UPC-A (including 2 and 5 character supplements), UPC-E(0), UPC-E(1), EAN (including ISBN and 2 or 5 character supplements), Code 128, EAN-128, Code 93, Code 11, MSI/Plessey, RSS14 (linear or stacked), RSS Limited, and RSS Expanded (linear or stacked).

INPUT DEVICES SUPPORTED

Laser (Helium-Neon, Visible Laser Diode, Infrared) and CCD Scanners
Wands (visible and infrared)
Slot Readers (or badge readers)
Magnetic Stripe Readers (Single or Dual Track)
RS-232 Input Port (Electronic Scales, Portable Terminals)

USER PROGRAMMABLE FEATURES

<u>Bar Code Selection:</u>	<u>Preambles/Postambles:</u>	<u>Laser Configuration:</u>
Enable/Disable	Bar Code (15 Chars Max)	Laser Timeout
Length	Mag Stripe (15 Chars Max)	Trigger Function
Check Digit	Serial Port (15 Chars Max)	Continuous Mode
Start/Stop Transmit	Transmit Delay	Computer Type
Beep Tone and Length	Magnetic Stripe Data Format	Transmit Speed

RS-232 SERIAL PORT

Baud Rates:	1200, 2400, 4800, 9600, 19.2K
Parity:	None, Odd, Even, Mark
Data Bits:	7 (with parity) or 8 (with none)
Signals:	Transmit Data, Receive Data, CTS and RTS loop-back
Flow Control Protocol:	None or XON/XOFF
Features:	Programmable Termination Character and Timeout

INDICATORS

Audio beep indicates successful read
A red/green LED indicates status of M2800

POWER REQUIREMENTS

M2800 receives its power from the PC USB interface.
Idle Power consumption = 0.25 watts. During USB suspend = 1.25mW

CONNECTORS

Laser Input: 9 Pin D Style
Wand Input: 5 Pin DIN Style
Mag Stripe Input: 8 Pin DIN Style
USB Interface: USB, Type B (downstream)
RS-232 Input: 9 Pin D Style

ENVIRONMENTAL

Operating Temperature:	0° to +50° C
Storage Temperature:	-30° to +70° C
Relative Humidity:	5% to 95% (non-condensing)


PHYSICAL SPECIFICATIONS

Weight: 14 ounces	Width: 5 1/8 inches
Length: 5 1/4 inches	Height: 1 1/2 inches

SIGNAL DEFINITIONS


WAND INTERFACE

PIN	SIGNAL
1	+5V
2	DATA
3	GROUND
4	Not Used
5	Not Used

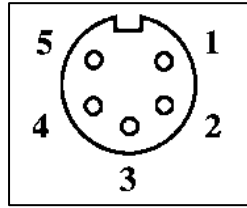


DUAL MAG STRIPE INTERFACE

PIN	SIGNAL
1	+5V
2	DATA, TRACK 2
3	CLOCK, TRACK 2
4	GROUND
5	DATA, TRACK 1
6	CLOCK, TRACK 1
7	CARD PRESENT
8	GROUND

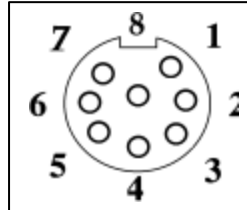


LASER INTERFACE

PIN	SIGNAL
1	SYNC
2	DATA
3	DECODE LED
4	NO CONNECTION
5	TRIGGER
6	HEAD ENABLE
7	GROUND
8	SHIELD GROUND
9	LASER POWER

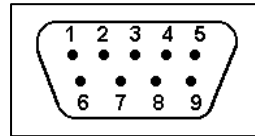

RS-232C SERIAL INPUT PORT

PIN	SIGNAL
1	DCD (not used)
2	RECEIVE DATA
3	TRANSMIT DATA
4	DTR (not used)
5	GROUND
6	DSR (not used)
7	RTS (connected to CTS)
8	CTS (connected to RTS)
9	RI (not used)

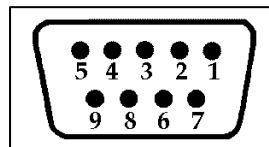

USB COMPUTER INTERFACE:

USB Spec. 1.0 – 2.0 Functionally Compliant. Use a standard USB cable 3 Meters or less in length.

Special/Function Keys:

FUNCTION KEYS

With Function Keys enabled, the decoder can accept a given ASCII character and transmit a corresponding Function Key (USB scan-code) to the computer. The ASCII characters and values are listed in the table below.



ASCII Characters	Function Keys	ASCII Values
DC1	F1	17
DC2	F2	18
DC3	F3	19
DC4	F4	20
NAK	F5	21
SYN	F6	22
ETB	F7	23
CAN	F8	24
EM	F9	25
SUB	F10	26


SPECIAL KEYS

With Special Keys enabled, the decoder can accept a given ASCII character and transmit a corresponding Special Key (USB scan-code) to the computer. The ASCII characters and values are listed in the table below.

ASCII Characters	Special Keys	ASCII Values
NULL	None, Not Sent	0
SOH	← (left arrow)	1
STX	→ (right arrow)	2
ETX	↑ (up arrow)	3
EOT	↓ (down arrow)	4
ENQ	Home	5
ACK	End	6
BEL	Delete	7
VT	Page Up	8
FF	Page Down	9
LF	None, Not Sent	10
Vertical Tab	Page Up	11
Form Feed	Page Down	12
CR	USB Enter Key	13
Shift Out	Shift ON	14
Shift In	Shift OFF	15
DLE	Ins Key	16
ESC	Esc Key	27
FS	Ctrl On	28
GS	Ctrl Off	29
RS	Alt On	30
US	Alt Off	31

TRANSACTION CARD DATA FORMAT

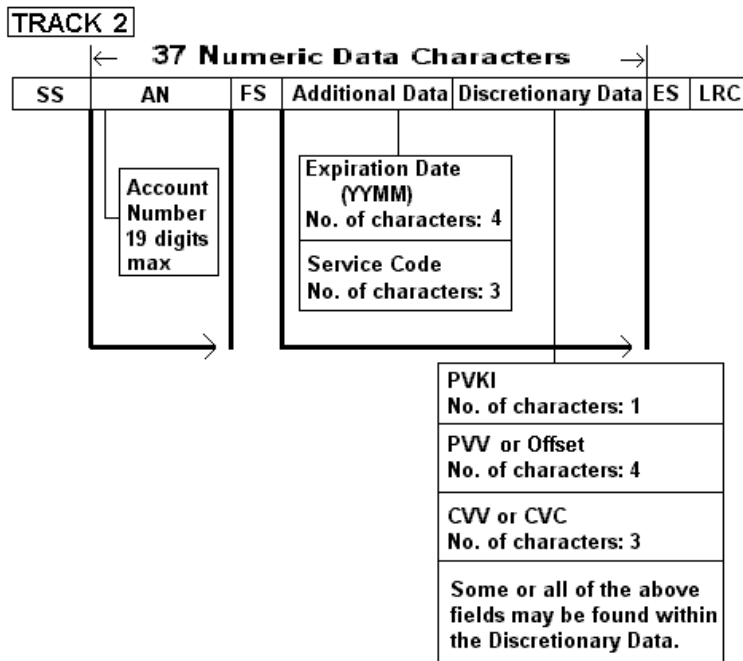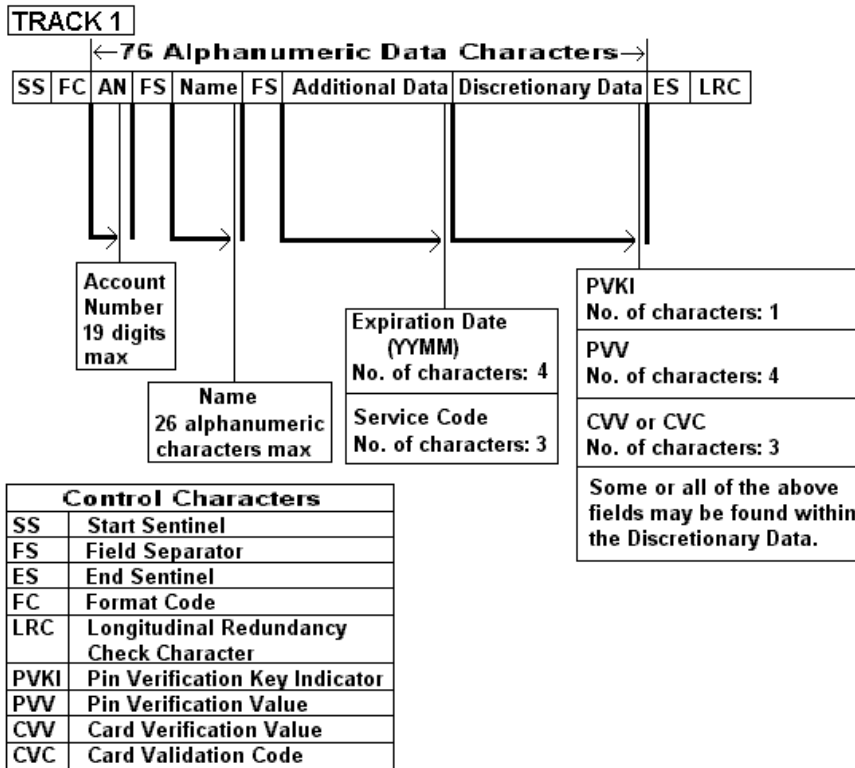

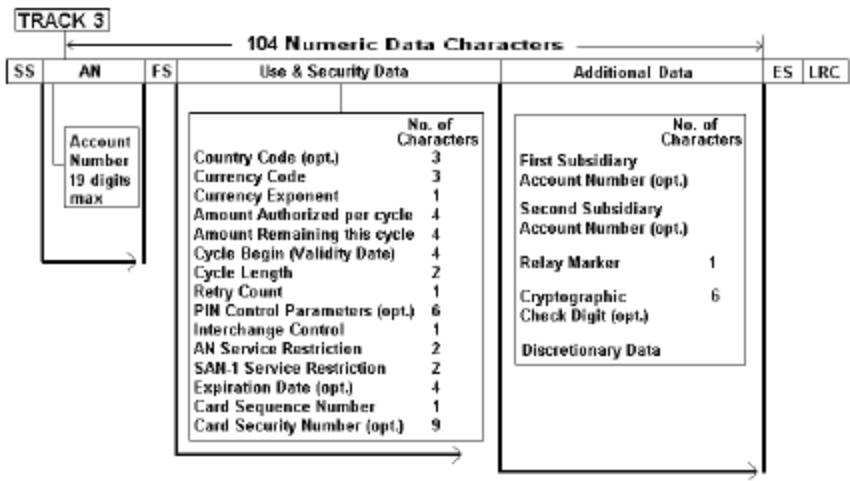

If an optional field is not used a Field Separator (FS) must be encoded.

The track formats used in this document are based on ISO Standards; however, other formats can be used. Contact your card issuer for