

code

Code Reader™ 1000/1400/8000

Configuration Guide



Code Reader™ 1000



Code Reader™ 1400



Code Reader™ 8000



Table of Contents

USB Settings

USB Keyboard Mode	6 (A1)
USB Downloader Mode	6 (A2)
USB Virtual COM One Way Mode	6 (A3)
USB Native Two Way Mode	6 (A4)
USB HID POS (Terminal 1D 131)	6 (B1)
Reset to USB Factory Defaults.....	6 (B2)

RS-232 Settings

RS-232 Raw Mode	6 (C1)
RS-232 Packet Mode	6 (C2)
Reset to RS-232 Factory Defaults.....	6 (C3)
RS-232 Interface - 7 Data Bits.....	6 (C4)
RS-232 Interface - 8 Data Bits - Default.....	6 (D1)
RS-232 Interface - 1200 Baud Rate	6 (D2)
RS-232 Interface - 2400 Baud Rate	6 (D3)
RS-232 Interface - 4800 Baud Rate	6 (D4)
RS-232 Interface - 9600 Baud Rate	6 (E1)
RS-232 Interface - 19200 Baud Rate	6 (E2)
RS-232 Interface - 38400 Baud Rate	6 (E3)
RS-232 Interface - 57600 Baud Rate	6 (E4)
RS-232 Interface - 115200 Baud Rate - Default.....	6 (F1)
RS-232 Interface - Even Parity.....	6 (F2)
RS-232 Interface - Odd Parity	6 (F3)
RS-232 Interface - No Parity - Default.....	6 (F4)

Continous Trigger Optimization and Settings

Continuous Scan Both Imagers.....	7 (A1)
Continuous Scan Off - Default.....	7 (A2)

Motion Detection Scanning

Enable Motion Detection with Stand Detection - Default.....	7 (B1)
Disable Motion Detection with Stand Detection.....	7 (B2)
Motion Detection On, Start Delay 0	7 (C1)
Motion Detection On, Start Delay 500ms	7 (C2)
Motion Detection On, Start Delay 0, Dark Environment	7 (C3)
Motion Detection On, Start Delay 500ms, Dark Environment	7 (C4)
Motion Detection Off.....	7 (D1)

Symbologies

Australian Post On.....	7 (D2)
Australian Post Off - Default.....	7 (D3)
Aztec On - Default	7 (D4)
Aztec Off	7 (E1)
Aztec Inverse On	7 (E2)
Aztec Inverse & Normal	7 (E3)
Codabar On - Default	7 (E4)
Codabar Off	7 (F1)
Codablock On	7 (F2)
Codablock Off - Default	7 (F3)
Code 11 On	8 (A2)
Code 11 Off - Default	8 (A3)
Code 11 - Checksum 1 digit	8 (A4)
Code 11 - Checksum 2 digit & Strip from Result	8 (B1)
Code 11 - Checksum 1 digit & Strip from Result	8 (B2)
Code 32 On	8 (B3)



Table of Contents

Code 32 Off - Default.....	8 (B4)
Code 39 On - Default.....	8 (C2)
Code 39 Off	8 (C3)
Code 39 Checksum On	8 (C4)
Code 39 Checksum Off- Default.....	8 (D1)
Code 39 Checksum and Strip On.....	8 (D2)
Code 39 Extended Full ASCII On.....	8 (D3)
Code 39 Extended Full ASCII Off - Default	8 (D4)
Code 93 On - Default.....	8 (E3)
Code 93 Off	8 (E4)
Code 128 On - Default	8 (F1)
Code 128 Off	8 (F2)
Composite On.....	8 (F3)
Composite Off - Default	8 (F4)
Data Matrix Rectangle On - Default.....	9 (A1)
Data Matrix Rectangle Off	9 (A2)
Data Matrix Inverse On.....	9 (A3)
Data Matrix Inverse Off - Default	9 (A4)
GS1 Limited DataBar On.....	9 (B1)
GS1 DataBar 14/ Truncated 14 On	9 (B2)
GS1 DataBar Stacked On	9 (B3)
GS1 DataBar Expanded On	9 (B4)
All GS1 DataBar On - Default.....	9 (C1)
All GS1 DataBar Off	9 (C2)
Han Xin On	9 (C3)
Han Xin Off - Default	9 (C4)
Hong Kong 2 of 5 On	9 (D1)
Hong Kong 2 of 5 Off - Default	9 (D2)
Hong Kong 2 of 5 1 Digit Symbol Allowed	9 (D3)
Hong Kong 2 of 5 2 Digit Symbol Allowed	9 (D4)
IATA 2 of 5 On (IATA 2 of 5 is a variant of Straight 2 of 5; to enable IATA 2 of 5 scan Straight 2 of 5 On)	12 (A1)
IATA 2 of 5 Off - Default (IATA 2 of 5 is a variant of Straight 2 of 5; to disable IATA 2 of 5 scan Straight 2 of 5 Off)	12 (A2)
Int 2 of 5 On - Default	9 (E1)
Int 2 of 5 Off.....	9 (E2)
Int 2 of 5 2 Digits On.....	9 (E3)
Int 2 of 5 2 Digits Off	9 (E4)
Int 2 of 5 4 Digits On.....	10 (A1)
Int 2 of 5 4 Digits Off	10 (A2)
Int 2 of 5 with Control Character Stripped On.....	10 (A3)
Int 2 of 5 Checksum (no character stripping) On	10 (A4)
Int 2 of 5 Checksum Off.....	10 (B2)
Intelligent Mail On.....	10 (B2)
Intelligent Mail Off - Default	10 (B3)
Japan Post On	10 (C1)
Japan Post Off - Default	10 (C2)
KIX Code On	10 (C3)
KIX Code Off - Default	10 (C4)
Matrix 2 of 5 On	10 (D3)
Matrix 2 of 5 Off - Default	10 (D4)
Maxicode On	10 (E1)
Maxicode Off - Default	10 (E2)
Micro PDF417 On.....	10 (E3)



Table of Contents

Micro PDF417 Off - Default	10 (E4)
MSI Plessy On - Default	10 (F1)
MSI Plessy Off	10 (F2)
NEC 2 of 5 On	11 (A1)
NEC 2 of 5 Off - Default	11 (A2)
PDF417 On - Default	11 (A3)
PDF417 Off	10 (A4)
Pharmacode On	11 (B3)
Pharmacode Off - Default	11 (B4)
Pharmacode Normal Barcode Decoding (left to right)	11 (C1)
Pharmacode Reverse Barcode Decoding (right to left)	11 (C2)
PLANET On	11 (C3)
PLANET Off - Default	11 (C4)
POSTNET On	11 (D1)
POSTNET Off - Default	11 (D2)
Plessey On	11 (D3)
Plessey Off - Default	11 (D4)
QR Code On - Default	11 (E1)
QR Code Off	11 (E2)
QR Code Inverse and Standard On	11 (E3)
QR Code Inverse On	11 (E4)
Enable All QR Code On (includes Micro QR)	11 (F1)
Inverse and Micro QR Code On	11 (F2)
Straight 2 of 5 On	12 (A1)
Straight 2 of 5 Off - Default	12 (A2)
Telepen On	12 (A3)
Telepen Off - Default	12 (A4)
Trioptic On	12 (B1)
Trioptic Off - Default	12 (B2)
UK Royal Mail On	12 (B3)
UK Royal Mail Off - Default	12 (B4)
UPC On - Default	12 (C1)
UPC Off	12 (C2)
UPC Extension On	12 (C3)
UPC Extension Off - Default	12 (C4)
UPU ID-Tag On	12 (D1)
UPU ID-Tag Off - Default	12 (D2)
Keyboard Mapping	
Belgium Keyboard	12 (E4)
Swiss Keyboard	12 (F1)
US English Keyboard Mapping - Default No Leading 0	12 (F2)
US English Keyboard Mapping - Leading 0	12 (F3)
French Keyboard	12 (E4)
German Keyboard	13 (A1)
Japanese Keyboard	13 (A2)
Control Characters for Non Printable ASCII	13 (A3)
Universal Keyboard Mapping	13 (A4)
Operating System Settings	
Enable Alternative OS (Windows CE/MAC/Linux)	13 (B1)
Disable Alternative OS	13 (B2)
Mirroring Settings	
Mirror On	13 (B3)



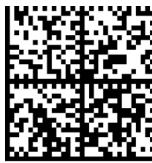
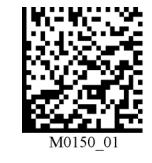
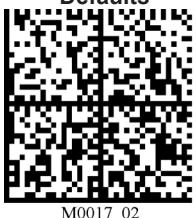
Table of Contents

Mirroring Off - Default.....	13 (B4)
Prefix/Suffix Settings	
Prefix - AIM IDs On.....	13 (C1)
Prefix - AIM IDs Off - Default	13 (C2)
Prefix - Comma.....	13 (C3)
Prefix - Space	13 (C4)
Prefix - Tab (USB Keyboard Mode Only).....	13 (D1)
Prefix - Tab (RS-232 Mode Only)	13 (D2)
Prefix - Erase/None - Default.....	13 (D3)
Prefix - CRLF (RS-232 Mode Only).....	13 (D4)
Suffix - Carriage Return (RS-232 Mode Only).....	13 (E1)
Suffix - Comma.....	13 (E2)
Suffix - Line Feed (RS-232 Mode Only)	13 (E3)
Suffix - Carriage Return Line Feed (RS-232 Mode Only).....	13 (E4)
Suffix - Space	13 (F1)
Suffix - Enter (Keyboard Mode Only).....	13 (F2)
Suffix - Tab (USB Keyboard Mode Only).....	13 (F3)
Suffix - Tab (RS-232 Mode Only).....	13 (F4)
Suffix - Erase/None - Default.....	14 (A1)
Erase Prefix & Suffix Data	14 (A2)
Miscellaneous SettingS	
Reader ID and Firmware Version	14 (A3)
Reader Text Commands	
Reader Text Commands On	14 (A4)
Reader Text Commands Off - Default.....	14 (B1)
Clear Reader	
Clear All Stored Data and Images	14 (B2)
Clear all JavaScript Rules	14 (B3)
Feedback Settings	
Beep On Vibrate On - Default (CR1400 Only).....	14 (B4)
Beep Off Vibrate On (CR1400 Only)	14 (C1)
Beep On Vibrate Off (CR1400 Only)	14 (C2)
Beep Off Vibrate Off (CR1400 Only)	14 (C3)
Beep On - Default (CR1000 & CR8000; No Vibration Mode)	
Beep Volume 0% (CR1000 & CR1400 Only)	14 (C4)
Beep Volume 33% (CR1000 & CR1400 Only)	14 (D1)
Beep Volume 67% (CR1000 & CR1400 Only)	14 (D2)
Beep Volume 100% - Default (CR1000 & CR1400 Only).....	14 (D3)
Scan Delay	
Duplicate Scan Disabled	14 (D4)
1 sec Duplicate Scan Delay.....	14 (E1)
2 sec Duplicate Scan Delay.....	14 (E2)
3 sec Duplicate Scan Delay.....	14 (E3)
Default Trigger Delay.....	14 (E4)
Targeting	
Targeting Off	14 (F1)
Targeting On - Default.....	14 (F2)
Cell Phone Reading	
Cell Phone Reading Enhancement Enable.....	14 (F3)
Cell Phone Reading Enhancement Disable.....	14 (F4)



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

USB Keyboard Mode  M0002_01	USB Downloader Mode  M0004_01	USB Virtual COM One Way Mode  M0005_01	USB Native Two Way Mode  M0006_01
A1	A2	A3	A4
USB HID POS (Terminal ID 131)  M0003_01	Reset to USB Factory Defaults  M0001_02	Intentionally Left Blank	Intentionally Left Blank
B1	B2	B3	B4
RS-232 Raw Mode  M0149_01	RS-232 Packet Mode  M0150_01	Reset to RS-232 Factory Defaults  M0017_02	RS-232 Interface 7 Data Bits  M0018_01
C1	C2	C3	C4
RS-232 Interface 8 Data Bits - Default  M0019_01	RS-232 Interface 1200 Baud Rate  M0020_01	RS-232 Interface 2400 Baud Rate  M0021_01	RS-232 Interface 4800 Baud Rate  M0022_01
D1	D2	D3	D4
RS-232 Interface 9600 Baud Rate  M0023_01	RS-232 Interface 19200 Baud Rate  M0024_01	RS-232 Interface 38400 Baud Rate  M0025_01	RS-232 Interface 57600 Baud Rate  M0026_01
E1	E2	E3	E4
RS-232 Interface 115200 Baud Rate - Default  M0027_01	RS-232 Interface Even Parity  M0028_01	RS-232 Interface Odd Parity  M0029_01	RS-232 Interface No Parity - Default  M0030_01
F1	F2	F3	F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Continuous Scan Both Imagers  M0127_02	Continuous Scan Off - Default  M0126_03	Motion Detection <ul style="list-style-type: none"> CR1000 and CR1400 readers that feature stand detection will default to motion detection reading when the reader is placed in a stand. Scanning 'Disable Motion Detection with Stand Detection' (B2), will put the reader into motion detection reading when the reader is both in and out of the stand To disable all motion detection, you must scan 'Disable Motion Detection with Stand Detection' (B2) and 'Motion Detection Scanning Off' (D1) To enable motion detection with stand detection after all motion detection has been turned off, scan any 'Motion Detection On' (C1-C4) code, and scan 'Enable Motion Detection with Stand Detection' (B1) To enable motion detection in readers that do not feature stand detection, scan the 'Motion Detection On' setting you prefer (C1-C4) <p>Refer to the reader's QuickStart Guide or User Manual to determine if your reader features stand detection.</p>	
Enable Motion Detection with Stand Detection, Start Delay 0 - Default  M0216_02	Disable Motion Detection with Stand Detection  M0217_02		
Motion Detection On, Start Delay 0  M0161_03	Motion Detection On, Start Delay 500ms  M0162_03	Motion Detection On, Start Delay 0, Dark Environment  M0163_03	Motion Detection On, Start Delay 500ms, Dark Environment  M0164_03
Motion Detection Scanning Off  M0129_08	Australian Post On  M0345_01	Australian Post Off - Default  M0346_01	Aztec On - Default  M0033_01
Aztec Off  M0034_01	Aztec Inverse On  M0035_01	Aztec Inverse & Normal  M0036_01	Codabar On - Default  M0037_01
E1	E2	E3	E4
Codabar Off  M0038_01	Codablock F On  M0039_01	Codablock F Off - Default  M0040_01	F4
			Intentionally Left Blank



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Intentionally Left Blank	Code 11 On  M0042_01	Code 11 Off - Default  M0041_01	Code 11 - Checksum 1 digit  M0043_01
A1	A2	A3	A4
Code 11 - Checksum 2 digit & Strip from Result  M0044_01	Code 11 - Checksum 1 digit & Strip from Result  M0045_01	Code 32 On  M0327_01	Code 32 Off - Default  M0326_01
B1	B2	B3	B4
Intentionally Left Blank	Code 39 On - Default  M0046_01	Code 39 Off  M0047_01	Code 39 Enable Checksum  M0048_01
C1	C2	C3	C4
Code 39 Disable Checksum - Default  M0049_01	Code 39 Enable Checksum and Strip  M0050_01	Code 39 Extended Full ASCII On  M0051_01	Code 39 Extended Full ASCII Off - Default  M0052_01
D1	D2	D3	D4
Intentionally Left Blank	Intentionally Left Blank	Code 93 On - Default  M0059_01	Code 93 Off  M0060_01
E1	E2	E3	E4
Code 128 On - Default  M0061_01	Code 128 Off  M0062_01	Composite On  M0065_01	Composite Off - Default  M0066_01
F1	F2	F3	F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Data Matrix Rectangle On - Default  A1	Data Matrix Rectangle Off  A2	Data Matrix Inverse On  A3	Data Matrix Inverse Off - Default  A4
GS1 DataBar Limited On  B1	GS1 DataBar 14/ Truncated 14 On  B2	GS1 DataBar 14 Stacked On  B3	GS1 DataBar Expanded On  B4
All GS1 DataBar On - Default  C1	All GS1 DataBar Off  C2	Han Xin On  C3	Han Xin Off - Default  C4
Hong Kong 2 of 5 On  D1	Hong Kong 2 of 5 Off - Default  D2	Hong Kong 2 of 5 1 Digit Symbol Allowed  D3	Hong Kong 2 of 5 Digit Symbol Allowed  D4
Int 2 of 5 On - Default  E1	Int 2 of 5 Off  E2	Int 2 of 5 2 Digits On  E3	Int 2 of 5 2 Digits Off  E4
Intentionally Left Blank F1	Intentionally Left Blank F2	Intentionally Left Blank F3	Intentionally Left Blank F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Int 2 of 5 4 Digits On  M0077_01	Int 2 of 5 4 Digits Off  M0078_01	Int 2 of 5 with Control Character Stripped  M0151_01	Int 2 of 5 Checksum On (no character stripping)  M0323_01
A1	A2	A3	A4
Int 2 of 5 Checksum Off  M0322_01	Intelligent Mail On (4 State CB)  M0343_01	Intelligent Mail Off (4 State CB) - Default  M0344_01	Intentionally Left Blank
B1	B2	B3	B4
Japan Post On  M0349_01	Japan Post Off - Default  M0350_01	KIX Code On  M0347_01	KIX Code Off - Default  M0348_01
C1	C2	C3	C4
Intentionally Left Blank	Intentionally Left Blank	Maxicode On  M0079_01	Maxicode Off - Default  M0080_01
D1	D2	D3	D4
Matrix 2 of 5 On  M0081_01	Matrix 2 of 5 Off - Default  M0082_01	Micro PDF417 On  M0083_01	Micro PDF417 Off - Default  M0084_01
E1	E2	E3	E4
MSI Plessy On - Default  M0085_01	MSI Plessy Off  M0086_01	Intentionally Left Blank	Intentionally Left Blank
F1	F2	F3	F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

NEC 2 of 5 On  A1	NEC 2 of 5 Off - Default  A2	PDF417 On - Default  A3	PDF417 Off  A4
Intentionally Left Blank B1	Intentionally Left Blank B2	Pharmacode On  B3	Pharmacode Off - Default  B4
Pharmacode Normal Barcode Decoding (left to right) On  C1	Pharmacode Reverse Barcode Decoding (right to left) On  C2	PLANET On  C3	PLANET Off - Default  C4
POSTNET On  D1	POSTNET Off - Default  D2	Plessey On  D3	Plessey Off - Default  D4
QR Code On - Default  E1	QR Code Off  E2	QR Code Inverse and Standard On  E3	QR Code Inverse On  E4
Enable All QR Code On (includes Micro QR)  F1	Inverse and Micro QR Code On  F2	Intentionally Left Blank F3	Intentionally Left Blank F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Straight 2 of 5 On  M0329_01	Straight 2 of 5 Off - Default  M0328_01	Telepen On  M0118_01	Telepen Off - Default  M0119_01
A1	A2	A3	A4
Trioptic On  M0056_01	Trioptic Off - Default  M0055_01	UK Royal Mail On  M0351_01	UK Royal Mail Off - Default  M0352_01
B1	B2	B3	B4
UPC On - Default  M0120_01	UPC Off  M0121_01	UPC Extension On  M0124_01	UPC Extension Off - Default  M0125_01
C1	C2	C3	C4
UPU ID-Tag On  M0365_01	UPU ID-Tag On  M0366_01	Intentionally Left Blank	Intentionally Left Blank
D1	D2	D3	D4
Intentionally Left Blank	Intentionally Left Blank	Intentionally Left Blank	Belgium Keyboard  M0189_01
E1	E2	E3	E4
Swiss Keyboard  M0190_01	US English Keyboard Mapping - Default No Leading 0  M0008_02	US English Keyboard Mapping - Leading 0  M0007_02	French Keyboard  M0010_01
F1	F2	F3	F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

German Keyboard  M0011_01	Japanese Keyboard  M0012_01	Control Characters for Non Printable ASCII  M0009_02	Universal Keyboard Mapping  M0013_01
A1	A2	A3	A4
Enable Alternative OS (Windows CE/MAC/Unix/Linux)  M0015_02	Disable Alternative OS  M0016_02	Mirroring On  M0152_01	Mirroring Off - Default  M0153_02
B1	B2	B3	B4
Prefix - AIM IDs On  M0159_01	Prefix - AIM IDs Off - Default  M0160_02	Prefix - Comma  M0130_02	Prefix - Space  M0131_02
C1	C2	C3	C4
Prefix - Tab (USB Keyboard Mode ONLY)  M0132_02	Prefix - Tab (RS-232 Mode ONLY)  M0133_02	Prefix - Erase/None - Default  M0134_02	Prefix - CRLF RS232 Only  M0135_02
D1	D2	D3	D4
Suffix - Carriage Return RS232 Only  M0136_02	Suffix - Comma  M0137_02	Suffix - Line Feed RS232 Only  M0138_02	Suffix - Carriage Return Line Feed RS232 Only  M0139_02
E1	E2	E3	E4
Suffix - Space  M0140_02	Suffix - Enter Keyboard Only  M0141_02	Suffix - Tab (USB Keyboard Mode Only)  M0142_02	Suffix - Tab (RS-232 Mode Only)  M0143_02
F1	F2	F3	F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Suffix - Erase/None - Default  A1	Erase All Prefix & Suffix Data  A2	Reader ID and Firmware Version  A3	Reader Text Commands On  A4
Reader Text Commands Off - Default  B1	Clear All Stored Data and Images  B2	Clear All JavaScript Rules  B3	Beep On Vibrate On - Default (CR1400 Only)  B4
Beep Off Vibrate On (CR1400 Only)  C1	Beep On Vibrate Off (CR1400 Only)  C2	Beep Off Vibrate Off (CR1400 Only)  C3	Beep Volume 0% (CR1000 and CR1400 Only)  C4
Beep Volume 33% (CR1000 and CR1400 Only)  D1	Beep Volume 67% (CR1000 and CR1400 Only)  D2	Beep Volume 100% (CR1000 and CR1400 Only)  D3	Duplicate Scan Disable  D4
1 sec Duplicate Scan Delay  E1	2 sec Duplicate Scan Delay  E2	3 sec Duplicate Scan Delay  E3	Default Trigger Delay  E4
Targeting Off  F1	Targeting On - Default  F2	Cell Phone Reading Enhancement Enable  F3	Cell Phone Reading Enhancement Disable  F4

