




Ribbon Loading

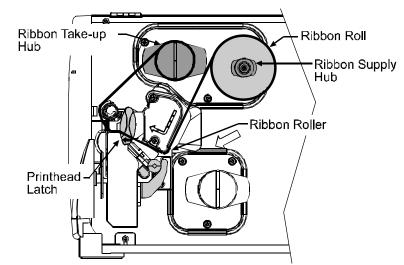

- Rotate the Printhead Latch and raise the printhead
- Slide the ribbon onto Ribbon Supply Hub
- Route the Ribbon as shown
- ➤ Wrap the ribbon around the Ribbon Take-up Hub
- Close the printhead and rotate the Ribbon Take-up Hub to remove the slack in the ribbon



Quick Start Guide

Corporate Headquarters 4501 Parkway Commerce Blvd Orlando, Fl 32808 Phone: 407-578-8007 Fax: 407-578-8377




Asia-Pacific 19 Loyang Way #01-01 CILC Building Singapore 508724 Phone: +65 542-2611 Fax: +65 542-3611 Datamax International Herbert House 12 Elizabeth Way, Pinnacles Harlow, Essex CM19 5FE UK Phone: +44 1279 772200 Fax: +44 1279 424448

For the latest products, news, and support visit our web page at


www.datamaxcorp.com


G u i d

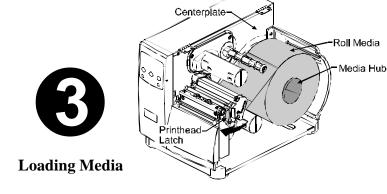

Ready Mode:

- Rotate the Printhead Latch and raise the printhead
- Slide the Roll Media onto the Media Hub
- Route the Media as shown

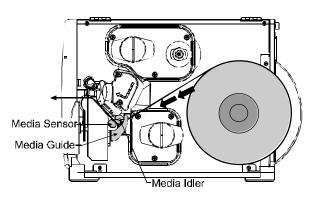

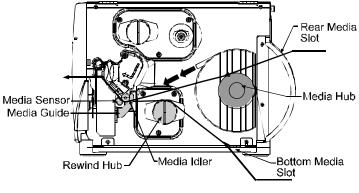

Internal Media Loading

External Media Loading



Printer Controls

OPause: Toggles the pause condition.

Tause. Toggies the pause condition

2 Feed: The FEED button feeds a label, and clears any faults

that have been corrected.

3 Cancel: Cancels a job and pauses the

printer.

4 Menu: Toggles between the ready

and menu mode.

Test: Enables the quick test mode,

see the Operators Manual for additional information.

Menu Mode:

O Arrow Up: Moves to the next item in the

menu tree, (increase values).

2 Arrow Down: Moves to the previous item in

the menu mode, (decrease

values).


3 Enter: Selects a displayed item or

value.

4 ESC: Moves to the previous menu

level.

Printer Display

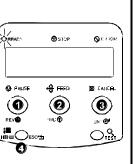



• Ready: On indicates ready, blinking indicates menu mode.

2Stop: On indicates paused state.

SError: On indicates a fault. To clear a fault press the feed button.

With the Printer On, and loaded with media (at least 4 inches wide):



Printing a Test Label ➤ Verify the printer is in the 'Ready Mode'→

> Press the Q TEST button.

Using the FWD button scroll to 'Print Config Label'. Press the Q TEST button again, after a brief hesitation the printer will print one Configuration Label.



Additional Information



Refer to the Operator's Manual for the Printhead Cam Adjustment when using narrow media.



Be sure to follow and perform the suggested Cleaning Schedule listed in the Operator's Manual.

Contacting Datamax...

Corporate Headquarters (407) 578-8007 Technical Support (407) 523-5540

For the latest products, news, and support visit our web page at www.datamaxcorp.com