SCANTEAM® 5750 Industrial Laser Decoded Output



User's Guide



Disclaimer

Welch Allyn[®] reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Welch Allyn to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of Welch Allyn.

Welch Allyn shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Welch Allyn, Incorporated.

© 1998–2000 Welch Allyn, Inc. All rights reserved.

Web Address: http://dcd.welchallyn.com

Statement of Agency Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Class B Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Caution: Any changes or modifications made to this device that are not expressly approved by Welch Allyn, Inc. may void the user's authority to operate the equipment.

Note: To maintain compliance with FCC Rules and Regulations, cables connected to this device must be *shielded* cables, in which the cable shield wire(s) have been grounded (tied) to the connector shell.

Canadian Notice

This equipment does not exceed the Class B limits for radio noise emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.

Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de la classe B prescrites dans le Reglement sur le brouillage radioelectrique edicte par le ministere des Communications du Canada.



C.S.A. Statement

This product must be used with a certified Class 2 power supply or be powered by a certified SELV (Safety Extra Low Voltage) output.

CDRH Statement

This product complies with 21 CFR Part 1040. This product is a Class II (Class III for 5750ALR) laser product with a maximum output of 1.0 mW (1.5 mW for 5750ALR) at 630–670 nanometers and continuous wave.

Statement of Agency Compliance

CE

The CE mark on the product indicates that the system has been tested to and conforms with the provisions noted within the 89/336/EEC Electromagnetic Compatibility Directive and the 73/23/EEC Low Voltage Directive.

For further information, please contact:

Welch Allyn Ltd. 1st Floor Dallam Court Dallam Lane Warrington, Cheshire WA2 7LT United Kingdom

Welch Allyn shall not be liable for use of our product with equipment (i.e., power supplies, personal computers, etc.) that is not CE marked and does not comply with the Low Voltage Directive.

Patents

The SCANTEAM 5750 product is covered by one or more of the following U.S. Patents:

 $\begin{array}{l} 4,360,798; 4,369,361; 4,387,297; 4,496,831; 4,593,186; 4,603,262; 4,607,156; \\ 4,652,750; 4,673,805; 4,736,095; 4,816,660; 4,845,350; 4,896,026; 4,923,281; \\ 4,992,717; 5,017,765; 5,047,617; 5,113,445; 5,140,144; 5,149,950; 5,168,148; \\ 5,168,149; 5,180,904; 5,247,162; 5,250,792; 5,262,627; 5,280,163; 5,280,164; \\ 5,304,786; 5,304,788; 5,367,151; 5,373,148; 5,396,053; 5,408,081; 5,410,139; \\ 5,436,440; 5,468,949; 5,479,000, 5,942,741. \end{array}$

Other U.S. and foreign patents pending.

UL and cUL Statement

UL listed UL1950 and CSA 22.2 No.950. cUL listed UL1950 and CSA 22.2 No 950.

TÜV Statement

TÜV or GS marked to EN60950 and EN60825-1.



TABLE OF CONTENTS

| Section 1 Introduction & Quick Start Menu | |
|---|------|
| Section | Page |
| Introduction | 1–1 |
| Scanner Identification | 1–2 |
| Connecting the Scanner | 1–3 |
| Scan Maps | 1–4 |
| Plug and Play Selections | |
| IBM PC Interface | 1–7 |
| Terminal Interface Selections | |
| Supported Terminals | 1–8 |
| Reset Factory Settings | 1–9 |
| Status Check | 1–9 |
| Quick Suffix Selections | 1–9 |
| Secondary Interface Selections | |
| Code 39 Wand Emulation Selection | 1–10 |
| Same Code Wand Emulation Selection | 1–10 |
| RS-232 Selection | 1–10 |
| Switched Power Mode Selections | 1–11 |
| Section 2 Output Parameters Menu | |
| Section | Page |
| Prefix / Suffix Selections | |
| Introduction | 2–1 |
| Primary Interface Prefix Selection | 2–3 |
| Primary Interface Suffix Selection | 2–3 |
| Exit Selection for Prefix / Suffix | 2–3 |
| Secondary Interface Prefix Selection | 2–5 |
| Secondary Interface Suffix Selection | 2–5 |
| Exit Selection for Prefix / Suffix | 2–5 |
| | |

| Section 2 Output Parameters Menu, continued | |
|---|------|
| Output Selections | |
| Beeper Volume Selection | 2–8 |
| Output Delays Selection | 2–8 |
| Reread Delay Selection | 2–9 |
| Good Read Delay Selection | 2–9 |
| Laser Voting Selection | 2–9 |
| Buffered Scans Selection | 2–10 |
| Code I.D. Transmit Selection | 2–10 |
| AIM I.D. Transmit Selection | 2–10 |
| Function Code Transmit Selection | 2–10 |
| Serial Communication Selections | |
| CTS Check Selection | 2–11 |
| Baud Rate Selection | 2–11 |
| RS-232 Word Length Selection | 2–12 |
| Parity Selection | 2–12 |
| Protocol Selection | 2–13 |
| Data Formatter Selections | |
| Status Check | 2–15 |
| Require Data Format | 2–15 |
| Data Format Editor | 2–15 |
| Section 3 General Operating Menu | |
| Section | Page |
| Laser Options | |
| Introduction | 3–1 |
| Marker Beam Selection | 3–2 |
| Wand Emulation Selections | |
| Transmission Rate Selection | 3–3 |
| Wake Up Pulse Selection | 3–3 |
| Output Polarity Selection | 3–3 |
| Quiescent State Idle Selection | 3–4 |
| Country Code Selections | |
| Foreign Keyboard Selection | 3–5 |
| Keyboard Selections | |
| Keyboard Style Selection | 3–6 |
| Keyboard Style Modifiers | 3–7 |

Section 4 Symbology Menu

| Section | Page |
|--|------|
| Industrial Symbology Selections | |
| | 4–1 |
| Codabar Selection | 4–2 |
| Code 39 Selection | 4–4 |
| Code 93 Selection | 4–6 |
| Interleaved 2 of 5 Selection | 4–7 |
| Matrix 2 of 5 Selection | 4–8 |
| Code 2 of 5 Selection | 4–8 |
| Code 11 Selection | 4–9 |
| Code 128 Selection | 4–9 |
| Code 128 Function Character Selection | 4–10 |
| Code 16K Selection | 4–11 |
| Code 49 Selection | 4–11 |
| Retail Symbology Selections | |
| EAN Selection | 4–12 |
| UPC Selection | 4–13 |
| EAN Addenda Selection | 4–14 |
| UPC Addenda Selection | 4–14 |
| MSI Selection | 4–15 |
| Plessev Selection | 4–15 |
| | |
| Section 5 Firmware Utility Menu | |
| Section | Page |
| Introduction | 5–1 |
| Downloading Utility | 5–2 |
| Uploading Utility | 5–2 |
| Cloning Utility | 5–3 |
| Temporary Serial Communication Configuration | 5–3 |
| Section 6 Supported Interface Keys | |
| Section | Page |
| Keyboard Function Relationships | 6–1 |
| Supported Interface Keys | 6–2 |

Section 7 Product Specifications

| Section | Page |
|--------------------------------------|------|
| SCANTEAM 5750 Product Specifications | 7–1 |

| Section 8 Maintenance and Troubleshooting | | | | | | | | | |
|---|-------------------|--|--|--|--|--|--|--|--|
| Section | | | | | | | | | |
| Maintena | ance | | | | | | | | |
| Troubles | hooting | | | | | | | | |
| Section 9 | Customer Service | | | | | | | | |
| Section | | | | | | | | | |
| Obtaining | g Factory Service | | | | | | | | |
| Technica | I Support | | | | | | | | |
| Limited V | Varranty | | | | | | | | |
| Default Cha | irts | | | | | | | | |

Page 8–1 8–2

Page 9–1 9–2 9–3

Programming Chart (inside back cover)

Sample Bar Codes (back cover)

Introduction

Your scanner provides industrial strength durability for a wide variety of bar code data collection applications. The scanner contains Welch Allyn's Instant Interface module, which integrates aggressive ("snappy") decoding, advanced data editing and formatting capabilities, and multiple interface connectivity.

The scanner recognizes and decodes 14 industry-standard bar code symbologies.

The scanner can be programmed for many communications parameters and input/output protocols compatible to the host. Programming is accomplished by using the single programming bar codes in this menu. Use this chapter to program your laser scanner to work with your terminal/computer.

This programming section contains the following:

- Getting Started Information
- Plug and Play Selections
- Terminal Interface Selections
- Main Menu Selections
- Dual Interface Selections

Introduction & Quick Start Menu

Getting Started



* To use the Auto Trigger feature place the scanner in the Document Stand.

Getting Started

Connecting the Scanner

Install the scanner by following the steps shown below:

- Turn off the power to the host system.
- Connect the interface cable to the scanner and to the terminal/computer.



(Cable, Keyboard, and Terminal will vary.)

- Turn on the power to the host system.
- Program your scanner to work with your terminal or computer by scanning the Terminal Set–Up Codes. Either scan the Plug and Play codes (page 1–7) or use the Supported Terminal list (page 1–8) to determine your Terminal ID.

With Plug and Play programming, you connect the scanner and scan *only* one bar code to program the scanner to work with a designated interface, including any required prefixes and suffixes.

• To determine if your scanner is set up correctly, scan one of the sample bar codes on the back cover of this guide.



ACAP = Minimum distance determined by symbol length and scan angle.





*100 mil retroreflective

Plug and Play Selections

IBM PC Interface



IBM PC AT and Compatibles Interface (Default) (also PS/2 30-286, 50, 55SX, 60, 70, 70-061, 70-121, 80)



IBM PS/2 and Compatibles Interface (for PS/2 25, 30 models)



IBM PC XT and Compatibles Interface

These bar codes **also** program a carriage return (CR) suffix.



The bar code above **also** programs the following parameters:

Programmable Option Baud Rate Parity Data Format Setting 9600 bits per second even 7 data bits, parity bit, 1 stop bit (8 Bit Data)



End of "Plug and Play" programming...

Terminal Interface Selections

If your terminal is not one of the Plug and Play options, you must program one of the terminals listed below. To program the terminal interface, scan the Program Terminal Interface bar code below, then scan the appropriate two digit Terminal I.D. code from the Programming Chart on the inside back cover of this manual.



Program Terminal Interface

| Supported Terminals | | | | | | | |
|-----------------------|--|---------------|--|--|--|--|--|
| Terminal | Model(s) | Terminal I.D. | | | | | |
| ADI | 1496 | 72 | | | | | |
| Apple Desktop Bus ADB | MAC Classic, SE SE30, II (All) | 49 | | | | | |
| Bull | BDS–7 (HDS–7) | 35 | | | | | |
| Esprit | 200, 400 | 05 | | | | | |
| Falco | 5220 | 47 | | | | | |
| IBM | PC XT | 01 | | | | | |
| IBM | PS/2 25, 30 | 02 | | | | | |
| IBM | AT, PS/2 30–286, 50, 55SX, 60, 70, 70–061, 70–121, 80 | 03* | | | | | |
| IBM 102 Key | 3151, 3161, 3162, 3163, 3191, | 06 | | | | | |
| | 3192, 3196, 3197, 3471, 3472, | | | | | | |
| IBM 122 Key | 3179-1 3191 3192 3471 | 07 | | | | | |
| | 3472, 3194 | 07 | | | | | |
| IBM 122 Key | 3196, 3197, 3476, 3477, | 08 | | | | | |
| | 3486, 3488, 3482 | | | | | | |
| IBM 122 Key | 3180 | 24 | | | | | |
| RS232 TTL | | 00 | | | | | |
| Telex 88 Key | 078A, 078, 79, 80, 191, 196, | 25 | | | | | |
| | 1191, 1192, 1471, 1472, 1476 | | | | | | |
| Telex 102 Key | 078A, 078, 79, 80, 191, 196, | 45 | | | | | |
| T-1 400 // | 1191, 1192, 1471, 1472, 1476 | 40 | | | | | |
| Telex 122 Key | 078A, 078, 79, 80, 191, 196, 1191, 1192, 1471, 1472, 1476 | 46 | | | | | |
| | MAC 00 | | | | | | |
| | VVY-3U | 13 | | | | | |
| | WY 60, 120, 150, 160 | 15 | | | | | |
| WVSE Enhanced BC | WV 60, 120, 150, 160, 99GT | 14 19 | | | | | |
| WISE Enhanced PC | VVT 00, 120, 100, 100 | 10 | | | | | |

Main Menu Selections

Reset Factory Settings

Scanning the *Factory Default Settings* bar code resets the scanner to the original factory settings, clearing any programming changes you may have made.



Factory Default Settings

Status Check

Scan the **Show Software Revision** bar code to transmit the software revision level to the host terminal. The software revision will be printed out as "WA34863XXX." (The "X's" will vary according to the firmware ID.)



Show Software Revision

Quick Suffix Selections

If your application requires it, scan the *Program Carriage Return Suffix* bar code to program a carriage return (CR) suffix for all enabled bar code symbologies. Scanning this bar code clears all previously programmed prefixes and suffixes.

Scan the *Clear Bar Code Suffix* bar code to disable (or clear) all previously programmed prefixes and suffixes (e.g., the carriage return suffix).



Program Carriage Return Suffix



Clear Bar Code Suffix

Secondary Interface Selections

Code 39 Wand Emulation Selection



★ Code 39 Wand Emulation Selection

Same Code Wand Emulation Selection



Same Code Wand Emulation Selection $\ensuremath{^\dagger}$

The Wand Emulation bar codes above **also** program the following parameters:

Programmable Option Transmission Rate

Output Polarity

Beeper Volume

Power Mode

Setting 40 inches per second White high Switched power (low power) Off

RS-232 Selection



RS-232 Selection

 \ddagger Supports Code 39, UPC, EAN, Code 128, Interleaved 2 of 5, and Codabar. All other codes output as Code 39.

Secondary Interface Selections

Switched Power Mode Selections

When this feature is enabled, the unit consumes less than 50 uA from its power line when the trigger is not pulled. When the trigger is pulled, it consumes normal power. This feature is used for battery powered devices to save power. If power savings is not an issue and speed is, disable this feature for better performance.





★ Switched Power (Low Power) Mode

Constant Power Mode

Introduction

Use this chapter to program the output parameters for the Hand-Held Laser Scanner. $% \left({{{\rm{T}}_{{\rm{T}}}}_{{\rm{T}}}} \right)$

This programming section contains the following menuing selections:

- Prefix and Suffix
- Output
- Serial Communication (RS-232)
- Data Formatter

Output Parameters Menu

Primary Interface Prefix and Suffix

The scanner transmits a decoded message after every successful bar code read. Prefix and Suffix characters are data characters you may assign to be sent before and after the transmitted bar code data.

Transmitted data frame -> Prefix Bar Code Message Suffix

Characters for the Prefix and Suffix are selected by their hexadecimal ASCII value, up to 12 characters each. Prefix and Suffix characters may be sent for a specific symbology, or may be sent with all bar code scans. Default Prefix = none. Default Suffix = none.

Programming Steps to Add a Primary Interface Prefix / Suffix:

- To add a Prefix, scan the *Add Primary Prefix* programming bar code. To add a Suffix, scan the *Add Primary Suffix* programming bar code.
- Refer to the Symbology Chart (page 2–7) to find the Hex value that represents the symbology(s) you want transmitted with one or more Prefixes or Suffixes. Scan the two digits on the Programming Chart (on the inside of the back cover of this menu).
- Refer to the Hex ASCII Chart (page 2–7) to find the Hex value that represents the ASCII characters you wish to transmit with the bar code data. Use the Programming Chart (inside back cover) to scan the alphanumeric combination that represents the ASCII characters.
- To complete Prefix / Suffix programming, scan either:
 - Save Current Prefix or Suffix Changes[†] programming bar code. This exits, saving the Prefix / Suffix selections you just assigned.
 - Discard Current Prefix or Suffix Changes programming bar code. This exits without changing the Prefix / Suffix.

† You may also start scanning bar codes; your Prefix / Suffix selections will be saved.

Programming Steps to Clear (or Delete) One Prefix / Suffix Entry:

- To clear the Prefix entry for a specific symbology, scan the *Clear One Primary Prefix* programming bar code.
 To clear the Suffix entry for a specific symbology, scan the *Clear One Primary Suffix* programming bar code.
- Refer to the Symbology Chart to find the Hex value representing the symbology's entry you want cleared. Scan the two digits on the Programming Chart (on the inside of the back cover of this menu).
- You don't need to scan Save Current ... Changes or Discard Current ... Changes programming bar codes to complete programming.

Other Programming Selections: Scanning the Clear All Primary Prefixes or Clear All Primary Suffixes bar code deletes <u>all</u> Primary Prefix or Suffix selections. You don't need to scan the Save Current ... Changes or Discard Current ... Changes programming bar code to complete programming.

Note: Prefix / Suffix programming examples may be found on page 2–6.

2–2

Primary Interface Prefix Selection





Clear All Primary Prefixes



Clear One Primary Prefix ‡

Primary Interface Suffix Selection





Clear All Primary Suffixes



Clear One Primary Suffix ‡

Exit Selection for Prefix / Suffix

Save Current Prefix or Suffix Changes



Discard Current Prefix or Suffix Changes



‡ One or more two-digit numbers are required after scanning this programming bar code. Please scan your selection on the Programming Chart (inside back cover).

Secondary (Dual) Interface Prefix and Suffix

The scanner will transmit a decoded message after every successful bar code read. Prefix and Suffix characters are data characters you may assign to be sent before and after the transmitted bar code data.

Transmitted data frame -> Prefix Bar Code Message Suffix

Characters for the Prefix and Suffix are selected by their hexadecimal ASCII value, up to 12 characters each. Prefix and Suffix characters may be sent for a specific symbology, or may be sent with all bar code scans. Default Prefix = none. Default Suffix = none.

Programming Steps to Add a Secondary (Dual) Interface Prefix / Suffix:

- To add a Prefix, scan the Add Secondary Prefix programming bar code. To add a Suffix, scan the Add Secondary Suffix programming bar code.
- Refer to the Symbology Chart (page 2–7) to find the Hex value that represents the symbology(s) you want transmitted with one or more Prefixes or Suffixes. Scan the two digits on the Programming Chart (on the inside of the back cover of this menu).
- Refer to the Hex ASCII Chart (page 2–7) to find the Hex value that represents the ASCII characters you wish to transmit with the bar code data. Use the Programming Chart (inside back cover) to scan the alphanumeric combination that represents the ASCII characters.
- O To complete Prefix / Suffix programming, scan either:
 - Save Current Prefix or Suffix Changes[†] programming bar code. This exits, saving the Prefix / Suffix selections you just assigned.
 - Discard Current Prefix or Suffix Changes programming bar code. This exits without changing the Prefix / Suffix.

† You may also start scanning bar codes; your Prefix / Suffix selections will be saved.

Programming Steps to Clear (or Delete) One Prefix / Suffix Entry:

- To clear the Prefix entry for a specific symbology, scan the *Clear One Secondary Prefix* programming bar code.
 To clear the Suffix entry for a specific symbology, scan the *Clear One Secondary Suffix* programming bar code.
- Refer to the Symbology Chart to find the Hex value representing the symbology's entry you want cleared. Scan the two digits on the Programming Chart (on the inside of the back cover of this menu).
- You don't need to scan Save Current ... Changes or Discard Current ... Changes programming bar codes to complete programming.

Other Programming Selections: Scanning the Clear All Secondary Prefixes or Clear All Secondary Suffixes bar code deletes <u>all</u> Secondary Prefix or Suffix selections. You don't need to scan the Save Current ... Changes or Discard Current ... Changes programming bar code to complete programming.

Note: Prefix / Suffix programming examples may be found on page 2–6.

2–4

Secondary Interface Prefix Selection





Clear All Secondary Prefixes



Clear One Secondary Prefix ‡

Secondary Interface Suffix Selection





Add Secondary Suffix ‡

Clear All Secondary Suffixes



Clear One Secondary Suffix ‡

Exit Selection for Prefix / Suffix

Save Current Prefix or Suffix Changes



Discard Current Prefix or Suffix Changes



‡ One or more two-digit numbers are required after scanning this programming bar code. Scan your selection on the Programming Chart (inside back cover).

SCANTEAM 5750 User's Guide

2-5

Prefix and Suffix Examples

Example 1: Add Suffix for Specific Symbology

You want to send a CR (carriage return) Suffix for UPC only.

- Scan the *Add Suffix* Suffix Selection bar code.
- The Symbology Chart indicates that the Hex value of UPC is "63". Scan
 6 and 3 on the Programming Chart (inside back cover).
- A "CR" is equivalent to "0D" (see the Hex ASCII Chart). Scan 0 and D on the Programming Chart.
- Scan the Save Current Suffix Changes Exit Selection bar code.

Example 2: Add Suffix for ALL Symbologies

You want to send a CR (carriage return) Suffix for all symbologies.

- Scan the Add Suffix Suffix Selection bar code.
- The Symbology Chart indicates that the Hex value for All Symbologies is "99". Scan 9 and 9 on the Programming Chart.
- A "CR" is equivalent to "0D". Scan **0** and **D** on the Programming Chart.
- Scan the **Save Current Suffix Changes** Exit Selection bar code.

Example 3: Add Prefix for Specific Symbology / Suffix for ALL Symbologies

You want to send a HT (tab) Prefix for UPC only and a CR / LF (carriage return / line feed) Suffix for all symbologies.

- Scan the *Add Prefix* Prefix Selection bar code.
- The Symbology Chart indicates that the Hex value of UPC is "63". Scan
 6 and 3 on the Programming Chart.
- An "HT" is equivalent to "09". Scan 0 and 9 on the Programming Chart.
- Scan the *Add Suffix* Suffix Selection bar code.
- The Symbology Chart indicates that the Hex value for All Symbologies is "99". Scan 9 and 9 on the Programming Chart.
- A "CR" is equivalent to "0D" and an "LF" is "0A". Scan 0, D, 0, and A on the Programming Chart.
- Scan the Save Current Prefix / Suffix Changes Exit Selection bar code.

Example 4: To Clear a Specific Prefix Entry

You've programmed the scanner to send a CR / LF (carriage return / line feed) Prefix for all symbologies (Hex value, 99). This is one Prefix entry. You've also programmed a "#" Prefix for UPC (Hex, 63). You decide that you want to clear the UPC entry, but not the Prefix entry for all symbologies.

- Scan the *Clear Specific Prefix* Prefix Selection bar code.
- The Symbology Chart indicates that the Hex value for UPC is "63". Scan
 6 and 3 on the Programming Chart.

| Symbology Chart | | | | | | | | | |
|--------------------|--------------|--------------|---|--------------|--------------|--|--|--|--|
| Symbology | Code ID † | Hex Value | Symbology | Code ID † | Hex Value | | | | |
| Codabar | а | 61 | Code 11 | h | 68 | | | | |
| Code 39 | b | 62 | Code 93 | i | 69 | | | | |
| UPC | С | 63 | Code 128 | j | 6A | | | | |
| EAN | d | 64 | Matrix 2 of 5 | m | 6D | | | | |
| Interleaved 2 of 5 | е | 65 | Plessey | n | 6E | | | | |
| Code 2 of 5 | f | 66 | All Symbologies | | 99 | | | | |
| MSI | g | 67 | (Prefix/Suffix Programming only .) | | | | | | |

| Hex to ASCII Conversion Chart | | | | | | | | | | | | | | | |
|--|--|---|--|--|--|---|--|----------------|--|----------------|--|---------------------|-------------------------------|--|--|
| ASCII | Hex | ASCII | Hex | ASC | I Hex | ASC | II Hex | ASC | I Hex | ASCI | I Hex | ASC | II Hex | ASCII | Hex |
| NUL SOH STX ETX EOT ENQ ACK BEL BS HT LF FF CB | 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D | DLE DC1 DC2 DC3 DC4 NAK SYN ETB CAN EM SUB ESC FS GS | 10 11 12 13 14 15 16 17 18 19 1A 1B 1C | SP ! # \$ % & ; () * +, | 20 21 22 23 24 25 26 27 28 29 2A 29 2A 2D | 0 1 2 3 4 5 6 7 8 9 :; < | 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D | @ABCDEFGHIJKLM | 40 41 42 43 44 45 46 47 48 49 4A 4B 4C 4D | PQRSTUVWXYZ[\1 | 50 51 52 53 54 55 56 57 58 59 5A 59 5A 55 50 50 50 50 50 50 50 50 50 50 50 50 | ، abcdef ghijk I | 601 62 64 65 66 78 69 A B C D | p q r s t u v w x y z { } | 70 71 72 73 74 75 76 77 78 79 7A 7B 7C 7D |
| SO SI | 0E 0F | RS US | 1E 1F | ; | 2E 2F | > ? | 3E 3F | N O | 4E 4F | , , | 5E 5F | n o | 6E 6F | , ~ DEL | 7E 7F |

Note: Prefix / Suffix entries for specific symbologies override the universal (All Symbologies, 99) entry.

Note: Adding a Prefix or a Suffix appends that Prefix / Suffix to any existing entries for the symbology(s) you've chosen. For example, if you've already programmed and saved a CR / LF (carriage return / line feed) and add a "#" Prefix, the "#" will be sent after the CR / LF.

If you add a Prefix / Suffix but want existing entries cleared, you'll need to use the **Clear Specific Prefix / Suffix** programming selection first. Then use the **Add Prefix / Suffix** programming selection to program your new Prefix / Suffix.



This selection provides control of the time delays between data output by the scanner to the host terminal. The actual delay is 5 milliseconds multiplied by the programmed value (00 - 99). *Default* = 00.

Intercharacter Delay is the time delay between data characters output by the scanner to the host terminal.

Interfunction Delay is the time delay between function (key) codes output by the scanner to the host terminal.

Intermessage Delay is the time delay between data messages or records output by the scanner to the host terminal.

Example: You need a 45 millisecond delay. Scan the *Intercharacter Delay* bar code. Then scan "0" and "9" on the Programming Chart ($09 \times 5ms = 45 ms$).



Intercharacter Delay (x5mS) ‡





Interfunction Delay (x5mS) ‡

.

A two-digit number is required after scanning this programming bar code. Please scan your selection on the Programming Chart (inside back cover).

2–8

Output Selections

Reread Delay Selection

This selection allows you to set a time period that must pass before the scanner can read the *same* bar code again. Setting a reread delay protects against accidental rereads of the same bar code. Longer delays are effective in minimizing accidental rereads at POS (point of sale) terminals. Use shorter delays in applications where repetitive bar code scanning is required.



Medium (450 milliseconds)

★ Low (175 milliseconds)





Extra High (2.0 seconds)

Good Read Delay Selection

This selection allows you to set a time period that must pass before the scanner can read another bar code. Some terminals require a slower read rate. By setting a good read delay, you can ensure a good read.



⊁ None



Medium (1.0 second)



Low (500 milliseconds)



High (1.5 second)

Laser Voting Selection

When Laser Voting is enabled, the scanner requires three (3) identical, consecutive scans before the bar code data will be accepted and transmitted to the terminal. When this selection is disabled, the bar code data will be transmitted following one (1) valid scan.





★ Disable

SCANTEAM 5750 User's Guide

2–9

Output Selections

Buffered Scans Selection

When enabled, this selection allows the scanner to accept a second scan while the current scan is transmitted to the host terminal (buffering of scanned data). When disabled, the scanner cannot accept additional scans until the current scan is transmitted to the host. Default = Enable.





★ Enable



This allows you to enable or disable transmission of a Code I.D. before the decoded bar code symbology. (See the Symbology Chart on page 2-7 for the single character code that identifies each symbology.)





AIM I.D. Transmit Selection

This selection allows you to enable or disable transmission of an AIM I.D. before the decoded bar code symbology. (See AIM Guidelines on Symbology Identifiers for more information on the AIM symbology ID characters.) Default = Disable.





★ Disable

Function Code Transmit Selection

When this selection is enabled, and function codes are contained within the scanned data, the scanner transmits the key code (which corresponds to the decoded ASCII function code) to the terminal. ASCII function codes are represented by the HEX values 00-1F. (Charts of these function codes are shown in Section 6, Supported Interface Keys.)





2 - 10

Serial Communication Settings

★ Default All Serial Communication Settings ★



CTS Check Selection

This selection allows you to select the software programming feature that checks for a CTS signal, if your application does not have a CTS I/O line. Default = Disable.





★ Disable

Baud Rate Selection

This selection sets the baud rate from 300 bits per second to 38,400 bits per second. Programming baud rate causes the data to be sent at the specified rate. The host terminal must be set up for the same baud rate as the scanner, to ensure reliable communication. Default = 9600 bps.

SCANTEAM 5750 User's Guide





1200











2400





2–11

Serial Communication Settings

RS-232 Word Length Selection

This selection allows you to set the RS-232 word length at seven or eight bits of data per character. The number of start and stop bits is fixed at one each. If an application requires only ASCII Hex characters 0 through 7F decimal (text, digits, and punctuation), select 7 data bits. For applications requiring use of the full ASCII set, select 8 data bits per character.



★ 7 Data, 1 Stop



7 Data, 2 Stop



8 Data, 1 Stop

Parity Selection

This selection provides a means of checking character bit patterns for validity. The scanner can be configured to operate under Even, Odd, Mark / None, or Space parity options. The host terminal must be set up for the same parity as the scanner, to ensure reliable communication.



None









Serial Communication Settings

Protocol Selection

This selection allows you to program the scanner for the protocol required by your application. The protocol is a set of rules concerning the exchange of data between serially communicating devices. The scanner supports Record, Xon / Xoff, and Ack / Nak protocols when receiving data from an RS-232 device.





Xon / Xoff



Data Formatter Selections

Data Format Editor

This selection provides editing of all input (scanned) data. All Industrial and Retail symbologies can be formatted. You may scan the *Clear Data Format* bar code if you are **certain** you want to delete or clear all formats.

To make Data Format Editor selections, you must know the terminal type, code I.D., code length, and editor commands your application requires. Use the Alpha-numeric bar codes (inside back cover) to scan these options.

Use the Data Format Editor by following the steps below:

- Scan the *Enter Data Format* bar code.
- O Terminal Type

Scan two bar codes that represent the terminal type (00-99†, see page 1–8 for Terminal I.D. list.)

O Code I.D.

Refer to the Symbology chart (page 2–7), then scan two bar codes from the "Hex Value" column that represent the Code I.D. of the symbology you want formatted. ("All Symbologies" – hex value 99 – is not supported by Data Formatter.)

O Length

Scan two numeric bar codes (inside back cover) for the bar code length you require (00-99†). Be sure to include spaces.

Editor Command Sequences

Refer to the Format Editor Commands chart (page 2–16). Scan two bar codes that represent the command you need.

O End Format (FF)

Scan "F" twice to end Data Format Editor programming.

 \dagger 99 is the Universal number, indicating all terminals and all code lengths.

Data Formatter Selections

Status Check

Scan the *Show Formats* bar code to transmit the existing Data Format Editor formats. One format per line will be printed out.



Show Formats

Require Data Format

When disabled, the bar code data will be output to the host as scanned (including prefixes and suffixes). When enabled, all input data must conform to an edited format or the scanner will not transmit the input data to the host device.





★ Disable

Data Format Editor

See pages 2–14 and 2–16 through 2–17 for a description of this selection and examples.



Enter Data Format



Clear All Data Formats

Data Formatter Selections

Format Editor Commands Chart

Send Commands

- F1 Send all characters followed by "XX" key or function code, starting from current cursor position. **Syntax = F1XX** (XX = HEX ASCII character or function code 00–FE HEX).
- F2 Send "NN" characters followed by "XX" key or function code, starting from current cursor position. **Syntax = F2NNXX** (NN = number of characters 00–99 DEC, XX = HEX ASCII character or function code 00–EF HEX).
- F3 Send up to but not including "SS" character (Search and Send) starting from current cursor position, leaving cursor pointing to "SS" character followed by "XX" key or function code. **Syntax = F3SSXX** (SS = HEX ASCII Character 00–7F HEX, XX = HEX ASCII character 00–7F HEX).
- F4 Send "XX" character "NN" times (Insert) leaving cursor in current cursor position. **Syntax = F4XXNN** (XX = HEX ASCII character 00–7F HEX, NN = number of characters 00–99 DEC).

Move Commands

- F5 Move cursor ahead "NN" characters from current cursor position. Syntax = F5NN (NN = number of characters 00–99 DEC).
- F6 Move cursor back "NN" characters from current cursor position. **Syntax = F6NN** (NN = number of characters 00–99 DEC).
- F7 Move cursor to the beginning of the data string. Syntax = F7.

Search Commands

- F8 Search ahead for "XX" character from current cursor position, leaving cursor pointing to "XX" character. Syntax = F8XX (XX = HEX ASCII character 00–7F).
- F9 Search back for "XX" character from current cursor position, leaving cursor pointing to "XX" character. **Syntax = F9XX** (XX = HEX ASCII character 00–7F).

Miscellaneous Commands

- FA Leading zero suppress on. Suppress leading zeroes from current cursor position until first non-zero character. **Syntax = FA**.
- FB Suppress "XX" character(s) (up to three) starting from current cursor position until suppress disable command "FC" or end of format. Syntax = FBXXFB, FBXXXXFB, FBXXXXXFB (XX = ASCII character 00–7F).
- FC Disable suppress filter and clear all suppressed characters. Syntax = FC.
- FE Compare character in current cursor position to the character "XX." If characters are equal, increment cursor. If characters are not equal, no format match. **Syntax = FEXX** (XX = HEX ASCII character 00 7F).
Data Formatter Selections

Data Formatter Example

You are using an IBM PC AT and are scanning a UPC A bar code with a five digit addenda (shown below). The bar code has a total of 18 characters, including the number system, the check digits, and a space between the main bar code data and the addenda bar code data.



0 12343 07030 3

For your application, you don't want the space between the main bar code data and the addenda bar code data transmitted. You also want the bar code data followed by a carriage return (CR).

Refer to the Format Editor Commands Chart on page 2–16 to format the following example. The programming bar codes on pages 2–15, and the alpha-numeric bar codes on the inside back cover are used to program the data formatter.

- Scan the *Enter Data Format* bar code (page 2–15).
- Scan the 03 bar codes for PC AT Terminal Type.
- Scan the 63 bar codes, the Hex value for UPC symbology.
- Scan the **18** bar codes for the bar code length.

The following are the Editor Command Sequences:

- Scan the *FB* (suppress characters command) bar codes, scan 20 (the Hex value for a space), and then scan *FB* to frame (complete) the command.
- Scan the F7 bar codes to move the cursor back to the beginning of the bar code data.
- Scan the *F1* and *0D* bar codes to send all the characters followed by a carriage return (CR= 0D in Hex value).
- Scan the *FF* bar codes to end Format Editor selection.

Data Formatter Selections

Introduction

Use this chapter to program the Hand-Held Laser Scanner for General Operating features.

This programming section contains the following menuing selections:

- Laser Options
- Wand Emulation
- Country Code
- Keyboard



General Operating Menu

Laser Options

Marker Beam Selection

When enabled, the scanner shows a marker or locator beam before the red scan line opens across a bar code and the scanning process begins. The marker beam, emitted by centering the optical scan mirror, appears as a bright spot of illumination that serves as an aiming guide when bar code targets are at a distance from the scanner. **Note:** Applies only to the 5750ALR product.





Marker Beam Delay

When the marker beam has been turned on, you may set a delay between the time the marker beam appears and the time the scanner reads the bar code.





Wand Emulation Selections

Transmission Rate Selection

This programming selection sets the transmission rate from 10 ips (inches per second) to 300 ips if the scanner is in Wand Emulation mode. Programming the transmission rate causes the data to be sent at the specified rate. The programmed transmission rate must be compatible with the device receiving the bar code data. *Default = 40 ips (inches per second)*.



This selection provides a "wake up" pulse on the sync line from the scanner to a portable terminal. This feature extends battery life of the portable terminal by waking up the terminal only when data is ready to be sent. Bar code data follows the wake up pulse after a 0.2 second delay. *Default = Disable*.





★ Disable

Output Polarity Selection

This selection allows you to set the output logic convention for the digital output. The choices are White High ("Laser" output) and Black High. Default = White High.





Wand Emulation Selections

Quiescent State Idle Selection

This sets the state of the video signal in idle mode. The scanner must be in Constant Power mode to use the quiescent state idle. Default = Quiescent State High.



★ Quiescent State High



Country Code Selections

Foreign Keyboard Selection

This programming selection allows you to re-map the keyboard layout for the selected country. As a general rule, the following characters are not supported by the scanner for countries other than the United States:

@ | \$ # { } [] = / ' \ < > ~



★ United States



Denmark, Finland, Norway, Sweden



Germany, Austria



Switzerland



Denmark (Wyse only)



Belgium





Italy



United Kingdom



Norway (Wyse only)

Keyboard Selections

Keyboard Style Selections

Keyboard Style Selections

This programming selection allows you to program special keyboard features, such as Caps Lock and Shift Lock.

Regular is used when you normally have the Caps Lock key off.

Caps Lock is used when you normally have the Caps Lock key on.

 ${\it Shift \, Lock}$ is used when you normally have the Shift Lock key on. (Not common to U.S. keyboards.)

Automatic Caps Lock is used if you change the Caps Lock key on and off. The software tracks and reflects if you have Caps Lock on or off (AT and PS/2 only). This selection can only be used with systems that have an LED which notes the Caps Lock status.

Emulate External Keyboard should be scanned if you do not have an external keyboard (IBM AT or equivalent).





Caps Lock







Keyboard Selections

Keyboard Style Modifiers

Keyboard Style Modifiers

This programming selection allows you to program special keyboard features, such as CTRL+ codes and Turbo Mode.

Default All – This sets all Keyboard Style Modifiers to their default states (Control + ASCII Mode Off, Turbo Mode Off, Numeric Keypad Mode Off).

Control + ASCII Mode On – If you scan this selection, the scanner sends key combinations for ASCII control characters for values 00-1F. Refer to page 6–1 for CTRL+ Values. *Default* = Off

Turbo Mode – Selecting Turbo Mode On, (for the IBM AT only), programs the scanner to send characters to the terminal faster. *Default* = *Off*

Numeric Keypad Mode – Selecting Numeric Keypad Mode On sends numeric characters as if entered from a numeric keypad. *Default* = *Off*

Automatic Direct Connect – When Emulate External Keyboard has been selected (page 3–6), Automatic Direct Connect Mode keeps the integrated keyboard from becoming permanently disabled. Default = Off

Note: This selection disabled the keyboard for the entire duration of the bar code transmission.



Default All



Control + ASCII Mode On



Turbo Mode On



Numeric Keypad Mode On



Automatic Direct Connect Mode On

★ Control + ASCII Mode Off



★ Turbo Mode Off



★ Numeric Keypad Mode Off



★ Automatic Direct Connect Mode Off

SCANTEAM 5750 User's Guide

3–7

Introduction

Use this chapter to program the Hand-Held Laser Scanner for Industrial and Retail Symbology selections.

This programming section contains the following menuing selections:

- Codabar Selections.
- Code 39 Selections.
- Code 93 Selections.
- Interleaved 2 of 5 Selections.
- Code 2 of 5 Selections.
- Matrix 2 of 5 Selections.
- Code 11 Selections.
- Code128 Selections.
 - Code 16K Selections.
 - Code 49 Selections.
 - EAN Selections.
- UPC Selections.
- MSI Selections.
- Plessey Selections.





★ Default All Codabar Settings ★





‡ A two-digit number is required after scanning this programming bar code. Scan your selection on the Programming Chart (inside back cover).

Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.



Codabar Selection, continued



★ No Check Character



Validate, But Don't Transmit

Validate, And Transmit

Concatenation

Codabar supports symbol concatenation. When you *Allow* concatenation, the reader will look for a Codabar symbol having a "D" start character, adjacent to a symbol having a "D" stop character. In this case the two messages are concatenated into one with the "D" characters omitted.

Codabar



Select *Require* to prevent the reader from decoding a lone Codabar symbol.

Concatenation



Don't Allow (Concatenation Off)





Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.



★ Default All Code 39 Settings ★





‡ A two-digit number is required after scanning this programming bar code. Scan your selection on the Programming Chart (inside back cover).

Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.

SCANTEAM 5750 User's Guide

4-4

Code 39 Selection, continued



Decoding





Message Length



Maximum ‡





★ No Check Character



Validate, But Don't Transmit



Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.

★ Default All Code 93 Settings ★



Code 93 Selection



Code 93





Message Length



Maximum ‡

| | FULL ASCII CHART † | | | | | | | | | | | | | | |
|---|--------------------|---|--|---------------------------|---|------------------|---|------------------|-----------------|-------------------------------|------------------|------------------|----------------|---|--|
| NUL SOH STX ETX EOT ENQ ACK BS HT LF VT FF CR SO | %ABCDEFGHIJKLMN | DLE DC1 DC2 DC3 DC4 NAK SYN ETB CAN EM SUB ESC FS GS RS RS | \$P \$R \$S \$U \$W \$X \$Y \$Z &A %D %D | SP !"#\$%&, ()*+,-; | SPACE /A /B /C /D /E /F /G /H // // /// // // // // // // // // // // | 0123456789:;<=>2 | 0 1 2 3 4 5 6 7 8 9 /Z F %G %H %I | @ABCDEFGHIJKLMN0 | %ABCDEFGHIJKLMN | P Q R S T U V W X Y Z [\] ^ | PQRSTUVWXYZ%LMN0 | ، abcdefghijkImn | %ABCDEFGHJKLM2 | p q r s t u v w x y z { } ? | P Q R S T U V W X Y Z P Q R S T + + + + + + + + + + + 2 % % % % |

 † This chart is used for encoding the above characters in Full ASCII when using Code 39 bar codes. For example, to get a "<", encode %G (which is 25 47 on the Hex ASCII chart in the Prefix / Suffix Programming section).

‡ A two-digit number is required after scanning this programming bar code. Scan your selection on the Programming Chart (inside back cover).

4–6

★ Default All Interleaved 2 of 5 Settings ★





Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.

★ Default All Matrix / Code 2 of 5 Settings ★





‡ A two-digit number is required after scanning this programming bar code. Scan your selection on the Programming Chart (inside back cover).

Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.

★ Default All Code 11 / Code 128 Settings ★





‡ A two-digit number is required after scanning this programming bar code. Scan your selection on the Programming Chart (inside back cover).

Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.

Code 128 Function Character Selection

When Code 128 Function Character is enabled, the scanner can substitute a <GS> for function character 1. To enable the <GS> substitution, you must scan the Code 128 Function Character On bar code, and the <GS> Substitution On bar code.

Note: For complete Code 128 support, the AIM ID Transmit selection should also be enabled. Refer to page 2-10.



⊁ Off

★ Default All Code 16K / Code 49 Settings ★





 \ddagger Not in standard product. Contact your Welch Allyn Sales Coordinator.

‡ A two-digit number is required after scanning this programming bar code. (16K may accept a 3-digit number.) Scan your selection on the Programming Chart (inside back cover).

Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.

Retail Symbology Selections

★ Default All EAN / UPC Settings ★





Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.

Retail Symbology Selections

★ Default All UPC / EAN Settings ★





Programming Tip: If a symbology will not be used, we recommend turning off to minimize the chance of a misread.



Retail Symbology Selections

★ Default All MSI & Plessey Settings ★





Programming Tip: If a symbology will not be used, we recommend turning it off to minimize the chance of a misread.

Introduction

The scanner's internal operational firmware is contained in a "Flash EEPROM" (a programmable / erasable ROM – Read Only Memory). This enables you to download new firmware upgrades, without opening the scanner or changing a chip (IC). A download kit that includes the software (in DOS or Windows versions) and an instruction manual is available from your sales distributor.

The scanner also has a special "cloning" capability. Cloning provides a quick, convenient way to re-program installed scanners from a master unit containing new or updated firmware, eliminating the need to use a PC for each serial download. After upgraded firmware is downloaded into the master unit, the master may be used to program other scanners. (A cloning cable is used, and may be ordered from your distributor.)

This programming section contains the following menuing selections:

- Downloading Utility.
- Uploading Utility.
- Cloning Utility.
- Temporary Serial Communication Configuration.



Firmware Utility Menu



Downloading Utility

Scanning the **Download New Firmware** bar code prepares the scanner to be downloaded with new firmware. New firmware is downloaded by using the Quick*Load application software (in the download kit). Quick*Load can perform firmware uploads (reading the device's memory) and downloads (writing to the device's memory). The Quick*Load application will prompt you to scan the symbol (shown below) at the appropriate time.



Uploading Utility

Scanning the *Memory Upload* bar code sends the entire contents of ROM to the host terminal. The data is transmitted serially, as INTEL-formatted ASCII text strings, at 19,200 baud, no parity, 8 data bits, and 1 stop bit.



Firmware Utilities

Cloning Utility

Scanning the *Clone Master* bar code will transfer the firmware contents of the "master" unit to the "destination" or installed unit. First, you must follow the steps below to initiate the cloning procedure:

- 1) Connect the destination (installed) unit to one of the 8 pin modular connectors on the cloning cable.
- 2) Connect the master unit (containing the new or updated software) to the remaining 8 pin modular connector on the cloning cable.
- Make sure that both units are powered *On*, and then scan the *Clone Destination* bar code with the destination unit.



Clone Destination

4) Now scan the *Clone Master* bar code with the master unit.



- 5) The master unit will start transferring its firmware contents to the installed / destination unit.
- 6) When cloning is complete, the master unit will double beep. This process takes about 30 seconds.

Temporary Serial Communication Configuration

For quick download communication configuration, scan the W + A bar code to temporarily configure the scanner for 9600 baud rate, no parity, 8 data bits, and 1 stop bit. Standard receive (RX) and transmit (TX) voltages are also selected. RTS / CTS handshaking is disabled. This change is *temporary*. The next time the scanner is powered down and then up, its serial communication settings are restored to the programmed settings.



Firmware Utilities

Keyboard Function Relationships The following Keyboard Function Code, Hex/ASCII Value, and Full ASCII "CTRL"+ relationships apply to all terminals that can be used with the Hand-Held Decoded Output Laser scanner.

| Function Code HEX/ASCII Value Full ASCII "C | TRL" + |
|--|------------------------------------|
| NUL 00 2 | |
| SOH 01 A | |
| STX 02 B | |
| ETX 03 C | |
| EOT 04 D | |
| ENQ 05 E | |
| ACK 06 F | |
| BEL 07 G | |
| BS 08 H | |
| HT 09 I | |
| LF OA J | |
| VT 0B K | |
| FF 0C L | |
| CR 0D M | |
| SO 0E N | |
| SI OF O | |
| DLE 10 P | |
| DC1 11 Q | |
| DC2 12 R | |
| DC3 13 S | |
| DC4 14 T | |
| NAK 15 U | |
| SYN 16 V | |
| ETB 17 W | |
| CAN 18 X | |
| EM 19 Y | |
| SUB 1A Z | |
| ESC 1B [| |
| FS 1C \ | |
| GS 1D] | |
| RS 1E 6 | |
| 110 11 | |
| US 1F - | |
| The last five characters in the Full ASCII "CTRL"+ column ([\]6 - only. The following chart indicates the equivalents of these five different countries. | ·), apply to US characters for |
| The last five characters in the Full ASCII "CTRL"+ column ([\]6- only. The following chart indicates the equivalents of these five different countries. Country Codes | ·), apply to US characters for |
| US IF - The last five characters in the Full ASCII "CTRL"+ column ([\]6- only. The following chart indicates the equivalents of these five different countries. Country Codes United States [\] 6 - | ·), apply to US characters for |

| Country | | | Coues | | | |
|----------------|---|---|-------|---|---|--|
| United States | [| ١ |] | 6 | - | |
| Belgium | ĺ | < | j | 6 | - | |
| Scandinavia | 8 | < | 9 | 6 | - | |
| France | ^ | 8 | \$ | 6 | = | |
| Germany | | Ã | + | 6 | - | |
| Italy | | \ | + | 6 | - | |
| Swiss | | < | • • | 6 | - | |
| United Kingdom | [| / |] | 6 | - | |
| Denmark | 8 | \ | 9 | 6 | - | |
| Norway | 8 | Ň | 9 | 6 | - | |
| Spain |] | Ň |] | 6 | - | |

SCANTEAM 5750 User's Guide

6–1

Section 6

Supported Interface Keys

| | | IBM AT/XT and | | | | |
|-----------|--------|-------------------|-------------|---------------------|--|--|
| Supported | | PS/2 Compatibles, | IBM XTs and | IBM, | | |
| Interfac | e Keys | WYSE PC/AT | Compatibles | Memorex Telex | | |
| NUL | 00 | Reserved | Reserved | Reserved | | |
| SOH | 01 | Enter (KP) | CR/Enter | Enter | | |
| STX | 02 | Cap Lock | Caps Lock | F11 | | |
| ETX | 03 | ALT make | Reserved | F12 | | |
| EOT | 04 | ALT break | Reserved | F13 | | |
| ENQ | 05 | CTRL make | Reserved | F14 | | |
| ACK | 06 | CTRL break | Reserved | F15 | | |
| BEL | 07 | CR/Enter | CR/Enter | New Line | | |
| BS | 08 | Reserved | Reserved | F16 | | |
| HT | 09 | Tab | Tab | F17 | | |
| LF | 0A | Reserved | Reserved | F18 | | |
| VT | 0B | Tab | Tab | Tab/Field Forward | | |
| FF | 0C | Delete | Delete | Delete | | |
| CR | 0D | CR/Enter | CR/Enter | Field Exit/New Line | | |
| SO | 0E | Insert | Insert | Insert | | |
| SI | 0F | Escape | Escape | F19 | | |
| DLE | 10 | F11 | Reserved | Error Reset | | |
| DC1 | 11 | Home | Home | Home | | |
| DC2 | 12 | Print | Print | F20 | | |
| DC3 | 13 | Back Space | Back Space | Back Space | | |
| DC4 | 14 | Back Tab | Back Tab | Backfield/Back Tab | | |
| NAK | 15 | F12 | Reserved | F21 | | |
| SYN | 16 | F1 | F1 | F1 | | |
| ETB | 17 | F2 | F2 | F2 | | |
| CAN | 18 | F3 | F3 | F3 | | |
| EM | 19 | F4 | F4 | F4 | | |
| SUB | 1A | F5 | F5 | F5 | | |
| ESC | 1B | F6 | F6 | F6 | | |
| FS | 1C | F7 | F7 | F7 | | |
| GS | 1D | F8 | F8 | F8 | | |
| RS | 1E | F9 | F9 | F9 | | |
| US | 1F | F10 | F10 | F10 | | |

* IBM 3191/92, 3471/72, 3196/97, 3476/77, Telex (all models).

Supported Interface Keys

| Supported Interface Keys | | IBM, Memorex Telex (102)* | Memorex Telex (88)** | WYSE | | |
|-----------------------------|----|------------------------------|-------------------------|--------------|--|--|
| NUL | 00 | Reserved | Reserved | Reserved | | |
| SOH | 01 | Enter | Enter | Enter | | |
| STX | 02 | F11 | PF10 | PF1 | | |
| ETX | 03 | F12 | PF11 | PF2 | | |
| EOT | 04 | F13 | PF12 | PF3 | | |
| ENQ | 05 | F14 | Reserved | PF11 | | |
| ACK | 06 | F15 | Reserved | PF12 | | |
| BEL | 07 | New Line | New Line | New Line | | |
| BS | 08 | F16 | Field Forward | PF4 | | |
| HT | 09 | F17 | Field Forward | TAB | | |
| LF | 0A | F18 | Reserved | F13 | | |
| VT | 0B | Tab/Field Forward | Field Forward | F14 | | |
| FF | 0C | Delete | Delete | Remove | | |
| CR | 0D | Field Exit | New Line | New Line | | |
| SO | 0E | Insert | Insert | Insert Here | | |
| SI | 0F | Clear | Erase | Cursor Up | | |
| DLE | 10 | Error Reset | Error Reset | Cursor Left | | |
| DC1 | 11 | Home | Reserved | Cursor Down | | |
| DC2 | 12 | Print | Print | Cursor Right | | |
| DC3 | 13 | Back Space | Back Space | Delete | | |
| DC4 | 14 | Back Tab | Back Field | Print | | |
| NAK | 15 | F19 | Reserved | F15 | | |
| SYN | 16 | F1 | PF1 | F1 | | |
| ETB | 17 | F2 | PF2 | F2 | | |
| CAN | 18 | F3 | PF3 | F3 | | |
| EM | 19 | F4 | PF4 | F4 | | |
| SUB | 1A | F5 | PF5 | F5 | | |
| ESC | 1B | F6 | PF6 | F6 | | |
| FS | 1C | F7 | PF7 | F7 | | |
| GS | 1D | F8 | PF8 | F8 | | |
| RS | 1E | F9 | PF9 | F9 | | |
| US | 1F | F10 | Home | F10 | | |

 * IBM 3196/97, 3476/77, 3191/92, 3471/72, Memorex Telex (all models) with 102 key keyboards

** Memorex Telex with 88 key keyboards

| Suppo Interfac | rted Es ce Keys | sprit 200, 400 ANSI | Esprit 200, 400 ASCII | Esprit 200, 400 PC |
|-------------------|--------------------|------------------------|--------------------------|-----------------------|
| NUL | 00 | Reserved | Reserved | Reserved |
| SOH | 01 | New Line | New Line | New Line |
| STX | 02 | N/A | N/A | N/A |
| ETX | 03 | N/A | N/A | N/A |
| EOT | 04 | N/A | N/A | N/A |
| ENQ | 05 | N/A | N/A | N/A |
| ACK | 06 | N/A | N/A | N/A |
| BEL | 07 | New Line | New Line | New Line |
| BS | 08 | N/A | N/A | N/A |
| HT | 09 | Tab | Tab | Tab |
| LF | 0A | N/A | N/A | N/A |
| VT | 0B | Tab | Tab | Tab |
| FF | 0C | N/A | N/A | Delete |
| CR | 0D | New Line | New Line | New Line |
| SO | 0E | N/A | N/A | Insert |
| SI | 0F | Escape | Escape | Escape |
| DLE | 10 | F11 | F11 | F11 |
| DC1 | 11 | Insert | Insert | Home |
| DC2 | 12 | F13 | F13 | Print |
| DC3 | 13 | Back Space | Back Space | Back Space |
| DC4 | 14 | Back Tab | Back Tab | Back Tab |
| NAK | 15 | F12 | F12 | F12 |
| SYN | 16 | F1 | F1 | F1 |
| ETB | 17 | F2 | F2 | F2 |
| CAN | 18 | F3 | F3 | F3 |
| EM | 19 | F4 | F4 | F4 |
| SUB | 1A | F5 | F5 | F5 |
| ESC | 1B | F6 | F6 | F6 |
| FS | 1C | F7 | F7 | F7 |
| GS | 1D | F8 | F8 | F8 |
| RS | 1E | F9 | F9 | F9 |
| US | 1F | F10 | F10 | F10 |

| Suppo Interfa | rted ce Keys | Bull BDS–7 (Honeywell HDS–7) | HP 700/92 | WYSE WY–60/150 (ASCII/ANSI keyboards) |
|------------------|-----------------|------------------------------------|--------------|---|
| NUL | 00 | Reserved | Reserved | Reserved |
| SOH | 01 | Transmit | Enter | Enter |
| STX | 02 | Reserved | Caps | PF1 |
| ETX | 03 | Reserved | Reserved | PF2 |
| EOT | 04 | Reserved | Reserved | PF3 |
| ENQ | 05 | Backtab | Reserved | PF11 |
| ACK | 06 | Reserved | Reserved | PF12 |
| BEL | 07 | Carriage Return | Reserved | New Line |
| BS | 08 | Back Space | Back Space | PF4 |
| HT | 09 | Tab | Tab | ТАВ |
| LF | 0A | F11 | Reserved | F13 |
| VT | 0B | F12 | Reserved | F14 |
| FF | 0C | Delete Character | Reserved | Remove |
| CR | 0D | Carriage Return | Return | New Line |
| SO | 0E | Insert | Reserved | Insert Here |
| SI | 0F | Clear | Reserved | Cursor Up |
| DLE | 10 | Error Reset | Home | Cursor Left |
| DC1 | 11 | Home | Reserved | Cursor Down |
| DC2 | 12 | Delete Line | Reserved | Cursor Right |
| DC3 | 13 | Erase EOP | Reserved | Delete |
| DC4 | 14 | Erase EOF | Reserved | Print |
| NAK | 15 | Insert Line | Clear Screen | F15 |
| SYN | 16 | F1 | F1 | F1 |
| ETB | 17 | F2 | F2 | F2 |
| CAN | 18 | F3 | F3 | F3 |
| EM | 19 | F4 | F4 | F4 |
| SUB | 1A | F5 | F5 | F5 |
| ESC | 1B | F6 | Escape | F6 |
| FS | 1C | F7 | F6 | F7 |
| GS | 1D | F8 | F7 | F8 |
| RS | 1E | F9 | F8 | F9 |
| US | 1F | F10 | Reserved | F10 |

| Supported | | |
|----------------|----|----------------|
| Interface Keys | | WYSE WY-30 |
| NUL | 00 | Reserved |
| SOH | 01 | Enter |
| STX | 02 | Reserved |
| ETX | 03 | Reserved |
| EOT | 04 | Reserved |
| ENQ | 05 | Reserved |
| ACK | 06 | Reserved |
| BEL | 07 | Return |
| BS | 08 | Reserved |
| HT | 09 | Tab |
| LF | 0A | Line Feed |
| VT | 0B | Reserved |
| FF | 0C | Reserved |
| CR | 0D | Return |
| SO | 0E | Reserved |
| SI | 0F | Cursor Up |
| DLE | 10 | Cursor Left |
| DC1 | 11 | Cursor Down |
| DC2 | 12 | Cursor Right |
| DC3 | 13 | Back Space |
| DC4 | 14 | Reserved |
| NAK | 15 | Reserved |
| SYN | 16 | F1 |
| ETB | 17 | F2 |
| CAN | 18 | F3 |
| EM | 19 | F4 |
| SUB | 1A | F5 (CTRL F1) |
| ESC | 1B | F6 (CTRL F2) |
| FS | 1C | F7 (CTRL F3) |
| GS | 1D | F8 (CTRL F4) |
| RS | 1E | F9 (SHIFT F2) |
| US | 1F | F10 (SHIFT F3) |
| Parameter | Specification |
|---|---|
| Dimensions Weight Length Height Width | 7 ounces (196 g) 5.5 inches (14 cm) 5.5 inches (14 cm) 3 inches (7.6 cm) |
| Light Source | 630–670 nm visible laser diode (VLD) |
| Scan Rate | 36 ±3 scans per second |
| Print Contrast | Minimum Reflective Difference (MRD) = 25%- 5750A; MRD = 40% - 5750ALR, 5750HD |
| Skew Angle | ±65 degrees (from perpendicular) – 5750A ±60 degrees (from perpendicular) – 5750HD ±30 degrees (from perpendicular) – 5750ALR |
| Pitch Angle | ±55 degrees (left/right from perpendicular) – 5750A, 5750ALR ±65 degrees (left/right from perpendicular) – 5750HD |
| Operating Voltage | 5VDC |
| Power Consumption | Measured at 5VDC 200 mA maximum |
| Temperature Ranges | Operating 32° F to +122° F (-0° C to +50° C) Storage -22° F to +158° F (-30° C to +70° C) |
| Humidity | 5 to 95% non-condensing |
| Mechanical Shock | 26 drops from 6 feet (1.8m) to concrete |
| ESD Sensitivity | 15 kV to any external surface |
| Agency Compliance | FCC Class B, CE, LVD, CDRH Class II, UL, cUL, TÜV, C–TIC. 5750ALR is a Class III laser device. |
| | |

The Hand-Held Decoded Output Laser Scanner provides reliable and efficient operation with a minimum of care. Although specific maintenance is not required, the following periodic checks insure dependable scanner operation: Scanning performance may degrade if the scan window is not clean. If the window is visibly dirty, or if the scanner isn't scanning well, clean the scan window with a soft cloth or facial tissue dampened with water (or a mild detergent-water solution). If a detergent solution is used, rinse with a clean The scanner housing may also be cleaned the same way. Warning: Do not submerge the scanner in water. The scanner's housing is not water-tight. Do not use abrasive wipers or tissues on the scan window: abrasive wipers may scratch the window. Never use solvents (alcohol or acetone) on the housing or window: solvents may damage the finish or the window. Do not open the scanner. There are no serviceable parts inside.

Section

8

Maintenance and Troubleshooting

Inspecting Cords and Connectors

Maintenance

Cleaning the Scan Window

tissue dampened with water only.

Inspect the scanner's interface cable and connector for wear or other signs of damage. A badly worn cable or damaged connector may interfere with scanner operation. Contact your Welch Allyn distributor for information about cable replacement.

Examining the Scanner Housing

Routinely examine the scanner housing for signs of damage. A damaged housing may cause the internal components to move and may result in a malfunctioning scanner.

To Reset Factory Settings

If you aren't sure what programming options have been set up in your scanner, or you've changed some options and now want the factory settings restored, refer to Main Menu Selections in Section 1 and scan the Factory Default Settings bar code.

SCANTEAM 5750 User's Guide

8-1

Maintenance & Troubleshooting

Troubleshooting

The Hand-Held Decoded Output Laser scanner automatically performs self-tests whenever you turn it on. If your scanner is not functioning properly, review the following Troubleshooting Guide to try to isolate the problem.

Troubleshooting Guide

Is the power on? Is the red illuminated beam on?

If the red scan beam on the scanner isn't illuminated, check that:

- the cable is connected properly.
- **2** the host system power is on (if external power isn't used).

Is the scanner having trouble reading your bar codes?

If the scanner isn't reading bar codes well, check that the bar codes:

- aren't smeared, rough, scratched, or exhibiting voids.
- 2 aren't coated with frost or water droplets on the surface.
- are enabled in the scanner or the decoder the scanner is connected to.

Is the bar code displayed but not "entered"?

The bar code is displayed on the host device correctly, but you still have to press a key to enter it (*the Enter/Return key or the Tab key, for example*).

You need to program a suffix.

Programming a suffix enables the scanner to output the scanned bar code *plus* the key you need (such as a "CR," carriage return) to enter the bar code into your application. (See Suffix Selection in Section 3, Output Parameters Menu.)

Maintenance & Troubleshooting

Does the scanner read your bar code incorrectly?

If the scanner reads a bar code (*one beep for a good read*), but the bar code is not displayed correctly on the host screen:

• The scanner may not be programmed for the appropriate terminal interface.

Example: You scan "12345" and the host displays "@es%."

Reprogram the scanner with the correct "Plug and Play" or Terminal Selection bar code (*see Section* 1).

• The scanner may not be programmed to output your bar code properly.

Example: You scan "12345" and the host displays "A12345B."

Reprogram the scanner with the proper Symbology selections (see Section 4, Symbology Menu).

The scanner won't read your bar code at all?

If the scanner will not read your bar code:

• Try scanning the Sample Bar Codes (found on the back cover of the User's Guide).

If the scanner <u>reads</u> the Sample Bar Codes, check that your bar code is readable. (See "Is the scanner having trouble reading your bar codes" on the previous page.)

Verify that your bar code symbology is enabled. (See Sections 4, Symbology Menu.)

If the scanner <u>does not read</u> the Sample Bar Codes either, continue to #2, below...

2 If the scanner won't read the Sample Bar Codes either:

Verify that the bar code symbologies are enabled. (See Sections 4, Symbology Menu.)

Scan the "Default All..." bar code on each symbology menu page in Section 4 to enable most symbologies. (*MSI and Plessey will have to be enabled individually, as they are defaulted* **Off**.)

Obtaining Factory Service

Welch Allyn provides service for all its products through a service center located at its manufacturing facilities in Skaneateles, New York. To obtain warranty or non–warranty service, return the unit to Welch Allyn (postage paid) with a copy of the dated purchase record attached.

In the United States, please contact the Welch Allyn Product Service Department at the address/telephone number listed below to obtain a Return Material Authorization number (RMA #).

Main Office Welch Allyn, Inc.

Data Collection Division 4619 Jordan Road P.O. Box 187 Skaneateles Falls, New York 13153–0187

General Inquiries Telephone: (315) 685–8945 Fax: (315) 685–3172

Product Service Department Telephone: (315) 685–4278 *or* 685–4360 Fax: (315) 685–4156

For service in Europe, please contact your Welch Allyn representative (at address below) or your local distributor.

United Kingdom Office Welch Allyn U.K., Ltd.

1st Floor, Dallam Court Dallam Lane, Warrington Cheshire WA2 7LT United Kingdom

Telephone: Int+44–1925–240055 Fax: Int+44–1925–631280

For service in Asia, please contact your Welch Allyn representative (at address below) or your local distributor.

Asia / Pacific Office Welch Allyn

10/F Tung Sun Commercial Centre 194–200 Lockhart Road Wanchai, Hong Kong

Telephone: Int+852–2511–3050 *or* 2511–3132 Fax: Int+852–2511–3557

Customer Support

For service in Japan, please contact your Welch Allyn representative (at address below) or your local distributor.

Japan Office

Welch Allyn, Ltd. Bon Marusan 8F 3-5-1 Kanda-Jinbocho Chiyoda-ku Tokyo 101, Japan

Telephone: Int+81-3-5212-7352 Fax: Int+81-3-3261-7372

For service in Latin America, please contact your Welch Allyn representative (at address below) or your local distributor.

Latin America Office Welch Allyn, Ltd.

5150 North Tamiami Trail Suite 302 Naples, FL 34103-2821

Telephone: (941) 263–7600 Fax: (941) 263–9689

Technical Support

If, after reviewing the Troubleshooting Guide (page 8–2), you still need assistance installing or troubleshooting your scanner, please call your Distributor or Application Support or log onto our web site:

Application Support Telephone: (315) 685–2476

Web: http://dcd.welchallyn.com

Customer Support

Limited Warranty

Welch Allyn, Inc., hereby warrants its products to be functional and free from manufacturing defects at the time of delivery. Welch Allyn, Inc. further warrants that it will replace or repair, at its option, any unit that fails to perform according to Welch Allyn's published specifications during a period of two (2) years from the time of shipment by Welch Allyn, Inc. to the user at the time it is purchased from any of Welch Allyn Inc.'s Authorized Distributors. Any attempt on the part of the user to disassemble or service the equipment shall void the warranty.

The warranty does not apply to product which have been damaged by improper handling, shipping, or misuse. The warranty does not apply, if, in the sole opinion of Welch Allyn, Inc., the unit has been damaged by accident, misuse, neglect, improper shipping and handling. Since the unit is sensitive to static, the responsibility to protect it from static damage is solely that of the user. The warranty is valid only if the unit or scanner has not been tampered with or serviced by any party unauthorized by Welch Allyn, Inc. as a repair facility.

THE WARRANTIES SET FORTH HEREIN ARE IN LIEU OF ANY AND ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE BUYER ACKNOWLEDGES THAT NO OTHER REPRESENTATIONS WERE MADE OR RELIED UPON WITH RESPECT TO THE QUALITY AND FUNCTION OF THE BOARD AND SCANNER HEREIN SOLD.

In no event shall Welch Allyn, Inc. or its resellers be liable for any loss, inconvenience or damage whether direct, incidental, consequential or otherwise, and whether caused by negligence or other fault resulting from the breach of any express warranty except as set forth herein. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or country to country.

Serial Interface Menu Defaults

The following chart lists the factory default Serial Interface Menu settings (indicated by a " \star " on the programming menu pages).

| Parameter Name | Default Setting | Page Reference | | |
|---------------------------------------|-------------------------|-------------------|--|--|
| Prefix / Suffix Selections | | | | |
| Primary Prefix | None | Page 2–3 | | |
| Primary Suffix | None | Page 2–3 | | |
| Secondary Prefix | None | Page 2–5 | | |
| Secondary Suffix | None | Page 2–5 | | |
| Output Selections | | | | |
| Beeper Volume | High | Page 2–8 | | |
| Output Delays Intercharacter Delay | 00 (x5mS) | Page 2–8 | | |
| Interfunction Delay | 00 (x5mS) | Page 2–8 | | |
| Intermessage Delay | 00 (x5mS) | Page 2–8 | | |
| Reread Delay | Low (175mS) | Page 2–9 | | |
| Good Read Delay | None | Page 2–9 | | |
| Laser Voting | Disable | Page 2–9 | | |
| Buffered Scans | Enable | Page 2–10 | | |
| Code I.D. Transmit | Disable | Page 2–10 | | |
| AIM I.D. Transmit | Disable | Page 2–10 | | |
| Function Code Transmit | Enable | Page 2–10 | | |
| Serial Communication Selections | | | | |
| CTS Check | Disable | Page 2–11 | | |
| Baud Rate | 9600 | Page 2–11 | | |
| RS-232 Word Length | 7 Data Bits, 1 Stop Bit | Page 2–12 | | |
| Parity | Even | Page 2–12 | | |
| Protocol | Record | Page 2–13 | | |
| Data Formatter Selections | | | | |
| Require Data Format | Disable | Page 2–15 | | |
| | | | | |

General Operating Menu Defaults

The following chart lists the factory default General Operating Menu settings (indicated by a " \star " on the programming menu pages).

| Parameter Name | Default Setting | Page Reference | | |
|----------------------------|-------------------------|-------------------|--|--|
| Laser Options | | | | |
| Marker Beam (5750ALR only) | Off | Page 3–2 | | |
| Marker Beam Delay | 1.25 Sec | Page 3–2 | | |
| Wand Emulation Selections | | | | |
| Transmission Rate | 40 ips | Page 3–3 | | |
| Wake Up Pulse | Disable | Page 3–3 | | |
| Output Polarity | White High | Page 3–3 | | |
| Country Code Selections | | | | |
| Foreign Keyboards | United States | Page 3–5 | | |
| Keyboard Selections | | | | |
| Keyboard Style | Regular | Page 3–6 | | |
| Keyboard Style Modifiers | Numeric Keypad Mode Off | Page 3–7 | | |

Symbology Menu Defaults - Industrial

The following chart lists the factory default Industrial Symbology Menu settings (indicated by a " \star " on the programming menu pages).

| Parameter Name | Default Setting | Page Reference | |
|-------------------------------|--------------------|-------------------|--|
| Codabar Selections | | | |
| Codabar | On | Page 4–2 | |
| Start / Stop Characters | Don't Transmit | Page 4–2 | |
| Decoding | Adaptive | Page 4–2 | |
| Message Length | Min = 4, Max = 60 | Page 4–2 | |
| Check Character | No Check Character | Page 4–3 | |
| Concatenation | Allow | Page 4–3 | |
| Code 39 Selections | | | |
| Code 39 | On | Page 4–4 | |
| Start / Stop Characters | Don't Transmit | Page 4–4 | |
| Full ASCII | Enable | Page 4–4 | |
| Append | Disable | Page 4–4 | |
| Decoding | Adaptive | Page 4–5 | |
| Message Length | Min = 0, Max = 48 | Page 4–5 | |
| Check Character | No Check Character | Page 4–5 | |
| Code 93 Selections | | | |
| Code 93 | On | Page 4–6 | |
| Message Length | Min = 0, Max = 64 | Page 4–6 | |
| Interleaved 2 of 5 Selections | | | |
| Interleaved 2 of 5 | On | Page 4–7 | |
| Decoding | Adaptive | Page 4–7 | |
| Message Length | Min = 4, Max = 80 | Page 4–7 | |
| Check Digit | No Check Digit | Page 4–7 | |
| Code 2 of 5 Selections | | | |
| Code 2 of 5 | On | Page 4–8 | |
| Message Length | Min = 4, Max = 48 | Page 4–8 | |
| Matrix 2 of 5 Selections | | | |
| Matrix 2 of 5 | On | Page 4–8 | |
| Message Length | Min = 4, Max = 80 | Page 4–8 | |

Symbology Menu Defaults - Industrial

The following chart lists the factory default Industrial Symbology Menu settings (indicated by a " \star " on the programming menu pages).

| Parameter Name | Default Setting | Page Reference | |
|---------------------------------------|--------------------|-------------------|--|
| Code 11 Selections | | | |
| Code 11 | On | Page 4–9 | |
| Check Digits Required | 2 Check Digits | Page 4–9 | |
| Message Length | Min = 4, Max = 80 | Page 4–9 | |
| Code 128 Selections | | | |
| Code 128 | On | Page 4–9 | |
| Message Length | Min = 0, Max = 80 | Page 4–9 | |
| Code 128 Function Character Selection | | | |
| Code 128 Function Character | Off | Page 4–10 | |
| <gs> Substitution</gs> | Off | Page 4–10 | |
| Code 16K Selections † | | | |
| Code 16K | Off | Page 4–11 | |
| Message Length | Min = 0, Max = 154 | Page 4–11 | |
| Code 49 Selections † | | | |
| Code 49 | Off | Page 4–11 | |
| Message Length | Min = 1, Max = 80 | Page 4–11 | |

 \ddagger Not in standard product. Contact your Welch Allyn Sales Coordinator.

Symbology Menu Defaults - Retail

The following chart lists the factory default Retail Symbology Menu settings (indicated by a "*" on the programming menu pages).

| Parameter Name | Default Setting | Page Reference | | |
|------------------------------|-------------------|-------------------|--|--|
| EAN Selections | | | | |
| EAN / JAN 13 | On | Page 4–12 | | |
| EAN / JAN 8 | On | Page 4–12 | | |
| Check Digit | Transmit | Page 4–12 | | |
| ISBN | Disable | Page 4–12 | | |
| UPC Selections | | | | |
| UPC A | On | Page 4–13 | | |
| UPC E0 | On | Page 4–13 | | |
| UPC E1 | Off | Page 4–13 | | |
| Check Digit | Transmit | Page 4–13 | | |
| Number System | Transmit | Page 4–13 | | |
| Version E Expand | Don't Expand | Page 4–13 | | |
| EAN / UPC Addenda Selections | | | | |
| EAN / UPC Addenda | Don't Require | Page 4–14 | | |
| EAN / UPC Addenda Format | Space | Page 4–14 | | |
| EAN Addenda | | | | |
| Two Digit Addenda | Disable | Page 4–14 | | |
| Five Digit Addenda | Disable | Page 4–14 | | |
| UPC Addenda | | | | |
| Two Digit Addenda | Disable | Page 4–14 | | |
| Five Digit Addenda | Disable | Page 4–14 | | |
| MSI Selections | | | | |
| MSI | Off | Page 4–15 | | |
| Message Length | Min = 4, Max = 48 | Page 4–15 | | |
| Plessey Selections | | | | |
| Plessey | Off | Page 4–15 | | |
| Message Length | Min = 4, Max = 48 | Page 4–15 | | |







Rev B



4619 Jordan Road P.O. Box 187 Skaneateles Falls, New York 13153–0187