

---

## Important Precautions

- This battery charger is intended to charge only the SONY NP-500 series of battery packs (such as NP-520, NP-500, and NP-F530).
- Attach the battery pack firmly.
- Charge the battery pack on a flat, vibration-free surface.
- The battery pack gradually discharges even if it is fully charged. Intermec recommends that you charge the battery pack immediately before use, or at least within a couple of days before use.
- Intermec recommends that you remove the battery pack from the charger within 24 hours after charging is completed.
- The temperature range for charging is 0°C to 40°C (32°F to 104°F). However, for maximum battery pack efficiency, the recommended temperature range when charging is 10°C to 30°C (50°F to 86°F).
- Be sure nothing metallic comes into contact with the contacts.
- Do not disassemble the charger. There are no user-serviceable parts in the charger.
- While the charger is in use, it becomes warm. This is normal.
- Do not place the charger in locations that are extremely hot or cold, dusty or dirty, very humid, or subject to vibration.
- Unplug the battery charger immediately and contact your Intermec service representative if the status light continues blinking or fails to light, if any part of the charger appears worn or damaged, or if any difficulty arises while using the battery charger.

---

## Ordering Power Cords for the Battery Charger

If you have not already ordered an Intermec power cord for your charger, contact your Intermec sales representative and order one:

Part No.	Voltage	Where Used
586105	100-120 VAC	Canada, Central America, Japan, Korea, Mexico, Taiwan, and US
586266	220-250 VAC	UK
586267	220-250 VAC	Europe
586276	220-230 VAC	Liechtenstein, Switzerland
586281	220-250 VAC	China, South Pacific
586282	120-250 VAC	Chile, Italy
586283	220-250 VAC	Denmark, Greenland

---

## TRAKKER Antares 4-Pack Battery Charger Instruction Sheet

---

The TRAKKER® Antares™ 4-pack battery charger (P/N 064667) lets you simultaneously charge up to four battery packs for the TRAKKER Antares 2400 series hand-held terminals.

These instructions describe how to install and use the battery charger. Before using the charger, please read these instructions thoroughly and retain them for future reference. For help managing battery power, see your TRAKKER Antares 2400 series terminal user's manual.



### Warning

*To prevent fire or electric shock, do not expose the battery charger to rain or moisture.*

### Avertissement

*Pour éviter des risques d'incendie ou de choc électrique, ne pas exposer le chargeur de la batterie à la pluie ou à l'humidité.*

---

## Specifications

Power requirements	100-240V AC, 50/60Hz
Power consumption	26 VA (at 100V), 42 VA (at 240V)
Application	SONY NP-500 series battery pack (such as NP-520, NP-500, and NP-F530)
Operating temperature	0°C to 40°C (32°F to 104°F)
Storage information	-20°C to 60°C (-4°F to 140°F)
Dimensions	Approx. 76 X 112 X 165 mm (3 X 4.4 X 6.5 in.)


Design and specifications are subject to change without notice.

**Intermec**  
Technologies Corporation

6001 36th Avenue West  
P.O. Box 4280  
Everett, WA 98203-9280

© 1998 Intermec  
All Rights Reserved

P/N 064746-002

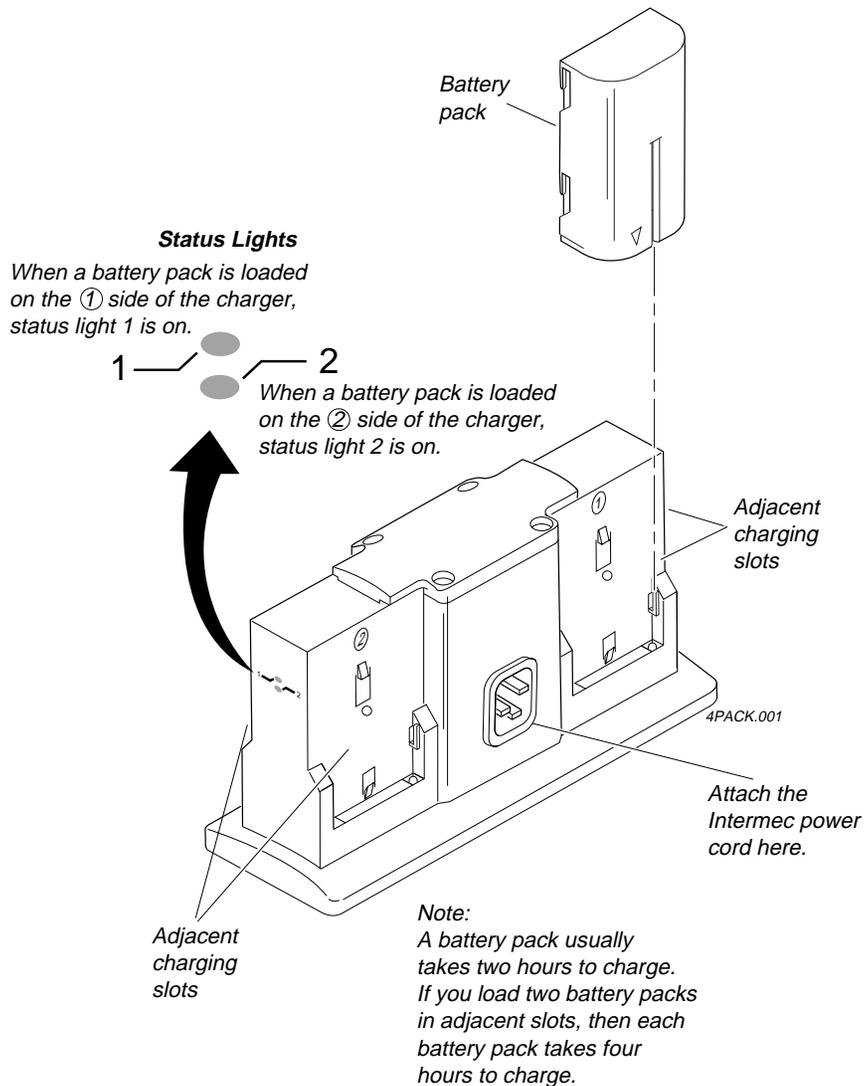

## **Installing the Battery Charger**

For security purposes, you may want to install the battery charger as described below. Steps 1 and 2 are optional.

1. Attach the two sheet metal mounting straps to the bottom of the battery charger with the two flathead screws provided.
2. Attach the battery charger to a clean, stable, flat work surface using your own screws or bolts (up to 1/2 inch diameter).
3. Plug the power cord into the charger and a wall outlet. If you do not have a power cord, see "Ordering Power Cords for the Battery Charger."

## **Charging a Battery Pack**

You can charge up to four battery packs simultaneously, and you can load the battery packs into any slot. The charging time depends on the condition of the battery pack. Usually a battery pack is fully charged in two hours. If two battery packs are in adjacent slots, each may take four hours to charge.

## **Loading a Battery Pack Into the Charger**

Press the battery pack against the battery charger and slide the battery pack down until it is seated firmly in the charger.

## **Interpreting the Status Lights**

Each charger slot has an orange status light which indicates the status of the battery pack in the slot. Next to each light is a line which points to the slot the light is for. Use this table to interpret the status lights:

<b>Lights</b>	<b>Description</b>
On	The battery pack is charging.
Blinking	The battery pack is charging, but has not been charged for awhile.
One Blink	You loaded a fully charged battery pack.
Off	Charging is complete.

## **Unloading a Battery Pack From the Charger**

To unload a battery pack from the charger, slide it up in the opposite direction from when you loaded it. You can unload and use a battery pack before it has been fully charged.