

User's Manual



**CK30 Handheld
Computer**

Intermec Technologies Corporation

Worldwide Headquarters
6001 36th Ave. W.
Everett, WA 98203
U.S.A.

www.intermec.com

The information contained herein is provided solely for the purpose of allowing customers to operate and service Intermec-manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Intermec Technologies Corporation.

Information and specifications contained in this document are subject to change without prior notice and do not represent a commitment on the part of Intermec Technologies Corporation.

© 2003-2006 by Intermec Technologies Corporation. All rights reserved.

The word Intermec, the Intermec logo, Norand, ArciTech, Beverage Routebook, CrossBar, dcBrowser, Duratherm, EasyADC, EasyCoder, EasySet, Fingerprint, INCA (under license), i-gistics, Intellitag, Intellitag Gen2, JANUS, LabelShop, MobileLAN, Picolink, Ready-to-Work, RoutePower, Sabre, ScanPlus, ShopScan, Smart Mobile Computing, TE 2000, Trakker Antares, and Vista Powered are either trademarks or registered trademarks of Intermec Technologies Corporation.

There are U.S. and foreign patents as well as U.S. and foreign patent applications pending.

Document Change Record

This page records changes to this document. The document was originally released as version 001.

Version	Date	Description of Change
002	04/2004	Added new information to support the release of Service Pack 1. New information includes remote upgrade using Intermec Settings, configuration using Intermec Settings one-to-one or with the Wavelink Avalanche package, support for IE Browser, support for the EasyADC system and other minor updates and revisions.
003	07/2004	Added an addendum to support the release of Service Pack 2. New information includes the addition of CCX compliance, the EAN.UCC Composite symbology, Funk security, the ability to disable or modify some key functions, and other minor updates.
004	01/2005	Revised to include information for the Service Pack 3 release. Changes include the addition of the SP2 addendum to the user's manual, CK30C support for iBrowse, VPN support, support for a programmable keypad, and minor updates and corrections.
005	11/2005	Updated information on Funk security and configuration, added new diagnostics, and added information on SmartSystems.
006	06/2006	Revised the manual to support RoHS compliance. Other new information includes an updated list of scanners and cables, instructions for changing the contrast, instructions for scanning PDF417 and Micro PDF417 bar codes, instructions for loading multiple certificates, expanded information about the backup battery and the Backup Battery Very Low dialog box, troubleshooting information for the SD card, bar code symbologies listed by scanner option, new information on the EV10 1D linear imager reading distances, and an illustration that identifies the pins in the serial adapter.
007	07/2006	Added the standard range laser scanning option. Corrected the minimum reading distances setbacks for the area imager and linear imager. Added a procedure for saving the configuration to Flash memory for registry persistence after a cold boot.

Contents

Before You Begin	xi
Safety Icons	xi
Global Services and Support	xi
Who Should Read This Document?	xiii
Related Documents	xiii
Patent Information	xiii
Other Copyright Information.....	xiv

1 Using the CK30 Handheld Computer	1
Introducing the CK30 Handheld Computer.....	2
What's New?	4
Using the Battery.....	5
Charging and Installing the Battery	6
Maximizing Battery Life	7
Checking the Battery Status.....	8
Using the Keypad	8
The 42-Key Large Numeric and Function Keypad	9
The 50-Key Full Alphanumeric Keypad	10
The 52-Key Full Alphanumeric Keypad	11
Using the Color-Coded Keys.....	12
Capitalizing All Characters	13
Using the Alpha Key on the 42-Key Keypad.....	13
Using the Power (%) Key.....	14
Disabling or Modifying Keypad Functions	14
Using the Screen	15
Understanding the Screen Icons	16
Changing the Contrast	17
Using the Mouse Pointer.....	18
Repositioning a Window	19
Understanding the Status Lights	20
Understanding the Beeps	21

Contents

Scanning Bar Codes.....	22
Scanning With the Linear Imager or Laser Scanner.....	23
Attaching a Tethered Scanner.....	26
Using Energy Saver Mode With Your 1551E or 1553 Scanner.....	27
Attaching a Scanner to the Serial Port.....	28
Installing an SD Card	30

2 Configuring the CK30..... 33

How to Configure the CK30 Parameters	34
Configuring the CK30 With the Setup Assistant	35
Configuring the CK30 With the Configuration Utility	36
Configuring the CK30 With SmartSystems Console	40
Configuring the CK30 by Scanning Bar Codes.....	41
Configuring the CK30 Through the Network	42
Synchronizing the CK30 System Time With a Time Server.....	45
Configuring the CK30 for Your Network	46
Configuring Serial Communications	46
Configuring 802.11b/g Radio Communications.....	48
Configuring Ethernet Communications on Older CK30s.....	51
Configuring Bluetooth Radio Communications	53
Configuring Security	55
Choosing Between Funk and Microsoft Security	56
Configuring WPA Security.....	57
Configuring 802.1x Security.....	63
Configuring LEAP Security.....	66
Configuring Static WEP Security	67
Loading a Certificate	69
Disabling Security	73
Configuring a VPN	73
Saving Your Configuration Changes to Flash Memory.....	75

3 Developing and Installing Applications 77

Developing Applications for the CK30	78
Developing a New Application for the CK30	78
Developing a Web-Based Application.....	79
Converting a Trakker Antares Application to a CK30 Application.....	83

Installing Applications on the CK30	84
Installing Applications Using ActiveSync	85
Installing Applications Using Your SD Card.....	89
Installing Applications Using the FTP Server.....	89
Installing Applications Using Wavelink Avalanche.....	90
Installing Applications Using the SmartSystems Console	90
Launching Your Application Automatically	91
Customizing How Applications Load on the CK30	91

4 Managing the CK30..... 93

Accessing the System Main Menu.....	94
Managing Files on the CK30	95
Running an Application From File Manager.....	95
Deleting a File With File Manager.....	96
Copying a File With File Manager.....	97
Viewing the Properties of a File With File Manager.....	97
Managing Applications on the CK30.....	98
Viewing All Applications Currently Running on the CK30	98
Closing an Application	99
Switching Between Applications	100
Viewing the Properties of an Application	100
Setting or Changing the System Main Menu Password	100
Backing Up Your Files.....	102
Upgrading Your CK30	103
Upgrading the Operating System Using an SD Card.....	103
Upgrading Your CK30 Using SmartSystems Console	105

5 Running Diagnostics 107

Using Diagnostics on the CK30.....	108
Understanding the Diagnostics Screens.....	109
Battery Information.....	109
Bluetooth Console.....	111
Bootcode Version	112

Contents

Contrast Test	112
CPU Monitor.....	113
Display Test	114
Hardware Configuration Table.....	114
Installed Fonts.....	115
Intermec Value Add Information.....	115
Keypad Test	116
LED Test	116
Memory Information	117
Network Connection Test.....	117
Network Interface Information.....	118
Operating System Version	119
Ping Utility	119
Radio Driver Version	120
Radio Information.....	120
RAM Monitor.....	121
Read CPU Registers	121
Security Information	122
Sound Test	123

6

Troubleshooting and Maintaining the CK30..... 125

Troubleshooting the CK30.....	126
Calling Product Support.....	126
Problems and Solutions	127
Problems While Operating the CK30.....	127
Problems While Configuring Security	129
Problems With Wireless Connectivity	132
Problems Transmitting Data Through the Serial Port.....	134
Problems While Scanning Bar Codes.....	134
Booting the CK30	139
Warm Booting the CK30	139
Cold Booting the CK30	139
Cleaning the Scanner Window and CK30 Screen	140

A

Specifications..... 143

Physical and Environmental Specifications.....	144
Accessories for the CK30	150

Typing Characters Not Printed on the Keypad	152
Pin Assignments for the Serial Port	156
B Default Settings	159
Default Configuration Settings	160
C Reprogrammable Keypad	167
Reprogramming the Keypad	168
Changing the Functionality of Keypad Keys or Key Combinations.....	168
Creating Keypad Macros	180
I Index	187

Contents

Before You Begin

This section provides you with safety information, technical support information, and sources for additional product information.

Safety Icons

This section explains how to identify and understand warnings, cautions, and notes that are in this document.



Warning

A warning alerts you of an operating procedure, practice, condition, or statement that must be strictly observed to avoid death or serious injury to the persons working on the equipment.



Caution

A caution alerts you to an operating procedure, practice, condition, or statement that must be strictly observed to prevent equipment damage or destruction, or corruption or loss of data.



Note: Notes either provide extra information about a topic or contain special instructions for handling a particular condition or set of circumstances.

Global Services and Support

Warranty Information

To understand the warranty for your Intermec product, visit the Intermec web site at www.intermec.com and click **Service & Support > Service & Support**. The Intermec Global Sales & Service page appears. From the **Service & Support** menu, move your pointer over **Support**, and then click **Warranty**.

Disclaimer of warranties: The sample code included in this document is presented for reference only. The code does not necessarily represent complete, tested programs. The code is provided “as is with all faults.” All warranties are expressly disclaimed, including the implied warranties of merchantability and fitness for a particular purpose.

Web Support

Visit the Intermec web site at www.intermec.com to download our current documents (in PDF). To order printed versions of the Intermec manuals, contact your local Intermec representative or distributor.

Visit the Intermec technical knowledge base (Knowledge Central) at intermec.custhelp.com to review technical information or to request technical support for your Intermec product.

Telephone Support

These services are available from Intermec.

Service	Description	In the U.S.A. and Canada call 1-800-755-5505 and choose this option
Order Intermec products	<ul style="list-style-type: none">• Place an order.• Ask about an existing order.	1 and then choose 2
Order Intermec media	Order printer labels and ribbons.	1 and then choose 1
Order spare parts	Order spare parts.	1 or 2 and then choose 4
Technical Support	Talk to technical support about your Intermec product.	2 and then choose 2
Service	<ul style="list-style-type: none">• Get a return authorization number for authorized service center repair.• Request an on-site repair technician.	2 and then choose 1
Service contracts	<ul style="list-style-type: none">• Ask about an existing contract.• Renew a contract.• Inquire about repair billing or other service invoicing questions.	1 or 2 and then choose 3

Outside the U.S.A. and Canada, contact your local Intermec representative. To search for your local representative, from the Intermec web site, click **Contact**.

Who Should Read This Document?

The *CK30 Handheld Computer User's Manual* provides you with information about the features of the CK30 and how to install, operate, maintain, and troubleshoot the CK30. Before you install and configure the CK30, you should be familiar with your network and general networking terms, such as IP address.

The *Intermec Computer Command Reference Manual* (P/N 073529) is included with this manual on a CD or is available as a download from the Intermec web site. Please refer to this manual for help configuring your CK30. The reference manual contains information about all of the CK30 commands and contains pages of bar codes that you can print and scan when configuring supported commands.

Related Documents

The Intermec web site contains Intermec documents (in PDF) that you can download for free.

To download documents

- 1** Visit the Intermec web site at www.intermec.com.
- 2** Click **Service & Support > Manuals**.
- 3** In the Select a Product field, choose the product whose documentation you want to download.

To order printed versions of the Intermec manuals, contact your local Intermec representative or distributor.

Patent Information

Product is covered by one or more of the following patents:
4,455,523; 5,627,360; 4,553,081; 5,657,317; 4,709,202; 5,671,436;
4,845,419; 5,684,290; 4,961,043; 5,777,309; 5,195,183; 5,793,604;
5,216,233; 5,805,807; 5,218,187; 5,818,027; 5,218,188; 5,821,523;
5,227,614; 5,828,052; 5,241,488; 5,831,819; 5,278,487; 5,834,753;
5,322,991; 5,841,121; 5,331,136; 5,844,222; 5,331,580; 5,883,492;
5,349,678; 5,883,493; 5,397,885; 5,886,338; 5,371,858; 5,889,386;
5,373,478; 5,898,162; 5,410,141; 5,969,328; 5,488,575; 5,986,435;
5,500,516; 6,075,340; 5,504,367; 6,109,528; 5,508,599; 6,158,661;

5,530,619; 6,234,395; 5,567,925; 6,244,512; 5,568,645; 6,330,975;
5,592,512; 6,431,451; 5,598,007, 6,497,368; 5,617,343; 6,538,413.

There may be other U.S. and foreign patents pending.

Other Copyright Information

Microsoft, Windows, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Bluetooth is a trademark of Bluetooth SIG, Inc., U.S.A.

Wi-Fi is a registered certification mark of the Wi-Fi Alliance.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.

(<http://www.openssl.org/>)

This product includes cryptographic software written by Eric Young. (eay@cryptsoft.com)

This product uses Regex++, Index software during its operational phases. The owner of Regex++ has granted use of the software to anyone provided such use is accompanied by the following copyright and permission notice:

Regex++, Index. (Version 3.31, 16th Dec 2001)

Copyright © 1998-2001 Dr John Maddock.

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Dr John Maddock makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.




1 Using the CK30 Handheld Computer

Use this chapter to familiarize yourself with the CK30 Handheld Computer. In this chapter you will find these sections:

- Introducing the CK30 Handheld Computer
- What's New?
- Using the Battery
- Using the Keypad
- Using the Screen
- Understanding the Status Lights
- Understanding the Beeps
- Scanning Bar Codes
- Installing an SD Card

Introducing the CK30 Handheld Computer

The Intermec CK30 is an ergonomically designed handheld computer built on the Microsoft® Windows® CE .NET operating system. It is a lightweight, easy-to-use, reliable computer that runs client/server applications, terminal emulation applications, and browser-based applications.

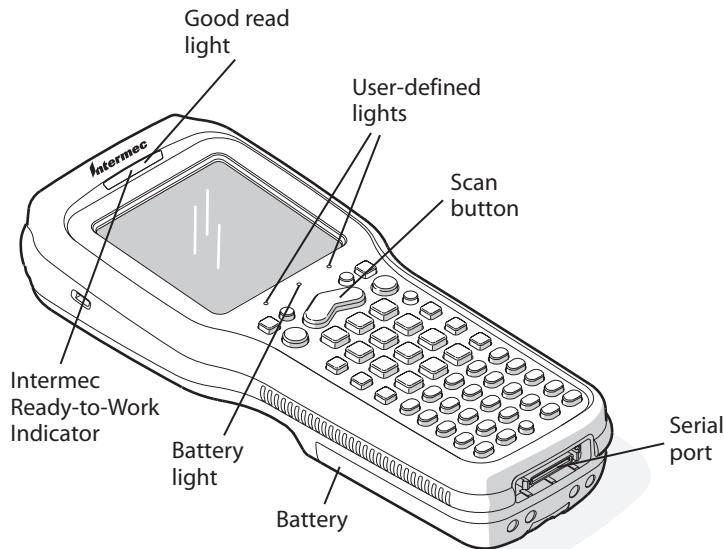


CK30 Handheld Computer



CK30 Handheld Computers with an IEEE 802.11b/g radio installed are Wi-Fi® certified for interoperability with other 802.11b/g wireless LAN devices.

The CK30 computer is available in three different models that offer several options. To find out which model of the CK30 you have, locate the configuration label on the back of the computer. The first five characters of the configuration number indicate the model of CK30 you ordered.

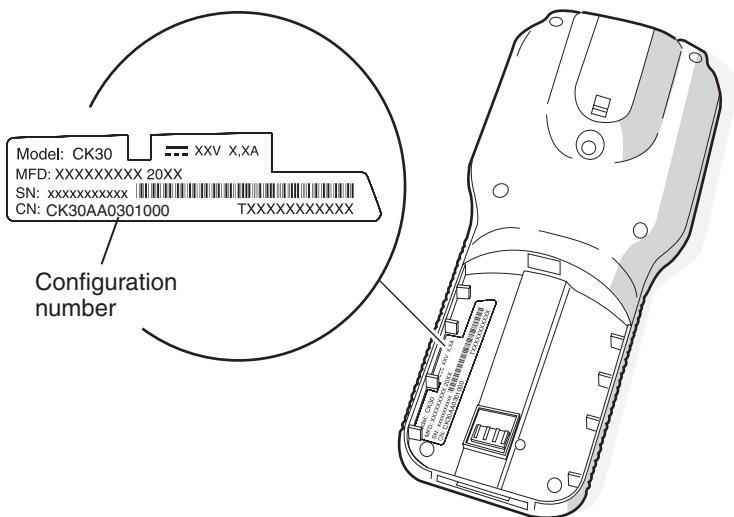

Configuration Label: This label is for a CK30 Model A (CK30A).

Features Included With the Different Models of the CK30

Feature	CK30A	CK30B	CK30C
802.11b/g radio		✓	✓
*Bluetooth (optional)	✓	✓	✓
CCX v2.0 compliance		✓	✓
.NET Compact Framework			✓
Pocket Internet Explorer		✓	
Internet Explorer 6, SQL Server CE			✓
iBrowse		✓	✓
IE Browser			✓
Monochrome Display	✓	✓	
Color Display			✓
32MB RAM/32MB Flash Memory	✓	✓	
64MB RAM/64MB Flash Memory			✓
200 MHz Processor	✓	✓	
400 MHz Processor			✓

*Bluetooth is a trademark owned by Bluetooth SIG, Inc., USA.

These options are available for the CK30B and CK30C:

- TE 2000 terminal emulation application including 3270, 5250, and VT/ANSI as well as third-party TE applications
- Linear imager, standard range laser, or tethered scanner interface
- Data Collection Browser (dcBrowser™) application

Use this manual to understand how to use the features and options available on the CK30. For additional help using terminal emulation, see the *TE 2000 Terminal Emulation Programmer's Guide* (P/N 977-055-008).

For additional help using dcBrowser, see the documentation that ships with the dcBrowser gateway software or the *Data Collection Browser Client User's Guide* (P/N 070011).

iBrowse is a locked-down web browser for Intermec devices that is compatible with Microsoft's Internet Explorer but does not allow the user to exit out of the browser or key in a URL to access a non-work related web site. For help using iBrowse, see the *iBrowse User's Guide* (P/N 961-055-015). For help using IE Browser, see "Developing a Web-Based Application" on page 79.

What's New?

This revision of the user's manual supports the latest software and hardware release:

- The operating system build is 4.00.xx.xxxx or higher, and Intermec Value Add (IVA) build is iva_4.03.xx.xxxx or higher.
- The CK30 is now available with a linear imager, standard range laser, or tethered scanner option.

Using the Battery

The CK30 uses a model AB1G (P/N 318-020-xxx) lithium-ion battery as its main power source. You must fully charge the main battery before you can use the CK30. When you change the battery, a backup battery maintains your status, memory, and real-time clock for at least 10 minutes.

If the Battery light blinks or turns on solid, you cannot restore factory defaults or perform a warm or cold boot on your CK30 using the **%o** key. You must replace the battery with a fully charged battery before you can perform either function.



Removing the main battery when the backup battery low or critically low icon displays on the taskbar may cause your CK30 to cold boot and you may lose data.

The lithium-ion battery pack that is used in this device may present a fire or chemical burn hazard if it is mistreated. Do not disassemble it, heat it above 100°C (212°F) or incinerate it.

If you fail to replace the battery immediately, you may lose important data or applications.

Dispose of used battery packs promptly. Keep away from children. Contact your local Intermec sales representative for replacement batteries.

Several factors determine the life of your battery such as extreme temperatures, input devices, and your usage. For example, if you use a tethered scanner every day, you will need to replace your battery more often than someone who uses an internal scanner.

Charging and Installing the Battery

Make sure you fully charge the AB1G battery before you install it in your CK30.

To charge the battery

- Either insert the battery into the AC1 4-slot battery charger or place the CK30 with battery installed in the AC2 4-Bay Charging Dock, AC3 8-Bay Charging Dock, AD1 1-Bay Communications Dock, or AD2 4-Bay Communications Dock. For more information on these accessories, see page 150.


Use the following table to understand how long it will take to charge your batteries in each of the CK30 charging or communications dock accessories.

Charging Times for CK30 Batteries

CK30 Accessory	Charging Time
AC1 4-Slot Battery Charger	5 hours
AC2 4-Bay Charging Dock	5 hours
AC3 8-Slot Charging Dock	5 hours
AD1 1-Bay Communications Dock	5 hours
AD2 4-Bay Communications Dock	5 hours

To install the battery

- Insert the tabs on the bottom of the charged battery into the CK30 and snap the battery into place.

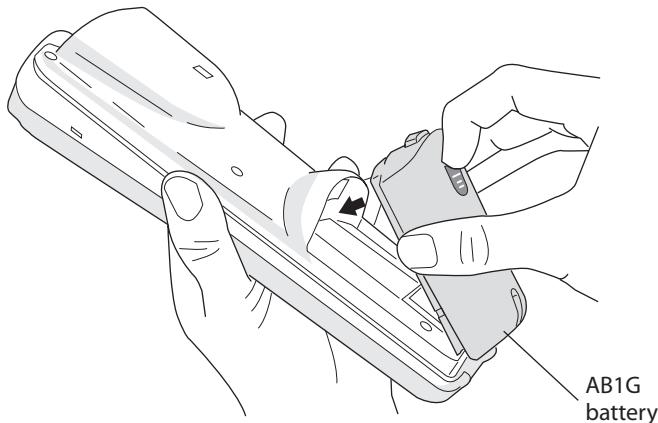

Maximizing Battery Life

There are several things that you can do to prolong the life of your fully charged battery.

- 1 Verify that Radio Power Management is enabled (Fast PSP). Enabling radio power management allows your radio to switch between awake and sleep modes based on network traffic. If you use the default setting of disabled (CAM), you will have the best network performance (data throughput) but it will draw the most power from your battery.
- 2 Verify that the backlight timeout is set to 15 seconds.
- 3 Verify that Power Management has an automatic shutoff time of 3 minutes.

You can use the Configuration Utility to easily make all of these configuration changes. For help, see “Configuring the CK30 With the Configuration Utility” on page 36.

Checking the Battery Status

The easiest way to tell the status of your battery is to look at the battery icon on the taskbar of your CK30.

Battery Icon Status

Icon	Status
	Battery has a medium charge. You should be able to work for several more hours before changing batteries.
	Battery is low. You need to replace the battery soon.
	Battery is critically low. You must replace the battery now.

You can also check the battery status by looking at the Battery light on the front of the CK30 or by using the battery diagnostics screen. For help using the Battery light, see “Understanding the Status Lights” on page 3 for more information. For help using the Battery Information diagnostic screen, see “Battery Information” on page 109.

Using the Keypad

Your CK30 has one of the following keypad overlay options:

- 42-key large numeric and function
- 50-key full alphanumeric
- 52-key full alphanumeric

You can order all versions of the CK30 keypad with an international overlay. The international overlay supports English and many Western European languages, such as French, German, Italian, Portuguese, and Spanish. You enter all of the characters and functions printed above the keys just like you would on a standard keypad.




Note: There are hidden characters (such as { and }) on each CK30 keypad that require using the color-coded keys to access them. For help accessing these hidden characters, see “Typing Characters Not Printed on the Keypad” on page 152.

The CK30 supports TE 2000 VT100/220/320/340 and ANSI, TE 2000 5250, and TE 2000 3270. When you order the CK30 with a TE 2000 application, you must order the corresponding keypad overlay. Use the TE 2000 keypad overlays to enter the same keys that you can enter on a VT/ANSI keyboard, an IBM 5250 keyboard, or an IBM 3270 keyboard. The terminal emulation keypads also come with the same color-coded keys that are on the standard overlay.


For help using TE 2000 terminal emulation, see the *TE 2000 Terminal Emulation Programmer's Guide* (P/N 977-055-008).

The 42-Key Large Numeric and Function Keypad

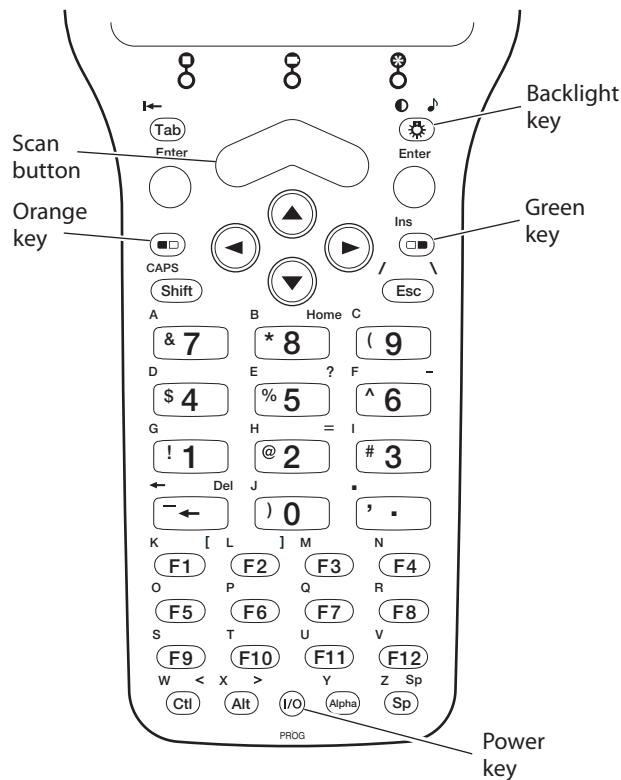

42-Key Large Numeric and Function Keypad: This keypad is designed for applications that enter mainly numeric data (0-9) and that need dedicated function keys (F1–F12). This keypad also lets you enter the entire alphabet and special characters by pressing color-coded key sequences.

The 50-Key Full Alphanumeric Keypad

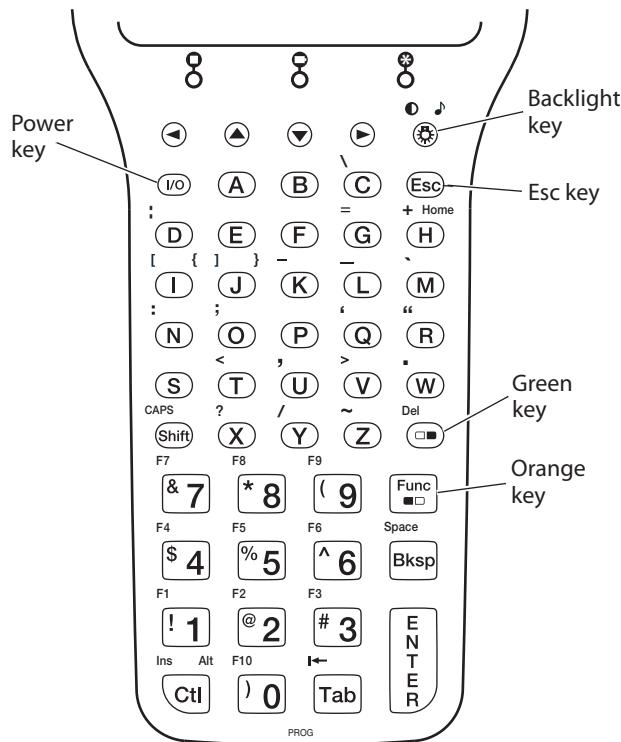


50-Key Full Alphanumeric Keypad: This keypad is designed for applications that enter mainly numeric data (0-9) and that may need to enter the entire alphabet. The keypad also provides shifted function keys (F1-F9) and special characters, symbols, and functions by pressing color-coded key sequences.



Note: The 50-key keypad does not have a scan key, because it was designed to work with the required AH1 handle that has a built-in scanner trigger.

The 52-Key Full Alphanumeric Keypad

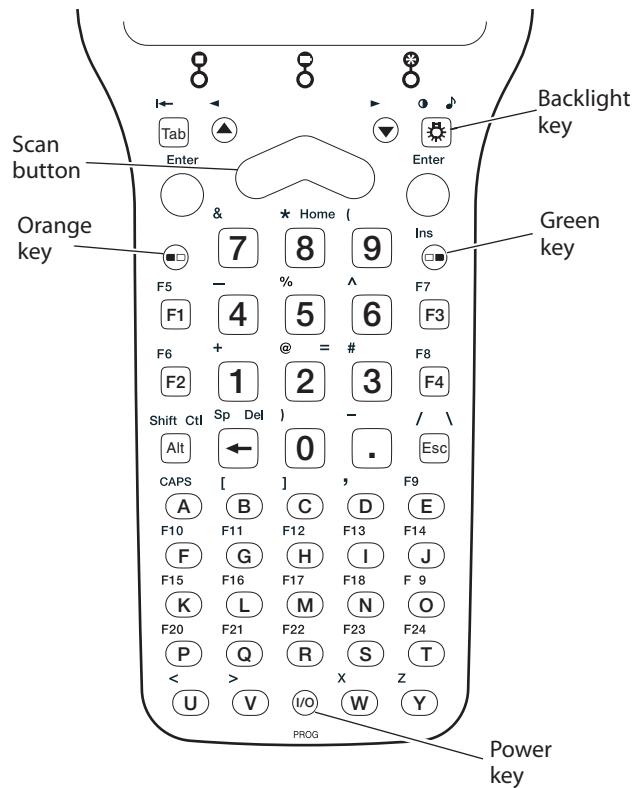

52-Key Full Alphanumeric Keypad: This keypad is designed for applications that enter mainly numeric data (0-9) and that may need to enter the entire alphabet. The keypad also provides function keys (F1-F24) and special characters, symbols, and functions by pressing color-coded key sequences.

Using the Color-Coded Keys

Each keypad available for the CK30 provides color-coded keys to let you access additional characters, symbols, and functions printed on the keypad overlay. Once you understand how to use the color-coded keys and key sequences, you will know how to access all of the additional features printed on the keypad overlay. There are two color-coded modifier keys on the CK30: the orange □ key and the green □ key.

You press and release the first key and then press and release the second key to access the color-coded character or function printed above a key.

Using the Color-Coded Keys

You Want To:	Press:	Example
Use an orange character or function printed above a key	□ key and then the key with character or function printed above it	Press □ and then 2 to type the @ character on the 52-key keypad.
Use a green character or function printed above a key	□ key and then the key with character or function printed above it	Press □ and then J to type the } character on the 50-key keypad.
Use a blue character printed on a key (42-key and 50-key keypads only)	Shift key and then the key	Press Shift and then 4 to type the \$ character on the 42-key keypad.
Lock the orange, green, Ctl , Alt , or Shift key to stay on	□, □, Ctl , Alt , or Shift key twice	Press □ twice and the  appears in the taskbar.
Unlock a green, orange, Ctl , Alt , or Shift key	□, □, Ctl , Alt , or Shift key once	



Note: There are hidden characters (such as { and }) on each CK30 keypad that require using the color-coded keys to access them. For help accessing these hidden characters, see “Typing Characters Not Printed on the Keypad” on page 152.

Capitalizing All Characters

To type all alphabetic characters as uppercase letters, you can enable the Caps Lock feature on the CK30 keypad.

To enable Caps Lock

1 Press the orange  key. The  icon appears on the taskbar.

2 Press one of these keys:

- On the 52-key keypad, press **A**.
- On the 42-key and 50-key keypad, press **Shift**.

The Caps Lock icon () appears on the taskbar.

3 Type an alphanumeric character. The letter appears as an uppercase character on the CK30 screen.

To disable Caps Lock

- Press the same key sequence you used to enable it.

Using the Alpha Key on the 42-Key Keypad

The 42-key keypad provides an **Alpha** key to allow you to enter alpha characters when necessary.

To enable the Alpha key

1 On the 42-key keypad, press the **Alpha** key. The Alpha icon () appears on the taskbar.

2 Press a function or numeric key. The corresponding orange alpha letter appears on the screen.

To disable the Alpha key

- Press  or .

Using the Power (%) Key

When you press the **%** key to turn off the CK30, you actually put the CK30 in Suspend mode. In Suspend mode, the CK30 continues to supply power to all memory, but turns off power to most hardware. This power-saving feature is designed to prolong battery life.

When you press the **%** key to turn the CK30 back on, your computer resumes where it was when you turned it off.

If you are using WPA2, WPA, or 802.1x security, the computer may need to reauthenticate before it starts your application.

If the Battery light flashes and your CK30 does not resume after pressing **%**, your battery may be too low to supply power.

Replace the battery. If replacing the battery does not solve the problem, see “Booting the CK30” on page 139.

Disabling or Modifying Keypad Functions

You can disable the functionality of several keys on the keypad if you want to restrict the ability to perform adjustments made from the keypad, such as changing the beeper volume.

You can disable these keypad functions:

- Beeper volume
- Task Manager (opened by pressing **Alt** and then **Tab**)



Note: When you disable **Alt Tab**, you also disable the **Alt Esc** key sequence.


You can modify this keypad function:

- The behavior of the **%** key. You can configure the boot functionality to either warm or cold boot when you press and hold the **%** key for five seconds.

To disable keypad functions

- 1 Press **□■** and then **■□**. The System Main Menu appears.
- 2 Select the **Configuration Utility**.

- 3 Select **Device Settings > Keypad**. The Keypad settings screen appears:

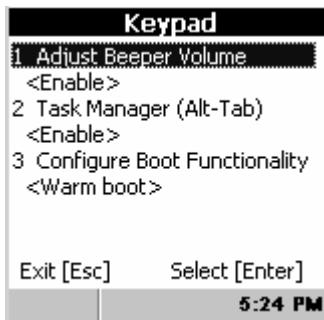


- 4 Choose the function you want to disable from the Keypad menu, select **Disable** from the function dialog box, and then press **Enter**.
- 5 Exit the Configuration Utility.

To change the % key functionality

- 1 Press □ and then □. The System Main Menu appears.
- 2 Select the **Configuration Utility**.
- 3 Select **Device Settings > Keypad**.
- 4 From the **Keypad** menu, select **Configure Boot Functionality**.
- 5 Choose **Warm Boot** or **Cold Boot** and then press **Enter**.
- 6 Exit the Configuration Utility.

Using the Screen

The CK30 can have either a color or monochrome display depending on the model. Both screens are 160 x 160 pixels. The desktop is 160 x 140 pixels and the taskbar is 160 x 20 pixels. In addition, the screens support Unicode characters, user-programmable fonts, and bitmap graphics.

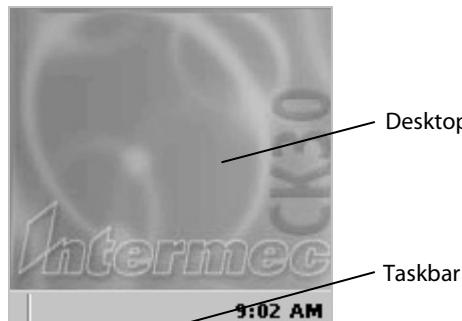

CK30 Start Screen

Understanding the Screen Icons

Use the screen icons on the taskbar to see battery status, network connections, and special keys or functions you may be using.

CK30 Screen Icons

Icon	Description
	Battery is half full. You should be able to work for several more hours before changing batteries.
	Battery is low. You need to replace the battery soon.
	Battery is critically low. You need to replace the battery now.
	Backup battery is low.
	Strong signal strength with the access point and security is enabled.*
	Medium signal strength with the access point and security is enabled.*
	Weak signal strength with the access point and security is enabled.*
	Strong signal strength with the access point, but security is not configured correctly.
	Medium signal strength with the access point, but security is not configured correctly.
	Weak signal strength with the access point and security is not configured correctly.
	No connection to the access point. For help, see “Problems With Wireless Connectivity” on page 132.

CK30 Screen Icons (continued)

Icon	Description
	Mouse pointer is turned on.
	Ethernet connection.
	No Ethernet connection.
	Orange key is enabled.
	Green key is enabled.
	Green key is locked.
	Orange key is locked.
	Ctrl key is enabled.
	Alt key is enabled.
	Shift key is enabled.
	Caps Lock key is enabled.
	Alpha key is enabled (locked).
	The window positioning feature is turned on.
	The CK30 is buffering (storing) data.
	You are in the password-protected area of the CK30.
	The CK30 is connected using ActiveSync.
	UDP Plus is connected.
	UDP Plus is transferring data.
	No UDP Plus connection.
	The CPU monitor is enabled.
	The RAM monitor is enabled.

* If you are using static WEP and you cannot send information wirelessly, make sure your WEP key setting is correct.

Changing the Contrast

You can change the contrast of the screen by pressing and then . Each time you press this key sequence, the screen gradually gets darker until it is almost black and then it goes to the lightest setting, which is almost white.

Using the Mouse Pointer

If you need to use a mouse to perform an action, you can use the mouse pointer on your CK30. The mouse pointer can simulate single-clicks, double-clicks, right mouse button, middle mouse button, and left mouse button functions.

To turn on the mouse pointer


- Press **Alt** and then **▼**. The mouse screen icon () appears in your taskbar.

Understanding the Mouse Pointer Keys

To Simulate This Function:	Press This Key on a Keypad:		
	42-key	50-key	52-key
Left mouse button	F2	X	B
Middle mouse button	F3	Y	C
Right mouse button	F4	Z	D
Single-click	5	5	5
Double-click	←	←	←
Press down on mouse button	0 (zero)	0 (zero)	0 (zero)
Release the mouse button	. (period)	Tab	. (period)

For example, to generate a left single-click with the 52-key keypad

- Press **B** and then **5**.

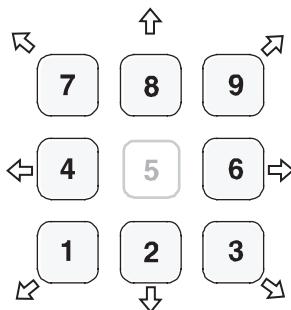

Moving the Mouse Pointer: Use the numeric keypad to move the mouse pointer by pressing the appropriate number key associated with the direction you want the mouse pointer to move.

To click and drag an item on the screen

- 1 Position the mouse pointer on the part of the window you want to move.
- 2 Press the key for the left mouse button and then press **0** (zero).
- 3 Use the directional keys to drag the mouse pointer.
- 4 Release the mouse pointer by pressing . (period) or **Tab** depending on your keypad.

To turn off the mouse pointer

- Press Alt and then ▾.

Repositioning a Window

If you need to move a window to see more of a screen, you can reposition the window without having to use the mouse pointer. When you turn on the positioning feature, the focus is on the top window. You can change the focus to another window by using the Task Manager to select a different task. See “Managing Applications on the CK30” on page 98.

To reposition a window

- 1 Press **Alt** and then ☀. An icon (▣) appears on the taskbar.
- 2 Use the numeric keypad to move the window. See page 3 for an illustration of the numeric keypad and how to use the number keys as directional keys.

To recenter the window in the CK30 screen

- Press **5**.

To turn off the repositioning feature

- Press **Alt** and then ☀.

Understanding the Status Lights

The status lights on the CK30 turn on to indicate the status of the battery, a successful decode of a bar code, or a user-defined function.



CK30 Status Lights

The Battery light and the battery screen icons work with each other to alert you to the status of your battery. If the Battery light comes on, check the taskbar to see which battery icon appears on it. Use the CK30 Screen Icons table on page 3 to help determine when you need to replace your battery.

Understanding the CK30 Status Lights

Light Name	Light	Description	
User-Defined	█ *	Use the Intermec resource kits to program these lights to turn on and off for any task or error within your application. The resource kits are part of the Intermec Developer Library (IDL), which is available from the Intermec web site at www.intermec.com/idl .	
Battery	████	Light Status	What It Means
	Off	The battery is charged.	
	On	Battery is critically low. You need to replace the battery now.	
Good Read		This green light comes on when the CK30 successfully decodes a bar code.	

Understanding the CK30 Status Lights (continued)

Light Name	Light	Description
Ready-to-Work™ indicator		This blue light indicates when the CK30 is ready to use TE 2000.
	Light Status	What It Means
	Off	TE 2000 has not loaded successfully.
	Blinking	The CK30 is not connected to the host.
	On	A connection to the server has been established and all network connections are active. You can use TE 2000.

Understanding the Beeps

The CK30 uses beeps to provide you with audio feedback when it performs some functions. For example, you hear a beep each time you scan a valid bar code.

Understanding the CK30 Beeps

Beep Sequence	What It Means
High beep	You entered valid data or a valid command, the CK30 decoded a label, or the CK30 decoded the last row of a two-dimensional bar code.
Three low beeps	You entered or scanned an invalid command.
Click	You pressed a key.

You can change the beeper volume for your needs and environment. You can set the beeper volume to off, low (quiet), medium, high (loud), and very high (very loud - default). If necessary, you can also change the beep duration and beep frequency for good read, low, and high beeps.

Changing the Beeper Volume

Method	Procedure
Use the keypad.	Press □■ and then press ◊◊ to increase the volume. There are five beep volumes on the CK30 including off. When you reach the loudest setting, the next setting is off. The volume starts with the lowest setting and goes up.
Use the Intermec Configuration menu.	From the System Main Menu, choose Configuration Utility > Device Settings > Beeper > Volume .
Use the Beeper Volume command.	For help, see “Beeper Volume” in the <i>Intermec Computer Command Reference Manual</i> .

Scanning Bar Codes



Do not look directly into the window area or at a reflection of the laser beam while the laser is scanning. Long-term exposure to the laser beam can damage your vision.

Use the scanner to scan and enter bar code data. The type of scanner you are using and the type of bar code you are decoding determines the way you scan the bar code. The CK30 supports the scanning of 1D linear bar codes. Plus, if you are using an integrated handle or a tethered scanner, the way you scan bar codes is different.

When you unpack the CK30, these bar code symbologies are enabled:

- Code 39
- Code 128
- DataMatrix (if supported)
- PDF417
- UPC/EAN

If you are using bar code labels that are encoded in a different symbology, you need to enable the symbology on the computer. Use the Configuration Utility to enable and disable symbologies

for your scanner. For help understanding how to use the Configuration Utility, see “Configuring the CK30 With the Configuration Utility” on page 36.

The next sections describe how to scan a bar code label with the linear imager, standard range laser, tethered scanner, or scanner attached to the serial port.


Scanning With the Linear Imager or Laser Scanner

If the CK30 has a linear imager or standard range laser, use the following procedure to learn how to scan bar codes.

The linear imager can decode PDF417 bar codes as well as bar codes with high-density, wide-density, and poor quality in any lighting conditions. For help scanning PDF417 bar codes, see the procedure on the next page.

To scan most bar code labels with a linear imager or laser scanner

- 1** Press **1/0** to turn on the CK30.
- 2** Point the scanner window at the bar code label and hold the computer at a slight angle 15 to 25 cm (6 to 10 in) from the label.
- 3** Press the **Scan** button on the keypad or pull the trigger on a handle and direct the red beam so that it falls across all bars in the bar code label.

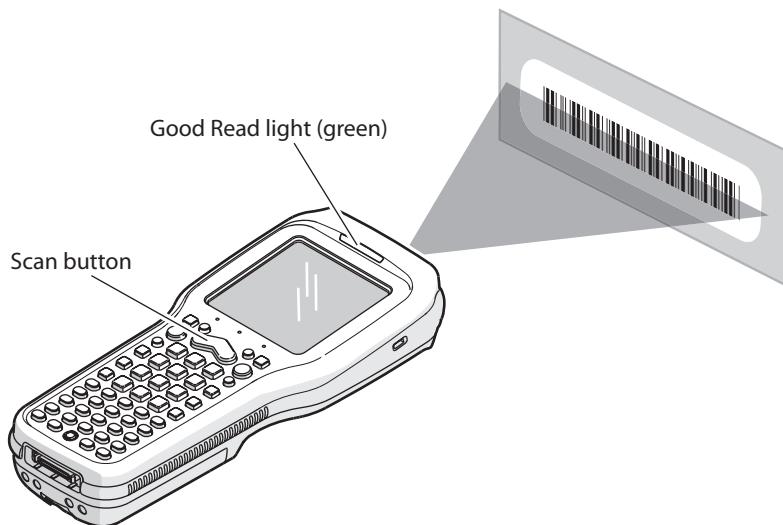


Scanning: Using the linear imager or laser scanner to scan a bar code label.

When the CK30 successfully reads a bar code label, you hear a high beep and the green Good Read light turns on briefly.

- 4 Release the **Scan** button.

To scan PDF417 or Micro PDF417 bar code labels with a linear imager

- 1 Press **%o** to turn on the CK30.
- 2 Point the scanner window PDF417 or Micro PDF417 bar code label and hold the computer at a slight angle six to ten inches from the label.
- 3 Press the **Scan** button on the keypad or pull the trigger on a handle and direct the red beam so that it falls across at the top row of the bar code label.

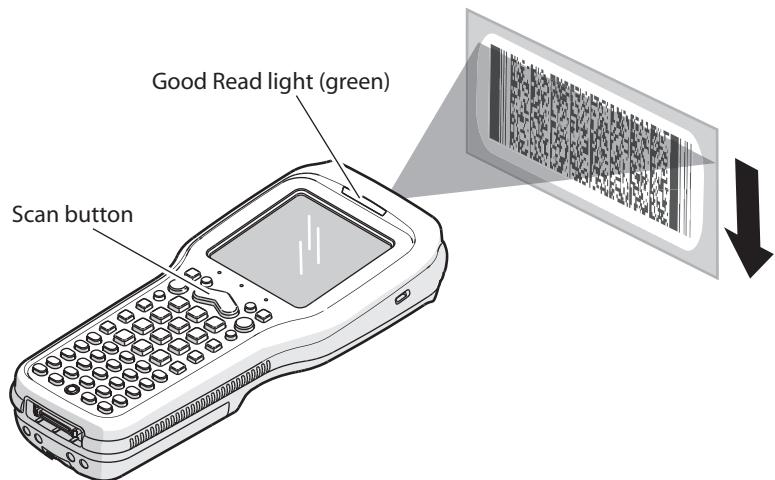

Scanning a PDF417 or Micro PDF417 Bar Code Label

- 4 Move the beam down all rows of the bar code label. The CK30 clicks as it reads each row.
- 5 The CK30 emits a high beep and the green Good Read light turns on briefly when the CK30 successfully reads the entire bar code label.

You may need to continue moving the beam from the bottom of the bar code label to the top, and back to the bottom, until you hear the high beep.
- 6 Release the **Scan** button.

Attaching a Tethered Scanner


You can use a tethered scanner with the CK30 if you ordered it with a 10-pin tethered scanner port in place of the integrated scanner. The following devices have been supported by the CK30:

Supported Device	Required Cable
1550C0100*, 1550C0102*, 1550C0104*, and 1550C0105*	068419-001*
1551E*	3-606034-02*
1553*	3-606034-02*
128X wands*	069444-002*
ASCII (generic decoded-output scanner)	3-606034-02*


* These products are not RoHS compliant and are discontinued. This information is included here only for customers who have already purchased these products.

To attach a tethered scanner

- 1 Locate and remove the scanner port cover.

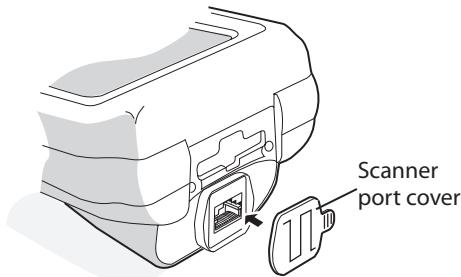

- 2 Insert the scanner 10-pin connector until it locks in place.

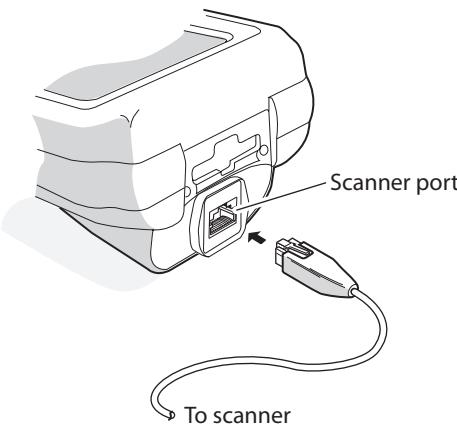

- 3 Configure the Scanner Model command and select the tethered device connected to the CK30. There are several ways to configure the scanner model:
 - Use the Configuration Utility. From the System Main Menu, choose **Configuration Utility > Data Collection > Tethered Scanner > Scanner Settings**.
 - Use one of the configuration methods discussed in “How to Configure the CK30 Parameters” on page 34.
- 4 Modify any scanner commands necessary to meet your needs. Use the Configuration Utility or one of the configuration methods discussed on page 34.

Using Energy Saver Mode With Your 1551E or 1553 Scanner



Note: The 1551E, 1553, and the two required energy saver cables listed on the next page are not RoHS compliant and are discontinued. This information is included here only for customers who have already purchased these products.

Use Energy Saver mode with your 1551E or 1553 scanner to save battery power on your CK30. When you use Energy Saver mode, the scanner is active while you are pressing the trigger and goes into Standby mode after a good read. With Energy Saver mode enabled, the current consumption drops to zero during standby. Full energy is restored when you scan the next label.

To use Energy Saver mode, you need:

- An energy saver cable:
 - P/N 3-606034-02 is required for a 10-pin scanner port.
 - P/N 3-606032-03 is required for a serial port.
- Firmware version 2.13 or later on the scanner.

For help using the Configuration Utility, see “Configuring the CK30 With the Configuration Utility” on page 36.

To enable Energy Saver mode

- 1 From the Configuration Utility, choose **Dock Tethered Scanner > Scanner Settings > Energy saver mode**.
- 2 Select **Enable** and press **Enter**.
- 3 Press **Esc** until you exit the Configuration Utility.



Note: If the scanner stops working after you enable energy saver mode, you may not be using an energy saver cable. For help, see “Problems While Scanning Bar Codes” on page 134.

Attaching a Scanner to the Serial Port

You can attach a scanner to the serial port of the CK30 if you order a serial adapter or a required cable. There are two serial adapters available to support decoded and undecoded scanners:

- Undecoded serial adapter (P/N 225-714-001)
- Decoded serial adapter (P/N 225-715-001) or AA2 serial cable adapter

Use the next two tables to locate the serial adapter and the required cable you need for your scanner.

Undecoded Serial Adapter and Required Cables

Scanner	Undecoded Serial Adapter	Required Cable
128X wands*	225-714-001	069444-005*
1550C0500*, 1550C0502*, 1550C0504*	225-714-001	068424* or 068425*
155XE	225-714-001	3-606030-10
1400	225-714-001	3-606030-10

* These products are not RoHS compliant and are discontinued. This information is included here only for customers who have already purchased these products.


Decoded Serial Adapter or AA2 and Required Cables

Scanner	Decoded Serial Adapter	Required Cable
1400	225-715-001 or AA2	3-604032-15, 3-604032-06*, or 3-606032-03*
1551E*	225-715-001 or AA2	3-604032-15, 3-604032-06*, or 3-606032-03*
1553E*	225-715-001 or AA2	3-604032-15, 3-604032-06*, or 3-606032-03*
1800	225-715-001 or AA2	3-366032-01*
SR60	225-715-001 or AA2	321-639-002

* These products are not RoHS compliant and are discontinued. This information is included here only for customers who have already purchased these products.

To attach a scanner to the serial port

- 1 Connect a scanner to the DB9 connector on the serial adapter or cable.
- 2 Hook the serial adapter into the battery on the CK30 and then snap it into place. If you are using the AA2 serial cable adapter, attach the 26-pin connector to the serial port.

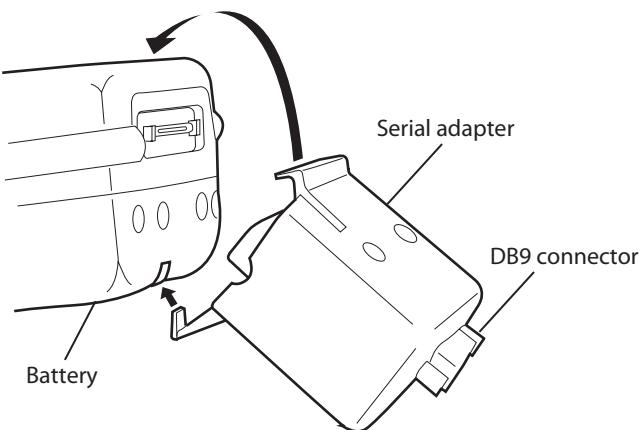

3 Attach the scanner to the serial adapter.

4 Refresh Intermec Settings.

If you attach the undecoded serial adapter, the default scanner is the 1550C05XX. If you attach the decoded serial adapter, the default scanner is the 1551E.

5 Use Intermec Settings to select your scanner model and configure the serial port. For help using Intermec Settings, see “Configuring the CK30 With SmartSystems Console” on page 40.



Note: When you attach an undecoded serial adapter to the CK30, the internal scanner does not work.

Installing an SD Card


You can use a Secure Digital (SD) card to increase file storage and install software. The CK30 currently supports SD cards that hold up to 1 gigabyte of information. The SD card slot is located on the top of the CK30 just above the laser scanner window.

To insert an SD card


1 Press **%o** to turn off the CK30.

2 Remove the two screws on the SD card slot door and remove the door.

- 3** Gently insert the SD card into the CK30 with the printed side facing the keypad and screen side of the CK30.

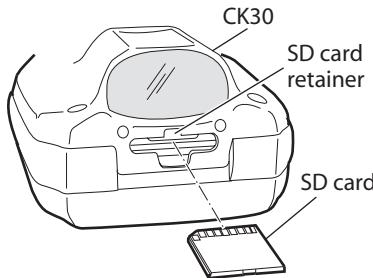

- 4** Push the card into the slot until it latches in place and the steel card retainer covers the end of the SD card.
- 5** To verify that the SD card is seated correctly, press $\frac{1}{10}$ to turn on the CK30.
- If the SD card contains operating system upgrade files, the upgrade process begins automatically. For more information, see “Upgrading Your CK30” on page 103.
 - You should be able to navigate to the SDMMC Disk folder to see the contents of the SD card. If not, see page 129 for troubleshooting help.
- 6** Replace the door, making sure to insert the door catch into the slot above the steel card retainer.

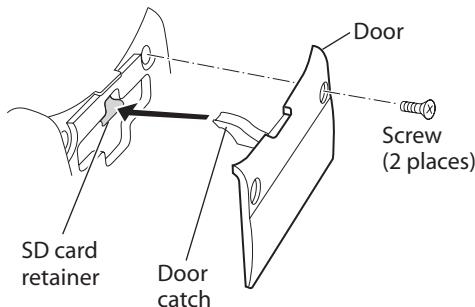


- 7** Replace the two screws.
- 8** Press $\frac{1}{10}$ to turn on the CK30.
- 9** (Optional) Navigate to the SDMMC Disk folder to see the contents of the SD card.

To remove the SD card

- 1** Press Vol to turn off the CK30.
- 2** Remove the two screws on the SD card slot door and remove the door.
- 3** Push in on the SD card until you hear it unlatch. The card should eject far enough that you can easily remove it from the CK30.

If the card does not eject easily, you can use the door catch to remove it by turning the door upside down and using the catch to pull out the SD card.

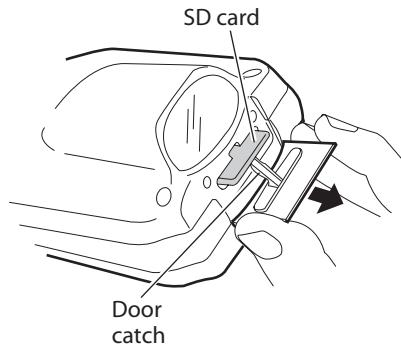

- 4** Remove the SD card from the CK30.



2 Configuring the CK30

Use this chapter to understand how to configure the CK30 to communicate in your network. In this chapter, you will find these sections:


- How to Configure the CK30 Parameters
- Configuring the CK30 for Your Network
- Configuring Security
- Saving Your Configuration Changes to Flash Memory

How to Configure the CK30 Parameters


You can configure many parameters on the CK30, such as the bar code symbologies it decodes or the network settings. These characteristics are controlled by configuration parameters. The values you set for these configuration parameters determine how the computer operates.

There are several ways to configure the CK30:


Use Setup Assistant on the CK30

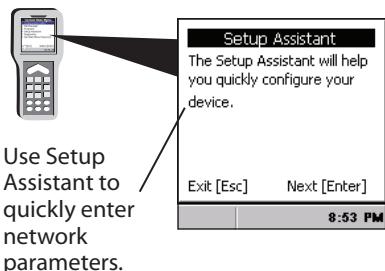


Use Configuration Utility on the CK30

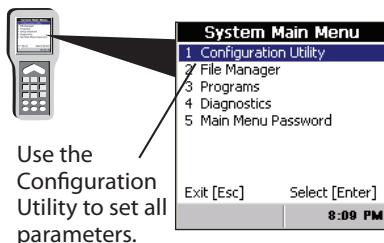

Use the SmartSystems Console

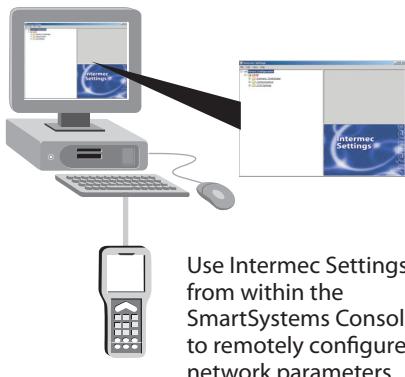

Use Configuration Commands

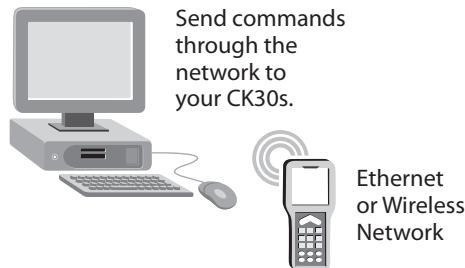

Scan Bar Codes



Configuring the CK30 With the Setup Assistant

When first setting up the CK30, use the Setup Assistant to set or enable basic network parameters and connect your CK30 to the network. The Setup Assistant guides you through setting the following basic network parameters:

- Date and time
- 802.11 radio
- WEP security
- DHCP server or IP address, subnet mask, and default router
- Device name



Note: If you are using the CK30 in an EasyADC system, enable the ION client. Your CK30 configures the security parameters, reboots, and launches the TE 2000 application. When the CK30 connects to its host, the Intermec Ready-to-Work Indicator turns on solid blue.

To set other parameters, use the Configuration Utility or another configuration method. The Setup Assistant runs on the CK30 the first time you turn on the computer.



The Setup Assistant Start Screen

After you complete the Setup Assistant, the CK30 should be communicating with your network.


Configuring the CK30 With the Configuration Utility

Use the menu-driven Configuration Utility to configure the CK30 and view system information. You can access the Configuration Utility while running any application.


Tip: To easily navigate through the CK30 menus, press the numbers to the left of the option you want to select.

To open the Configuration Utility

- 1 Press □ and then □ to open the System Main Menu.

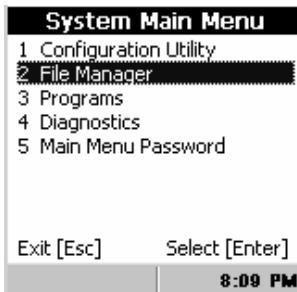


- 2 Select the **Configuration Utility**. The Configuration Utility main menu appears.

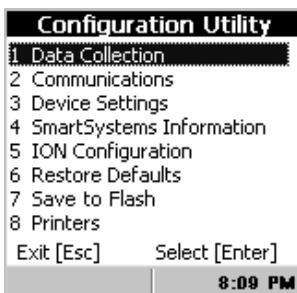

Refer to the next sections to understand your menu options, learn how to navigate and enter information, and learn how the menus are organized in the Configuration Utility. For help understanding the commands and parameters, see the *Intermec Computer Command Reference Manual* (P/N 073529).

When using the Configuration Utility, you may not see a parameter until you enable or disable a value for another key field. For example, you will not see IP Settings unless you disable DHCP. You may also not see a parameter if your computer does not support a particular feature.

Use the following diagram to find the commands you need to use to configure your CK30s. These screens do not represent the exact information you will see on your CK30. They have been modified to show you how the information is structured.

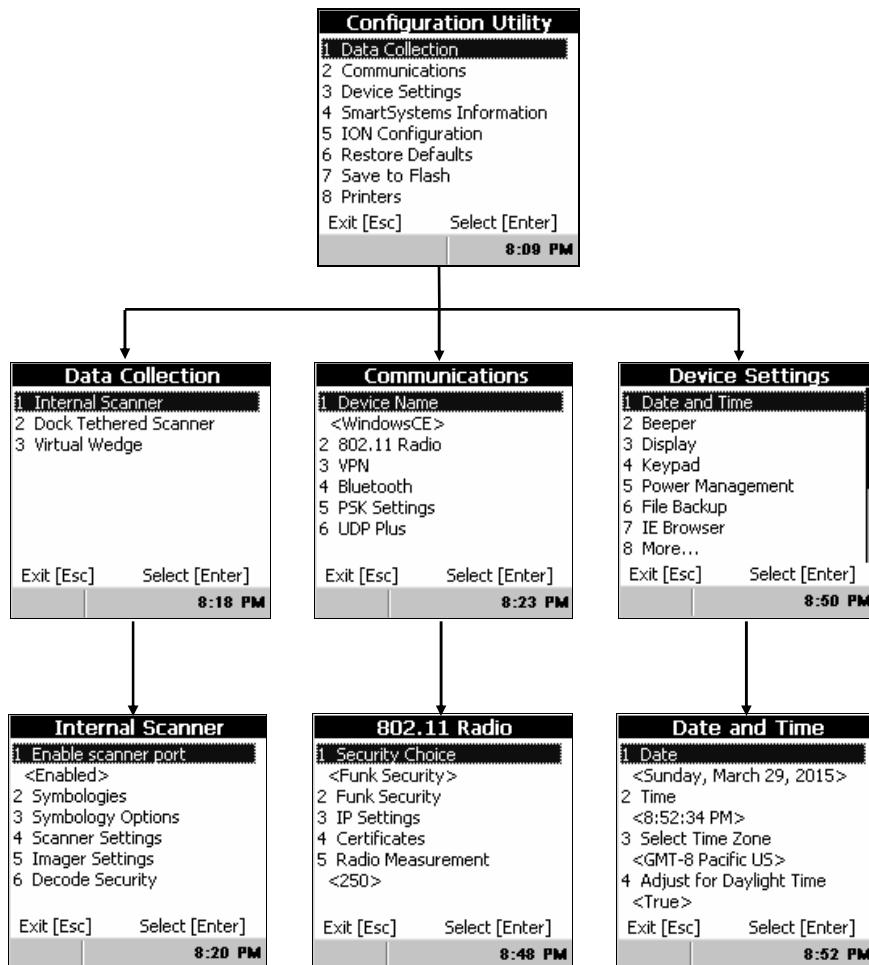

Configuration Utility Menus at a Glance

Configuration Utility Menu Options

Menu Option	Description
Data Collection	Configure scanner settings and bar code symbologies.
Communications	Set up network settings including the 802.11b/g radio and the Bluetooth radio.
Device Settings	Configure settings specific to the CK30 such as the date, time, beeper volume, and backlight timeout.
SmartSystems Information	Add information specific to the SmartSystems application such as identity, administrator, and location.
ION Configuration	Configure settings specific to the Instant On (ION) application.
Restore Defaults	Restore factory default settings on your CK30.
Save to Flash	Configure registry persistence so your settings are saved after a cold boot.
Printers	Configure settings for Bluetooth printers associated with the CK30.

Use this table to understand how to navigate and enter information in the Configuration Utility.

Navigating in the Configuration Utility

To Do This:	Press:
Select an option	<ul style="list-style-type: none"> The number associated with the option ▲ or ▼ to select an option and then press Enter Tab to select an option and then press Enter
Save a setting	F3 key
Exit or return to a previous screen	Esc until you exit the application or return to a previous screen
Delete a character	□ key, Backspace (←) key
Delete all characters in a highlighted field	Backspace (←) key

Navigating in the Configuration Utility (continued)

To Do This:	Press:
Return to the Configuration Utility main menu (Home)	<ul style="list-style-type: none"> • On the 42-key and 52-key keypads, press □■ and then 8 • On the 50-key keypad , press □■ and then H

Restoring Default Settings


You can restore the CK30 to factory default settings from the Configuration Utility. For a complete list of the default settings, see “Default Configuration Settings” on page 160.



Note: Using the Restore Defaults option resets all network parameters. As a result, you may lose network communications. This option should only be used by network administrators or by Intermec support personnel.

To restore factory default settings

- 1 From the Configuration Utility menu, select **Restore Defaults**.
- 2 Press **Enter** to select Restore Defaults. The following Restore Defaults dialog box appears.

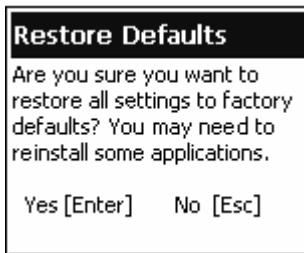

- 3 Press **Enter** to restore factory defaults.

Your CK30 performs a cold boot and returns all of your settings to the factory default settings.

- 4 If you have CAB files loaded on your CK30, you will see a Confirm File Replace dialog box. Select **Yes to All** and then press **Enter**. The CK30 installs your CAB files.

When the CK30 is done booting, the Start Screen or the Setup Assistant appears depending on your settings.



 
Note: You may need to reinstall some applications after restoring the default settings because any settings that were modified for your application will be reset.

Exiting the Configuration Utility

You can exit the Configuration Utility at any time by pressing the **Esc** key. If you have made changes to your configuration, they will automatically be saved to flash if you save your changes.

To exit the Configuration Utility

- 1 Press **Esc** until you return to the System Main Menu. If you have made any changes to your configuration, the Save Changes dialog box appears.



- 2 If you want to save your configuration, select **Save changes**. If you do not want to save your configuration changes, select **Discard changes**.

Configuring the CK30 With SmartSystems Console

The SmartSystems™ Console lets you manage all your SmartSystems-enabled devices at the same time from a central host PC. The CK30 ships with a SmartSystems client, which means it is SmartSystems-enabled. The console displays all of the CK30s in your network. In the console, you can right-click a CK30 and a menu appears. To configure the CK30, choose **Intermec Settings** from the menu.

The console is part of SmartSystems Foundation, which is available from the Intermec web site. Go to www.intermec.com/SmartSystems to download SmartSystems Foundation. For help using the console, see the online manual available from the Help menu in the console.

Configuring the CK30 by Scanning Bar Codes

You can change some of the configuration parameters of the CK30 by scanning Code 39 or Code 93 bar code labels containing configuration commands. This method is a fast and easy way to change just a few configuration parameters on a single CK30.

You can only change some of the configuration parameters by scanning bar codes. To configure all of the configuration parameters, use the Configuration Utility or send commands through the network to your CK30.

You can print and scan the bar code labels from the *Intermec Computer Command Reference Manual* or you can create your own bar code labels. For help, see the *Intermec Computer Command Reference Manual*.

You can also use Intermec's EasySet software to print configuration labels you can scan to change your configuration settings. For more information, see the EasySet online help. EasySet is available from the Intermec Data Capture web site. There are some limitations on using EasySet labels to change symbology configuration settings. Please use an alternate method of configuration for setting up symbologies.

For example, you can use the Beeper Volume configuration command to adjust the beep volume of the CK30. Scan this bar code label to set the volume to the lowest (quietest) level:

Beeper Volume Low



\$+BV1

When you scan bar code configuration commands, the CK30 emits a series of beeps unless the volume is turned off. There are two beep sequences:

- One high beep means you scanned a valid configuration command.
- Three low beeps means you scanned an invalid configuration command.

Configuring the CK30 Through the Network

You can change the configuration parameters of the CK30 by sending commands through a host PC or through the network. If you are using a network, you can configure one or more CK30s at a time. If a CK30 has already been configured for your wireless network, you can remotely configure the CK30 by sending a command from an application on the host PC. You cannot set all parameters through the network. You can only set those commands that have a syntax in the *Intermec Computer Command Reference Manual*.



Note: You can continue running an application on the CK30 while configuring it from the host.

Configuring the CK30 in a UDP Plus Network

You can use the host computer to configure a CK30 in your wireless network. To send and receive configuration data or files, you need to write a host application that can communicate with the Intermec Application Server.

For help, see the appropriate Intermec Application Server user's manual. You use the Terminal Message Format (TMF) protocol to send and receive transactions between the host application and the CK30.

To set up the Intermec Application Server

- Configure a peer-to-peer destination name for the host application. Create a transaction ID, \$NGCFGRSP, that will be routed to this destination name. The Intermec Application Server uses the transaction ID to route responses from the CK30 back to the host application. \$NGCFGRSP is a special transaction ID that the server uses to forward configuration response data from a CK30.

All configuration responses are routed with the \$NGCFGRSP transaction ID. The Intermec Application Server cannot keep track of multiple applications sending reader or configuration commands. If you have two host applications sending reader or configuration commands, they must both be configured to receive the \$NGCFGRSP transactions, and therefore both will receive all responses from all CK30s.

To set up the host computer

- Verify that the host computer can communicate with the Intermec Application Server.

To set up the application

- Prepare and write a host application that can communicate with the Intermec Application Server and send transactions to and receive transactions from the CK30 in this format:

<i>transaction header</i>	<i>TMF field</i>	<i>commands</i>
---------------------------	------------------	-----------------

where:

transaction header is a 96-byte field containing the message number, date and time, source application ID, destinations application ID, transaction ID, and other information. You must set the system message (SYS\$MSG) flag to E in the transaction header. For help, see the Intermec Application Server user's manual.

TMF field is a 2-byte field containing one of these values:

CG Configuration Get request sent from the host application.

Cg Configuration Get response sent from the CK30 to the host.

CS Configuration Set request sent from the host application.

Cs Configuration Set response sent from the CK30 to the host.

commands are the reader and configuration commands that you want to set on the CK30 or the current value you want to retrieve from the CK30. To save configuration changes in flash memory, send the reader command .+1 as the last command.

For a list of all supported commands, see the *Intermec Computer Command Reference Manual*.

To see an example of the host application transaction, see the example on page 45.

Configuring the CK30 in a TCP/IP Direct Connect Network

You can use the host computer to configure a wireless CK30 in your TCP/IP network. To send and receive configuration data, you need to write a host application that can communicate with the CK30 directly through an access point or through the Ethernet network. Use the Terminal Message Format (TMF) protocol to send and receive transactions between the host application and the CK30.

To set up the host computer

- Verify that you can communicate with the CK30.

To set up the application

- Prepare and write a host application that can communicate with the CK30. Send message transactions to and receive transactions from the CK30 on the network port using this format:

<i>TMF field</i>	<i>commands</i>
------------------	-----------------

where:

TMF field is a 2-byte field containing one of these values:

CG Configuration Get request sent from the host application.

Cg Configuration Get response sent from the CK30 to the host.

CS Configuration Set request sent from the host application.

Cs Configuration Set response sent from the CK30 to the host.

commands are the reader and configuration commands that you want to set on the CK30 or the current value you want to retrieve from the CK30. To save configuration changes in flash memory, send the reader command .+1 as the last command.

For a list of all commands, see the *Intermec Computer Command Reference Manual*.

Example

In the host application, you want to get the current values of two configuration commands from the CK30. Send this transaction from the host application:

CG\$+NABV



Note: The transaction header is not shown in this example. You do not need a transaction header for a host application in a TCP/IP network, but you do for a UDP Plus network.

where:

CG is a TMF Configuration Get request.

\$+ is the Change Configuration reader command.

BV is the Beeper Volume configuration command.

The CK30 returns this transaction to the host application.

Cg\$+BV4

where:

Cg is a TMF Configuration Get response.

\$+ is the Change Configuration reader command.

BV4 means the Beep Volume configuration command is currently set to a value of 4, which is a very high beeper volume.

Synchronizing the CK30 System Time With a Time Server

It is important that the time on all of your CK30s be synchronized with a network time server to ensure real-time communications and updates. Network time servers acquire Coordinated Universal Time (UTC) from an outside source such as the U.S. Naval Observatory (USNO). The CK30 uses Simple Network Time Protocol (SNTP) to synchronize with a network time server.

The default reference time server is the USNO (tock.usno.navy.mil). To synchronize the time on your CK30 with this time server, you must have a valid connection to the Internet. You can also synchronize the CK30 system time with a corporate network server within your firewall that is SNTP capable. To use an internal corporate network server, you need to set the domain name in the registry.


Configuring the CK30 for Your Network

The CK30 is a versatile handheld computer that you can easily add to your wired or wireless data collection network. You can connect your CK30 to your network using:

- Serial communications
- 802.11b/g radio communications
- Ethernet communications
- Bluetooth™ radio communications

Configuring Serial Communications

The CK30 has a serial port to transfer data to and receive data from another device via RS-232 communications. You can also insert the CK30 into a communications dock to transmit data to and receive data from a host computer or PC using RS-232 communications. The serial cable and the communications dock are sold separately. For more information on accessories and how to order them, see page 150.

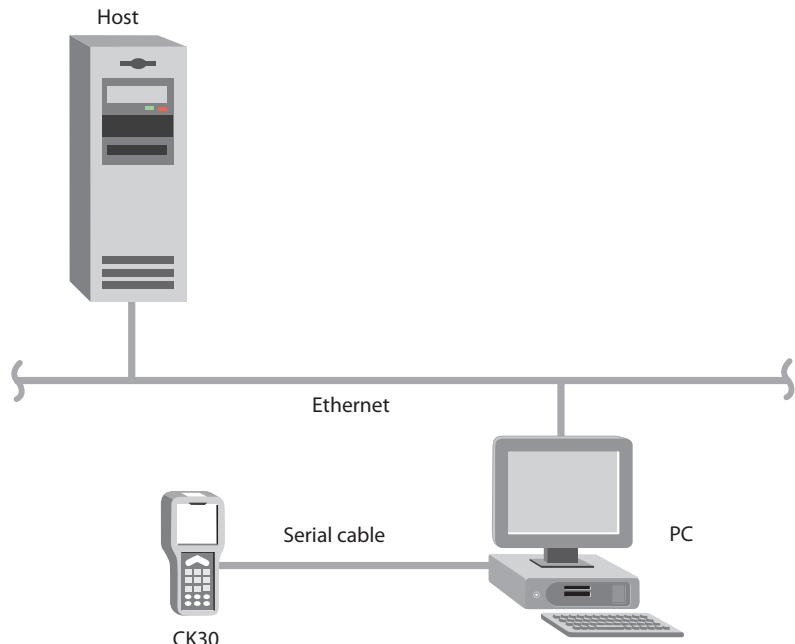***CK30 in a Serial Network*****To use serial communications with your CK30**

- 1 Turn off the CK30.
- 2 Connect the CK30 to the serial port of another device. You can do this in one of the following ways:
 - Connect the CK30 serial port to the serial port of the other device using the AA1 (26-pin to DB9-pin) serial cable adapter and a female-to-female null modem RS-232 cable.
 - Connect the AD1 or AD2 communications dock to the serial port of the other device using a DB9-pin to DB9-pin serial adapter cable. Insert the CK30 into the dock.
- 3 Turn on the CK30.

Configuring 802.11b/g Radio Communications



Caution

Make sure all components with antennas are at least 30 cm (1 ft) apart when power is applied. Failure to comply could result in equipment damage.

The wireless CK30 has an internal 802.11b/g radio to transfer data using wireless communications. This section of the manual assumes that you have already set up your wireless communications network including your access points. If you are using a UDP Plus network, you also need to have your Intermec Application Server communicating with a host computer.


Your CK30 supports these network protocols:

- TCP/IP
- UDP Plus

The next sections explain the parameters you need to configure for the CK30 to work in your wireless network.

Configuring the Network Parameters for a TCP/IP Network

In a TCP/IP network, the CK30 communicates with a host computer directly using TCP/IP. The access point acts as a bridge to allow communications between the wired network and the wireless network.

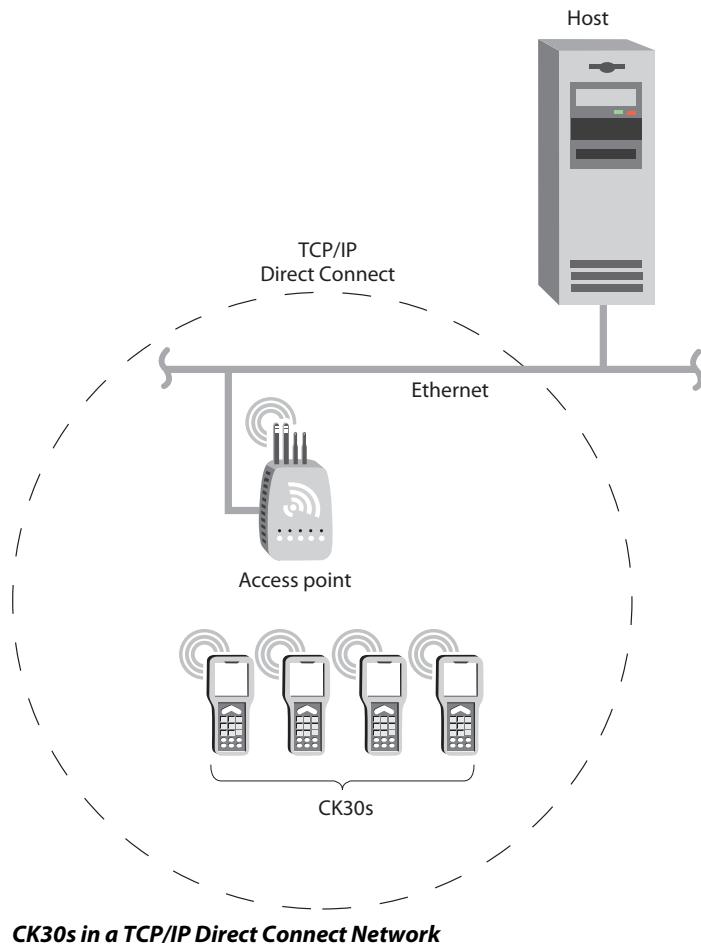


To use wireless communications in a TCP/IP network

- 1 Configure these network parameters on each CK30 in the network:
 - Network Name (SSID)
 - IP Settings (if not using DHCP)
- 2 Make sure that your CK30 is talking to the network and that the network can see your CK30.
- 3 Configure security. For help, see “Configuring Security” on page 55.

The easiest way to configure the network parameters on the CK30 is to use the Configuration Utility. For help, see “Configuring the CK30 With the Configuration Utility” on page 36.

Configuring the Network Parameters for a UDP Plus Network

In a UDP Plus network, the CK30 communicates with a host computer through the Intermec Application Server.

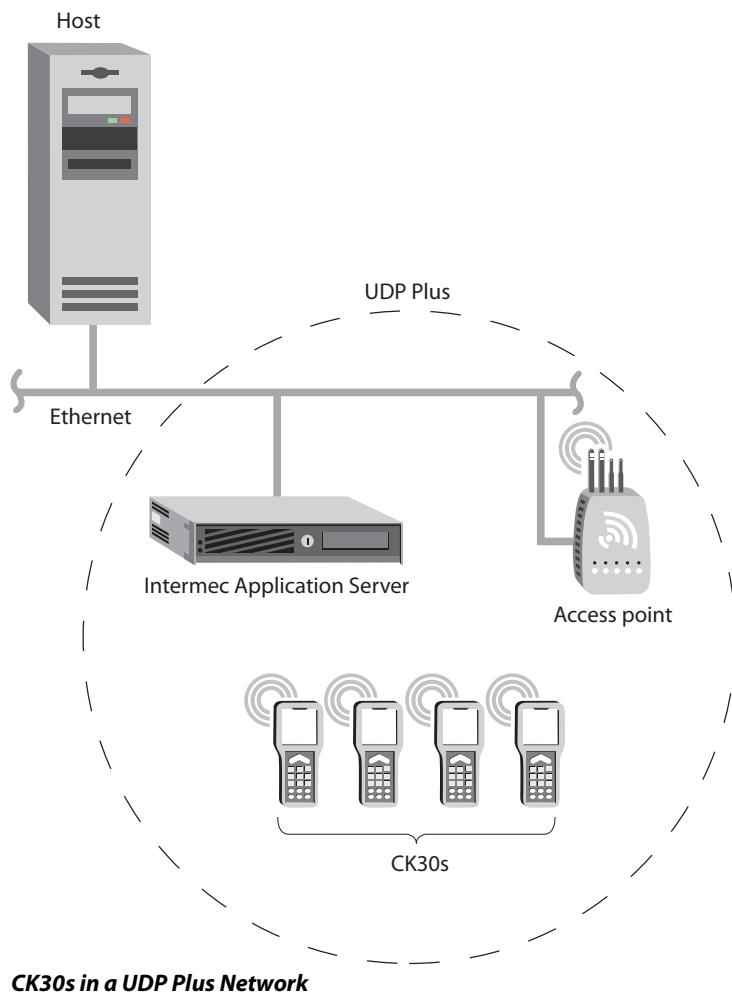

The Intermec Application Server translates UDP Plus packets on the wireless network into TCP/IP packets on the wired network and vice versa. The access point acts as a bridge to allow communications between the wired network and the wireless network.

To use wireless communications in a UDP Plus network

- 1** Configure these network parameters on each CK30 in the network:
 - Network Name (SSID)
 - Controller IP Address
 - IP Settings (if not using DHCP)
 - Network Port
- 2** Configure the security. For help, see “Configuring Security” on page 55.


You can configure the network parameters on the CK30 with the Configuration Utility. For help, see “Configuring the CK30 With the Configuration Utility” on page 36.

Configuring Ethernet Communications on Older CK30s



Note: The Ethernet option is no longer available on the CK30. The information in this section is useful only if you already have an installed base of older CK30s with the Ethernet option.

You can use an older CK30 directly in an Ethernet network if you ordered the Ethernet option on your CK30A. Insert the CK30A into an AD1 or AD2 Communications Dock. The communications dock has an Ethernet connector that makes it possible for the CK30 to communicate with your Ethernet network.

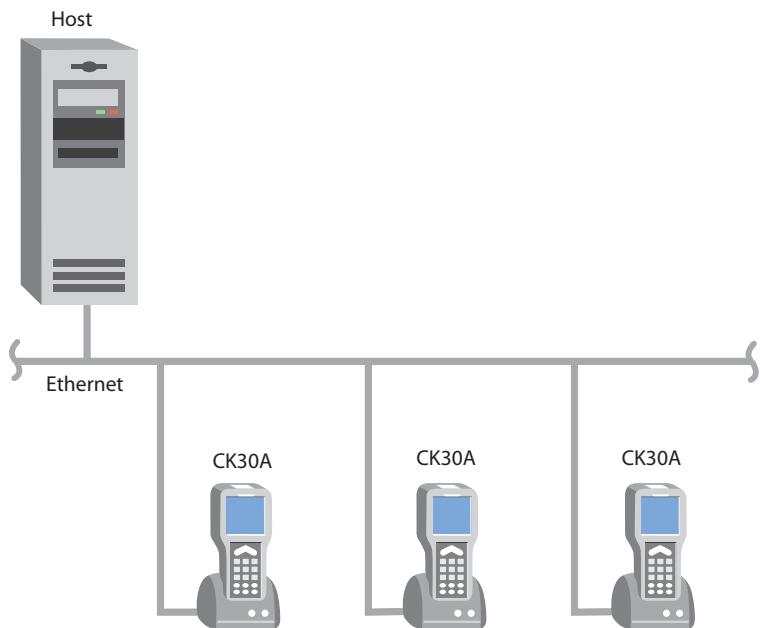

Older CK30s in an Ethernet Network

To use an older CK30 in an Ethernet network

- 1** Configure these network parameters on each CK30:
 - If you have a DHCP server, enable DHCP.
 - If you do not have a DHCP server, set these parameters:
 - a** IP address
 - b** Subnet mask
 - c** Default router
- 2** If required for your network, you may also need to set these parameters on each CK30:
 - Primary and secondary DNS Servers
 - Primary and Secondary WINS Servers
- 3** Make sure that your CK30 is talking to the network and that the network can see your CK30.

Configuring Bluetooth Radio Communications

You can send and receive information to printers wirelessly using the Bluetooth module by Socket Communications. The Bluetooth technology uses short-range radio links and allows for communications over a 10-meter (32.8 ft) range.

To configure the CK30 for wireless printing


- 1 Go to **Configuration Utility > Communications > Bluetooth**. The Bluetooth menu appears.



- 2 Set these Bluetooth parameters:

Parameter	Setting
Power	On
Discoverable	Enable
Connectable	Enable

- 3 Save your changes and exit the Configuration Utility.
- 4 From File Manager, go to **Program Files > Intermec > Network > Bluetooth**.
- 5 Select **wp_quickset_1.exe**. The Run dialog box appears.
- 6 Select **Run** and press **Enter** to start the Bluetooth device discovery. A list of discovered devices appears in the Devices dialog box.

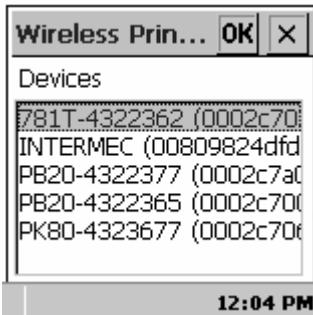

- 7 Select the device you want to use from the list and press **Enter**. You are now ready to send information to the selected device.

If devices are discovered, but your device is not displayed in the box, make sure your device and radio are turned on and try device discovery again.

Use this table to understand the settings you see in the Bluetooth menu.

Bluetooth Settings

Setting	Description
Device Address	Displays the Bluetooth address of your CK30.
Discoverable	Allows other Bluetooth devices to be able to discover your CK30 during a device discovery.
Connectable	Allows other Bluetooth devices to connect to your CK30.
Class of Device	Determines how the device appears to other devices during discovery.
Power	Set and view whether the Bluetooth radio is on or off.
IBT	Displays the version of the Intermec Bluetooth Library.
Radio	Displays the version of the Bluetooth Radio Hardware.

For more information on using Bluetooth communications, see the Bluetooth Resource Kit. The resource kit is part of the

Intermec Developer Library (IDL), which is available as a download from the Intermec web site at www.intermec.com/idl.

Configuring Security

The CK30 provides four types of security for your wireless network:

- Wi-Fi Protected Access 2 (WPA2)
- Wi-Fi Protected Access (WPA)
- 802.1x
- WEP

This section explains how to configure security on your wireless CK30. If you choose not to use security, see “Disabling Security” on page 73. Intermec always recommends that you implement security.

You must choose to use either Funk or Microsoft security to implement your security solution. For details, see the next section, “Choosing Between Funk and Microsoft Security.”

If you want to extend the connectivity of your WLAN to remote servers, you can configure a virtual private network (VPN) to communicate through a dedicated server to a corporate network over the internet. For help setting up a VPN, see “Configuring a VPN” on page 73.

If you are using WPA-802.1x, WPA2-802.1x, or 802.1x security, this section also assumes that your authentication server and authenticators are properly configured. For more information on 802.1x security, see the *MobileLAN™ secure 802.1x Security Solution Installation Guide* (P/N 073134) available at www.intermec.com.



Note: Your security choice does not depend on your authentication server. For example, you can choose Funk security if you use Microsoft Internet Authentication Service (IAS) to issue certificates.

Choosing Between Funk and Microsoft Security

The CK30 provides both Funk and Microsoft security choices. Funk security is the default setting. Use the following sections to set security using either Funk or Microsoft as your security choice.

Both Funk and Microsoft offer similar features, but Funk security also offers these features:

- CCX v2.0 compliance
- Support for LEAP and TTLS
- Configuration of up to four profiles

If you want to use the default Funk security, you need to select a profile. For help, see the next section, “Selecting a Profile for Funk Security.”

If you want to use Microsoft security, you need to select it as your security choice. For help, see “Selecting Microsoft as Your Security Choice” on page 57.

Selecting a Profile for Funk Security

You can define up to four profiles for Funk security. Different profiles let your CK30 communicate in different networks without having to change all of your security settings. For example, you may want to set up one profile for the manufacturing floor and one for the warehouse.

By default, the active profile is Profile 1.

To select a profile for Funk security

- 1 Press □ and then ■ to open the System Main Menu.
- 2 Select the **Configuration Utility**.
- 3 Select **Communications > 802.11 Radio > Funk Security**.
- 4 Select **Active Profile**, choose a profile from the list, and press **Enter**.
- 5 Select the active profile to expand it.
- 6 (Optional) Give your profile a meaningful name:
 - a Select **Profile Label** and a dialog box appears.

- b** Select the text in the box, type a meaningful name, and press **Enter**.
- 7** Configure your security settings.
- 8** (Optional) Repeat this process for each profile you want to define.
- 9** Select one profile as the active profile by selecting Active Profile and choosing a profile from the list.
- 10** Save your settings.

Selecting Microsoft as Your Security Choice

The default security setting is Funk. If you want to use Microsoft security, you need to select it as your security choice.

To select Microsoft security as your security choice

- 1** Press **□** and then **■** to open the System Main Menu.
- 2** Select the **Configuration Utility**.
- 3** Select **Communications > 802.11 Radio > Security Choice**.
- 4** From the **Security Choice** list, select **Microsoft Security**.
- 5** Press **Enter**. An alert box appears telling you that you must save your settings and warm boot the CK30 for your new security choice to take effect.
- 6** Select **Yes** and press **Enter**.

Your CK30 warm boots and your new security choice is Microsoft security.

Configuring WPA Security

Wi-Fi Protected Access (WPA) is a strongly enhanced, interoperable Wi-Fi security that addresses many of the vulnerabilities of Wired Equivalent Privacy (WEP). Instead of WEP, WPA uses Temporal Key Integrity Protocol (TKIP) for its data encryption method.

Currently, WPA satisfies some of the requirements in the IEEE 802.11i draft standard. When the standard is finalized, WPA will maintain forward compatibility.

WPA runs in Enterprise (802.1x) mode or PSK (Pre-Shared Key) mode:

- In Enterprise mode, WPA provides user authentication using 802.1x and the Extensible Authentication Protocol (EAP). That is, an authentication server (such as a RADIUS server) must authenticate each device before the device can communicate with the wireless network.
- In PSK mode, WPA provides user authentication using a shared key between the access point and the CK30. WPA-PSK is a good solution for small offices or home offices that do not want to use an authentication server.

To use WPA security, you need:

- an authentication server (Enterprise mode only).
- an access point with an 802.11b/g radio that supports WPA.
- a CK30 with the 802.11b/g radio and the 802.1x/WPA security option.

The CK30 also supports Wi-Fi Protected Access 2 (WPA2) if you are using Funk security. WPA2 is a product certification available through the Wi-Fi Alliance that certifies wireless equipment is compatible with the 802.11i standard. WPA2 uses the Advanced Encryption Standard (AES) for data encryption.

WPA2 runs in 802.1x (Enterprise) mode or PSK (Pre-Shared Key) mode:

- For WPA2-802.1x mode, WPA2 requires authentication in two phases; the first is an open system authentication and the second uses 802.1x and an Extensible Authentication Protocol (EAP) authentication method.
- In PSK mode, WPA2 provides user authentication using a shared key between the authenticator and the CK30. WPA2-PSK is a good solution for small offices or home offices that do not want to use an authentication server.

Configuring WPA Security With Funk Security

Use these procedures to set WPA-802.1x, WPA2-802.1x, WPA-PSK, or WPA2-PSK security on your CK30 with Funk security.

To configure WPA-802.1x or WPA2-802.1x with Funk security

- 1 Make sure you have configured the communications and radio parameters on your CK30.
- 2 Make sure you have selected Funk as your security choice.
- 3 Press  and then  to open the System Main Menu.
- 4 Choose **Configuration Utility > Communications > 802.11 Radio > Funk Security > Profile**.
- 5 For **Association**, choose **WPA** or **WPA2** and press **Enter**. Encryption automatically defaults to TKIP if you are using WPA. Encryption automatically defaults to AES if you are using WPA2.
- 6 For **8021x**, choose **TTLS**, **PEAP**, or **TLS** and press **Enter**. If you choose TTLS or PEAP:
 - a Select **Prompt for Credentials**, choose **Enter credentials now** and press **Enter**.



Note: You can use **Prompt for credentials** to troubleshoot your connection to the network if you have problems.

- b Select **User Name**, type a user name, and then press **Enter**.
- c Select **User Password**, type a user password, and then press **Enter**.
- d Select **Validate Server Certificate**, choose **Yes**, and then press **Enter**.



Note: You must have the date on the CK30 set correctly when you enable Validate Server Certificate.

If you choose TLS:

- a Load a user and root certificate on your CK30. For help, see “Loading a Certificate” on page 69 for help.
- b Select **Validate Server Certificate**, choose **Yes**, and then press **Enter**.
- c You must enter a **User Name** and **Subject Name**. You can also enter a **Server Common Name** if you want to increase your level of security.

- 7 Exit the Configuration Utility.

To enable WPA-PSK or WPA2-PSK with Funk security

- 1 Make sure you have configured the communications and radio parameters on your CK30.
- 2 Make sure you have selected Funk as your security choice.
- 3 Press **□■** and then **■□** to open the System Main Menu.
- 4 Choose **Configuration Utility > Communications > 802.11 Radio > Funk Security > Profile**.
- 5 For **Association**, choose **WPA** or **WPA2** and press **Enter**.
- 6 For **802.1x**, choose **None** and press **Enter**.
- 7 For **Pre-Shared Key**, enter the pre-shared key or the passphrase.

The pre-shared key must be a value of 32 hex pairs preceded by 0x for a total of 66 characters. The value must match the key value on the access point. The passphrase must be from 8 to 63 characters. After you enter a passphrase, the CK30 internally converts it to a pre-shared key.

This value must match the passphrase on the authenticator.

- 8 Exit the Configuration Utility.

Configuring WPA Security With Microsoft Security

Use these procedures to set WPA-802.1x and WPA-PSK security on your CK30 with Microsoft security.

To enable WPA-802.1x security on your CK30 with Microsoft security

- 1 Make sure you have configured the communications and radio parameters on your CK30.
- 2 Press **□■** and then **■□** to open the System Main Menu.
- 3 Choose **Configuration Utility > Communications > 802.11 Radio > Microsoft Security**.
- 4 For **Infrastructure Mode**, choose **Infrastructure** and press **Enter**.
- 5 For **Network Authentication**, choose **WPA** and press **Enter**. Data Encryption automatically defaults to TKIP.


- 6** For **802.1x Authentication**, choose either **TLS** or **PEAP** and press **Enter**.

If you choose TLS:


- a** Select **Properties**. The Auth. Settings dialog box appears.



- b** Choose the **Select** button.
c Select your certificate from the list and press **Enter**. The User Logon dialog box appears.

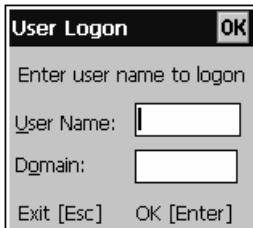

- d** Enter a **User Name** and a **Domain**.
e Press **Enter**.
- If you choose PEAP:
- a** Select **Properties**. The Auth. Settings dialog box appears.
b Make sure the **Validate Server** check box is selected.
c Press **Enter**. Once the radio starts to authenticate, the Network Password dialog box appears.

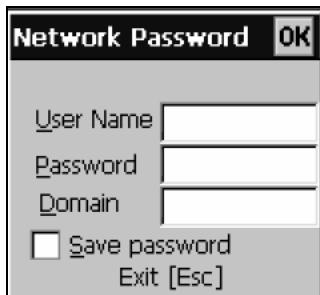

- d Enter the **User Name**, **Password**, and select the **Save password** check box.
 - e (Optional) In the **Domain** field, enter the Active Directory domain associated with the user account.
 - f Press **Enter**. You return to the **Communications** menu.
- 7 Exit the Configuration Utility.

To enable WPA-PSK With Microsoft Security

- 1 Make sure you have configured the communications and radio parameters on your CK30.
- 2 Press □ and then ■ to open the System Main Menu.
- 3 Choose **Configuration Utility > Communications > 802.11 Radio > Microsoft Security**.
- 4 For **Infrastructure Mode**, choose **Infrastructure**.
- 5 For **Network Authentication**, choose **WPA-PSK**. Data Encryption automatically defaults to TKIP.
- 6 For **Pre-Shared Key**, enter a pre-shared key or the passphrase.

The pre-shared key must be a value of 32 hex pairs preceded by 0x for a total of 66 characters. The value must match the key value on the authenticator. The passphrase must be from 8 to 63 characters. After you enter a passphrase, the CK30 internally converts it to a pre-shared key.

This value must match the passphrase on the authenticator.

- 7 Exit the Configuration Utility.

Configuring 802.1x Security

802.1x security provides centralized user authentication using an authentication server, authenticators (access points), and supplicants. These components communicate using an EAP authentication type, such as TLS (Transport Layer Security) or PEAP (Protected Extensible Authentication Protocol). 802.1x security provides data encryption using dynamic WEP key management.

To use 802.1x security, you need:

- an authentication server.



Note: You can also use a MobileLAN access point with software release 1.80 or later as an authentication server. For help, see the system manual for your access point.

- an access point with an 802.11b/g radio.
- a CK30 with an 802.11b/g radio and the 802.1x/WPA security option.

Configuring 802.1x Security With Funk Security

- 1 Make sure you have configured the communications and radio parameters on your CK30.
- 2 Make sure you have selected Funk as your security choice.
- 3 Press **□** and then **□** to open the System Main Menu.
- 4 Choose **Configuration Utility > Communications > 802.11 Radio > Funk Security > Profile**.
- 5 For **Association**, choose **Open** and then press **Enter**.
- 6 For **Encryption**, choose **WEP** and then press **Enter**.
- 7 For **Authentication**, choose **TTLS, PEAP, or TLS** and then press **Enter**.
If you choose TTLS or PEAP:
 - a Select **Prompt for Credentials**, choose **Enter credentials now** and press **Enter**.



Note: You can use **Prompt for credentials** to troubleshoot your connection to the network if you have problems.

- b** Select **User Name**, type a user name, and then press **Enter**.
- c** Select **User Password**, type a user password, and then press **Enter**.
- d** Select **Validate Server Certificate**, choose **Yes**, and then press **Enter**.



Note: You must have the date on the CK30 set correctly when you enable Validate Server Certificate.

If you choose TLS:

- a** Load a user and root certificate on your CK30. For help, see “Loading a Certificate” on page 69 for help.
- b** Select **Validate Server Certificate**, choose **Yes**, and then press **Enter**.
- c** You must enter a **User Name** and **Subject Name**. You can also enter a **Server Common Name** if you want to increase your level of security.

8 Exit the Configuration Utility.

Configuring 802.1X Security With Microsoft Security

Use this procedure to configure 802.1x security on your CK30 with Microsoft security.

To enable 802.1x security on your CK30

- 1** Make sure you have configured the communications and radio parameters on your CK30.
- 2** Press **□■** and then **■□** to open the System Main Menu.
- 3** Choose **Configuration Utility > Communications > 802.11 Radio > Microsoft Security**.
- 4** For **Infrastructure Mode**, choose **Infrastructure**.
- 5** For **Network Authentication**, choose **Open**.
- 6** For **Data Encryption**, choose **WEP**.


7 For 802.1X Authentication, choose TLS or PEAP.

If you choose TLS:

- a** Select **Properties**. The Auth. Settings dialog box appears.




- b** Choose the **Select** button.
- c** Select your certificate from the list and press **Enter**. The User Logon dialog box appears.

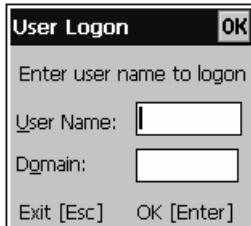

- d** Enter a **User Name** and a **Domain**.
- e** Press **Enter**.

If you choose PEAP:

- a** Select **Properties**. The Auth. Settings dialog box appears.
- b** Make sure the **Validate Server** check box is selected.
- c** Press **Enter**. Once the radio starts to authenticate, the Network Password dialog box appears.

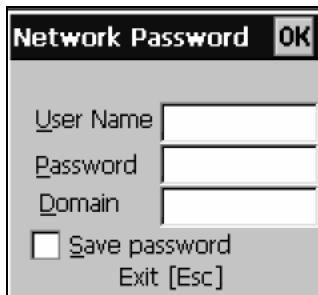

- d Enter the **User Name**, **Password**, and select the **Save password** check box.
- e (Optional) In the **Domain** field, enter the Active Directory domain associated with the user account.
- f Press **Enter**. You return to the **Communications** menu.
- 8 Exit the Configuration Utility.

Configuring LEAP Security

Lightweight Extensible Authentication Protocol (LEAP), also known as Cisco-Wireless EAP, provides username/password-based authentication between a wireless client and a RADIUS server. In the 802.1x framework, traffic cannot pass through an Ethernet hub or wireless network access point until it successfully authenticates itself.

The station must identify itself and prove that it is an authorized user before it is actually allowed to use the LAN. LEAP also delivers a session key to the authenticated station, so that future frames can be encrypted with a key that is different than keys used by others sessions

To use LEAP security, you need:

- a RADIUS server.
- Cisco access points.

LEAP security is not supported with Microsoft security.

To enable LEAP security on your CK30

- 1 Make sure you have selected Funk as your security choice.

- 2 Make sure you have configured the communications and radio parameters on your CK30.
- 3 Choose **Configuration Utility > Communications > 802.11 Radio > Funk Security > Profile**.
- 4 For **8021x**, choose **LEAP** and then press **Enter**.
- 5 For **Association**, choose **Open, WPA, WPA2, or Network EAP** and then press **Enter**. Encryption automatically defaults to TKIP if you choose WPA, to AES if you choose WPA2, and to WEP if you choose Open or Network EAP.
- 6 Select **Prompt for Credentials**, choose **Enter credentials now**, and then press **Enter**.
- 7 Select **User name**, type your user name, and then press **Enter**.
- 8 Select **User Password**, type a user password, and then press **Enter**.
- 9 Exit the Configuration Utility.

Configuring Static WEP Security

The CK30 uses the Wired Equivalent Privacy (WEP) protocol to add security to your wireless network based on the 802.11b standard.

To use WEP security, you need:

- a CK30 handheld computer with an 802.11b/g radio.
- an access point with an 802.11b/g radio.

Configuring Static WEP Security With Funk Security

- 1 Make sure you have selected Funk as your security choice.
- 2 Make sure you have configured the communications and radio parameters on your CK30.
- 3 Press **□■** and then **■□** to open the System Main Menu.
- 4 Choose **Configuration Utility > Communications > 802.11 Radio > Funk Security > Profile**.
- 5 For **Association**, choose **Open** and then press **Enter**.
- 6 For **Encryption**, choose **WEP** and then press **Enter**.

- 7 For **8021x**, choose **None** and then press **Enter**.
- 8 Define a value for the keys you want to use. You can define up to four keys (**Key 1** through **Key 4**).

Enter an ASCII key or a hex key that is either 5 bytes or 13 bytes long depending on the capability of the radio. Set a 5-byte value for 64-bit WEP or a 13-byte value for 128-bit WEP. Hex keys must be preceded by 0x and contain 5 or 13 hex pairs.
- 9 For **Transmit key**, choose the key you want to use for transmitting data.
- 10 Exit the Configuration Utility.

Configuring Static WEP Security With Microsoft Security

- 1 Make sure you have configured the communications and radio parameters on your CK30.
- 2 Press **□■** and then **■□** to open the System Main Menu.
- 3 Choose **Configuration Utility > Communications > 802.11 Radio > Funk Security > Profile**.
- 4 For **Network Authentication**, choose **Open**.
- 5 For **Data Encryption**, choose **WEP**.
- 6 For **Network Key Setting**, choose **Enter Key and Index**.
- 7 For **Network Key Value**, enter an ASCII key or a hex key that is either 5 bytes or 13 bytes long depending on the capability of the radio.

Set a 5-byte value for 64-bit WEP or a 13-byte value for 128-bit WEP. Hex keys must be preceded by 0x and contain 5 or 13 hex pairs.
- 8 For **Network Key Index**, select the key you want to use for data transmission.
- 9 Exit the Configuration Utility.

Loading a Certificate

If you choose to use transport layer security (TLS) with WPA or 802.1x security, you need to have a unique client certificate on the CK30 and a trusted root certificate authority (CA) certificate. You can use a third-party CA to issue unique client certificates and a root certificate.

There are three ways to load certificates on the CK30:

- If you are using Active Directory® to issue certificates, you can use the Enroll Certificates application to load the certificates.
- If you are using another third-party CA, you can use the Import Certificates program to load the certificates.
- If you have multiple certificates to install, you can use the Import Root Certificates and Import User Certificates functions.




Note: For certificates to be valid, the CK30 must be set to the correct date and time. After cold booting the CK30, you may need to correct the date and time.

To load certificates if you are using Active Directory

- 1 Configure the network and radio settings for the CK30 to communicate with your certificate authority.
- 2 From the Configuration Utility, select **Communications > 802.11 Radio > Certificates**.
- 3 Select **Enroll Certificates**. The Enroll Certificates dialog box appears.




- 4 In the Enroll Certificates dialog box, enter the **User Name**, **Password**, and **Server (IP address)** to log into the CA server.
- 5 Press **Enter**. A dialog box appears asking if you want to load the root certificate.

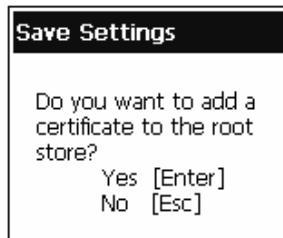

- 6 Press **Enter** for yes. The Enrollment Tool message box appears telling you that the user certificate has been added.
- 7 Press **Enter** to close the Enrollment Tool message box.
- 8 Configure your CK30 for WPA, WPA2, or 802.1x security.


To load certificates if you are using a third-party CA

- 1 From the Configuration Utility, select **Communications > 802.11 Radio > Certificates**.
- 2 Select **Import Certificates**. The certificates application appears.

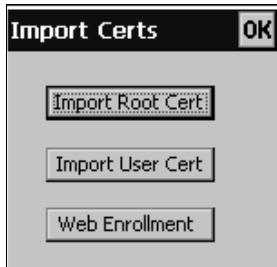

- 3 Select **Import Root Cert**. The Import Root Cert dialog box appears.
- 4 From the Import Root Cert dialog box, select **Pick certificate** and navigate to your root .cer file.
- 5 Press **Enter**. The path to your .cer file now appears in the Certificate Path text box.

- 6 From the Import Root Cert dialog box, select **Import Root Cert**. A dialog box appears asking if you want to add the certificate to the root store.

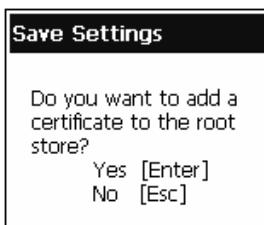

- 7 Press **Enter** to add the certificate. A message box appears telling you that the root certificate has been imported.



- 8 Press **Enter** to close the Success message box.
- 9 Select **Import User Cert**. The Import User Cert dialog box appears.
- 10 From the Import User Cert dialog box, select **Pick certificate** and navigate to your user .cer file.
- 11 Press **Enter**. The path to your .cer file now appears in the text box.
- 12 From the Import User Cert dialog box, select **Pick private key** and navigate to your .pvk file.
- 13 Press **Enter**. The path to your .pvk file now appears in the text box.
- 14 From the Import User Cert dialog box, select **Import User Cert**. A dialog box appears telling you that the user certificate and the associated key were successfully imported.



- 15 Press **Enter** to close the Success message box.
- 16 Configure your CK30 for WPA, WPA2, or 802.1x security.

To load multiple certificates

- 1 Create the \Temp\Root and the \Temp\User folders on the CK30.
- 2 Copy at least one root certificate .cer file into the \Temp\Root folder.
- 3 Copy at least one user certificate .cer file and key .pvk file into the \Temp\User folder. Each pair of filenames must match (for example, cert1.cer and cert1.pvk).
- 4 From the Configuration Utility, select **Communications > 802.11 Radio > Certificates**. The Certificates screen appears.



Note: The Import Root Certificate and Import User Certificate functions are also available in Intermec Settings.

- 5 Select **Import Root Certificates**. The Import Root Certific screen appears. Press **▲** to select **True** and press **Enter** to save the change. You return to the Certificates screen.
- 6 Select **Import User Certificates**. The Import User Certific screen appears. Press **▲** to select **True** and press **Enter** to save the change. You return to the Certificates screen.
- 7 Press **F3** to immediately import the certificates:

- All root certificates in \Temp\Root are imported into the Trusted Authorities certificate store.



Note: You are prompted when a root certificate is imported, unless that certificate is already in the store.

- All certificate and key files in \Temp\>User are imported into the My Certificates certificate store.
 - The Import Root Certificates and the Import User Certificates settings are changed from **True** to **False**.
- 8 Configure your CK30 for WPA, WPA2, or 802.1x security.

Disabling Security

If you choose not to use security with your wireless network, you can disable it on the CK30. Intermec recommends that you always set security in your network.

To disable security

- 1 Press and then to open the System Main Menu.
- 2 Choose **Configuration Utility > Communications > 802.11 Radio > Funk Security > Profile**.
- 3 For **Association**, choose **Open**.
- 4 For **Encryption**, choose **None**.

Configuring a VPN

A virtual private network (VPN) is a private network that uses a public network (Internet) to connect remote sites or users together. These networks use encryption and other security mechanisms to ensure that only authorized users can access the network and that data cannot be intercepted. The CK30 uses the Microsoft CE .NET Remote Access Service (RAS) to set up the VPN. You can configure the CK30 to use either Point-to-Point Tunneling Protocol (PPTP) or Layer Two Tunneling Protocol (L2TP).

PPTP is a network protocol that adds a security infrastructure for the transfer of data from a remote CK30 to a private server, thus creating a VPN by using TCP/IP-based data networks. Like PPTP, L2TP also uses Point-to-Point Protocol (PPP) to encrypt data. L2TP uses Internet Protocol Security Protocol (IPSec) to enable a more secure VPN client connection from your CK30 to a remote server.

IPSec supports the following settings:

- Public key certificates
- Pre-shared keys



Note: If you want to use L2TP and IPSec, they must be supported by the corporate server.

To configure a VPN

- 1 From the Configuration Utility, select **Communications > VPN**.
- 2 Select **Create New VPN**.
- 3 Select **VPN Name**, type a VPN name, and then press **Enter**.
- 4 Select **VPN Type**, choose PPTP or P2TP, and then press **Enter**.
- 5 Select **Host Name**, type a host name, and then press **Enter**.
- 6 Select **Create the new VPN**. A message box appears to tell you that your new VPN has been created.
- 7 Press **Enter**.
- 8 Select **View/Edit VPN**.
- 9 Select **TCP/IP Settings** and make the settings match those of your remote server.
- 10 Select **Security** and make the settings match those of your remote server.
- 11 If you are using L2TP, select **IPSEC Setting** and make the settings match those of your remote server.
- 12 Select **Connect Current VPN**.
- 13 Exit the Configuration Utility.


Saving Your Configuration Changes to Flash Memory

If you want to save your configuration changes through a cold boot, you need to save your changes to the flash memory. You can save your changes to flash memory by:

- using the Configuration Utility main menu.
- scanning a bar code.
- sending a reader command through the network.

To save configuration changes using the Configuration Utility

- 1 From the System Main Menu, select **Configuration Utility**.
- 2 From the Configuration Utility, select **Save to Flash** and then press **Enter**. The Save Settings dialog box appears.

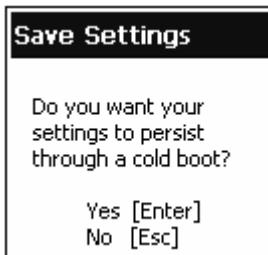

- 3 Press **Enter**.

An hourglass appears while the CK30 is saving your settings to flash. When the CK30 is done saving your changes, it returns you to the Save to Flash menu.

- 4 Press **Esc** twice to return to the System Main Menu.

To save configuration changes by scanning a bar code

- Scan this bar code:

Save Configuration in Flash Memory



.+1



Note: After you scan this bar code, wait several seconds before cold booting the CK30.

To save configuration changes by sending a command from the host

- Send .+1 as the last command from the host application.



3 Developing and Installing Applications

In this chapter you will find guidelines for developing applications and converting existing Trakker Antares applications. You will also find information on installing applications and automatically launching them. In this chapter you will find these sections:

- Developing Applications for the CK30
- Installing Applications on the CK30
- Launching Your Application Automatically
- Customizing How Applications Load on the CK30

Developing Applications for the CK30

The CK30 Handheld Computers run applications programmed in Microsoft Visual Studio 2005-. The CK30C can also run applications developed for the .NET Compact Framework using Microsoft C# and Visual Basic.

Use this section to understand what you need to:

- Develop a new application for the CK30.
- Develop a web-based application for the CK30.
- Convert a Trakker Antares application to a CK30 application.

Developing a New Application for the CK30

Use the Intermec Resource Kits to develop new applications to run on the CK30. The Intermec Resource Kits are libraries of C++ and .NET components grouped by functionality that you can use to create applications for the CK30. The Resource Kits are part of the Intermec Developer Library (IDL), which is available as a download from the Intermec web site at www.intermec.com/idl.

You need these hardware and software components to use the Intermec Resource Kits:

- Pentium PC, 400 MHz or higher
- Windows 2000 (Service Pack 2 or later) or Windows XP (Home, Professional, or Server)
- For native C++ development, Microsoft eMbedded Visual C++ version 4.0
- For .NET Development and Compact Framework (C# and VB.NET), Microsoft Visual Studio .NET 2003 or Visual Studio 2005
- 128MB RAM (196MB recommended)
- 360MB Hard drive space for minimum installation (720MB for complete)
- CD-ROM drive compatible with multimedia PC specification


- VGA or higher-resolution monitor (Super VGA recommended)
- Microsoft Mouse or compatible pointing device

Developing a Web-Based Application

You can develop web-based data collection applications for use on the CK30. For help, see any HTML source book. The CK30 ships with iBrowse or IE Browser (CK30C only).

To open iBrowse or IE Browser

- 1 Press □ and then □ to open the System Main Menu.
- 2 Select **Programs**. The Programs menu appears.
- 3 Select either **iBrowse** or **IE Browser**. If you selected IE Browser, the default browser window appears.

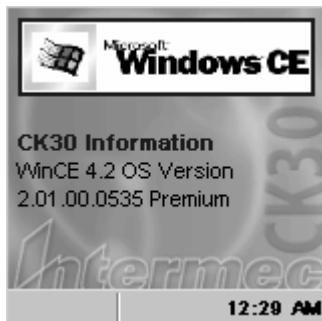

For help using IE Browser, press **F1**. For help using iBrowse, see the *iBrowse User's Guide* (P/N 961-055-015).



Note: iBrowse does not support the use of tethered scanners with the CK30.

Using the IE Browser Application

IE Browser is an IE 6.0 compatible web interface that allows you to run web-based applications on the CK30. IE Browser provides the ability to customize the way function keys work. You can use default Windows functions, allow your application to control the functions, or program the function keys to go to a URL. To increase the amount of usable screen real estate, elements of a typical browser such as the address bar and scroll bars have been removed.

Use this table to understand what keys to press to perform basic functions in IE Browser.

To use the IE Browser shortcut keys

- 1 Set Use F1-F5 as URL keys to Default Windows.**
- 2 Set Pass Function Keys to Browser to Function Keys to URLs.**

IE Browser Shortcuts

You Want to:	Press These Keys:
Access Help, exit Help	F1
Make the font smaller	F3
Make the font larger	F4
Refresh the browser	F5
Exit IE Browser	Ctl and then C
Hide the taskbar	Ctl and then X
Go to the home page	Ctl and then H
Edit the URL	Ctl and then O, Alt and then M
Scroll up or down a page	▲ and ▼ keys
Move to the next hyperlink	Tab
Go back a page	Alt and then ◀
Go forward a page	Alt and then ▶
Stop loading	Esc

Use the following procedures to program the basic functionality of IE Browser.

Setting the Start Page

Use the Start Page command to set the default application address for IE Browser. The Start Page is the first page a user sees when they turn on the CK30 and select IE Browser.

To set the start page

- 1** From the Configuration Utility main menu, select **Device Settings > IE Browser > General > Start Page**.
- 2** In the Start Page dialog box, enter the address for the application you want to use for your default application.
- 3** Press **Enter** to save your changes.

Using Windows Default Function Keys

IE Browser provides the capability of being able to use the default Windows functions for F1-F5, such as F1 for Help.

To use Windows default function keys for F1 to F5

- 1** From the Configuration Utility main menu, select **Device Settings > IE Browser > Use F1-F5 as URL Keys**.
- 2** In the Use F1-F5 as URL Keys dialog box, select **Default Windows** and press **Enter**.
- 3** From the IE Browser menu, select **Pass Function Keys to Browser**.
- 4** In the Pass Function Keys to Browser dialog box, select **Function Keys to URLs** and press **Enter**.

Using Web-Based Application Settings for Function Keys

If your web-based application always uses F1-F5 to perform the same functions, you can set up IE Browser so that it recognizes and uses your web application function keys.

To program function keys to use the web-based application settings

- 1** From the Configuration Utility main menu, select **Device Settings > IE Browser > Use F1-F5 as URL Keys**.
- 2** In the Use F1-F5 as URL Keys dialog box, select **URL Shortcuts** and press **Enter**.

- 3 From the IE Browser menu, select **Pass Function Keys to Browser**.
- 4 In the Pass Function Keys to Browser dialog box, select **Function Keys to HTML** and press **Enter**.

Setting the URLs for the Function Keys

You can program all of the available function keys on the CK30 to launch a URL. You can also control whether the URLs will have open or restricted access.

To set the URLs for the function keys

- 1 From the Configuration Utility main menu, select **Device Settings > IE Browser > Set URL's for F1-F5**.

You can select to set the URLs for F1-F5, F6-F10, F11-F15, F16-F20, or F21-F24. This procedure uses F1-F5 as an example.

- 2 Select **F1 URL**.
- 3 In the F1 URL dialog box, enter the URL you want to correspond to the F1 key and press **Enter**.
- 4 (Optional) If you want to restrict access to the URL, select **F1 Access** to bring up the F1 Access dialog box.
- 5 (Optional) In the F1 Access dialog box, select **Restricted Access** and press **Enter**.
- 6 Complete Steps 1 through 5 as many times as necessary to program all of the function keys you need.

Programming the Function Keys to Go to a URL

If you want your function keys to open URLs when you press them, you need to program IE Browser to recognize that it should open a URL when you select a function key.

To program function keys to go to a URL

- 1 From the Configuration Utility main menu, select **Device Settings > IE Browser > Use F1-F5 as URL Key**.
- 2 In the Use F1-F5 as URL Keys dialog box, select **URL Shortcuts** and press **Enter**.

- 3 From the IE Browser menu, select **Pass Function Keys to Browser**.
- 4 In the Pass Function Keys to Browser dialog box, select **Function Keys to URLs** and press **Enter**.
- 5 Set the URLs for the function keys you want to use. For help, see the previous procedure on how to set the URLs.

Programming IE Browser Applications for the CK30 Screen

Since the CK30 screen is small, you may want to use a few of the programming tips in this table to more efficiently use your screen space.

To Do This:	Use These Attributes in Your Tags:
Remove scroll bars	<body scroll=no> </body>
Remove top and left margins	<body topmargin=0 leftmargin=0> </body>
Use a small font	<basefont face="Lucida Console" size=1>...
Remove spacing between cells in a table	<table class=MenuItem cellspacing=0 cellpadding=0>...</table>
Set the font size for entries in a table	<tbody style="font:7pt Lucida Console">...</tbody> Tip: You can also use this attribute with theader and tfooter tags.
Create a shorter text edit box that stretches across the screen	<input type="text" name="barcode1" tabindex="1" style="font-size:6pt; width:160px"/>
Control the order of controls the tab key jumps to	<input type="text" name="barcode1" tabindex="1"/>

Converting a Trakker Antares Application to a CK30 Application

If you have an existing Trakker Antares application that you would like to run on the CK30, you can use the Antares Migration Resource Kit to convert it. The Antares Migration Resource Kit is a set of libraries and tools that you use to convert your existing Trakker Antares C applications into C++ applications for use on the CK30.

The CK30 does not support all Trakker Antares PSK functions. You may need to rewrite parts of your application when converting it for use on the CK30. See the resource kit documentation for a list of functions that are not supported.

You need these hardware and software components to use the Antares Migration Resource Kit:

- PC with at least 300MB of free disk space running Microsoft Windows 2000/XP
- Microsoft eMbedded Visual C++ version 4.0 with Service Pack 2

The Resource Kit is part of the Intermec Developer Library (IDL), which is available from the Intermec web site at www.intermec.com/idl.

Installing Applications on the CK30

There are several ways you can package applications to install on the CK30:

- You can package your application as a cabinet (CAB) file.
- If you have a simple application, you may only need to deliver the EXE file.
- You can copy a directory structure that contains the application, supporting files, DLLs, images, sound files, and data files.

Intermec recommends using CAB files to install your applications. The CK30 uses standard Windows CE CAB files and will install third-party CAB files. Before the CK30 executes a CAB file, it marks the file as read-only so that it will not be deleted after installation. After the CAB file is extracted, the CK30 automatically saves any RAM-based changes you have made to the registry or file system so that they will persist through a cold boot. This process means that you will not have to reinstall your applications when your battery goes dead or you perform a cold boot.

You can have your CAB files place your application in any of these memory locations on the CK30:

- The RAM-based file store (anywhere in the root \ directory)
- The Flash File System (the CK_FFS folder)
- On the SD card (SDMMC folder)

Unless your application and additional data files are very large, you can place them in the RAM of the unit. They will automatically be backed up to the Flash File System (\CK_FFS\Persistent Copy folder). These files will be preserved through a cold boot, or a complete battery drain and accompanying cold boot. However, Intermec recommends that you place your applications files in the CK_FFS or SDMMC Disk folder.

If you have an SD card inserted in your CK30, it appears as the SDMMC Disk folder. This folder is the recommended location for placing your application install files.

There are several ways you can install files and applications on the CK30:

- ActiveSync
- SD Card
- FTP Server
- Wavelink Avalanche
- SmartSystems Console

The following sections explain how to use each one of these processes to install your application on the CK30.

Installing Applications Using ActiveSync

You can use ActiveSync to establish a connection between your PC and the CK30. ActiveSync allows you to transfer files, synchronize files, perform remote debugging, and other device management activities. ActiveSync is a free application available from the Microsoft web site.

To establish a partnership between your PC and the CK30, you need:

- a USB cable or a female-to-female null modem serial cable.
- an AD1 communications dock.
- ActiveSync version 3.7.1 or later.

Installing ActiveSync and Establishing a Partnership

You can use either a USB cable or a serial cable to establish your initial partnership between the CK30 and your PC.

To install ActiveSync and establish a partnership


- 1 Download ActiveSync from the Microsoft web site and follow the onscreen instructions for installing it on your PC. When the installation process is complete, the Get Connected dialog box appears.



- 2 Connect the AD1 to your PC with the USB or serial cable.
- 3 If you are using a serial cable, from the CK30 System Main Menu, select **Programs > ActiveSync Serial**.
The default setting for ActiveSync on the CK30 is USB.
- 4 Click **Next** in the Get Connected dialog box. ActiveSync detects a device on the USB or serial port and prompts you to set up a new partnership.
- 5 In the Set Up a Partnership dialog box, click **Next**.
- 6 In the Select Number of Partnerships dialog box, select **Yes, I want to synchronize with only this computer** and then click **Next**.

- 7 In the Select Synchronization Settings dialog box, check the items you want to synchronize and click **Next**.
- 8 In the Setup Complete dialog box, click **Finish**.

When the partnership has been established, the following screen appears on your PC showing the device name of your CK30 and the Connected status.

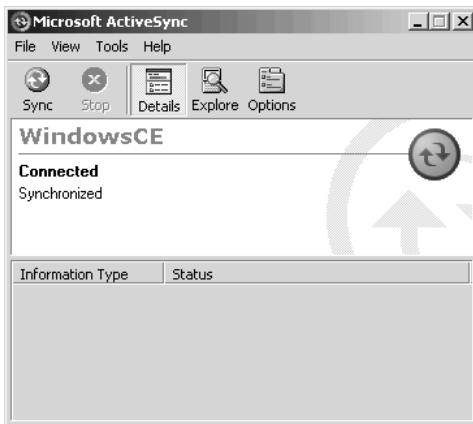

The Microsoft ActiveSync Screen

An ActiveSync icon (⌚) also appears on the CK30 taskbar indicating that it has established an ActiveSync partnership with your PC.



Note: If ActiveSync does not establish a partnership on the first try, the Get Connected dialog box appears on your PC with the message “Your device was not detected.” Make sure all of your cables are securely connected and click **Next** on the Get Connected dialog box until your device is detected.

Now that the partnership has been established, ActiveSync initiates all future connections. To connect to your PC using ActiveSync in the future, simply place a CK30 in the AD1 communications dock, connect the CK30 serially to your PC, or turn on the CK30.

Using ActiveSync to Copy Files and Install Applications

You can use ActiveSync to copy files to the CK30 and to install applications. Use the following procedures to learn how to copy files and install applications on the CK30 using ActiveSync.

To install an application on the CK30 using ActiveSync

- 1** Connect the CK30 to your PC using ActiveSync. For help, see the previous section, “Installing ActiveSync and Establishing a Partnership.”
- 2** In the Microsoft ActiveSync screen, click **Explore**. Windows Explorer opens the Mobile Device window of your CK30.



- 3** In Windows Explorer on your PC, browse to the file that you want to copy to your CK30.
- 4** Right-click the file and click **Copy**.
- 5** Place the cursor in the SDMMC Disk or CK_FFS\Factory Defaults (recommended) folder of your CK30, right-click, and click **Paste**.

The file has now been copied to the CK30 and you can see it using the CK30 File Manager.

- 6** Navigate to your application file and run it.

After your application is installed, you can run it from the Programs menu in the System Main Menu.

Installing Applications Using Your SD Card

If you have an SD card for your CK30, this is the best place for you to install applications.

To install applications using the SD card

- 1** If you are using an SD card reader, remove the SD card from the CK30 and place it in the reader. For help, see “Installing an SD Card” on page 8.
- 2** Copy your application file to the SD card.
If you are using ActiveSync, an FTP server, or Wavelink Avalanche to copy the files to the SD card, place the application in the SDMMC Disk folder on the CK30.
- 3** If you are using an SD card reader, insert the SD card back into the CK30.
- 4** Navigate to the SDMMC Disk folder and run your application.

After your application is installed, you can run it from the Programs menu in the System Main Menu.

Installing Applications Using the FTP Server

The CK30 has a built-in FTP server that connects to a network through the 802.11b/g radio or Ethernet. You can use the server to transfer your application file to the CK30. Another benefit of using the FTP server is that you can create FTP scripts to automate the process of copying your files to the CK30. This option is useful when you need to send files to a large number of CK30s.

If you want to disable the FTP server, use a CAB file or another method to modify the registry key HKEY_LOCAL_MACHINE\COMM\FTPD. You need to set the value IsEnabled (a REG_DWORD) to zero (0). If you set the value to zero, the Web server will not accept connections from the network, even from the local host.

Installing Applications Using Wavelink Avalanche

You can use the Wavelink Avalanche™ device management system to install applications on all of your wireless CK30s. The CK30 ships with the Avalanche Enabler already loaded on it.

Each time the Avalanche Enabler is activated (typically on a warm boot), the CK30 attempts to connect to the Avalanche Agent. When the CK30 connects to the agent, the Agent determines whether an update is available and immediately starts the software upgrade, file transfer, or configuration update.

To use Avalanche to remotely manage the CK30

- 1** Install software packages and updates for the CK30 using the Avalanche Administrative Console.
- 2** Schedule the CK30 updates or manually initiate an update using the Avalanche Administrative Console.

For more information on using Wavelink Avalanche, contact your local Intermec representative or visit the Wavelink web site at www.wavelink.com.

Installing Applications Using the SmartSystems Console

You can use the SmartSystems Console to drag-and-drop Intermec applications onto your CK30s. The CK30 ships with the SmartSystems client loaded on it. The console is part of SmartSystems Foundation, which is available from the Intermec web site for free. To download SmartSystems Foundation, go to www.intermec.com/SmartSystems.

To use SmartSystems Console to install an application

- 1** Download your application file from the Intermec web site and unzip it on your desktop.
- 2** Double-click the application file to install it. The application file should appear in the software vault.
- 3** From the SmartSystems Console in the software vault, drag-and-drop the application onto each CK30 discovered in your network.

For more information on using the SmartSystems Console, see the online help.

Launching Your Application Automatically

To launch your application automatically on the CK30 every time you perform a warm or cold boot, make sure your CAB file places a shortcut to your application in the \Windows\StartUp folder.

Customizing How Applications Load on the CK30

If you have several processes that you need to have run in a specific order as the CK30 turns on, you can use the AutoRun system to customize the way applications load. For compatibility with other Intermec computers, you can place a copy of AutoRun.exe in the same folder as your AutoRun.dat file but it is not required.

To create and install the AutoRun.dat file on your CK30

- 1** On the CK30, create a subfolder called 2577 on the SDMMC Disk or the CK_FFS folder.
- 2** On your PC, open Notepad.
- 3** Write commands for AutoRun.dat using these supported script commands:

Script Command	Description
EXEC	Launches a specified program and waits (up to 10 minutes) for it to complete.
CALL	Processes a specified file of commands and returns. When you use the CALL command, the execution of the current file pauses while a new file that follows the same set of commands executes. Once the new file completes executing, AutoRun.exe continues processing the current file.
CHAIN	Processes a specified file of commands and does not return. This command allows you to call another file that follows the same set of commands and stop processing the current file.
RUN	Loads a specified program and executes it. Specifies the show window attribute so the user interface is visible when the application launches.
LOAD	Loads a specified program and executes it. Specifies the hide window attribute so the user interface is hidden initially.

4 Save this Notepad file as AutoRun.dat.

5 Copy the AutoRun.dat file to the \2577 folder on your CK30.

During every boot, the system scans for AutoRun.dat in the \2577 folder on first the SDMMC Disk and then the CK_FFS folder. The CK30 executes the first AutoRun.dat file that it finds.

Here is a sample AutoRun.dat file that runs a dialer application, connects to a VPN, and establishes a TE 2000 session:

```
EXEC "\Program Files\My Dialer\Dialer.exe" 348-2600  
EXEC "\Program Files\My VPN\Connect.exe" MyDomain  
RUN "\Program Files\TE2000\TE2000.exe" MyServer
```



4

Managing the CK30

Use this chapter to understand how to manage information on the CK30. In this chapter, you will find these sections:


- Accessing the System Main Menu
- Managing Files on the CK30
- Managing Applications on the CK30
- Setting or Changing the System Main Menu Password
- Backing Up Your Files
- Upgrading Your CK30

Accessing the System Main Menu

You need to access the System Main Menu to be able to use most of the tools for managing the CK30, such as File Manager and the Configuration Utility. You can set a password to protect access to the System Main Menu. For help setting the password, see “Setting or Changing the System Main Menu Password” on page 100.

To access the System Main Menu

- 1** From the CK30 start screen, press □ and then □.
- 2** If you have set a password, enter it in the System Menu Access screen and press **Enter**. The System Main Menu appears.

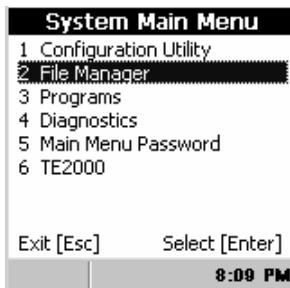

Note: If you have set a password to restrict access to the System Main Menu, an icon (☞) appears on the taskbar indicating that you are using the password-protected area of the CK30.

To exit the System Main Menu

- 1** If you are running a task that you do not want an unauthorized user to access, make sure you close it.
- 2** From the System Main Menu, press **Esc**.
- 3** When the Exit Main Menu screen appears, press **Enter**.


Managing Files on the CK30

You use File Manager to manage files on the CK30. File Manager not only lets you view all of the folders and files located on your CK30, it also lets you:

- run an application.
- delete a file.
- copy a file.
- view the properties of a file.

To open File Manager

- From the System Main Menu, select **File Manager**. The File Manager screen appears.

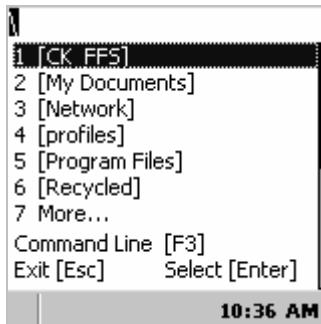

Running an Application From File Manager

You can run an application in File Manager by selecting a file and using the Run command or by using the Command Line prompt.

To run an application using the Run command

- 1 Navigate to the folder containing the application file.
- 2 Select the file by pressing the number before the file or by scrolling to it with the arrow keys and pressing **Enter**.


The following dialog box appears.



- 3 Select **Run** and press **Enter**. Your application runs.

To run an application from the Command Line

- 1 From any screen in the File Manager, press **F3**. The command line dialog box appears.

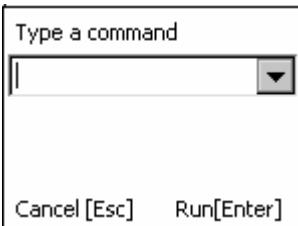

- 2 Type the path to the application and press **Enter**. Your application runs.



Note: You can also include parameters following the application name.

Deleting a File With File Manager

You can use the File Manager to delete files from your CK30.

To delete a file

- 1 Navigate to the folder containing the file you want to delete.
- 2 Select the file by pressing the number before the file or by scrolling to it and pressing **Enter**.
- 3 From the dialog box, select **Delete** and press **Enter**.
- 4 When the screen asks for confirmation that you want to delete the file, press **Enter**.


The file is deleted and you remain in the selected folder.

Copying a File With File Manager

You can use File Manager to make a copy of a file and place it in a different folder.

To copy a file

- 1 Navigate to the folder containing the file you want to copy.
- 2 Select the file by pressing the number before the file or by scrolling to it and pressing **Enter**.
- 3 From the dialog box, select **Copy**. The following dialog box appears.

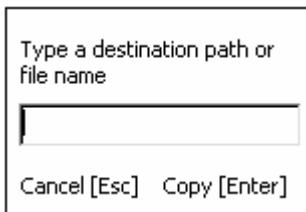

- 4 Type the path to the folder where you want to copy the file and press **Enter**.

Viewing the Properties of a File With File Manager

You can use the File Manager to view properties about a file including the name, size, date created, and date accessed.

To view the properties of a file

- 1 Navigate to the folder containing the file you want to view.
- 2 Select the file by pressing its associated number or by scrolling to it and pressing **Enter**.
- 3 From the dialog box, select **Properties** and press **Enter**. A screen appears showing you the details of the file.

For example, you should see something similar to the following message box.



- 4** Press any key to return to the File Manager.

Managing Applications on the CK30

Task Manager provides information about applications running on the CK30. You do not need to use the System Main Menu to access Task Manager—you can access Task Manager at any time. If you have set a password to protect using the System Main Menu, you will not be able to close an application or view the properties of an application without logging in.

Use Task Manager to perform these tasks:

- View all applications currently running on the CK30
- Close an application
- Switch between applications
- View the properties of an application


Viewing All Applications Currently Running on the CK30

If you want to close down an application while you are using a different application, or if you want to make sure that you have all applications closed before you close the System Main Menu, you can use the Task Manager to view all applications that are currently running on the CK30.

To view applications currently running on the CK30

- Press **Alt** and then **Tab**.

The **Task Manager** dialog box appears with the active application or task selected.

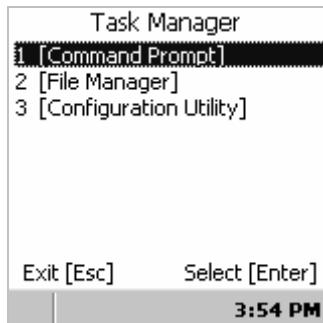

Closing an Application

You can use the Task Manager to close an application at any time. You can close the application you are currently using or another application that is running in the background.

To close an application

- 1 Select the application you want to close. A list box similar to the following appears.



- 2 Scroll to **End Task** and press **Enter**.

The application closes and you return to the System Main Menu.

Switching Between Applications

You can use the Task Manager to switch between applications without having to close down your current application.

To switch between applications

- 1** Select the application you want to switch to.
- 2** Select **Switch To** and press **Enter**.


The application you selected now appears on the screen.

Viewing the Properties of an Application

You can use the Task Manager to view two important properties of an application: the process ID and the file path to the application.

To view the properties of an application

- 1** Select the application you want to view.
- 2** Select **Properties** and press **Enter**. The Task Properties dialog box appears.

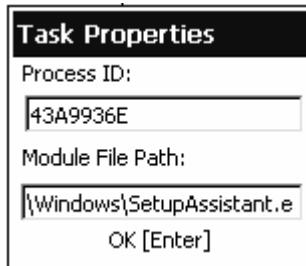

- 3** Press **Enter** to close the Task Properties dialog box.


Setting or Changing the System Main Menu Password

When you initially start the CK30, there is no password to protect access to the System Main Menu. Anyone can view and use powerful tools such as the Configuration Utility, File Manager, and Diagnostics. You may want to set a password to restrict access to the System Main Menu. (This is sometimes called entering Admin mode or Lockdown mode.)

Setting a password does not restrict access to the Task Manager. However, if you have set a password, users who have not logged in will not be able to close an application or view the properties of an application.

To set a password

- 1 Press **□■** and then **■□** to open the System Main Menu.
- 2 From the System Main Menu, select **Main Menu Password**. The Set Menu Password dialog box appears.

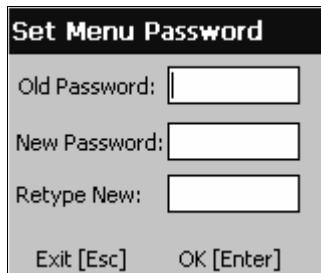

- 3 Press **Tab** to move to the **New Password** field.
- 4 Type your new password, and then press **Tab** to move to the **Retype New** field.
- 5 Type your new password in again.
- 6 Press **Enter**. The screen displays a message reading “Password successfully changed.”
- 7 Press **Enter** to clear the screen and return to the System Main Menu.

To change your password

- 1 Press **□■** and then **■□**.
- 2 In the **Password** field, type your password and press **Enter**.
- 3 From the System Main Menu, select **Main Menu Password**. The Set Main Menu dialog box appears.
- 4 Type your existing password in the **Old Password** field and press **Tab**.
- 5 Type your new password in the **New Password** field and then press **Tab**.

- 6** Type your new password again in the **Retype New** field.
- 7** Press **Enter**. The screen displays a message reading “Password successfully changed.”
- 8** Press **Enter** to clear the screen and return to the System Main Menu.

To remove password protection

- 1** Press **□■** and then **■□**.
- 2** In the **Password** field, type your password and press **Enter**.
- 3** From the System Main Menu, select **Main Menu Password**. The Set Main Menu dialog box appears.
- 4** Type your existing password in the **Old Password** field and press **Tab**.
- 5** Leave the **New Password** field blank and then press **Tab**.
- 6** Leave the **Retype New** field blank and press **Enter**. The screen displays a message reading “Password successfully changed.”
- 7** Press **Enter** to clear the screen and return to the System Main Menu.

Backing Up Your Files

The CK30 makes it easy for you to make a backup copy of all files you have installed or modified on the computer that are not already located in the SDMMC Disk or CK_FFS folders. When you make a backup copy of the file system, the CK30 saves the file system to a folder called Persistent Copy. This folder and all of the files and subfolders it contains, are automatically restored when the CK30 cold boots.

You should back up your files any time you want to make permanent changes to the files in the Persistent Copy folder. You also need to back up the files when you want to permanently delete a file. When you install a CAB file, the CK30 automatically performs this backup process.

To back up your files

- 1 Press □■ and then □□ to open the System Main Menu.
- 2 From the System Main Menu, go to **Configuration Utility > Device Settings > File Backup**.
- 3 Select **Backup Files Location** and choose the location where you want your files to be backed up.
- 4 Press **Enter** to save your selection.
- 5 Select **Backup the File System**.
A copy of all your files is saved to the \Persistent Copy folder in your desired location.
- 6 Press **Esc** until you exit the menu system.

Upgrading Your CK30

There are two ways to upgrade your CK30:

- You can upgrade your computer using an SD card.
- You can upgrade your computer using SmartSystems Console.

When you remotely upgrade your computer, you are updating the operating system and the embedded Intermec Value Add (IVA) files.

Upgrading the Operating System Using an SD Card

To upgrade the operating system, you need:

- an SD card.
- an SD card reader (optional).
- the latest upgrade file. This file is available from the Intermec web site at www.intermec.com. Go to **Service & Support > Downloads**. Make sure the file you select is for your language.

You can use any file transfer method (ActiveSync, FTP server, and so on) to copy the upgrade files to your SD card. Intermec recommends using an SD card reader.



Note: If you are using an SD card reader to copy files to your SD card, see “Installing an SD Card” on page 30 for information on how to remove and insert the SD card.

When you upgrade the operating system, you erase the current configuration and replace it with the new default configuration. You will need to set the network communications parameters on the CK30 to reestablish communications with the other devices in the wireless network.

To upgrade the operating system using an SD card

- 1** Download the latest upgrade (.exe) file from the Intermec web site to your desktop PC.
- 2** Double-click the .exe file on your desktop PC. An InstallShield application starts and walks you through the process of extracting the upgrade files. You can designate the folder where you want the files to unzip.

If you do not have SmartSystems Console installed, the default location that the files are extracted to is:

Program Files\Intermec\CK3x OS vx.xx.xx.xxxx

where

x.xx.xx.xxxx is the operating system upgrade version.

If you have SmartSystems Console installed, the default location the files are extracted to is:

Program files\Intermec\SmartSystem\Ss_Lib\Software\ CK3x OS vx.xx.xx.xxxx

where

x.xx.xx.xxxx is the operating system upgrade version.

- 3** If you are using an SD card reader, remove the SD card from the CK30 and place it in the reader.
- 4** Copy all of the files in Program Files\Intermec\CK3x OS vx.xx.xx.xxxx to your SD card.

If you are using ActiveSync or an FTP server to copy the files to your CK30, place the files in the SDMMC Disk folder.

- 5 If you are using an SD card reader, insert the SD card into the CK30.
- 6 Perform a cold boot on the CK30. For help, see “Cold Booting the CK30” on page 139.



Note: Make sure the CK30 has completely loaded all of the upgrade files before you remove the SD card.

Upgrading Your CK30 Using SmartSystems Console

You can use the SmartSystems Console to upgrade the operating system on your CK30. The console is part of SmartSystems Foundation.

Before you can upgrade your computer, you need:

- SmartSystems Foundation. To download SmartSystems Foundation, go to www.intermec.com/SmartSystems.
- the device upgrade .exe file. This file is available from the Intermec web site at www.intermec.com. Go to **Service & Support > Downloads**. Make sure the file you select is for your language.

To upgrade a CK30 using SmartSystems Console

- 1 Install SmartSystems Foundation on your desktop PC and open the console.
- 2 Make sure the console and the CK30s are on the same subnet.
- 3 Make sure your CK30s are either in a communications dock or charging dock or that power management is disabled.
- 4 Download the device upgrade .exe file to your desktop PC.
- 5 Double-click the .exe file on your desktop PC. An InstallShield application starts and walks you through the process of extracting the upgrade files in the default location.



Note: Do not change the default location where InstallShield extracts the files. SmartSystems Console requires that the files be located in the default directory.

- 6** In the software vault, locate the device upgrade you want to install.
- 7** Drag-and-drop the device upgrade from the software vault onto each CK30 you want to upgrade. SmartSystems Console will tell you that it is installing the upgrade on your CK30.

Once the upgrade is done downloading to your CK30, your CK30 replaces the operating system and then automatically cold boots. Progress messages appear on the CK30 screen.

The SmartSystems Console will show your CK30 as being offline until the CK30 reboots and reconnects to the system.



5 Running Diagnostics

The CK30 provides these diagnostics for troubleshooting.

Diagnostic Test	Page	Diagnostic Test	Page
Battery Information	109	Memory Information	117
Bluetooth Console	111	Network Connection Test	117
Bootcode Version	112	Network Interface Information	118
Contrast Test	112	Operating System Version	119
CPU Monitor	113	Ping Utility	119
Display Test	114	Radio Driver Version	120
Hardware Configuration Table	114	Radio Information	120
Installed Fonts	115	RAM Monitor	121
Intermec Value Add Information	115	Read CPU Registers	121
Keypad Test	116	Security Information	122
LED Test	116	Sound Test	123

Using Diagnostics on the CK30

You can access the System Main Menu and select Diagnostics at any time while running an application. The Diagnostics menu contains these options:

- Hardware Diagnostics
- Software Diagnostics
- System Diagnostics


Use the Hardware Diagnostics menu to run tests on the CK30 or view system information. For example, you can run an LED test to determine if your CK30 lights are working correctly or you can view how much of a charge you have left in your main battery.

Use the Software Diagnostics menu to view the version of your operating system, the bootcode version, and Intermec Value Add (IVA) information.

Use the System Diagnostics menu to help analyze network, system, or applications problems on the CK30. For example, you can run diagnostics to check the network communications.

To open the diagnostics menu

- 1 Press □■ and then ■□.
- 2 If you have set a password, enter it in the **System Menu Access** screen and press **Enter**. The System Main Menu appears.
- 3 Select **Diagnostics**.

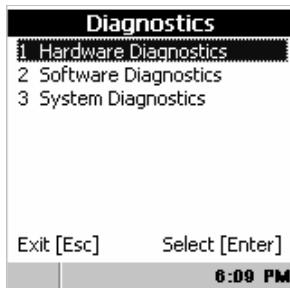

- 4 Choose the diagnostics menu you want to use.

To close the Diagnostics menu

- 1 Press **Esc** until you return to the System Main Menu.
- 2 From the System Main Menu, press **Esc**.
- 3 When the **Exit Main Menu** screen appears, press **Enter**.

When you exit the System Main Menu, the CK30 resumes the application you were running when you opened the diagnostics menu.

Understanding the Diagnostics Screens

This section lists all of the diagnostics screens in alphabetical order. You will see the following information for each diagnostics screen:


- Description, purpose, and definition
- Location of diagnostic in the System Main Menu
- A sample diagnostics screen

Battery Information

Use this diagnostic to view information on the main battery and backup battery.

To open the Battery Information diagnostic

- Go to **Diagnostics > Hardware Diagnostics > Battery Info**.

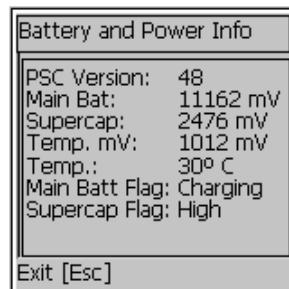Sample Screen

Charging in a Dock: The values in the **Main Bat** and **Main Batt** fields indicate that this CK30 is charging in a dock.

The **Main Bat** field displays the voltage of the AB1G battery as explained in the next table.

Main Battery Status and Voltage Descriptions

Status	Voltage	Battery Charge Remaining
High	8500 mV	100%
High	> 8000 mV	> 75%
Medium	7600 to 7999 mV	50% to 75%
Low	7200 to 7599 mV	25% to 50%
Critically low	< 7199 mV	< 25%

The **Main Batt Flag** field displays the battery status, which is linked to the battery icon described on page 8. You can continue using the battery until the CK30 indicates that the battery is low: the battery light turns on and the low battery icon () appears on the taskbar.

The **Supercap** field displays the voltage of the backup battery as described in the next table.

Backup Battery Status and Voltage Descriptions

Status	Voltage	Condition
High	> 2400 mV	Fully charged
High	> 2200 mV	OK to swap the main battery
Low	> 1750 mV	OK to swap the main battery if you first suspend the CK30
Low	< 1750 mV	Do not swap the main battery because the CK30 might cold boot

The main battery continually charges the backup battery unless the main battery is critically low or removed.

There are some usage patterns that can cause the backup battery to become depleted. For example, if you remove the main battery every night to charge it outside the CK30, the backup battery will be low in the morning. This usage pattern does not harm the backup battery.

When the backup battery is low, the Backup Battery Very Low dialog box appears on your CK30 screen.



Click the **X** to close the dialog box. The dialog box continues to appear until the backup battery is fully charged. You must install a fully charged main battery or place the CK30 in a charger. It takes about 15 minutes for the backup battery to charge up to 2.4V.

If the Backup Battery Very Low dialog box continues to appear for more than 15 minutes, view the Battery Information diagnostic screen. If the **Supercap Flag** field is not **Charging**, the backup battery may have failed. You may need to send the CK30 to Intermec to have the backup battery replaced. For help, see “Calling Product Support” on page 126.

Bluetooth Console


The Bluetooth Console is a tool that helps to debug the Bluetooth driver.

You can use the Bluetooth Console to perform several Bluetooth diagnostics, such as deciding whether Bluetooth hardware was recognized and initialized correctly, setting a PIN, and establishing an L2CAP connection between two Bluetooth devices. For more information on using the Bluetooth Console (or BDTC), visit the Microsoft web site.

To open the Bluetooth Console diagnostic

- Go to **Diagnostics > System Diagnostics > Bluetooth Console**.

Sample Screen

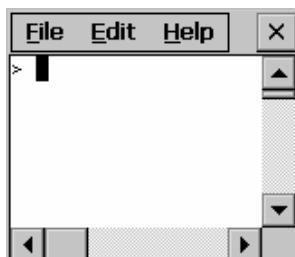


Bootcode Version

The Bootcode Version diagnostic displays the version of boot code loaded on your CK30.

To open the Bootcode Version diagnostic

- Go to **Diagnostics > Software Diagnostics > Bootcode Version**.

Sample Screen

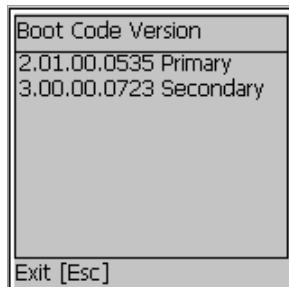

Contrast Test

Use the Contrast Test to make sure the different contrast settings are working correctly on your CK30. The test will run through all of the settings and return you to your original setting.


When you start the contrast test, the screen gradually gets darker until it is almost black and then it goes to the lightest setting which is almost white. The contrast test should take you through eight different levels of contrast. If your CK30 does not step through multiple levels of contrast, you may have a problem

with your display. For help, contact your local Intermec representative.

To open the Contrast Test diagnostic

- Go to **Diagnostics > Hardware Diagnostics > Contrast Test**.

Sample Screen

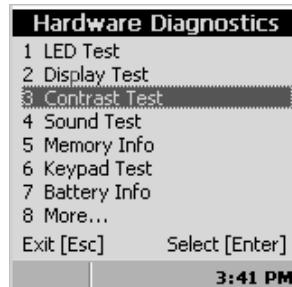

CPU Monitor

The CPU Monitor displays the activity of the CPU by using bars in a graphical icon. The bars in the icon represent the percentage of CPU cycles available as described in the next table.

Number of Bars	Percentage of CPU Cycles Available
One	80 to 100%
Two	60 to 80 %
Three	40 to 60%
Four	20 to 40%
Five	0 to 20%

If you see five bars, you may notice that the device seems slow and unresponsive.

To open the CPU Monitor diagnostic

- Go to **Diagnostics > System Diagnostics > CPU Monitor**.

The CPU Monitor icon (■) appears on the taskbar.

To close the CPU Monitor diagnostic

- 1 Go to **Diagnostics > System Diagnostics > CPU Monitor**.
A dialog box appears asking if you want to stop the CPU Monitor.
- 2 Press **Enter**.


Display Test

Use the Display Test to make sure that every pixel on the CK30 screen is working correctly. For example, you may want to test the screen if you do not see complete characters on the screen. The Display Test turns all pixels on, displays horizontal stripes, displays vertical stripes, and then turns all pixels off. If you have a color screen, the display test also changes your screen to blue, red, and then green.

To open the Display Test diagnostic

- Go to **Diagnostics > Hardware Diagnostics > Display Test**.

Sample Screen

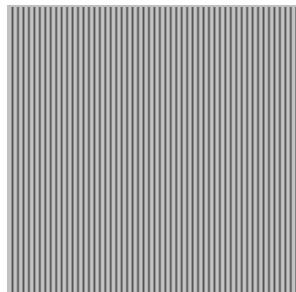

Hardware Configuration Table


Use the HW Config Table to view important information about your CK30 such as the serial number, configuration number, model, software options, and the scanner type.

You can use this information to tell the Intermec representative information on the hardware and software that were installed at the Intermec factory.

To open the HW Config diagnostic

- Go to **Diagnostics > Hardware Diagnostics > HW Config Table.**

Sample Screen

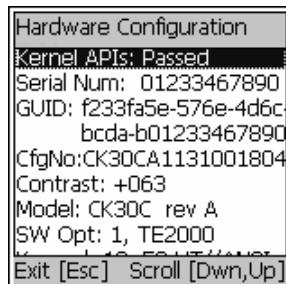


Installed Fonts

Use this screen to view all of the fonts installed on your CK30.

To open the Installed Fonts diagnostic

- Go to **Diagnostics > Software Diagnostics > Installed Fonts.**

Sample Screen

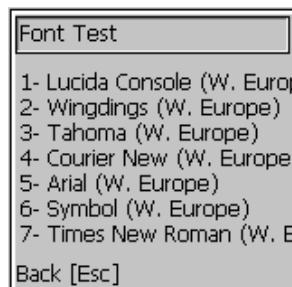


Intermec Value Add Information

Use this screen to see the versions of Intermec Value Add (IVA) products on your CK30.

To open the IVA Info diagnostic

- Go to **Diagnostics > Software Diagnostics > IVA Info.**

Sample Screen

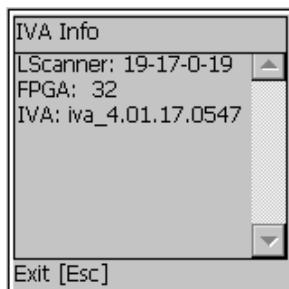


Keypad Test

A developer can use the Keypad Test to quickly find the hex value for any key on the keypad. You can also test to make sure the keypad is operating correctly.

To open the Keypad Test diagnostic

- Go to **Diagnostics > Hardware Diagnostics > Keypad Test**.

Sample Screen

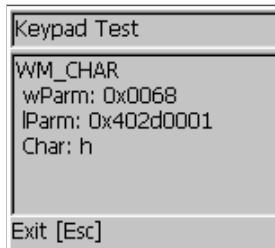

LED Test

Use the LED Test to make sure that your LEDs (lights) are operating correctly. The LED Test turns all of the lights on the CK30 on in this sequence: Good Read light, the user-defined lights, and then the Intermec Ready-to-Work indicator. The lights blink one time each and then they blink five times each.

To open the LED Test diagnostic

- 1 Go to **Diagnostics > Hardware Diagnostics > LED Test**. A warning appears telling you that running the LED test disables the blue light until you perform a warm or cold boot.
- 2 Press **Enter**.


Memory Information

Use the Memory Info diagnostic to see how much RAM and flash memory is available on the CK30. You can also see the Flash Part ID.

To open the Memory Info diagnostic

- Go to **Diagnostics > Hardware Diagnostics > Memory Info**.

Sample Screen

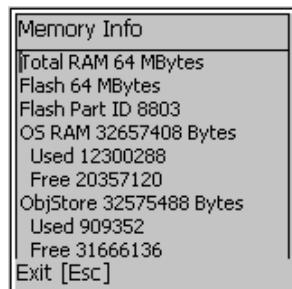

Network Connection Test

Use the Net Connect Test to test the network interface connection if you are using DHCP. The Net Connect Test searches for a DHCP server first. When the test finds a server, press **Enter** to send the Ping command. If you do not have DHCP enabled, you need to enter the IP address of the host to ping and then press **Enter**. If you have DNS enabled, you can either enter the name of the host or an IP address.


The test sends the ping command four times and displays the results.

For help troubleshooting your network connection, see “Problems With Wireless Connectivity” on page 132.

To open the Net Connect Test diagnostic

- Go to **Diagnostics > System Diagnostics > Net Connect Test.**

Sample Screen

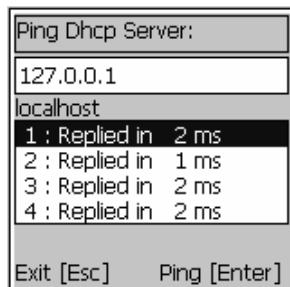


Network Interface Information

Use the Net Interface Information diagnostic screen to view the DHCP server IP address, the CK30 device address, and the MAC address.

To open the Net Interface Info diagnostic

- Go to **Diagnostics > System Diagnostics > Net Interface Info.**

Sample Screen

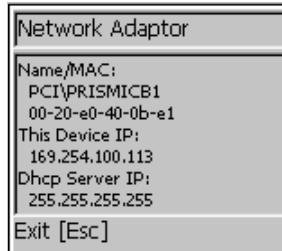


Operating System Version

Use the OS Version diagnostic screen to view the operating system software version and whether you have the Standard or Premium version loaded on the CK30.

To open the OS Version diagnostic

- Go to **Diagnostics > Software Diagnostics > OS Version**.

Sample Screen

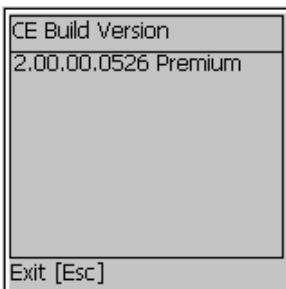

Ping Utility


Use the Ping Utility to test the network interface connection. If you do not have DHCP enabled, you need to enter the IP address of the host to ping and then press **Enter**. If you have DNS enabled, you can enter the host name or an IP address and then press **Enter**. The test sends the ping command four times and displays the results.

For help troubleshooting your network connection, see “Problems With Wireless Connectivity” on page 132.

To open the Ping Utility diagnostic

- Go to **Diagnostics > System Diagnostics > Ping Utility**.

Sample Screen

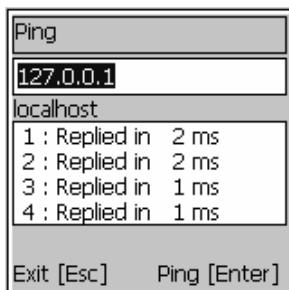

Radio Driver Version

Use the Radio Driver Version diagnostic screen to view the driver version of the wireless radio in your CK30.

To open the Radio Driver Version diagnostic

- Go to **Diagnostics > Software Diagnostics > Radio Driver Version.**

Sample Screen




Radio Information

The radio information utility displays the radio signal quality being received by the CK30. You can use this diagnostic tool to perform a site survey and determine the best locations for placing access points.

To open the Radio Info diagnostic

- Go to **Diagnostics > System Diagnostics > Radio Info.**

Sample Screen

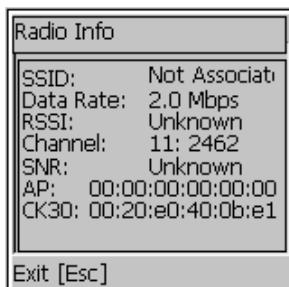

RAM Monitor

Use the RAM Monitor to see a graphical representation of RAM usage. There are two columns in the RAM Monitor icon. The left column indicates the amount of storage available. The right column indicates the amount of program memory available. The fewer bars you have in either column the more memory you have left.

To open the RAM Monitor diagnostic

- Go to **Diagnostics > System Diagnostics > RAM Monitor**.

The RAM Monitor icon () appears on the taskbar.

To close the RAM Monitor diagnostic

- 1 From the **Start** menu, tap **Programs > Intermec Diagnostics > System > RAM Monitor**. A dialog box appears asking if you want to stop the RAM Monitor.
- 2 Press **Enter**.


Read CPU Registers

The Read CPU Registers diagnostic reads every register in the x-scale processor chip and displays the values.

To open the Read CPU Registers diagnostic

- Go to **Diagnostics > Hardware Diagnostics > Read CPU Registers**.

Sample Screen

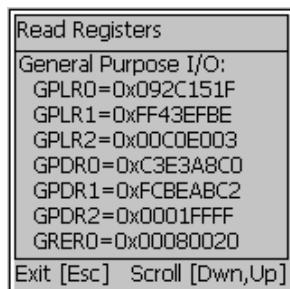

Security Information

Use the Security Information diagnostic to troubleshoot security authentication. The Security Information diagnostic displays security events as they occur on the CK30. This diagnostic works with both Microsoft and Funk security choices.

To open the Security Info diagnostic

- Go to **Diagnostics > System Diagnostics > Security Info**.

Sample Screen



Sound Test

Use the Sound Test to make sure the entire beeper volume range and beep frequency range are available and working correctly.

The Sound Test can also help you choose a beeper volume and frequency that you can hear in your working environment.

When you select the test, the CK30 sounds a series of beeps from the default beep through the entire range of quiet to loud beeps. After it sounds the beeper volume, it cycles through the beeps starting with low frequency up through the highest frequency supported.

To open the Sound Test diagnostic

- Go to **Diagnostics > Hardware Diagnostics > Sound Test**.



Troubleshooting and Maintaining the CK30

Use this chapter to solve problems you may encounter while using the CK30. You will also find information on booting the computer and routine maintenance.

If you have any problems using the CK30, look in this chapter to find a possible solution. This chapter consists of the following sections:

Sections	Page
Calling Product Support	126
Problems While Operating the CK30	127
Problems While Configuring Security	129
Problems With Wireless Connectivity	132
Problems Transmitting Data Through the Serial Port	134
Problems While Scanning Bar Codes	134
Booting the CK30	139
Cleaning the Scanner Window and CK30 Screen	140

Troubleshooting the CK30

Use this chapter to troubleshoot some common problems you may experience with your CK30. If you cannot find the answer to your problem in the “Problems and Solutions” section, you may need to call Product Support.

Calling Product Support

To talk to an Intermec Product Support representative, call 1-800-755-5505.

Before you call Intermec Product Support, make sure you have the following information ready:

- Operating system version
- Configuration number
- If you are using security, know the type (Funk or Microsoft) and the full set of parameters
- Power management settings
- If you are using terminal emulation (TE), know the version and protocol
- If you are not using TE, know the language your custom application was written in and the tools you used to create it

You can find most of this information in Intermec Diagnostics or the Configuration Utility. Consult your application developer for information on your custom application.

To find your operating system version

- 1 From the System Main Menu, go to **Diagnostics > Software Diagnostics > OS Version**.
- 2 Press **Esc** to exit.

To find your configuration number

- 1 From the System Main Menu, go to **Diagnostics > Hardware Diagnostics > HW Config Table**.
- 2 Press **Esc** to exit.

To open the Configuration Utility

- From the System Main Menu, select **Configuration Utility**.

Problems and Solutions

You can also use the CK30 diagnostics to help analyze and solve problems. For help, see Chapter 5, “Running Diagnostics,” on page 107.

If you send the CK30 in for service, it is your responsibility to save the computer data and configuration. Intermec is responsible only for ensuring that the keypad and other hardware features match the original configuration when repairing or replacing your computer.

Problems While Operating the CK30

Problem	Solution
You press % to turn on the CK30 and nothing happens.	<ul style="list-style-type: none"> Make sure the contrast is not set all the way to the darkest or lightest setting. Press  and then  repeatedly until you reach the desired contrast level. If you have a CK30 with a color screen, make sure the backlight is on by pressing . Make sure you have a charged battery installed correctly. For help, see “Charging and Installing the Battery” on page 6. The battery may be discharged. Replace the battery with a spare charged battery, or charge the battery and try again.
The Battery light is on.	The battery charge is low. You have a few minutes of power left. Immediately replace the battery with a spare charged battery, or charge the battery.
You scan a configuration command, such as Beeper Volume, and you hear three low beeps.	If you are working in the System Main Menu, you cannot scan configuration commands. Use the Configuration Utility to change the CK30 configuration, or exit the system menu to scan configuration commands.
You scan or enter an option for the Scanner Model configuration command and you hear three low beeps.	You may have scanned or entered a Scanner Model command that does not apply to the type of scanner that you have installed. Try scanning or entering the Scanner Model command again and select an option for the type of device you are using.

Problems While Operating the CK30 (continued)

Problem	Solution
A Windows dialog box covers the screen and you cannot close it.	Enable the mouse pointer by pressing Alt and then ▾. Center the dialog box, and then close it. For help, see page 18.
The computer appears to be locked up and you cannot enter data.	<ul style="list-style-type: none">• (CK30 with an 802.11b/g radio only) Wait at least 10 seconds and try again. If the CK30 is still connecting to the Intermec Application Server or the host, it ignores any input from the keypad or scanner.• Press %o to turn off the CK30 and then press %o again to turn on the CK30.• Press and hold %o for five seconds to warm boot the CK30.• Perform a cold boot on the CK30. For help, see “Cold Booting the CK30” on page 126.• Try reloading the firmware. For help, see “Upgrading Your CK30” on page 103.• If the CK30 will not boot or reset, contact your local Intermec service representative for help.
You cannot type a character on the keypad or you can only type uppercase or lowercase letters.	You may have accidentally locked a modifier key on the keypad. Check the CK30 status bar to see if it contains an icon with a locked symbol. Press the necessary key sequence to unlock the key. For help, see “Using the Keypad” on page 8.
The Backup Battery Very Low dialog box appears.	<p>Click the X to close the dialog box. This dialog box continues to appear until the backup battery is fully charged. You must install a fully charged main battery or place the CK30 into a charger. The backup battery will fully charge in about 15 minutes.</p> <p>Do not swap the main battery until this dialog box stops appearing.</p> <p>If the Backup Battery Very Low dialog box continues to appear for more than 15 minutes, see the next entry in this table for help.</p>

Problems While Operating the CK30 (continued)

Problem	Solution
The Backup Battery Very Low dialog box continues to appear for more than 15 minutes.	<p>Make sure that the backup battery is charging. Follow the instructions in “Battery Information” on page 109. If the Supercap Flag field on the battery information screen does not display Charging, you may need to send the CK30 to Intermec to replace the backup battery. For help, contact Product Support as described on page 126.</p> <p>You may also insert a fully charged main battery into the CK30 and allow the backup battery to charge overnight. In the morning, if the main battery is in good condition and can run the CK30, cold boot the CK30. The Backup Battery Very Low dialog box should not appear. If it does, contact Product Support.</p>
You insert an SD card and cannot find the SDMMC Disk folder on the CK30. Or, you insert a bootable SD card and the CK30 is not booting from the card.	<p>The SD card may not be seated correctly. Push in on the SD card until you hear it unlatch and the card is ejected. Insert the SD card as described in Steps 3 and 4 of “Installing an SD Card” on page 30. If this does not solve the problem, try another SD card..</p>

Problems While Configuring Security

If you have trouble configuring the computer for security, check these problems and possible solutions.

Problems While Configuring Security

Problem	Solution
The CK30 indicates that it is authenticated, but it does not communicate with the host.	Make sure that the CK30 IP address, host IP address, subnet mask, and default router are properly configured for your network.
The message, “The server certificate has expired or your system date is incorrect” appears after you cold boot the CK30.	The correct date and time on the CK30 are not always saved through a cold boot. You need to re-enter the date and time, and then save your changes.
You are setting up multiple access points in a network, with different SSIDs, and the connection fails.	The CK30 does not save WEP key values when you change the SSID. Re-enter the WEP key value after you change the SSID and save your changes. You should now be able to connect to the different access points.

Problems While Configuring Security (continued)

Problem	Solution
The CK30 does not appear to be authenticating and a network connection icon does not appear on the taskbar.	<ul style="list-style-type: none">• The CK30 may not be communicating with your access point. Make sure the network name on the CK30 is the same as the network name (SSID) of the access point that you are trying to communicate with. The default network name is “INTERMEC.”• The 802.1x security network may not be active. Make sure that the server software is properly loaded and configured on the server PC. For help, see the documentation that shipped with your server software.
A network connection icon appears in the taskbar, but it disappears.	<ul style="list-style-type: none">• The CK30 may not be communicating with the access point that you want it to communicate with. Make sure that the network name on the CK30 is the same as the network name of the access point that you are trying to communicate with. The default network name is “INTERMEC.”• The access point that you are trying to communicate with may not be communicating with the server. Make sure your access point is turned on, properly configured, and has 802.1x security enabled.• Make sure your authentication server is active and that it can communicate with your access point. You can use the PING utility to determine communications. Go to Diagnostics > System Diagnostics > Ping Utility.
You are using static WEP keys and you have a strong connection to the access point, but you cannot communicate with it.	Make sure that you are using the correct static WEP key. Sometimes you can see the strong signal strength and security enabled icon () even though you have the WEP key set incorrectly.

Problems While Configuring Security (continued)

Problem	Solution
The CK30 indicates that it is not authenticated.	<p>Make sure that:</p> <ul style="list-style-type: none">the User Name and Password parameters on your CK30 match the user name and password on your authentication server. You may need to re-enter the password on both your CK30 and the authentication server.on your authentication server, the user and group are allowed and the group policy is allowed to log in to the server. For help, see the documentation that shipped with your authentication server software.the IP address and secret key for your access point must match the IP address and secret key on your authentication server. You may need to re-enter the IP address and secret key on both your access point and authentication server.your authentication server is active and that it can communicate with your access point. You can use the PING utility to determine communications. Go to Diagnostics > System Diagnostics > Ping Utility.the authentication server software is running on the server PC.

Problems With Wireless Connectivity

Problem	Solution
When you turn on the CK30 after it was suspended for a while (10-15 minutes or longer), it can no longer send or receive messages over the network.	The host may have deactivated or lost your current terminal emulation session. In a TCP/IP direct connect network, you need to turn off the “Keep Alive” message (if possible) from the host so that the TCP session is maintained while a CK30 is suspended.
The network connection icon is in the taskbar, but the host computer is not receiving any data from the CK30.	In a UDP Plus network, there may be a problem with the connection between the Intermec Application Server and the host computer. Check with your network administrator or see the user's manual for the Intermec Application Server. In a TCP/IP network, there may be a problem with the connection between the access point and the host computer. Check with your network administrator or use your access point user's manual.
The CK30 is connected to the Intermec Application Server or host computer and you move to a new site to collect data. The network connection icon was visible but now the no network connection icon (☒) is visible.	You may have gone out of range of an access point. Try moving closer to an access point or to a different location to re-establish communications. Once you are in range again, the network connection icon appears again. Any data you collected while out of range is transmitted over the network.

Problems While Wireless Connectivity (continued)

Problem	Solution
The no network connection icon (☒) appears on the taskbar. The CK30 is not communicating with the access point.	<ul style="list-style-type: none">• The CK30 is not connected to the access point. Make sure the access point is turned on and operating. You may also be using the CK30 out of range of an access point. Try moving closer to an access point to re-establish communications.• Make sure the CK30 is configured correctly for your network. The radio parameters on the CK30 must match the values set for all access points the CK30 may communicate with. For help, see “Configuring 802.11b/g Radio Communications” on page 48.• If you have an 802.11b radio, the radio initialization process may have failed. Try resetting the CK30. See “Booting the CK30” on page 126.• If you have tried these possible solutions and the no network connection icon still appears, you may have a defective radio card. For help, contact your local Intermec service representative.
The network connection icon is in the taskbar, but you cannot establish a terminal emulation session with the host computer.	There may be a problem with the host computer, a problem with the connection between the Intermec Application Server and the host computer, or a problem with the connection between the access point and the host computer. Check with your network administrator to make sure the host is running and allowing users to login to the system.

Problems Transmitting Data Through the Serial Port

If you are having problems sending or receiving data through the integrated serial port on the CK30, check these possible problems:

- Make sure the CK30 is connected to the PC, host computer, or RS-232 serial device using the appropriate cable adapter and null modem cable.
- If the CK30 is in a communications dock, make sure that the communications dock is connected to the serial device using the appropriate cable.
- You cannot use the decoded serial adapter or AA2 to connect to any device other than a decoded scanner. The CK30 auto-detects the serial adapter or AA2, and the scanner software makes the COM port unavailable. Instead, use the AA3 to connect a device like a printer to the CK30. The AA3 requires an external power source.

For more information on using the serial port, see “Configuring Serial Communications” on page 46.

Problems While Scanning Bar Codes

Problem	Solution
You cannot see a red beam of light from the scanner when you press the Scan button and aim the scanner at a bar code label.	<p>Make sure that you are using a supported scanner. For details, see “Attaching a Tethered Scanner” on page 26 or “Attaching a Scanner to the Serial Port” on page 28.</p> <p>If you are using a supported scanner, there are two possible problems:</p> <ul style="list-style-type: none">• You may be too far away from the bar code label. Try moving closer to the bar code label and scan it again.• You may be scanning the bar code label “straight on.” Change the scanning angle and try again. <p>You can test the effective range of the scanner. Move within 2 feet of a wall and test the scanner. You need to be within the scanning range to scan bar code labels. For help scanning bar codes, see “Scanning Bar Codes” on page 22.</p>

Problems While Scanning Bar Codes (continued)

Problem	Solution
<p>When you release the Scan button or handle trigger, the red beam of light from the scanner does not turn off.</p>	<p>If the CK30 contains an imager:</p> <ul style="list-style-type: none">• If the CK30 is configured for continuous/edge triggering, the red beam of light should remain on. This is not a troubleshooting issue.• If the CK30 is configured for level triggering (which is the default), the red beam of light should turn off. If the red beam of light remains on, there may be a problem with the scanner. Press the Scan button or pull the trigger again without scanning a bar code label. If the red beam of light is still on, contact your local Intermec service representative. <p>If the CK30 contains a laser scanner:</p> <ul style="list-style-type: none">• If you set the Aim then Scan parameter to Enable and the Turn off after good read parameter to Disable/Auto-Trigger, the red beam of light should remain on. This is not a troubleshooting issue.• If the Aim then Scan and Turn off after good read parameters are not configured on the CK30, the red beam of light should turn off. If the red beam of light remains on, there may be a problem with the scanner. Press the Scan button or pull the trigger again without scanning a bar code label. If the red beam of light is still on, contact your local Intermec service representative.

Problems While Scanning Bar Codes (continued)

Problem	Solution
You have an input device attached to the CK30 and it cannot read any bar codes.	You may not be using an input device that is supported with the CK30. Make sure you are using one of the supported input devices and that you have selected the correct scanner model using the Configuration Utility. See page 26 for a list of supported input devices.
The input device attached to the computer does not appear to work well or read bar code labels very quickly.	Try setting the Scanner Model command to the specific input device you have attached. Check the bar code symbologies you have enabled on the CK30. Enable only the symbologies that you are using.
Your 1551E or 1553 scanner was working fine, but after changing the port setting you cannot change the configuration.	The 1551E or 1553 scanner must be using the correct RS-232 settings to allow configuration from the Configuration Utility. Try disabling and then enabling the scanner port state.
You receive a message reading “Scanner Communication Failure” when trying to connect a 1551E or 1553 decoded scanner.	Try these steps in order: <ol style="list-style-type: none">1 Make sure that you are using the correct cable (P/N 3-606034-xx).2 Try enabling the scanner port. Go to Data Collection > Dock Tethered Scanner > Enable Scanner Port.3 Try upgrading the scanner firmware.4 Select ASCII as the scanner model.
The configuration settings in the Configuration Utility do not match the settings on your 1551E or 1553.	Try disabling and then enabling the scanner port state to synchronize the CK30 settings with the scanner.
You receive an error when changing the scanner model with a serial adapter attached.	Try these steps in order: <ol style="list-style-type: none">1 Check to make sure the serial adapter is attached to the CK30.2 Disconnect and then reconnect the serial adapter to the CK30. The green Good Read light flashes to indicate that the software is auto-detecting the adapter and loading the software.3 Warm boot the CK30.

Problems While Scanning Bar Codes (continued)

Problem	Solution
Your 1551E or 1553 scanner stopped working after you activated energy saver mode or connected a cable.	<p>You can enable energy saver mode only if the scanner is connected to the CK30 by an energy saving cable.</p> <p>Follow these steps:</p> <ol style="list-style-type: none">1 Disconnect the scanner from the CK30.2 Find the Reset Factory Defaults bar code in the scanner documentation.3 While pulling the trigger, hold the scanner over the Reset Factory Defaults bar code, and apply external power to the scanner. The scanner is reset to factory defaults.4 Use Configuration Utility or Intermec Settings to disable energy saver mode on the CK30.5 Use Configuration Utility or Intermec Settings to disable the port on the CK30.6 Attach the scanner to the CK30.7 Use Configuration Utility or Intermec Settings to enable the port.8 Use the scanner to scan a bar code. The scanner should work now, but energy saver mode is disabled. <p>Continue with Steps 9 through 11 only if you want to use energy saver mode.</p> <ol style="list-style-type: none">9 Install the correct energy saving cable. Use P/N 3-606034-02 for the 10-pin scanner port, or use P/N 3-606032-03 for the serial port.10 Use Configuration Utility or Intermec Settings to enable energy saver mode on the CK30.11 Use the scanner to scan a bar code. Energy saver mode is enabled.

Problems While Scanning Bar Codes (continued)

Problem	Solution
The scanner will not read the bar code label.	<ul style="list-style-type: none">Make sure you aim the scanner beam so it crosses the entire bar code label in one pass.The angle you are scanning the bar code label may not be working well, or you may be scanning the label “straight on.” Try scanning the bar code label again, but vary the scanning angle.The bar code label print quality may be poor or unreadable. To check the quality of the bar code label, try scanning a bar code label that you know will scan. Compare the two bar code labels to see if the bar code quality is too low. You may need to replace the label that you cannot scan.Make sure the bar code symbology you are scanning is enabled. Use the Configuration Utility to check the symbologies. On the Symbologies Menu, each symbology that is enabled has a check mark (✓) next to the name of the symbology. If your bar code symbology is disabled, enable it and then try scanning the bar code label again.Make sure that the application you are running on the computer is expecting input from a bar code. You may need to type this information instead of scanning it.
The scanner does not read the bar code labels quickly, or the scanning beam seems to be faint or obscured.	The scanner window may be dirty. Clean the window with a solution of ammonia and water. Wipe dry. Do not allow abrasive material to touch the window.
You scan a valid bar code label to enter data for your application. The data decoded by the scan module does not match the data encoded in the bar code label.	<ul style="list-style-type: none">The computer may have decoded the bar code label in a symbology other than the label's actual symbology. Try scanning the bar code label again. Make sure you scan the entire label.To operate the computer quickly and efficiently, you should enable only the bar code symbologies that you are going to scan.

Booting the CK30

You seldom need to warm or cold boot the CK30. The CK30 uses the configuration currently saved in flash memory during the boot process.

You need to boot the CK30 when an application is locked up and will not respond, when you upgrade the firmware, or when you reflash the computer. The next instructions explain how you warm and cold boot the CK30.

Warm Booting the CK30

If your charged CK30 does not resume after pressing **Y/o**, or if the computer or an application is locked up, you may need to warm boot it.

To warm boot the CK30

- Press and hold **Y/o** for 5 seconds. The CK30 tells you it is performing a warm boot and the screen comes back up to the start screen.


Cold Booting the CK30

If the CK30 or application is locked up and does not respond to a warm boot, follow this procedure to perform a cold boot.

When you perform a cold boot, all data in your RAM storage is deleted. To make a backup copy of everything in your RAM-based storage system, see “Backing Up Your Files” on page 102.

To cold boot the CK30

- 1 Remove the battery.
- 2 Using a small pointed object (such as the end of a paper clip or pen), press the reset switch on the backside of the CK30.

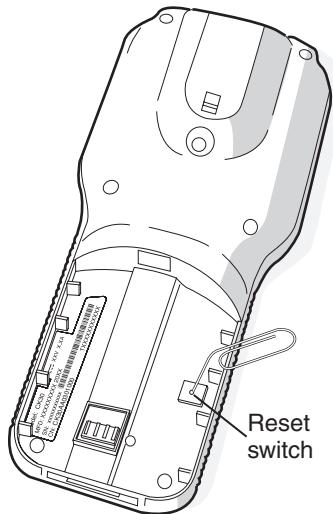

Caution

Do not use force or a sharp object when pressing the reset switch. You may damage the reset switch.

3 Replace the battery.

The battery light on the CK30 blinks three times and the CK30 starts the power on sequence.



Note: The correct date and time settings may not be saved through a cold boot. You may need to reset the time and date.

Cleaning the Scanner Window and CK30 Screen

To keep the computer in good working order, you may need to perform these minor maintenance tasks:

- Clean the scanner window.
- Clean the CK30 screen.

Clean the scanner window and CK30 screen as often as needed for the environment in which you are using the computer. To clean the CK30, use a solution of ammonia and water.



Caution

**There are no user-serviceable parts inside the CK30.
Opening the unit will void the warranty and may cause
damage to the internal components.**

To clean the scanner window and computer screen

- 1** Press *Mo* to turn off the CK30.
- 2** Dip a clean towel or rag in the ammonia solution and wring out the excess. Wipe off the scanner window and screen. Do not allow any abrasive material to touch these surfaces.
- 3** Wipe dry.



A Specifications

Physical and Environmental Specifications

Use this section to locate technical information about the CK30 and its available features and options.

Physical Dimensions

Length:	20.3 cm (8.0 in)
Width:	8.9 cm (3.5 in)
Depth:	5.5 cm (2.15 in) with standard case, 6.2 cm (2.45 in) with wide case
Weight:	476 g (16.8 oz)

Power Specifications

Operating:	Rechargeable 2400 mAh lithium-ion battery
Backup:	Super Cap supplies 10 minutes bridge time while replacing the main battery

Electrical Specifications

Models:	CK30A, CK30B, CK30C
Electrical rating:	— 7.4 to 12 VDC; 500 mA peak

Temperature and Humidity Specifications

Operating temperature:	-10°C to 50°C (14°F to 122°F)
Operating humidity:	10 to 90% non-condensing
Storage temperature:	-20°C to 60°C (-4°F to 140°F)
Storage humidity:	0 to 95% relative humidity, non-condensing

Screen Specifications

- 160 x 160 pixels
- 7.9 cm (3.12 in) diagonal square active area
- Contrast: eight settings
- CK30A, CK30B: electroluminescent backlight with on/off control
- CK30C: LED backlight with high and low settings

Keypad Options

- 42-key large numeric and function keypad, available with programmable, international, 3270 TE/5250 TE, and VT/ANSI TE overlays
- 50-key full alphanumeric keypad, available with programmable, international, 3270 TE/5250 TE, and VT/ANSI TE overlays
- 52-key full alphanumeric keypad, available with programmable, international, 3270 TE/5250 TE, and VT/ANSI TE overlays

Bar Code Symbologies

If you are using a tethered scanner or a scanner attached to the serial port, see your scanner manual for a list of supported bar code symbologies.

If you are using the linear imager, the CK30 supports these bar code symbologies:

- China Post
- Codabar
- Codablock A
- Codablock F
- Code 11
- Code 2 of 5
- Code 39
- Code 93
- Code 128
- EAN.UCC Composite
- Interleaved 2 of 5
- Matrix 2 of 5
- Micro PDF417
- MSI
- PDF417
- Plessey
- RSS 14
- RSS Limited
- RSS Expanded
- Telepen
- TLC 39
- UPC/EAN

Appendix A — Specifications

If you are using the standard range laser, the CK30 supports these bar code symbologies:


- China Post
- Codabar
- Codablock A
- Codablock F
- Code 11
- Code 2 of 5
- Code 39
- Code 93
- Code 128
- EAN.UCC Composite
- Interleaved 2 of 5
- Matrix 2 of 5
- Micro PDF417
- MSI
- PDF417
- Plessey
- RSS 14
- RSS Limited
- RSS Expanded
- Telepen
- TLC 39
- UPC/EAN

Linear Imager Reading Distances

Minimum reading distances are measured in the dark (0 lux).

Minimum Reading Distances With 2.247 cm (0.885 in) Setback

Symbology	Bar Code Contents	Density	Minimum Distance	Maximum Distance
Code 39	RESO 0.100 MM	0.1 mm (4 mils)	8.6 cm (3.42 in)	11.7 cm (4.6 in)
	R 0.125 MM	0.125 mm (5 mils)	7.6 cm (3 in)	14.7 cm (5.8 in)
	0.25	0.25 mm (10 mils)	3.8 cm (1.52 in)	21.6 cm (8.5 in)
	0.5	0.5 mm (20 mils)	1.8 cm (0.72 in)	28.7 cm (11.3 in)
	R1MM	1 mm (40 mils)	5.4 cm (2.12 in)	37.6 cm (14.8 in)
UPC/EAN	120010010100	0.33 mm (13 mils)	2.8 cm (1.12 in)	23.6 cm (9.3 in)
PDF417	10 mil	0.254 mm (10 mils)	7.6 cm (3 in)	14.7 cm (5.8 in)
	15 mil	0.381 mm (15 mils)	5.6 cm (2.22 in)	16.7 cm (6.6 in)

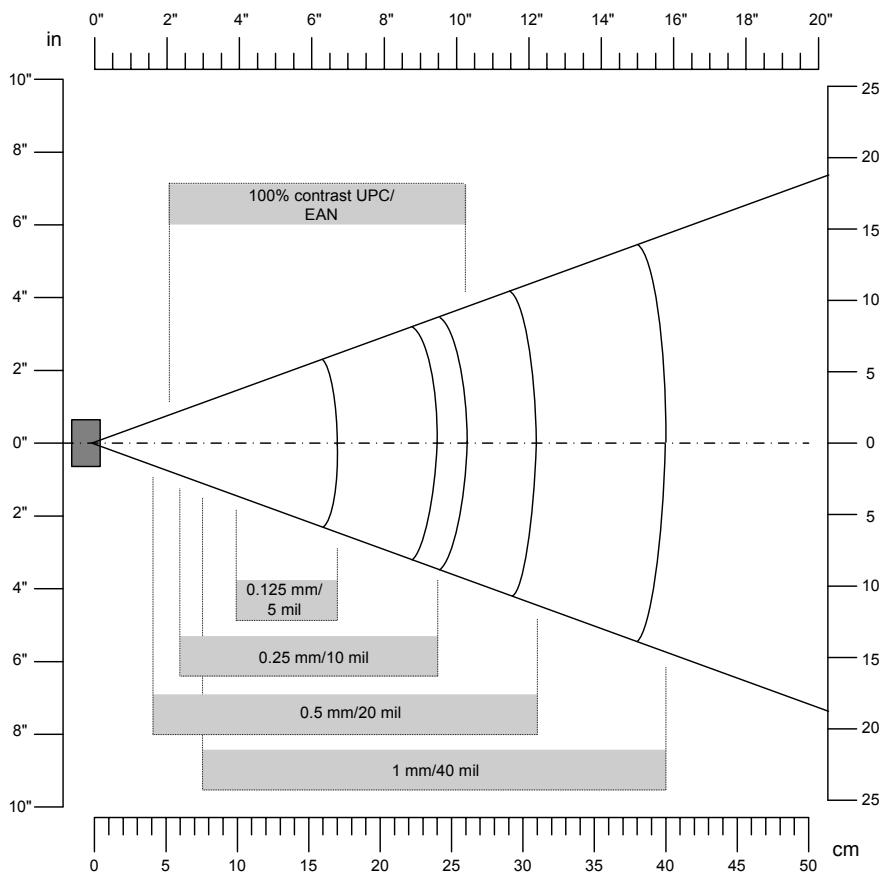


Linear Imager Minimum Reading Distances: This graphic does not include the 2.247 cm (0.885 in) setback for the CK30.

Standard Range Laser Reading Distances

Minimum reading distances are measured in the dark (0 lux).

Minimum Reading Distances With 2.189 cm (0.862 in) Setback

Symbol	Density	Minimum Distance	Maximum Distance
Code 39	0.1 mm (4 mils)	6.954 cm (2.738 in)	9.748 cm (3.838 in)
	0.125 mm (5 mils)	6.192 cm (2.438 in)	12.796 cm (5.038 in)
	0.25 mm (10 mils)	5.430 cm (2.138 in)	27.782 cm (10.938 in)
	0.5 mm (20 mils)	4.922 cm (1.938 in)	48.610 cm (19.138 in)
	1 mm (40 mils)	6.192 cm (2.438 in)	61.818 cm (24.338 in)
UPC/EAN	0.33 mm (13 mils)	3.906 cm (1.538 in)	32.862 cm (12.938 in)
PDF417	0.17 mm (6.6 mils)	6.192 cm (2.438 in)	17.876 cm (7.038 in)

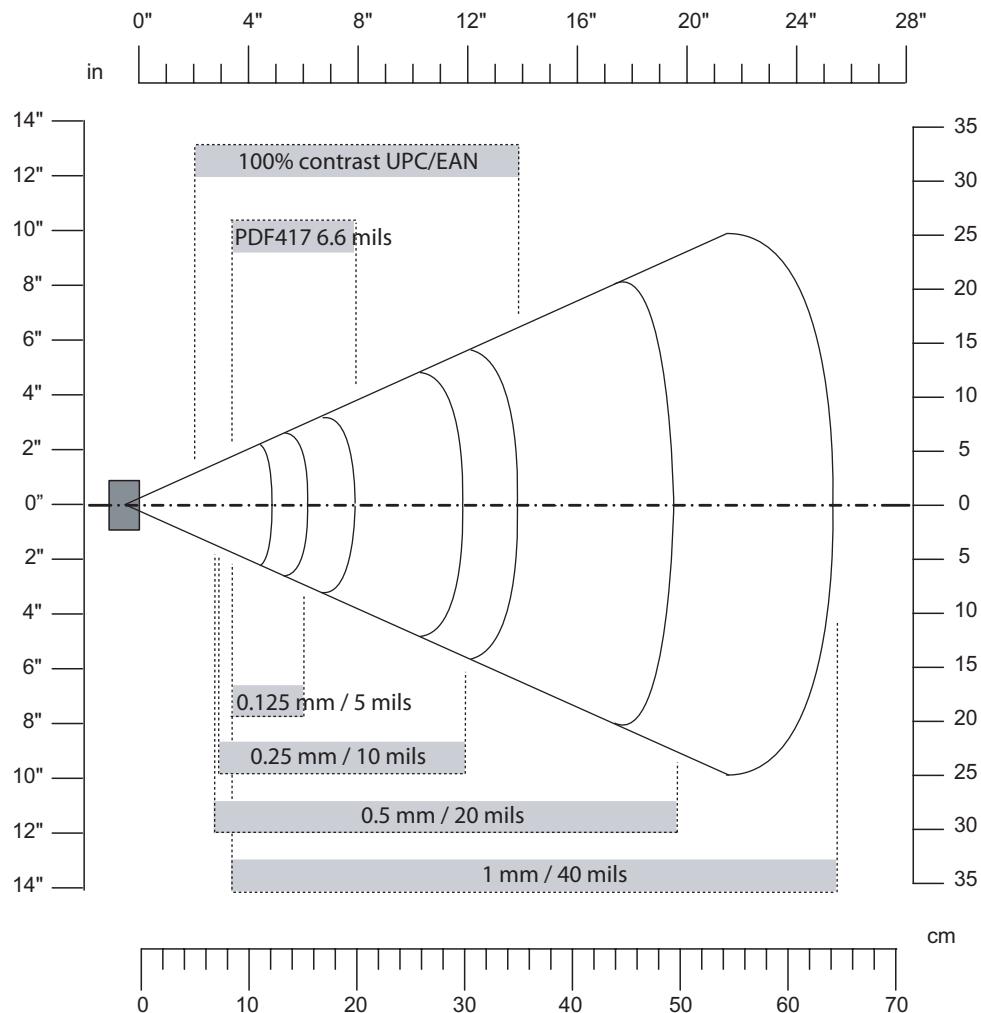

Standard Range Laser Minimum Reading Distances: This graphic does not include the 2.189 cm (0.862 in) setback for the CK30.

Accessories for the CK30

You can use these accessories (sold and ordered separately) with the CK30. To order accessories, contact your local Intermec sales representative.

851-082-xxx Power Supply

Provides power to all CK30 communication docks and chargers except for the AC3.

AA2 Serial Cable Adapter (P/N 236-069-xxx)

The AA2 serial cable adapter converts the CK30 serial connector to a DB 9 serial connector which includes power on pin 9.

AA3 Serial Cable Adapter (P/N 236-070-xxx)

The AA3 serial adapter is a 26-pin dual-row connector to DB-9 connector that connects directly to the bottom of the CK30. This adapter does not include power on pin 9.

AB1G Battery (P/N 318-020-xxx)

Use the lithium-ion battery to provide main power to the computer.

AC1 4-Slot Battery Charger (P/N 852-904-xxx)

Use the AC1 to charge up to four AB1G batteries at a time. The battery charger is designed to sense when a battery is fully charged and not overcharge it, ensuring long and consistent battery life.

AC2 4-Bay Battery Charging Dock (P/N 852-905-xxx)

Use the AC2 to charge up to four AB1G batteries without having to remove them from the CK30. You can insert up to four CK30s with batteries installed making it easy to remember to charge your batteries overnight.

AC3 8-Slot Battery Charging Dock (P/N 852-906-xxx)

Use the AC3 to charge up to eight AB1G batteries without having to remove them from the CK30. This dock requires the 851-064-xxx power supply.

AD1 Communications Dock (P/N 225-709-xxx)

Use the AD1 to charge your AB1G battery and provide power to your CK30 while still having the ability to communicate via a serial, Ethernet, or USB port.

AD2 4-Bay Communications Dock (P/N 225-710-xxx)

Use the AD2 to hold up to four CK30s with a battery installed. The AD2 dock charges the batteries, provides power to the computer, provides one Ethernet connector, and provides a serial port for each inserted CK30.

AG1 Protective Case

The protective case provides a clear vinyl covering to protect the screen and keypad area.

AG2 Protective Boot

The protective boot provides additional ruggedness for the CK30.

CK30 and CK31 Handle (P/N 203-754-xxx)

The handle works with all models of the CK30 and CK31 and provides a convenient scanning trigger.

AL1 Holster and Belt

The holster and belt provide an easy way for you to carry the CK30 while not using it. The holster and belt support either right or left-handed use and you can use it to carry a CK30 with or without a handle. You can only use this accessory with a CK30 that has either the 1D linear imager or the 2D imager.

AL2 Handstrap

The removable and adjustable handstrap make it easy for you to hold and use the CK30 without tiring your hand.

AL3 Swiveling Belt Clip

Use the swiveling belt clip to store your CK30 while not in use. Once you have attached the belt clip, it is easy to insert and remove the CK30 as necessary.

AV1 Vehicle Cradle

Use the AV1 vehicle to attach your CK30 to a vehicle, such as a forklift. The vehicle cradle provides protection from vibrations that exceed the level the CK30 can withstand alone.

Decoded Serial Adapter (P/N 225-715-001)

The decoded serial adapter converts the 26-pin serial port on the CK31 into a DB9 (9-pin) male serial connector that you can connect to a decoded scanner.

Undecoded Serial Adapter (P/N 225-714-001)

The undecoded serial adapter converts the 26-pin serial port on the CK31 into a DB9 (9-pin) male serial connector that you can connect to an undecoded scanner.

Typing Characters Not Printed on the Keypad

Each keypad uses hidden key sequences to access characters not printed on the keypad overlay. Use the next tables to understand how to access these hidden characters on the different keypads.

Typing Hidden Characters on the Standard Keypads

To Type:	Press This Key Sequence on One of the Keypads: 42-Key	52-Key
\$	Not hidden	□■ and then 6
'	□■ and then F9	□■ and then G
!	Not hidden	□■ and then I
"	□■ and then F6	□■ and then K
'	□■ and then F7	□■ and then L
{	□■ and then F11	□■ and then N
}	□■ and then F12	□■ and then O
:	□■ and then F3	□■ and then P
;	□■ and then F4	□■ and then Q
	□■ and then F8	□■ and then R
?	Not hidden	□■ and then S
~	□■ and then F10	□■ and then T
Y	□■ and then Alpha	Not hidden
,	□■ and then Right Enter	Not hidden

Typing Hidden Characters on the International Keypads

To Type:	Press This Key Sequence on One of the Keypads: 42-Key	50-Key	52-Key
\$	Not hidden	Not hidden	□■ and then 6
{	■□ and then ▲	□■ and then S	□■ and then 9
}	■□ and then ▼	□■ and then T	□■ and then 0
<	■□ and then ▲	Not hidden	Not hidden
>	■□ and then ▼	Not hidden	Not hidden
]	□■ and then 9	Not hidden	Not hidden
[□■ and then Tab	Not hidden	Not hidden
,	□■ and then Right Enter	Not hidden	Not hidden

Typing Hidden Characters on the 3270/5250 TE Keypads


To Type:	Press This Key Sequence on One of the Keypads: 42-Key	52-Key
\$	Not hidden	□■ and then 6
<	■□ and then ▲	Not hidden
>	■□ and then ▼	Not hidden
]	□■ and then Alpha	Not hidden
[□■ and then Tab	Not hidden
`	Not applicable	□■ and then G
!	Not hidden	□■ and then I
“	Not applicable	□■ and then K
‘	Not applicable	□■ and then L
{	■□ and then ▲	□■ and then N
}	■□ and then ▼	□■ key and then O
:	Not applicable	□■ and then P
;	Not applicable	□■ and then Q
?	Not hidden	□■ and then R
~	Not applicable	□■ and then T
,	□■ and then Right Enter	Not hidden

Typing Hidden Characters on the VT/ANSI TE Keypads

To Type:	Press This Key Sequence on One of the Keypads: 42-Key	52-Key
\$	Not hidden	□ and then 6
`	Not applicable	□ and then G
!	Not hidden	□ and then I
«	Not applicable	□ and then K
‘	Not applicable	□ and then L
{	■ and then ▲	□ and then N
}	■ and then ▼	□ key and then O
:	Not applicable	□ and then P
?	□ and then 5	□ and then R
]	□ and then Alpha	Not hidden
[□ and then Tab	Not hidden
<	■ and then ▲	Not hidden
>	■ and then ▼	Not hidden
,	□ and then Right Enter	Not hidden

Pin Assignments for the Serial Port

Use the following illustration and table to understand the pinouts on the 26-pin serial port of the CK30.

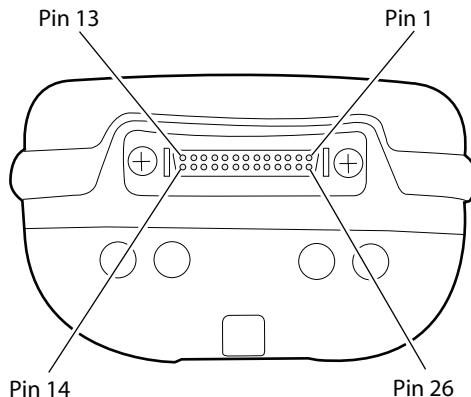

Identifying the Pins in the CK30 Serial Port

Pin Assignments for the Serial Port

Pin	Signal Name	I/O to Terminal	Description
1	GND		Ground
2	VCC_EXT (5V)	O	External 5V @ 500 mA maximum output
3	TXD	O	RS-232 TXD
4	RTS	O	RS-232 RTS
5	DTR	O	RS-232 DTR
6	RXD	I	RS-232 RXD
7	CD	I	RS-232 DCD (ActiveSync wakeup)
8	CTS	I	RS-232 CTS
9	DSR	I	RS-232 DSR
10	VIDEO	I	DBP from tethered undecoded scanner
11	SOS	I	Start of scan from tethered undecoded scanner
12	TETH_SCAN	I	Active low input used to indicate an external scanner connection

Pin Assignments for the Serial Port (continued)

Pin	Signal Name	I/O to Terminal	Description
13	GND		Ground
14	GND		Ground
15	TRIGGER	I	Trigger input from tethered undecoded scanner
16	LASEN	O	Laser enable output to tethered undecoded scanners
17	BEEP	O	Beep output to tethered undecoded scanner
18	GOODREAD	O	Good Read output to tethered undecoded scanners
19	VBUS	I	USB Wake-up (5V power from USB host)
20	UDC-	I/O	USB DATA – (Client)
21	UDC+	I/O	USB DATA + (Client)
22	TX+	O	Ethernet TPETXP
23	TX-	O	Ethernet TPETXN
24	RX+	I	Ethernet TPERXP
25	RX-	I	Ethernet TPERXN
26	GND		Ground

Appendix A — Specifications



B Default Settings

Default Configuration Settings

Use the following tables to see the default configuration settings of the CK30. If you restore the CK30 to factory default settings, it will use these values. The tables are organized according to the options in the Configuration Utility. The options you see on your CK30 depend on which decode algorithm you have enabled. See the *Intermec Computer Command Reference Manual* for more information.

Default Scanner Configuration

Symbology	Default Value
AustraliaPost	Disabled
Aztec	Disabled
BPO	Disabled
Disabled	Disabled
Codabar	Disabled
Codablock	Disabled
Code 11	Disabled
Code 2 of 5	Disabled
Code 39	Enabled
Code 93	Disabled
Code 128	Enabled
Datamatrix	Enabled
DutchPost	Disabled
EAN.UCC	Disabled
Composite	
Interleaved 2 of 5	Disabled
JapanPost	Disabled
Matrix 2 of 5	Disabled
Maxicode	Disabled
Micro PDF417	Disabled
MSI	Disabled
PDF417	Enabled

Default Scanner Configuration (continued)

Symbology	Default Value
Planet	Disabled
Plessey	Disabled
Postnet	Disabled
QR Code	Disabled
RSS	Disabled
Telepen	Disabled
TLC 39	Disabled
UPC/EAN	Enabled

Symbology Options	Default Value
Preamble	No characters (disabled)
Postamble	No characters (disabled)
Global Symbology ID	Disable

Scanner Model	Default Value
Depends on internal scanner option or tethered scanner	Depends on internal scanner option or tethered scanner

Scanner Settings	Scanner Option	Default Value
Triggering Mode	Imager only	Level
Aim then Scan	Laser only	Disable
Hardware Trigger	Any scanner	Enable
Turn Off After Good Read	Any scanner	Enable/One-shot

Scanner Port Settings	Default Value
Baud Rate	9600 bps
Data Bits	7 bits
Parity	Even
Stop Bits	2 stop bit

Default Scanner Configuration (continued)

Imager Settings	Default Value
1D Omni-directional Decode	Enable
Enable	
Lighting Mode	Illum LED Priority
Lighting Goal	60
Image Dimension	
Bottom Position	479
Top Position	0
Aimer LED Duration	0 ms
Sticky Aimer LED Duration	0 ms

Decode Security Settings	Default Value
Consecutive Data Validation	0
Identical Consecutive Timeout	300 ms
Different Consecutive Timeout	0 ms

Virtual Wedge Settings	Default Value
Virtual Wedge Enable	Enable
Grid	Null

Default Communications Configuration

Communication Settings	Default Value
Device Name	WindowsCE

802.11 Radio Settings	Default Value
Security Choice	Funk Security
Funk Security	
Active Profile	Profile 1
Profile Label	Profile_1
Network Type	Infrastructure
Channel	3
SSID	INTERMEC
Power Mode	Disabled (CAM)
8021x	None

Default Communications Configuration (continued)

802.11 Radio Settings	Default Value
Funk Security (<i>continued</i>)	
Association	Open
Encryption	None
Pre-Shared Key	Null
IP Settings	
DHCP	Enabled
DHCP Client Identifier	Null
Primary DNS	0.0.0.0
Secondary DNS	0.0.0.0
Primary WINS	0.0.0.0
Secondary WINS	0.0.0.0

Bluetooth Settings	Default Value
Power	On
Class of Device	Unavailable
IBT	0.16
Radio	Unavailable
Device Address	Text string

PSK Settings	Default Value
Protocol Selection	TCP/IP
Remote Connection	
Host IP	0.0.0.0
Host Port	5555
Controller IP	0.0.0.0
Controller Port	5555
Serial Port	
Baud Rate	115200 bps
Parity	Even
Data Bits	7 bits
Stop Bits	1 stop bit
Flow Control	None
Protocol	Configurable
EOM1	0x03
EOM2	No characters
SOM	0x02

Default Communications Configuration (continued)

PSK Settings	Default Value
<i>Serial Port (continued)</i>	
Reader Command	Enabled without TMF
LRC	Disable
Handshake	0x00 - Disable

UDP Plus Settings	Default Value
UDP Plus Activate	Disable
Controller IP	0.0.0.0
Controller Port	5555
Ack Delay Upper Limit	5000 ms
Ack Delay Lower Limit	300 ms
Retries	7
Send Timer	20 s
Receive Timer	45 s

Default Device Settings Configuration

Device Settings	Default Value
Date and Time	
Date	January 1, 2015
Time	Time of current update
Select Time Zone	GMT-8 Pacific US
Adjust for Daylight Time	Enable
Beeper Volume	Very high
Number of Good Read Beeps	One
Beeper Duration	
Good Read Beep	80 ms
Low Beep	100 ms
High beep	150 ms
Beeper Frequency	
Good Read Beep	1950 Hz
Low Beep	512 Hz
High beep	1950 Hz

Default Device Settings Configuration (continued)

Device Settings	Default Value
Display	
Backlight Timeout	15 seconds
Max. Backlight Level	Low
Backlight Level High	High
Backlight Level Low	High
Backlight Level	High
Backlight on Good Read	Off
Display Contrast	Depends on display type
Screen Rotation	Disable
Keypad	
Adjust Beeper Volume	Enable
Task Manager (Alt-Tab)	Enable
Configure Boot	Warm boot
Functionality	
Auto Shutoff	3 minutes
Backup Files Location	Flash File System
Start Page	\windows\itcbrowserCK30.htm
Use F1-F5 as URL Keys	URL Shortcuts
Pass Function Keys to Browser	Function Keys to HTML
Set URL's for Function Keys	N/A

Default ION Configuration

ION Configuration	Default Value
Run ION Client	Off
ION Server	1
ION List File	SSCK30.cab



C Reprogrammable Keypad

Reprogramming the Keypad

You can use the reprogrammable keypad utility of the CK30 to:

- change the functionality of keypad keys or key combinations.
- create keypad macros.

Use this table to understand how to navigate through the reprogrammable keypad utility.

To Do This:	Press This Key:
Accept changes and advance to next dialog box	Enter
Cancel a procedure	Esc
Move between fields	Tab
Move backward a field	Shift Tab
Select or clear a radio button or check box	Space
Move up or down selections within a box	▲ or ▼

Changing the Functionality of Keypad Keys or Key Combinations

Use the reprogrammable keypad utility to change the functionality of keypad keys or key combinations. The reprogrammable keypad utility enables you to:

- Program any Unicode character to any key or modified key combination.
- Program any Virtual Key/Unicode character to any key or modified keystroke.
- Use any key as a function key such as backlight and contrast.
- Launch an application from a key or key combination.
- Remap hardware scan codes.




Note: The only key you cannot reprogram is the **%** key.

Starting the Reprogrammable Keypad Utility

Before you can reprogram any key, you need to enable the reprogrammable keypad utility.

To enable the reprogrammable keypad utility

- 1 Open File Manager.
- 2 From the \Windows directory, select FilterKeysToggle.exe and press **Enter**.
- 3 From the dialog box, select **Run** and then press **Enter**. The Key Program Feature dialog box appears.
- 4 Select **Yes** and press **Enter**.
- 5 Press **Ctl Alt Shift ▲**. The reprogrammable keypad utility appears.

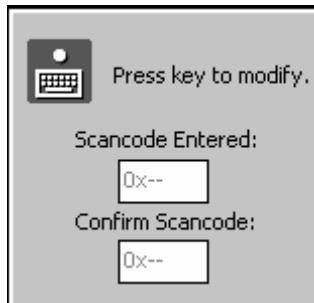


Programming a Unicode Character


You can program any Unicode character to any key or modified key combination.

To program a Unicode character


- 1 Start the reprogrammable keypad utility.
- 2 Press the key you want to reprogram twice. The hexadecimal scan code for the key appears in both fields.
- 3 Press **Enter**. The select modifiers dialog box appears.

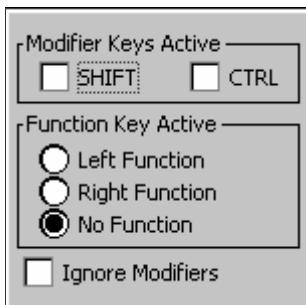

- 4 Select the modifier or function keys that you want to press before you access the key you are modifying. For example, if you want to press **Shift** to access the reprogrammed key, you select **Shift**. You do not need to select a modifier or function key.
- 5 Press **Enter**. The Key Response dialog box appears.

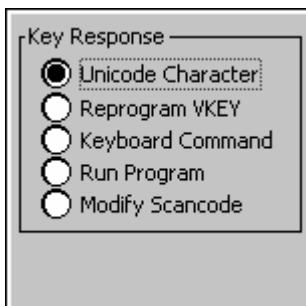

- 6 Select **Unicode Character** and press **Enter**. The Unicode dialog box appears.

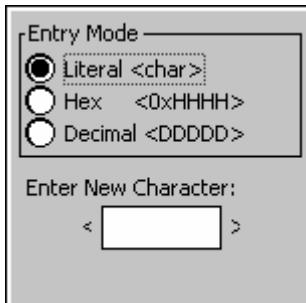

- 7 Select the Entry Mode for the Unicode character.

Entry Mode	Description
Literal	You enter the actual character that the key combination produces.
Hex	You enter a hex string. The hex string must be preceded by 0x. The range is from 0x0 to 0xFFFF.
Decimal	You enter a decimal string. The range is from 0 to 65535.


- 8 Press **Tab** to select the Enter New Character text field.
- 9 Type the new character or string and press **Enter**. A dialog box appears asking if you want to commit your new entry to permanent storage.
- 10 Select **Yes** or **No** and press **Enter**.

Programming a Virtual Key or Unicode Character


You can program any virtual key or Unicode character to any key or modified key combination.

To program a virtual key or Unicode character


- 1 Start the reprogrammable keypad utility.
- 2 Press the key you want to reprogram twice. The hexadecimal scan code for the key appears in both fields.
- 3 Press **Enter**. The select modifiers dialog box appears.

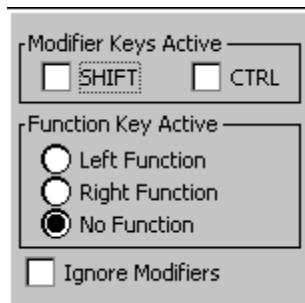

- 4 Select the modifier or function keys that you want to press before you access the key you are modifying. For example, if you want to press **Shift** to access the reprogrammed key, you select **Shift**. You do not need to select a modifier or function key.
- 5 Press **Enter**. The Key Response dialog box appears.

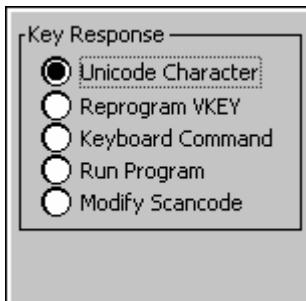

- 6 Select **Reprogram VKEY** and press **Enter**. The Virtual Key (Vkey) dialog box appears.

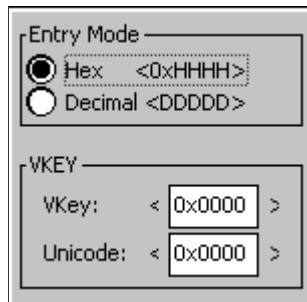

- 7 Select the Entry Mode for the Vkey character.

Entry Mode	Description
Hex	You enter a hex string. The hex string must be preceded by 0x. The range is from 0x0 to 0xFFFF.
Decimal	You enter a decimal string. The range is from 0 to 65535.

- 8 Press **Tab** to select the **Vkey** text field.

- 9 Type the Vkey string and press **Tab** to select the **Unicode** field.
- 10 Type the Unicode string and press **Enter**. A dialog box appears asking if you want to commit your new entry to permanent storage.
- 11 Select **Yes** or **No** and press **Enter**.


Programming Any Key as a Function Key

You can program any key to work as a function key. You can choose for your function key to behave as:


- Scanner Trigger
- Backlight Key
- Contrast Key
- Volume Key
- Mouse Key Toggle
- Rotate Display
- Insert VKey
- LWIN VKey (Menu launch on CK30)
- Delete VKey
- Backtab VKey
- Pan Mode Toggle
- High Contrast Toggle (Accessibility changes to system colors)
- Contrast Lighter
- Contrast Darker
- Reprogram Key (key sequence to launch the reprogrammable keypad utility)
- Reprogram Key Delete (deletes the key sequence to launch the reprogrammable keypad utility)
- Record MACRO (record a new key sequence to launch the Macro Utility)
- Delete MACRO (deletes the key sequence to launch the Macro Utility)

To program any key as a function key

- 1 Start the reprogrammable keypad utility.
- 2 Press the key you want to reprogram twice. The hexadecimal scan code for the key appears in both fields.
- 3 Press **Enter**. The select modifiers dialog box appears.

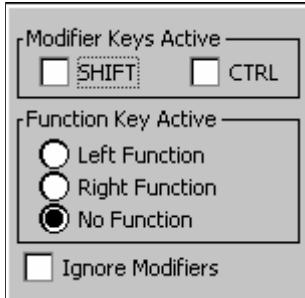

- 4 Select the modifier or function keys that you want to press before you access the key you are modifying. For example, if you want to press **Shift** to access the reprogrammed key, you select **Shift**. You do not need to select a modifier or function key.
- 5 Press **Enter**. The Key Response dialog box appears.

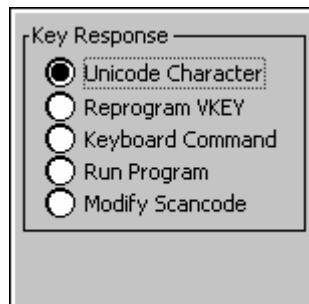

- 6 Select **Keyboard Command** and press **Enter**. The Keyboard Command Select dialog box appears.




- 7 Select the desired function from the list and press **Enter**. A dialog box appears asking if you want to commit your new entry to permanent storage.
- 8 Select **Yes** or **No** and press **Enter**.

Launching an Application From a Key or Key Combination


You can program any key or key combination to launch an application.

To program a key or key combination to launch an application


- 1 Start the reprogrammable keypad utility.
- 2 Press the key you want to reprogram twice. The hexadecimal scan code for the key appears in both fields.
- 3 Press **Enter**. The select modifiers dialog box appears.

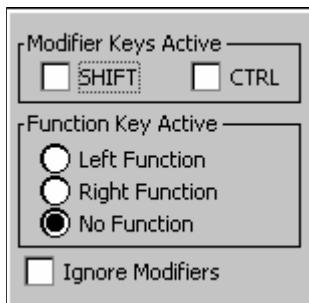

- 4 Select the modifier or function keys that you want to press before you access the key you are modifying. For example, if you want to press **Shift** to access the reprogrammed key, you select **Shift**. You do not need to select a modifier or function key.
- 5 Press **Enter**. The Key Response dialog box appears.

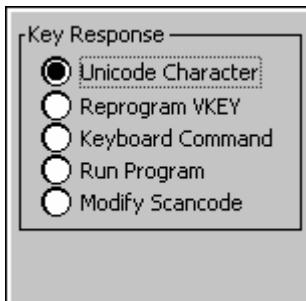

- 6 Select **Run Program** and press **Enter**. The application dialog box appears.

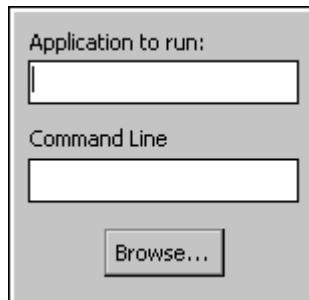


- 7 In the Application to run text box, type the location of the application you want to launch or click **Browse** to locate the application.
- 8 (Optional) Enter any command line parameters you want to use.
- 9 Press **Enter**. A dialog box appears asking if you want to commit your new entry to permanent storage.
- 10 Select **Yes** or **No** and press **Enter**.

Remapping a Hardware Scan Code


You can remap the keys on the keypad to function the way you want them to function for your work environment. For example, you can remap the left **Enter** key to function as the right **Enter** key on a 52-key keypad. This remapping is useful for a left-handed person. When you remap a key, it ignores the select modifiers dialog box.

To remap a key


- 1 Start the reprogrammable keypad utility.
- 2 Press the key you want to reprogram twice. The hexadecimal scan code for the key appears in both fields.
- 3 Press **Enter**. The select modifiers dialog box appears.

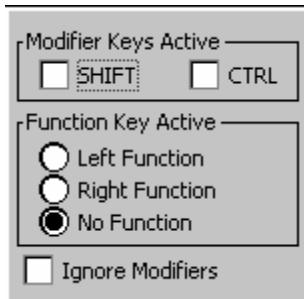

- 4 Press **Enter**. The Key Response dialog box appears.

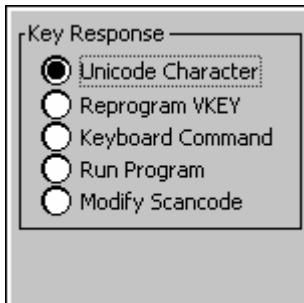

- 5 Select **Modify Scan code** and press **Enter**. The Press Key to Translate dialog box appears.

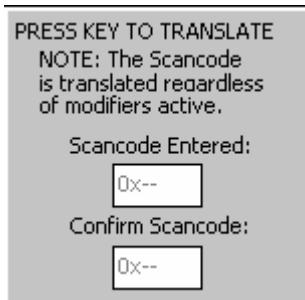

- 6 Press the new key you want the scan code remapped to twice.
- 7 Press **Enter**. A dialog box appears asking if you want to commit your new entry to permanent storage.
- 8 Select **Yes** or **No** and press **Enter**.

Removing One or All Reprogramming Modifications

You can remove all reprogramming modifications you made or pick a specific modification to remove. Another way you can remove all modifications is by choosing to restore defaults. For help restoring defaults, see “Restoring Default Settings” on page 39.

To remove all reprogramming modifications

- 1 Press **Ctl Alt Shift ▼**. The Remove all keypad modifications dialog box appears.




- 2 Select **Yes** and press **Enter**. A dialog box appears asking if you want to remove the entry from permanent storage.
- 3 Select **Yes** or **No** and press **Enter**. You will hear a beep when your changes are successful.

To remove one reprogramming modification

- 1 Press **Ctl Alt Shift ▼**. The Remove all keypad modifications dialog box appears.



- 2 Select **No** and press **Enter**. The next dialog box appears.

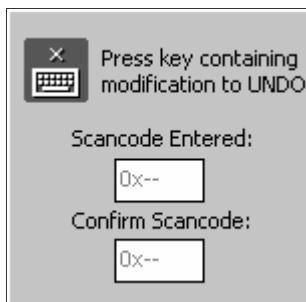

- 3 Press the key containing the modification you want to remove twice and press **Enter**. The select modifiers dialog box appears.
- 4 Select the modifiers that you have assigned to the key and press **Enter**. You will hear a beep when your changes are successful.

Finding the Registry Entries for Keypad Changes

The CK30 provides registry files for each keypad change you make. These files are located at:

\CK_FFS\KeypadMods\KeypadModxxxx.reg

Each modification has its own entry. To combine entries, copy all the keys into a single registry file and combine identical keys to contain the data from both files.

For example if one .reg file contains:

```
[HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD]
"ScancodeFilterArray"=hex:\
    0a,00,00,00,04,00,00,00,00,00
```

And the other .reg contains:

```
[HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD]
"ScancodeFilterArray"=hex:\
    11,00,01,00,03,00,00,00,00,00
"KeyFilterProcess0x111"="\Windows\cmd.exe"
"KeyFilterCmd0x111"="test"
```

Your combined reg file should look like this:

```
[HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD]
"ScancodeFilterArray"=hex:\
    11,00,01,00,03,00,00,00,00,00,
    0a,00,00,00,04,00,00,00,00,00
"KeyFilterProcess0x111"="\Windows\cmd.exe"
"KeyFilterCmd0x111"="test"
```

Creating Keypad Macros

A keypad macro is a sequence of keys mapped to a single key or key combination. Keep the following considerations in mind when programming with macros:

- You can only use one macro at a time.
- Do not use scan triggers in macros because they are timing dependent.
- Avoid using key sequences that launch applications because of timing issues.
- The best use of macros is as a tool for repetitive data entry.

Use this table to understand the macro icons that appear in the status bar.


Icon	Description
	You are recording a macro.
	You are deleting the macro.
	You are playing the macro.

Starting the Keypad Macro Utility

Before you can record a macro, you need to enable the keypad macro utility.

To enable the keypad macro utility

- 1 Open File Manager.
- 2 From the \Windows directory, select FilterKeysToggle.exe and press **Enter**.
- 3 From the dialog box, select **Run** and then press **Enter**. The Key Program Feature dialog box appears.
- 4 Select **Yes** and press **Enter**.
- 5 Press **Ctl Alt Shift** . The keypad macro utility appears.

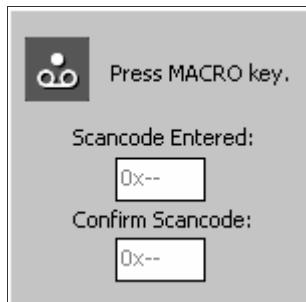


Recording a Keypad Macro


The best use of a macro is for entering repetitive data. However, you can also record a series of steps in a procedure.

To record a keypad macro


- 1 Start the keypad macro utility.
- 2 Press the key you want to activate the macro twice. The hexadecimal scan code for the key appears in both fields.
- 3 Press **Enter**. The select modifiers dialog box appears.

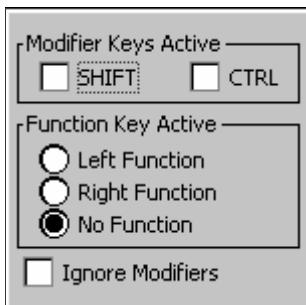

- 4 Select the modifier or function keys that you want to press before you activate the macro. For example, if you want to press **Shift** to activate the macro key, you select **Shift**. You do not need to select a modifier or function key.
- 5 Press **Enter**. The select timing dialog box appears.

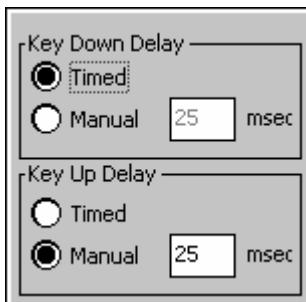

- 6 Select **Timed** or **Manual** for Key Down Delay and Key Up Delay. If you select Timed, the key response delay matches the timing of the key press. If you select Manual, you need to enter the time for the delay.
- 7 Press **Enter**. The macro entry dialog box appears.

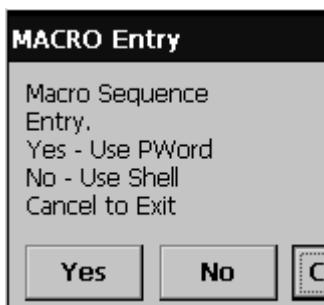

- 8 Select **Yes** to launch Pocket Word if you want to enter data for the macro. Select **No** to use the Shell for recording your macro.
- 9 Either enter data in Pocket Word or perform a process in the Shell.
- 10 Press **Ctl Alt Shift**  to stop recording the macro. The reprogram key dialog box appears.




- 11 Select **Yes** to accept your macro. A dialog box appears asking if you want to commit your macro to permanent storage.
- 12 Select **Yes** or **No** and press **Enter**.

Removing All or One Keypad Macro

You can remove all macros or pick a specific macro to remove.

To remove all macros

- 1 Press **Ctl Alt Shift** . The Remove all keypad macros dialog box appears.

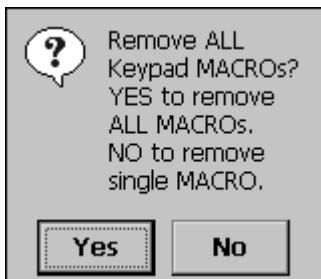

- 2 Select **Yes** and press **Enter**. A dialog box appears asking if you want to remove the entry from permanent storage.


- 3 Select **Yes** or **No** and press **Enter**. You will hear a beep when your changes are successful.

To remove one macro

- 1 Press **Ctl Alt Shift** . The Remove all keypad modifications dialog box appears.



- 2 Select **No** and press **Enter**. The next dialog box appears.

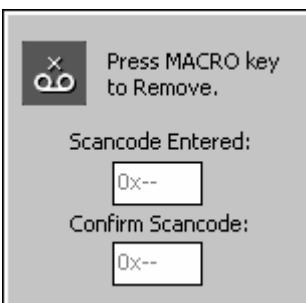

- 3 Press the key that activates the macro twice and press **Enter**. The select modifiers dialog box appears.
- 4 Select the modifiers that you have assigned to the macro key and press **Enter**. You will hear a beep when your changes are successful.

Finding the Registry Entries for Keypad Macros

Registry files for each keypad macro are provided for you. These files are located at:

\CK_FFS\KeypadMods\KeypadModxxxx.reg

Each macro has its own entry. To combine entries, copy all the keys into a single registry file and combine identical keys to contain the data from both files.

For example if one .reg file contains:

```
[HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD]
"ScancodeFilterArray"=hex:\n
    08,00,0d,00,06,00,06,00,00,00\n
"KeyMacro0xd08"=hex:\n
08,00,00,00,00,00,00,00,\n
08,f0,00,00,7a,00,00,00,\n
10,00,00,00,19,00,00,00,\n
10,f0,00,00,01,00,00,00,\n
18,00,00,00,19,00,00,00,\n
18,f0,00,00,6e,00,00,00
```


And the other .reg contains:

```
[HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD]
"ScancodeFilterArray"=hex:\n
    0d,00,05,00,06,00,06,00,00,00\n
"KeyMacro0x50d"=hex:\n
0a,00,00,00,00,00,00,00,\n
0a,f0,00,00,a0,00,00,00,\n
11,00,00,00,19,00,00,00,\n
11,f0,00,00,6c,00,00,00,\n
19,00,00,00,19,00,00,00,\n
19,f0,00,00,6b,00,00,00
```

Your combined reg file should look like this:

```
"ScancodeFilterArray"=hex:\n
    08,00,0d,00,06,00,06,00,00,00,\n
    0d,00,05,00,06,00,06,00,00,00\n\n
"KeyMacro0xd08"=hex:\n
08,00,00,00,00,00,00,00,\n
08,f0,00,00,7a,00,00,00,\n
10,00,00,00,19,00,00,00,\n
10,f0,00,00,01,00,00,00,\n
18,00,00,00,19,00,00,00,\n
18,f0,00,00,6e,00,00,00\n\n
"KeyMacro0x50d"=hex:\n
0a,00,00,00,00,00,00,00,\n
0a,f0,00,00,a0,00,00,00,\n
11,00,00,00,19,00,00,00,\n
11,f0,00,00,6c,00,00,00,\n
19,00,00,00,19,00,00,00,\n
19,f0,00,00,6b,00,00,00
```

Appendix C — Reprogrammable Keypad

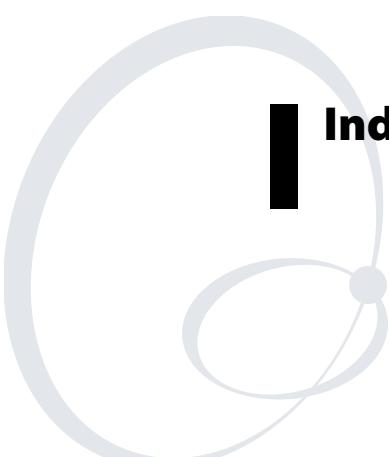

I Index

Symbols and Numbers

- key. *See* orange key
- key. *See* green key
- ☒ key, illustrated, 9, 10, 11
- % key
 - illustrated, 9, 10, 11
 - modifying functionality, 15
 - using, 14
- or ⊖, changing contrast, 17
- +1 command, saving changes to flash, 76
- 128X wand, attaching, 26
- 1550, attaching scanner, 26
- 1551 or 1553 scanner
 - attaching scanner, 26
 - energy saver mode, 27
 - troubleshooting, 137
- 1D linear imager. *See* linear imager
- 26-pin serial port assignments, 156
- 3270/5250 TE keypads, typing hidden characters, 154
- 42-key keypad
 - Alpha key, 13
 - illustrated, 9
- 4-bay battery charging dock, AC2
 - accessory, 150
- 4-bay communications dock, accessory, 151
- 4-slot battery charger, AC1 accessory, 150
- 50-key keypad, illustrated, 10
- 52-key keypad, illustrated, 11
- 802.11b/g radio
 - communications, configuring, 48
 - default configuration, 162
- 802.1x security
 - configuring
 - Funk security, 63
 - Microsoft security, 64
 - overview, 63
 - troubleshooting, 129–31
- 851-064-xxx power supply, described, 150
- 851-082-xxx power supply, described, 150
- 8-slot battery charging dock, AC3
 - accessory, 150

A

- AA2 serial cable adapter accessory
 - attaching, 29
 - described, 150
- AA3 serial cable adapter accessory,
 - described, 150
- AB1G battery
 - described, 150
 - using, 5
- AC1 4-slot battery charger accessory,
 - described, 150
- AC2 4-bay battery charging dock
 - accessory, described, 150
- AC3 8-slot battery charging dock
 - accessory, described, 150
- access points, determining best locations, 120
- accessing, System Main Menu, 94
- accessories, described, 150
- Active Directory, using to issue certificates, 69
- ActiveSync
 - installing and establishing a partnership, 86
 - using to copy and install files, 88
 - using to install applications, 85
 - using to upgrade operating system, 103
- AD1 communications dock, described, 151
- AD2 4-bay communications dock,
 - described, 151
- Admin mode
 - entering, 100
 - exiting, 102
- AG1 protective case, described, 151
- AG2 protective boot, described, 151
- AH1 handle. *See* CK30 and CK31 handle
- AL1 holster and belt, described, 151
- AL2 handstrap, described, 151
- AL3 swiveling belt clip, described, 151
- Alpha key, using on the 42-key keypad, 13
- Antares, Trakker, applications, converting, 83

- application
 - closing, 99
 - converting a Trakker Antares, 83
 - customizing how they load, 91
 - developing a web-based, 79
 - installing
 - with ActiveSync, 85
 - with Avalanche, 90
 - with FTP server, 89
 - with SD card, 89
 - with SmartSystems Console, 90
 - launching
 - automatically, 91
 - from a key or key combination, 175
 - loading on CK30, customizing, 91
 - managing, 98
 - properties, viewing, 100
 - running
 - from File Manager, 95
 - from the Command Line, 96
 - saving changes from host, 76
 - switching between, 100
 - viewing
 - all currently running, 98
 - properties, 100
 - ASCII, attaching scanner, 26
 - audio feedback. *See* beeps
 - authentication, troubleshooting 802.1x
 - security, 129–31
 - automatically launching your application, 91
 - AutoRun
 - AutoRun.dat file, 91
 - AutoRun.exe file, 91
 - customizing how applications load, 91
 - sample AutoRun.dat file, 92
 - AV1 vehicle cradle, described, 152
 - Avalanche, using to remotely manage the CK30, 90
- B**
- backing up files, 102
 - backup battery
 - 10 minutes to replace main battery, 5
 - described, 110
 - very low, 111, 128, 129
- Backup Battery Very Low dialog box
 - described, 111
 - troubleshooting, 128, 129
 - bar codes
 - saving configuration changes by scanning, 76
 - scanning
 - most symbologies, 23
 - overview, 22
 - PDF417, 24
 - scanning to configure the CK30, 41
 - symbologies
 - enabled by default, 22
 - supported, 145
 - troubleshooting, 134
 - battery
 - AB1G accessory, 150
 - Backup Battery Very Low dialog box, 111, 128, 129
 - blinking light or on solid, 5
 - charger
 - AC1 accessory, 150
 - AC2 accessory, 150
 - AC3 accessory, 150
 - charging times, 6
 - checking status, 8
 - installing, 7
 - light, illustrated, 20
 - low icon, understanding, 110
 - maximizing life, 7
 - status icons, 8
 - understanding voltage, 110
 - using, 5
 - when to swap, 110
 - Battery Information, diagnostics screen, 109
 - Battery light, illustrated, 20
 - beeper volume
 - changing, 21
 - disabling keypad, 14
 - beeps
 - testing, 123
 - understanding, 21
 - belt clip, AL3 swiveling, accessory, 151
 - blue light. *See* Intermec Ready-to-Work indicator

- Bluetooth
 commands, described, 54
 configuring, 53
 Console, diagnostics tool, 111
 default configuration, 163
 discovering devices, 53
 settings, described, 54
 wireless printing, configuring, 53
- boot, protective, AG2, 151
- Bootcode Version, diagnostic screen, 112
- booting
 changing $\text{\textbackslash}o$ key functionality, 15
 CK30, 139
 cold, 139
 warm, 139
- C**
- CAB file, using to install applications, 84
- cables
 for serial adapters, 28
 scanner, supported, 26
- calling Product Support, 126
- capitalizing characters, 13
- Caps Lock, using, 13
- card, SD
 cannot find SDMMC Disk folder, 129
 CK30 will not boot from card, 129
 how to access files, 85
 inserting or removing, 30
 troubleshooting, 129
 using to install applications, 89
 using to store applications, 85
- certificates
 issued by Active Directory, 69
 issued by third-party CA, 70
 loading
 available methods, 69
 correct date and time required, 69
 Enroll Certificates application, 69
 Import Root Cert and Import User Cert applications, 70
 multiple, 72
 overview, 69
- changing your password, 101
- characters not printed on keypad, typing, 152
- charging dock
 AC1, 4-slot, battery, 150
 AC2, 4-bay, battery, 150
 AC3, 8-slot, battery, 150
- charging times, battery, 6
- CK_FFS folder, using to store applications, 85
- CK30
 Command Reference Manual, described, xiii
 default configuration settings, 160, 164, 165
 description, 2
 model features, 3
 troubleshooting, guide to, 125
 upgrading the operating system, 103
- CK30 and CK31 handle, described, 151
- cleaning
 scanner window, 140
 screen, 140
- click and drag, with mouse pointer, 19
- closing an application, 99
- cold boot, 139
 configuring $\text{\textbackslash}o$ key to perform, 15
 preserving files through, 102
 saving configuration changes through, 75
- color-coded keys, using, 12
- COM port locked up, 134
- Command Line, using to run an application, 96
- Command Reference Manual, Intermec Computer*, described, xiii
- communications
 configuration menu option, 38
 default configuration, 162
- communications dock
 AD1 accessory, 151
 AD2 accessory, 151
- configuration commands
 bar codes, scanning to configure, 41
 definitions. *See Intermec Computer Command Reference Manual*
 sending through the network, 42
- troubleshooting, 127

- configuration number
 - finding, 114, 126
 - locating on the configuration label, 2
 - Configuration Utility
 - exiting, 40
 - menu options, described, 38
 - menu structure, illustrated, 37
 - navigating within, 38
 - opening, 36
 - configuration, default settings, 160
 - configuring
 - 802.11b/g radio communications, 48
 - 802.1x security
 - Funk security, 63
 - Microsoft security, 64
 - troubleshooting, 129–31
 - Bluetooth wireless printing, 53
 - default settings, 160
 - Ethernet communications, 51
 - LEAP security, 66
 - Microsoft security, 57
 - saving changes to flash memory, 75
 - security, 55
 - serial communications, 46
 - static WEP security, 67
 - TCP/IP network parameters, 48
 - UDP Plus network parameters, 50
 - VPN, 73
 - WEP security
 - Funk security, 67
 - Microsoft security, 68
 - WPA security, 57
 - configuring the CK30
 - by scanning bar codes, 41
 - example, through the network, 45
 - parameters, 34
 - saving changes to flash memory, 75
 - through the network, 42
 - using EasySet configuration labels, 41
 - using Setup Assistant, 35
 - using SmartSystems, 40
 - using the Configuration Utility, 36
 - contacting Intermec by phone, xii
 - contrast
 - changing, 17
 - Contrast Test, diagnostic screen, 112
 - converting a Trakker Antares application, 83
 - copy files
 - to CK30 using ActiveSync, 88
 - using File Manager, 97
 - copyright information, xiv
 - CPU Monitor, diagnostics screen, 113
 - CPU Register, reading, 121
 - customizing how applications load on the CK30, 91
- D**
- Data Collection configuration menu option, 38
 - dcBrowser documentation, 4
 - decoded serial adapter
 - attaching, 28
 - cables, 29
 - described, 152
 - default configuration
 - restoring, 39
 - scanner, 160
 - settings, 160
 - deleting a file, 96
 - device IP address, viewing, 118
 - Device Settings configuration menu option, 38
 - device settings, default configuration, 164
 - DHCP server IP address, viewing, 118
 - diagnostics
 - Battery Information, 109
 - Bluetooth Console, 111
 - Bootcode Version, 112
 - Contrast Test, 112
 - CPU Monitor, 113
 - Display Test, 114
 - Hardware Configuration Table, 114
 - Installed Fonts, 115
 - IVA Versions, 115
 - Keypad Test, 116
 - LED Test, 116
 - Memory Information, 117
 - Net Connect Test, 117, 119
 - Net Interface Information, 118
 - Operating System Version, 119
 - Radio Driver Version, 120
 - Radio Information, 120

Index

- diagnostics (*continued*)
 - RAM Monitor, 121
 - Read CPU Registers, 121
 - Security Information, 122
 - Sound Test, 123
 - using, 108
 - diagram, Configuration Utility, 37
 - dimensions, physical, 144
 - disabling security, 73
 - Display Test, diagnostics screen, 114
 - dock
 - AD1 communications, 151
 - AD2 4-bay communications, 151
 - downloading manuals from web, xiii
- E**
- EasySet, using to print configuration bar codes, 41
 - electrical specifications, 144
 - energy saver mode
 - requires special cable, 28
 - troubleshooting, 137
 - using, 27
 - Enroll Certificates application, using to load certificates, 69
 - environmental specifications, 144
 - Ethernet
 - communications, configuring, 51
 - icons, defined, 16
 - network diagram, 52
 - exiting
 - Configuration Utility, 40
 - System Main Menu, 94
- F**
- factory default settings
 - cannot restore, 5
 - restoring, 39
 - features, CK30, 3
 - File Manager
 - opening, 95
 - using to copy a file, 97
 - using to delete a file, 96
 - using to run an application, 95
 - using to view file properties, 97
 - files
 - backing up, 102
 - copying with File Manager, 97
- deleting with File Manager, 96
 - managing, 95
 - viewing the properties, 97
- flash file system, 84
 - flash memory, saving configuration changes, 75
- fonts, viewing installed, 115
 - FTP server
 - using to install applications, 89
 - using to upgrade operating system, 103
- function keys
 - programming any key to be, 173
 - using, 12
- Funk security
 - configuring
 - LEAP security, 66
 - WEP security, 67
 - WPA2-802.1x, 59
 - WPA2-PSK, 60
 - WPA-802.1x, 59
 - WPA-PSK, 60
 - configuring 802.1x, 63
 - selecting a profile, 56
- G**
- Good Read light
 - described, 20
 - illustrated, 20
 - troubleshooting, 135
 - green key, using, 12
- H**
- handle, accessory, 151
 - handstrap, AL2 accessory, 151
 - Hardware Configuration Table, diagnostics screen, 114
 - Hardware Diagnostics menu, 108
 - hardware scan code, remapping, 177
 - hidden characters, typing, 152
 - holster and belt, AL1 accessory, 151
 - host computer not receiving data, troubleshooting, 132
 - humidity, specifications, 144
- I**
- iBrowse
 - described, 4
 - opening, 79

- icons
 - battery status, 8
 - understanding macro, 180
 - understanding screen, 16
- IE Browser
 - opening, 79
 - programming function keys to go to a URL, 82
 - programming function keys to use web-based application settings, 81
 - programming tips, 83
 - setting a start page, 81
 - setting URLs for function keys, 82
 - shortcut keys, 79
 - using Windows default function keys, 81
- Import Root Cert application, using to load certificates, 70
- Import Root Certificates, using to load certificates, 72
- Import User Cert application, using to load certificates, 70
- Import User Certificates, using to load certificates, 72
- inserting, SD card, 30
- Installed Fonts, diagnostics screen, 115
- installing
 - ActiveSync, 86
 - applications
 - FTP server, 89
 - with ActiveSync, 85
 - with Avalanche, 90
 - with SD card, 89
 - with SmartSystems Console, 90
 - battery, 7
- Intermec Computer Command Reference Manual*, xiii
- Intermec Developer's Library (IDL), 78, 84
- Intermec Ready-toWork indicator
 - described, 21
 - illustrated, 20
- Intermec resource kits, 78
- Intermec SDK. *See* Intermec Developer's Library (IDL)
- international keypads
 - typing hidden characters, 153
 - using, 8
- ION Client. *See* Intermec Computer Command Reference Manual
- ION Configuration menu option, 38
- ION configuration, default settings, 165
- IPSec, described, 73
- IVA
 - IVA Versions, diagnostics screen, 115
 - version supported in this manual, 4
- K**
- key
 - , illustrated, 9, 10, 11
 - , illustrated, 9, 10, 11
 - ☒, illustrated, 9, 10, 11
 - ☒, illustrated, 9, 10, 11
 - Scan button, illustrated, 9, 11
- keypad
 - 42-key, illustrated, 9
 - 50-key, illustrated, 10
 - 52-key, illustrated, 11
 - disabling or modifying key functions, 14
 - international, 8
 - keys, changing the functionality, 168
 - locating the changes registry files, 179
 - locating the keypad macro registry files, 184
 - or ○, changing contrast, 17
 - macro utility, enabling, 181
 - macro, recording, 181
 - macros, creating, 168, 180
 - options, 145
 - programming any key to work as a function key, 173
 - programming to launch an application, 175
 - remapping keys, 177
 - removing all reprogramming, 178
 - removing macros, 183
 - reprogramming, 168
 - reprogramming for Unicode characters, 169
 - reprogramming for virtual keys, 171
 - terminal emulation, 9
 - typing hidden characters, 152

Index

- keypad (*continued*)
 - using color-coded keys, 12
- Keypad Test, diagnostic screen, 116
- L**
 - L2TP, described, 73
 - launching an application
 - automatically, 91
 - from a key or key combination, 175
 - Layer Two Tunneling Protocol (L2TP), 73
 - LEAP security
 - configuring with Funk security, 66
 - not supported for Microsoft security, 66
 - overview, 66
 - LED Test, diagnostics screen, 116
 - lights
 - status, 20, 21
 - testing, 116
 - Lightweight Extensible Authentication Protocol. *See* LEAP
 - linear imager
 - default configuration, 162
 - reading distances, 146
 - scanning most symbologies, 23
 - scanning PDF417, 24
 - loading applications, customizing, 91
 - loading certificates for security, 69
 - Lockdown mode
 - entering, 100
 - exiting, 102
 - locking a key, 12
- M**
 - MAC address, viewing, 118
 - macros
 - creating keypad, 168, 180
 - enabling the keypad utility, 181
 - recording, 181
 - removing, 183
 - stop recording, 183
 - understanding icons, 180
 - main menu
 - accessing, 94
 - exiting, 94
 - managing
 - applications using Task Manager, 98
 - files with File Manager, 95
 - manuals, downloading from the web, xiii
- maximizing battery life, 7
- memory
 - diagnostics, 117
 - storage, 84
 - viewing available RAM, 121
 - viewing available RAM and flash, 117
- Memory Information, diagnostics screen, 117
- menu structure, Configuration Utility, 37
- Micro PDF417 bar codes, how to scan, 24
- Microsoft security
 - configuring
 - WEP security, 68
- Microsoft security
 - configuring
 - 802.1x, 64
 - WPA-802.1x, 60
 - WPA-PSK, 62
 - selecting as your security choice, 57
- models, CK30, 3
- mouse
 - moving a window, 19
 - using, 18
- moving a window, 19
- N**
 - navigating in the Configuration Utility, 38
- Net Connect Test, diagnostics screen, 117, 119
- Net Interface Information, diagnostics screen, 118
- network
 - connection, testing, 117
 - supported protocols, 48
 - using to send configuration commands, 42
- network connection, testing, 119
- new operating system features, 4
- no network connection icon, troubleshooting, 133
- O**
 - operating system
 - Operating System Version, diagnostics screen, 119
 - version supported in this manual, 4

- operating the CK30
 - humidity range, 144
 - temperature range, 144
 - troubleshooting, 127, 128, 129
- options
 - CK30, 4
 - keypad, 145
- orange key, using, 12
- P**
- parameters, configuring CK30, 34
- passphrase
 - setting for Funk WPA-PSK, 60
 - setting for Microsoft WPA-PSK, 62
- password for System Main Menu
 - changing, 101
 - removing, 102
 - setting, 101
- patent information, xiii
- PDF417 bar codes, how to scan, 24
- persistence through a cold boot,
 - configuration changes, 75
- Persistent Copy folder, backing up files, 102
- physical
 - dimensions, 144
 - specifications, 144
- pin assignments, serial port, 156
- Ping command, using to test network connection, 117, 119
- Ping Utility, 119
- pointer, mouse, 18
- port, serial
 - pin assignments, 156
 - scanner, attaching, 28
- Power key. *See* **Yo** key
- power specifications, 144
- power supply
 - accessory, 150
 - controller utility, 120
- PPTP, described, 73
- printing, configuring Bluetooth wireless, 53
- problems. *See* troubleshooting
- Product Support, calling, 126
- profile, selecting for Funk security, 56
- programming
 - guide, TE 2000 Terminal Emulation, 4
 - keys, 168
- properties
 - viewing applications, 100
 - viewing file, 97
- Protected Extensible Authentication Protocol (PEAP), described, 63
- protective boot, AG2 accessory, 151
- protective case, AG1 accessory, 151
- PSK
 - default configuration, 163, 164
 - using to convert Trakker Antares applications, 83
- R**
- radio
 - communications, configuring, 48
 - configuring 802.11b/g, 48
 - configuring Bluetooth, 53
 - default configuration, 163
 - signal, using to place access points, 120
- Radio Driver Version, diagnostics screen, 120
- Radio Information, diagnostics screen, 120
- RAM Monitor, diagnostics screen, 121
- Read CPU Registers, diagnostics screen, 121
- reading distances
 - linear imager, 146
 - standard range laser, 148
- recording macros
 - starting, 181
 - stopping, 183
- register, displaying values, 121
- registry entries
 - combining, 180, 185
- registry files
 - keypad changes, 179
 - keypad macros, 184
- remapping keys, 177
- remotely managing the CK30, using Avalanche, 90
- removing
 - keypad macros, 183
 - password protection, 102

- removing (*continued*)
 programming modifications from keys, 178
 SD card, 32
- repositioning a window, 19
- reprogrammable keypad utility
 enabling, 169
 navigating within, 168
- reprogramming the keypad, 168
- reset switch, 139
- Restore Defaults configuration menu
 option, 38
- restoring default settings, 39
- restricting access to System Main Menu, 100
- RS-232 communications, configuring, 46
- Run command, using to run an application, 95
- running applications from File Manager, 95
- S**
- safety, icons, xi
- saving changes to flash, 75
- Scan button
 illustrated, 9, 11
 troubleshooting, 134
- scan code, hardware, remapping, 177
- scanner
 attaching a tethered, 26
 default configuration settings, 161–62
 energy saver mode, 27
 list of supported devices and cables, 26
 troubleshooting, 134
- scanner trigger, programming any key to be, 173
- scanner window, cleaning, 140
- scanning
 bar code to save changes, 76
 bar codes, 22
 bar codes to configure the CK30, 41
 linear imager, 23
 PDF417 or Micro PDF417, 24
 standard range laser, 23
- screen
 cleaning, 140
 Contrast Test, diagnostic screen, 112
- contrast, changing, 17
- specifications, 144
- understanding icons, 16
 using, 15
- screen icons, understanding, 16
- SD card
 cannot find SDMMC Disk folder, 129
 CK30 will not boot from card, 129
 how to access files, 85
 inserting or removing, 30
 troubleshooting, 129
 using to install applications, 89
 using to store applications, 85
- SDMMC Disk folder
 access to files on SD card, 85
 cannot find after inserting SD card, 129
 using to store applications, 85
- security
 certificates, overview, 69
 configuring, 55
 LEAP, 66
 WEP
 Funk security, 67
 Microsoft security, 68
 WPA, overview, 58
 WPA2-802.1x, 59
 WPA2-PSK, 60
 WPA-802.1x, 59, 60
 WPA-PSK
 Funk security, 60
 Microsoft security, 62
 decode, default configuration, 162
 disabling, 73
 restricting access to System Main Menu, 100
- Security Information, diagnostics screen, 122
- sending configuration commands through the network, 42
- serial adapter
 attaching, 28
 decoded, 152
 undecoded, 152
- serial cable adapter
 AA2 accessory, 150
 AA3 accessory, 150

- serial communications
 - configuring, 46
 - network diagram, 47
 - troubleshooting, 134
 - serial port
 - pin assignments, 156
 - problems transmitting data through, 134
 - scanner, attaching, 28
 - setting a password, for System Main Menu, 101
 - settings, restoring default, 39
 - Setup Assistant, using to configure CK30, 35
 - site survey, using Radio Information to perform, 120
 - SmartSystems Console
 - using to configure the CK30, 40
 - using to install applications, 90
 - using to upgrade the CK30, 105
 - SmartSystems Foundation, downloading, 40
 - SmartSystems Information configuration menu option, 38
 - SNTP, using to synchronize system time, 45
 - Software Diagnostics menu, 108
 - software version, viewing, 119, 126
 - sound test, 123
 - specifications
 - electrical, 144
 - humidity, 144
 - power, 144
 - screen, 144
 - temperature, 144
 - standard range laser
 - available option, 4
 - reading distances, 148
 - scanning most symbologies, 23
 - start screen, 16
 - status
 - bar, described, 15
 - beeps, 21
 - troubleshooting, 127
 - checking battery, 8
 - lights, understanding, 20
 - supercap. *See* backup battery
 - support, contacting Intermec, xii, 126
 - switch, reset, 139
 - switching applications, 100
 - symbologies, bar code
 - default, 22
 - supported, 145
 - synchronizing time on CK31, 45
 - System Diagnostics menu, 108
 - System Main Menu
 - accessing, 94
 - changing the password, 101
 - exiting, 94
 - removing password, 102
 - setting a password to protect, 100
 - system power, information on, 120
- T**
- Task Manager
 - disabling from keypad, 14
 - using to close an application, 99
 - using to manage applications, 98
 - using to switch applications, 100
 - using to view all applications running, 98
 - using to view application properties, 100
 - TCP/IP
 - network diagram, 49
 - network, configuring parameters, 48
 - TE 2000
 - connection status, 21
 - Terminal Emulation Programmer's Guide, 4
 - telephone support, xii
 - temperature, specifications, 144
 - terminal emulation
 - keypad options, 9
 - keypads, typing hidden characters, 154
 - session, problems establishing, 133
 - terminal message format (TMF), 42
 - testing
 - contrast, 112
 - display, 114
 - keypad, 116
 - LEDs, 116
 - network connection, 117, 119

Index

- testing (*continued*)
 sound, 123
tethered scanner, attaching, 26
third-party CA, using to issue certificates, 70
time server
 corporate network server, 46
 default, 46
time, synchronizing with time server, 45
TKIP, using with WPA, 57
TMF field, defined, 43, 44
Trakker Antares application, converting, 83
transaction header, defined, 43
transaction ID, creating, 42
Transport Layer Security (TLS), described, 63
troubleshooting
 1551 or 1553 scanner, 136, 137
 Backup Battery Very Low dialog box, 128, 129
 bar code symbologies, 138
 COM port locked up, 134
 configuring 802.1x security, 129–31
 energy saver mode, 137
 guide to finding solutions, 125
 input device, 136
 lost network connection after suspend, 132
 operating the CK30, 127, 128, 129
 preventive maintenance, 140
 scanning bar codes, 134
 serial communications, 134
 wireless connectivity, 133
typing characters not printed on keypad, 152
- U**
- UDP Plus
 default configuration, 164
 network diagram, 50
 network, configuring parameters, 50
- undecoded serial adapter
 attaching, 28
 cables, 29
 described, 152
- understanding
 screen icons, 16
 status lights, 20
- Unicode character
 program to any key or key combination, 169
 selecting an entry mode, 171
- upgrading
 operating system with an SD card, 103
 operating system with SmartSystems Console, 105
- uppercase letters, typing, 13
- user-defined lights, description, 20
- using
 battery, 5
 Caps Lock, 13
 diagnostics, 108
 green key, 12
 Y key, 14
 mouse pointer, 18
 orange key, 12
 programmable lights, 20
 screen, 15
- V**
- vehicle cradle, AV1 accessory, 152
version, finding operating system, 126
virtual key (Vkey)
 program to any key or key combination, 171
 selecting an entry mode, 172
- virtual private network. *See* VPN
- virtual wedge, default configuration, 162
- voltages
 backup battery, 110
 main battery, 110
- volume, changing, 21
- VPN
 configuring, 74
 described, 73
- VT/ANSI keypad, typing hidden characters, 155
- W**
- warm booting, 139
 changing Y function to cold booting, 15
problems using the I/O key, 5

- warranty information, xi
- web-based application, developing, 79
- WEP security
 - configuring
 - Funk security, 67
 - Microsoft security, 68
 - overview, 67
- what's new, 4
- Wi-Fi
 - certified information, 2
 - Protected Access (WPA), 57
- window, repositioning, 19
- wireless communications
 - configuring, 48
 - printing, 53
 - troubleshooting, 131–33
- work area of screen, 15
- WPA security
 - configuring, 57
- Enterprise mode, defined, 58
- PSK mode, defined, 58
- WPA2 security
 - 802.1x mode, defined, 58
 - overview, 58
 - PSK mode, defined, 58
- WPA2-802.1x security, configuring with
 - Funk security, 59
- WPA2-PSK security, configuring with
 - Funk security, 60
- WPA-802.1x security, configuring
 - Funk security, 59
 - Microsoft security, 60
- WPA-PSK security
 - configuring
 - Funk security, 60
 - Microsoft security, 62
 - overview, 58

Index



Corporate Headquarters

6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

CK30 Handheld Computer User's Manual



P/N 073528-007