

***Special
Operating
Instructions
for
LS 4008i-I312***



73-55349-312
Revision A - June 2003



The LS4008i-I312 differs from the standard as follows:

Custom Feature

1. RS-232 host type defaults to OPOS.
2. For OPOS host, UPC-A preamble defaults to system character.

Parameter	Default Value
RS-232 host type	OPOS
UPC-A preamble	System character