

symbol°



© 2001-2002 SYMBOL TECHNOLOGIES, INC. All rights reserved.

Symbol reserves the right to make changes to any product to improve reliability, function, or design.

Symbol does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Symbol products might be used. An implied license exists only for equipment, circuits, and subsystems contained in Symbol products.

Symbol and the Symbol logo are registered trademarks of Symbol Technologies, Inc. Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Symbol Technologies, Inc. One Symbol Plaza Holtsville, N.Y. 11742-1300 http://www.symbol.com

Patents

This product is covered by one or more of the following U.S. and foreign Patents: U.S. Patent No. 4.593.186; 4.603.262; 4.607.156; 4.652.750; 4.673.805; 4.736.095; 4.758.717; 4,760,248; 4,806,742; 4,816,660; 4,845,350; 4,896,026; 4,897,532; 4,923,281; 4,933,538; 4,992,717; 5,015,833; 5,017,765; 5,021,641; 5,029,183; 5,047,617; 5,103,461; 5,113,445; 5,130,520; 5,140,144; 5,142,550; 5,149,950; 5,157,687; 5,168,148; 5,168,149; 5,180,904; 5,216,232; 5,229,591; 5,230,088; 5,235,167; 5,243,655; 5,247,162; 5,250,791; 5,250,792; 5,260,553; 5,262,627; 5,262,628; 5,266,787; 5,278,398; 5,280,162; 5,280,163; 5,280,164; 5,280,498; 5,304,786; 5,304,788; 5,306,900; 5,324,924; 5,337,361; 5,367,151; 5,373,148; 5,378,882; 5,396,053; 5,396,055; 5,399,846; 5,408,081; 5,410,139; 5,410,140; 5,412,198; 5,418,812; 5,420,411; 5,436,440; 5,444,231; 5,449,891; 5,449,893; 5,468,949; 5,471,042; 5,478,998; 5,479,000; 5,479,002; 5,479,441; 5,504,322; 5,519,577; 5,528,621; 5,532,469; 5,543,610; 5,545,889; 5,552,592; 5,557,093; 5,578,810; 5,581,070; 5,589,679; 5,589,680; 5,608,202; 5,612,531; 5,619,028; 5,627,359; 5,637,852; 5,664,229; 5,668,803; 5,675,139;5,693,929; 5,698,835; 5,705,800; 5,714,746; 5,723,851; 5,734,152; 5,734,153; 5,742,043; 5,745,794; 5,754,587; 5,762,516; 5,763,863; 5,767,500; 5,789,728; 5,789,731; 5,808,287; 5,811,785; 5,811,787; 5,815,811; 5,821,519; 5,821,520; 5,823,812; 5,828,050; 5,848,064; 5,850,078; 5,861,615; 5,874,720; 5,875,415; 5,900,617; 5,902,989; 5,907,146; 5,912,450; 5,914,478; 5,917,173; 5,920,059; 5,923,025; 5,929,420; 5,945,658; 5,945,659; 5,946,194; 5,959,285; 6,002,918; 6,021,947; 6,029,894; 6,031,830; 6,036,098; 6,047,892; 6,050,491; 6,053,413; 6,056,200; 6,065,678; 6,067,297; 6,082,621; 6,084,528; 6,088,482; 6,092,725; 6,101,483; 6,102,293; 6,104,620; 6,114,712; 6,115,678; 6,119,944; 6,123,265; 6,131,814; 6,138,180; 6,142,379; 6,172,478; 6,176,428; 6,178,426; 6,186,400; 6,188,681; 6,209,788; 6.209.789: 6.216.951: 6.220.514: 6.243.447: 6.244.513: 6.247.647: 6.308.061 6.250.551: 6,295,031; 6,308,061; 6,308,892; 6,321,990; 6,328,213; 6,330,244; 6,336,587; 6,340,114; 6,340,115; 6,340,119; 6,348,773; D305,885; D341,584; D344,501; D359,483; D362,453; D363,700; D363,918; D370,478; D383,124; D391,250; D405,077; D406,581; D414,171; D414,172; D418,500; D419,548; D423,468; D424,035; D430,158; D430,159; D431,562; D436,104. Invention No. 55,358; 62,539; 69,060; 69,187 (Taiwan); No. 1,601,796; 1,907,875; 1,955,269 (Japan); European Patent 367,299; 414,281; 367,300; 367,298; UK 2,072,832; France 81/03938; Italy 1,138,713 rev. 03/02

Licensed under one or more of the following Palm Computing, Inc. (a subsidiary of 3Com Corporation) patents: U.S. Pat. Nos. 5,125,039, 5,550,715, 5,727,202 and other Patents Pending.

Introduction

Congratulations on your purchase of Symbol Technologies' SPT 1550 Terminal! Its unique combination of features make this product superior for use in a wide range of applications. These features include:

- Pocket size
- Personal Information Management software
- Printing support
- Scanning capability
- 8 MB RAM and 4 MB ROM
- Multi-language operating system.


The Palm 4.1 operating system is available in English, French, Italian, German and Spanish. Go to http://devzone.symbol.com to download the multi-language ROM image.


This guide covers basic set up and use of the terminal. The *SPT 1550 Product Reference Guide* provides more detail about the applications available on the SPT 1550. See your Reseller or call Symbol Technologies to receive this manual.

Getting Started with the SPT 1550

Before using your SPT 1550, you need to perform some set up procedures. First, familiarize yourself with the SPT 1550 by reviewing the following illustration.

Parts of the SPT 1550

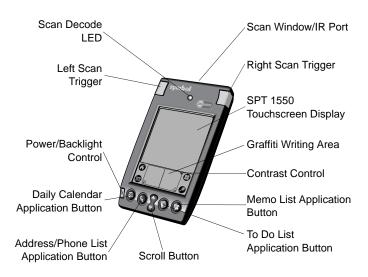

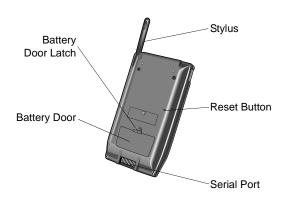


Installing Batteries

Before using your SPT 1550, install two AAA alkaline batteries behind the battery door on the back of the SPT 1550.

Note: Battery life may change with different manufacturers. Symbol Technologies recommends the use of Duracell "Ultra" brand batteries for best battery life performance.

To install the batteries:

 Press the latch on the battery door and lift the battery door away from the SPT 1550.

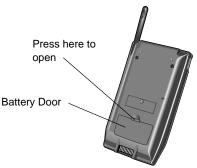

Install the two AAA alkaline batteries into the battery compartment.

Note: A diagram in the interior of the battery compartment shows the orientation of the + and - ends of the batteries. When correctly installed, the clips in the battery compartment secure the batteries in place.

3. Replace the battery door so that it is flush with the back of the SPT 1550 and "clicks" into position.

Note: Do not force the battery door. When the batteries are correctly installed, the battery door clips smoothly into place. If you feel resistance when replacing the battery



door, make sure the door is aligned with the slots on the back of your SPT 1550, and that the batteries are firmly seated in the battery compartment.

Caution: While batteries are being replaced, data is retained for approximately one minute. We strongly suggest that you have your replacement batteries ready for insertion before removing the old batteries from the unit.

Starting the SPT 1550

To start your SPT 1550, press the power button.




The first time you start your SPT 1550 terminal and whenever you perform a hard reset, the first *Setup* screen displays.



Tap the screen to continue with setup.


 The initial calibration screen appears. To calibrate your SPT 1550 so the cursor on the touch screen aligns with the tip of your stylus, tap the center of each target that appears on the screen with the tip of the stylus.

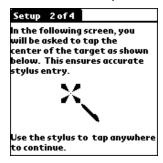



After you tap each of the targets, the third setup screen prompts you to set your country, time zone, date and time.

3. Tap the Time Zone field to open the Set Time Zone screen.

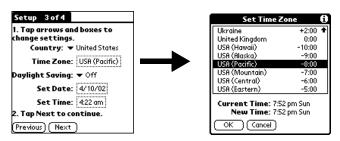

- Tap the up or down arrows to select your country and time zone.
- b. Tap the time zone.
- c. Tap the OK button to close the Set Time Zone screen.
- 4. Tap the Set Time field to open the Set Time screen.




- Tap the up or down arrows to change the number for the hour.
- Tap the minutes numbers, and then tap the arrows to adjust the settings for the current time.
- c. Tap the AM or PM box to select the time of day.


Note: Your SPT 1550 terminal can also display time based on a 24-hour clock. Refer to the *Product Reference Guide*.

- d. Tap the OK button to close the Set Time screen.
- 5. To set the current date:

 Tap the Set Date field on the third setup screen to open the Set Date screen.

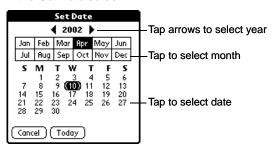

- b. Tap the arrows at the top to select the current year.
- c. Tap a month box to select the current month.
- d. Tap the current date to set the date, and close the *Set Date* screen.
- 6. When finished, tap Next to continue to the fourth setup screen.

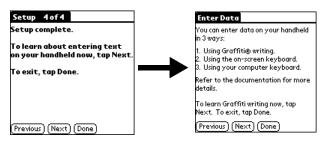

 Tap Next if you'd like to learn about how to enter data on your terminal. Otherwise, tap Done. The application screen displays.




Using the SPT 1550

Using the Power/Backlight Control

The power button turns the SPT 1550 on and off. This button also serves as your backlight control. With the terminal on, press and hold the power button for approximately 2 seconds to turn the backlight on and off.

Adjusting Contrast

Tap the Contrast icon to adjust the contrast of the screen.

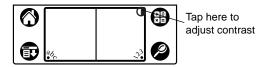

Using your stylus, adjust the contrast by dragging the contrast slider until the contrast is set to the desired level, or use the scroll buttons on the terminal.

Writing with the Stylus


Your SPT 1550 includes Graffiti® handwriting software as the primary system for entering text and numbers. Graffiti is a system

where simple strokes you write with the stylus are instantly recognized as letters or numbers. See the *SPT 1550 Product Reference Guide* for more detailed information.

Using the Onscreen Keyboard

You can activate the on-screen keyboard any time you need to enter text or numbers on your SPT 1550. Note that you cannot enter Graffiti characters while using the on-screen keyboard. To use the on-screen keyboard:

- 1. Open any SPT 1550 application.
- Tap any record name, or tap the New button with the tip of the stylus.
- 3. Tap the left target to open the *Alpha* keyboard, or tap the right target to open the *Numeric* keyboard.

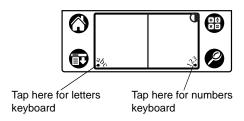



Icon Descriptions

Applications Icon	Tap to exit the current application and to display a list of available applications for selection.		
Calculator Icon	Tap to display the calculator application.		
Menu Icon	ap from within an application to display the nenu of options for the selected application.		
Find Icon	Tap from within an application to enter search criteria to find an entry.		

Scanning with the SPT 1550

The SPT 1550 has an integrated scanner which, if your terminal is configured to use scanning input, allows you to collect data by scanning bar codes. To scan bar codes with the SPT 1550:

Caution: Do not look directly into the laser.

- 1. Start an application that enables you to scan bar codes.
- 2. Aim the scanner at the bar code.
- 3. Press either the right or left scan trigger. The Scan LED lights red. Make sure the red scan beam covers the entire bar

code. A beep sounds to indicate a successful decode and the Scan LED turns green.



Maintaining the SPT 1550

Your SPT 1550 is designed to be reliable and to provide years of trouble-free service. However, you should observe the following general tips when using your SPT 1550:

- Do not scratch the screen of your SPT 1550. When working
 with your SPT 1550, use the supplied stylus or plastic-tipped
 pens intended for use with a touch-sensitive screen. Never
 use a pen or pencil or other sharp object on the surface of
 the SPT 1550 screen.
- Your SPT 1550 is not waterproof and should not be exposed to rain or moisture. Under harsh conditions, water may enter the circuitry through the front panel buttons. In general, treat your SPT 1550 as you would a pocket calculator or other small electronic instrument.
- The touch-sensitive screen of your SPT 1550 contains glass.
 Do not drop your SPT 1550 or subject it to any strong impact.
 Do not carry your SPT 1550 in your back pocket; if you sit on it, the glass may break.
- Protect your SPT 1550 from temperature extremes. Do not leave your SPT 1550 on the dashboard of a car on a hot day, and keep it away heat sources.



- Do not store or use your SPT 1550 in any location that is extremely dusty, damp or wet.
- Use a soft, damp cloth to clean your SPT 1550. If the surface
 of the SPT 1550 screen becomes soiled, clean it with a soft
 cloth moistened with a diluted window-cleaning solution.

Troubleshooting

SPT 1550 terminal does not turn on:

- · Make sure batteries are installed properly.
- Replace the batteries. If your SPT 1550 terminal still does not operate, try a soft reset; see Resetting Your SPT 1550.

Low battery warning after replacing the batteries:

 The battery warning message may appear immediately after replacing the batteries. In addition, if you check the battery gauge in the Applications Launcher immediately after replacing the batteries, the gauge may start at "empty" and slowly rise to "full." This is normal. It takes a few minutes for the battery gauge to accurately show the condition of the batteries.

No sound:

 Check the System Sound option in the General Preferences screen. If the option is set to off, there will be no sound. See the SPT 1550 Product Reference Guide for more information.

SPT 1550 terminal turns itself off:

Your SPT 1550 terminal is designed to turn itself off after a
period of inactivity. This period can be set at 30 seconds, one
minute, two minutes or three minutes. Check the "Auto-off after" setting in the General Preferences screen, and change
the setting if you need a longer delay before the automatic
shutoff feature activates. See the SPT 1550 Product Reference Guide for more information.

SPT 1550 terminal doesn't recognize my handwriting:

- For your SPT 1550 to recognize handwriting input with the stylus, you need to use the Graffiti[®] character strokes. See the SPT 1550 Product Reference Guide for information about how to write Graffiti character strokes.
- Make the Graffiti character strokes in the Graffiti writing area
 not on the display part of the screen.
- Make sure you are writing the strokes for letters in the lefthand side, and the strokes for numbers in the right-hand side of the Graffiti writing area.
- Make sure that Graffiti is not shifted into extended or punctuation modes. See the SPT 1550 Product Reference Guide for information about shifting into and out of punctuation modes.

Tapping the screen buttons or icons does not activate the corresponding feature:

Recalibrate the digitizer. Choose Digitizer from the Preferences application pick list and follow the directions on the screen.

When I tap the icon, nothing happens:

 Not all applications or screens have menus. Try changing to a different application.

A message appears stating that your SPT 1550 terminal memory is full:

- Delete unused memos and records. If necessary, you can save these records on your computer using the Save Backup Copy option that appears in the Delete dialogs.
- Purge the Date Book and To Do List applications. (To purge, go into the Date Book or To Do List application, tap the menu button, and select the purge option.) This deletes completed To Do items and past Date Book events from the memory of



your SPT 1550 terminal. Note that you may need to perform a HotSync operation to recover the memory.

 If you have installed additional applications on your SPT 1550 terminal, remove them to recover memory.

Beamed data does not transmit:

 Confirm that the SPT 1550 terminals are 5" apart, and that the path between the two devices is clear of obstacles.

When receiving beamed data an out of memory message appears:

 Your SPT 1550 terminal requires at least twice the amount of memory available as the data you are receiving. For example, if you are receiving a 30K application, you must have at least 60K free. The extra 30K is freed once the beaming operation is complete.

Your SPT 1550 unit does not accept scan input:

- Verify that the unit is loaded with a scanning application. See your System Administrator.
- Check to be sure the bar code symbol is not defaced.
- · Be sure you are within proper scanning range.
- Be sure the unit is programmed to accept the type of bar code you are scanning.
- If you are expecting a beep on a good decode and don't hear one, check that the application is set to generate a beep on good decode.
- If the scanner stops emitting a laser beam when you press
 the trigger, check your battery level. When the battery is low,
 the scanner shuts off before the terminal notifies you of the
 low battery condition.

Note: If, after performing these checks, the scanner is still not reading symbols, contact your distributor or Symbol Technologies.

Resetting Your SPT 1550 Terminal

Under normal circumstances, you will never have to use the reset button. However, on rare occasions your SPT 1550 terminal stops responding to buttons or the screen, perform a reset to get your SPT 1550 terminal running again.

Performing a Soft Reset

A soft reset tells your SPT 1550 terminal to stop what it's doing and start over again. All records and entries stored in your SPT 1550 terminal are retained. After a soft reset, the Welcome to Palm III terminal screen appears followed by the General Preferences screen (to set time and date).

To perform a soft reset, use the tip of an unfolded paper clip (or similar object *without* a sharp tip) to gently press the reset button inside the hole on the back panel of your SPT 1550 terminal.



Performing a Hard Reset

A hard reset also tells your SPT 1550 terminal to start over again. With a hard reset all records and entries stored in your SPT 1550 terminal are erased. *Therefore, never perform a hard reset unless a soft reset does not solve your problem.*

Note: You can restore any data previously synchronized with your computer during the next HotSync operation.

To perform a hard reset:

- Hold down the power button on the front panel of the SPT 1550 terminal.
- While holding down the power button, use the tip of an unfolded paper clip (or similar object without a sharp tip) to gently press the reset button.
- 3. Release the power button.
- 4. When a message appears on the SPT 1550 terminal screen warning that you are about to erase all the data stored on your SPT 1550 terminal, do one of the following:
 - a. Press the upper half of the scroll button on the front panel of the SPT 1550 terminal to complete the hard reset and display the Digitizer screen.
 - b. Press any other button to perform a soft reset.

Note: With a hard reset, the current date and time are retained. Formats Preferences and other settings are restored to their factory default settings.

Ergonomic Recommendations

Caution: In order to avoid or minimize the potential risk of ergonomic injury follow the recommendations below. Consult with your local Health & Safety Manager to ensure that you are meeting with your company's safety programs to prevent employee injury.


- · Reduce or eliminate repetitive motion
- · Maintain a natural position
- · Reduce or eliminate excessive force
- · Keep objects that are used frequently within easy reach
- · Perform tasks at correct heights
- · Reduce or eliminate vibration
- · Reduce or eliminate direct pressure
- · Provide adjustable workstations
- · Provide adequate clearance
- Provide a suitable working environment
- · Improve work procedures.

Regulatory Information

All Symbol devices are designed to be compliant with rules and regulations in locations they are sold and will be labeled as required.

Any changes or modifications to Symbol Technologies equipment, not expressly approved by Symbol Technologies, could void the user's authority to operate the equipment.

Radio Frequency Interference Requirements

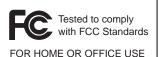

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- · Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Radio Frequency Interference Requirements - Canada

This Class B digital apparatus complies with Industry Canada Standard ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

(F Marking and European Economic Area (EEA)

Symbol Technologies, Inc., hereby declares that this device is in compliance with all the applicable Directives, 89/336/EEC, 73/23/EEC. A Declaration of Conformity may be obtained from http://www2.symbol.com/doc/.



Laser Devices

Symbol products using lasers comply with US 21CFR1040.10, and IEC825-1:1993, EN60825-1:1994+A11:1996. The laser classification is marked on one of the labels on the product.

Class 1 Laser devices are not considered to be hazardous when used for their intended purpose. The following statement is required to comply with US and international regulations:

Caution: Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure.

Class 2 laser scanners use a low power, visible light diode. As with any very bright light source, such as the sun, the user should avoid staring directly into the light beam. Momentary exposure to a Class 2 laser is not known to be harmful.

Scanner Labeling



In accordance with Clause 5, IEC 0825 and EN60825, the following information is provided to the user:



ENGLISH

CLASS 1 CLASS 2

CLASS 1 LASER PRODUCT LASER LIGHT DO NOT STARE INTO BEAM CLASS 2 LASER PRODUCT

DANISH KLASSE 1

KLASSE 1 LASERPRODUKT KLASSE 2 LASERLYF SE IKKE IND I STRÅLEN KLASSE 2 LASERPRODUKT

DUTCH KLASSE 1

KLASSE-1 LASERPRODUKT KLASSE 2 LASERLICHT NIET IN STRAAL STARFN KLASSE-2 LASERPRODUKT

FINNISH LUOKKA 1

LUOKKA 1 LASERTUOTE LUOKKA 2 LASERVALO ÄLÄ TUIJOTA SÄDETTÄ LUOKKA 2 LASERTUOTE

FRENCH CLASSE 1

PRODUIT LASER DE CLASSE 1 CLASSE 2 LUMIERFLASER NE PAS REGARDER LE RAYON FIXEMENT PRODUIT LASER DE CLASSE 2

GERMAN

KLASSE 1 LASERPRODUKT DER KLASSE 1 KLASSE 2 LASERSTRAHLEN NICHT DIREKT IN DEN LASERSTRAHL SCHAUEN

LASERPRODUKT DER KLASSE 2

מוצר לייזר רמה 1

רמה 1

רמה 2

אור לייזר אין להביט אל תוך הזרם מוצר לייזר רמה 2

ITALIAN

CLASSE 1 PRODOTTO AL LASER DI CLASSE 1 CLASSE 2 LUCE LASER

NON FISSARE IL RAGGIOPRODOTTO AL LASER DI CLASSE 2

NORWEGIAN KLASSE 1

LASERPRODUKT, KLASSE 1 KLASSE 2 LASERLYS IKKE STIRR INN I LYSSTRÅLEN

LASERPRODUKT, KLASSE 2

PORTUGUESE CLASSE 1 PRODUTO LASER DA CLASSE 1

CLASSE 2 LUZ DE LASER NÃO FIXAR O RAIO LUMINOSO

PRODUTO LASER DA CLASSE 2

SPANISH

CLASE 1 PRODUCTO LASER DE LA CLASE 1 CLASE 2 LUZ LASER

NO MIRE FLIAMENTE EL HAZ PRODUCTO LASER DE LA CLASE 2

SWEDISH

KLASS 1 LASERPRODUKT KLASS 1

KLASS 2 LASERLJUS STIRRA INTE MOT STRÅLEN

LASERPRODUKT KLASS 2

For Frequently Asked Questions and tips on SPT 1550 operation, please visit the Symbol Palm website at http://www.symbol.com/palm.

Warranty

Symbol Technologies, Inc. ("Symbol") manufactures its hardware products in accordance with industry-standard practices. Symbol warrants that for a period of twelve (12) months from date of shipment, products will be free from defects in materials and workmanship.

This warranty is provided to the original owner only and is not transferable to any third party. It shall not apply to any product (i) which has been repaired or altered unless done or approved by Symbol, (iii) which has not been maintained in accordance with any operating or handling instructions supplied by Symbol, (iii) which has been subjected to unusual physical or electrical stress, misuse, abuse, power shortage, negligence or accident or (iv) which has been used other than in accordance with the product operating and handling instructions. Preventive maintenance is the responsibility of customer and is not covered under this warranty.

Wear items and accessories having a Symbol serial number, will carry a 90-day limited warranty. Non-serialized items will carry a 30-day limited warranty.

Warranty Coverage and Procedure

During the warranty period, Symbol will repair or replace defective products returned to Symbol's manufacturing plant in the US. For warranty service in North America, call the Symbol Support Center at 1-800-653-5350. International customers should contact the local Symbol office or support center. If warranty service is required, Symbol will issue a Return Material Authorization Number. Products must be shipped in the original or comparable packaging, shipping and insurance charges prepaid. Symbol will ship the repaired or replacement product freight and insurance prepaid in North America. Shipments from the US or other locations will be made F.O.B. Symbol's manufacturing plant.

Symbol will use new or refurbished parts at its discretion and will own all parts removed from repaired products. Customer will pay for the replacement product in case it does not return the replaced product to Symbol within 3 days of receipt of the replacement product. The process for return and customer's charges will be in accordance with Symbol's Exchange Policy in effect at the time of the exchange.

Customer accepts full responsibility for its software and data including the appropriate backup thereof.

Repair or replacement of a product during warranty will not extend the original warranty term. Symbol's Customer Service organization offers an array of service plans, such as on-site, depot, or phone support, that can be implemented to meet customer's special operational requirements and are available at a substantial discount during warranty period.

General

Except for the warranties stated above, Symbol disclaims all warranties, express or implied, on products furnished hereunder, including without limitation implied warranties of merchantability and fitness for a particular purpose. The stated express warranties are in lieu of all obligations or liabilities on part of Symbol for damages, including without limitation, special, indirect, or consequential damages arising out of or in connection with the use or performance of the product. Seller's liability for damages to buyer or others resulting from the use of any product, shall in no way exceed the purchase price of said product, except in instances of injury to persons or property. Some states (or jurisdictions) do not allow the exclusion or limitation of incidental or consequential damages, so the proceeding exclusion or limitation may not apply to you.

Service Information

Before you use the unit, it must be configured to operate in your facility's network and run your applications.

If you have a problem running your unit or using your equipment, contact your facility's Technical or Systems Support. If there is a problem with the equipment, they will contact the Symbol Support Center:

United States ¹	1-800-653-5350 Canada 1-631-738-2400			905-629-7226
United Kingdom	0800 328 2424 Asia/Pacific			337-6588
Australia	1-800-672-906	Austria/Österreich		1-505-5794-0
Denmark/Danmark	7020-1718	Finland/Suomi		9 5407 580
France	01-40-96-52-21	Germany/Deutchland		6074-49020
Italy/Italia	2-484441	Mexico/México		5-520-1835
Netherlands/Nederland	315-271700	Norway/Norge		+47 2232 4375
South Africa	11-8095311	Spain/España	91 324 40 00 Inside Spain	
Sweden/Sverige	84452900		+34 91 324 40 00 Outside Spain	
Latin America Sales Support	1-800-347-0178 Inside US +1-561-483-1275 Outside US			
Europe/Mid-East Distributor Operations	Contact local distributor or call +44 118 945 7360			

¹Customer support is available 24 hours a day, 7 days a week.

For the latest version of this guide go to:http://www.symbol.com/manuals.



72-51518-02 Revision A — May 2002