

*STI80-0264 Special Operating Instructions*  
*(73-12805-0264)*  
*Revision A: February 1997*

---

# ***Special Operating Instructions***

**symbol<sup>®</sup>**

*STI80-0264 Special Operating Instructions  
(73-12805-0264)  
Revision A: February 1997*

---

The STI80-0264 differs from the STI80-0200 in the following ways:

- Full keyboard emulation is supported.
- It interfaces a Synapse-compatible scanner to most laptops through the external PS/2 keyboard port.


## **Setup**

1. Connect the Synapse cable to the scanner.
2. Plug the other end of the Synapse cable into the laptop before powering up the laptop.
3. Power up the laptop. The Synapse cable powers up in the “On-Line Continuously” state, providing the best performance.
4. If your scanner’s *Product Reference Guide* has a Synapse Host Type bar code, scan that bar code.


## **What If...**

If the scanner is not operating properly, check the following conditions:

- If the scanner decodes but data isn't transmitted to the host, scan the **ON-LINE DURING TRANSMIT ONLY** bar code below.
- If the laptop receives data but locks out the on-board keyboard, scan the **ON-LINE DURING TRANSMIT ONLY** bar code below.
- When using this Synapse on an IBM laptop, use the Mouse/Keyboard adapter recommended by IBM.
- If Synapse is moved from one laptop to another, be sure to scan the **SET SYNAPSE DEFAULTS** bar code in the *Synapse Interface Guide*.

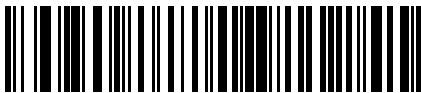

**ON-LINE CONTINUOUSLY**

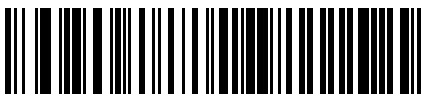

**ON-LINE ONLY DURING TRANSMIT**