Position and snap the grip into place on the unit as shown.



Attach the grip using the screws.
Failure to screw the grip into the unit may cause damage to the unit.

7. Stylus

If you do not have a Pistol Grip, the stylus and stylus holder can be attached to the hand strap on the bottom of the unit by separating the Velcro halves of the holder and wrapping it around the strap.

Attach the stylus retainer cord to the bottom of the stylus by pressing one of the end loops through the hole in the stylus and then pass the other end of the cord through that loop.

If you do not have a pistol grip, attach the other end of the cord to the hand strap in the same way. If you do have a pistol grip, attach the other end of the cord to the hole in the bottom of the pistol grip. We recommend you always use the stylus retainer cord to avoid loosing the small stylus.

8. Power on the 3200

The small red button above the W on the unit is the power button. Press the button the power on the unit.

After powering on the unit, follow the WDT3200 onscreen prompts to set up the unit and set the time zone. The correct time zone is very important. Based on the time zone you set, the date and time will be synced with the PC each time the unit is connected and synced.

9. Install ActiveSync software

Using the included Microsoft ActiveSync CD, install ActiveSync. Follow the onscreen prompts in the installer.

If you purchased any integrated Wasp software, you should install that software after ActiveSync is installed.

Vista does not require ActiveSync.

10. Other Accessories and Parts

There is a SD memory slot on the front of the scanner above the scanning window. It is for extra memory only up to 1GB.

11. Start the Scanner

This feature is enabled by default. If you need to manually turn it on, follow the instructions below:

From the start menu go to Settings, then "Control Panel". Double click on "Scanner Settings" to open the "Scanner Control Panel". Then click on the third tab titled "To Kpd", select the checkbox labeled "Start Scan2Key When Exit" and then click the OK button to close the form. Close the control panel and now you are ready to scan.



WDT3200 Quick Start Guide



© 2007 Wasp Barcode Technologies

Steps for getting started with your WDT3200 mobile device

1. Unpack

Open the box and remove all the pieces from their protective packaging.

Parts included: 3200 Unit, Battery, Power Adapter, Exchangeable Plug Adapters, Recharge and Data Transfer Cable, Hand Strap, Stylus, Stylus Holder, Stylus Retainer Cord

2. Remove the Protective Film

Remove the protective film from the top window and red scanner window on the front of the unit.

3. Open the Battery Compartment

On the back of the unit, slide the battery compartment latch toward the bottom of the unit and lift the battery compartment door off of the unit.


IMPORTANT: In the battery compartment, on the left side there is an on/off switch. Make sure it is in the **on** position before inserting the battery.



4. Install the Battery

The plastic battery removal strip should be sticking up at the bottom of the battery compartment and should stick out after the battery is inserted or it will be very difficult to remove the battery.

On the battery there are three gold contacts on one of the short ends of the battery.

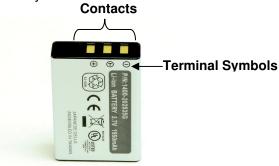

Insert the gold contacts into the battery compartment first. The terminal symbols should be on top + T – when the battery is inserted.

Slide the battery in and press down on the back until the battery snaps into place. To remove the battery pull the battery removal strip toward the bottom of the unit.

Replace the battery compartment door and hand strap.

5. Prepare the Battery Adapter

Prepare the battery adapter by removing the black connection protector from the wall plug adapter. The connection protector is labeled "Please remove before use". Next, choose the wall plug adapter that matches your

country and snap it into place on the plug adapter.

Plug the small end of the plug adapter cord into the Recharge and Data Transfer cable and the plug end into a power source. Plug the recharge cable into the 3200 unit and charge for **12 hours before first use**.



6. Pistol Grip

If have the optional pistol grip, remove the hand strap by grasping the strap near the bottom of the unit. Move the strap down and away from the unit. The hand strap clip will come out of the unit and expose the battery compartment. The other end of the hand strap is connected with Velcro and can be removed by separating the Velcro halves.

Two screws to attach the pistol grip will either be in a bag that came with the grip or they will be attached to the inside of the grip in two small screw holders. Remove them before attaching the grip.