


# Format Configurable User Manual

Monarch<sup>®</sup>  
DOS-based  
PATHFINDER<sup>®</sup>  
Ultra<sup>®</sup> System

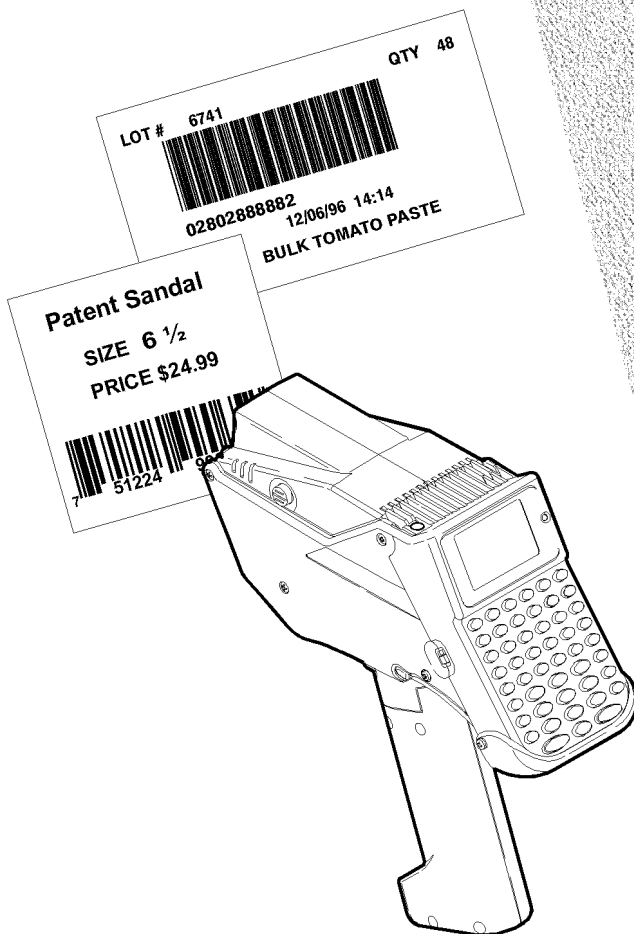

**Monarch<sup>®</sup>**  
**PAXAR**

Each product and program carries a respective written warranty, the only warranty on which the customer can rely. Monarch reserves the right to make changes in the product and the programs and their availability at any time and without notice. Although Monarch has made every effort to provide complete and accurate information in this manual, Monarch shall not be liable for any omissions or inaccuracies. Any update will be incorporated in a later edition of this manual.

©2001 Monarch Marking Systems, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form by any means, without the written permission of Monarch Marking Systems, Inc.

#### **Trademarks**

MONARCH®, PATHFINDER®, Ultra® and PATHFINDER Ultra® are registered trademarks of Monarch Marking Systems, Inc.

6035 is a trademark of Monarch Marking Systems, Inc.

Paxar is a registered trademark of Paxar Corporation.

Microsoft, MS-DOS and Windows are trademarks of Microsoft Corporation.

TrueType is a trademark of Apple Computer, Inc.

Hewlett-Packard is a trademark of Hewlett-Packard Company.

CG Triumvirate and CG Triumvirate Bold are trademarks of AGFA Monotype Corporation.

Monarch Marking Systems, Inc.  
170 Monarch Lane  
Miamisburg, OH 45342

# TABLE OF CONTENTS

Introduction.....	1-1
Features .....	1-1
Terms to Know .....	1-2
Label Sizes .....	1-3
How this Manual is Organized .....	1-4
Getting Started.....	2-1
Using the Keypad and the Display.....	2-2
Using the Function Keys.....	2-3
Using the Most Common Keys .....	2-4
Reading the Display.....	2-4
Entering a Sample Format.....	2-5
Printing the Sample Format .....	2-8
Using the Operator Data Entry Form .....	2-9
Sample Operator Data Entry Form .....	2-10
Operator Data Entry Form Page 1 .....	2-11
Operator Data Entry Form Page 2 .....	2-12
Configuring the Printer.....	3-1
General Options .....	3-2
Toggle Backlight.....	3-2
Set Print Method.....	3-3
Set Date .....	3-3
Set Time .....	3-3
Set 12 of 5 Scan Lengths .....	3-4
Reset/Clear Formats .....	3-4
Select Currency .....	3-4
Set Supply Type .....	3-5
Suppress Warnings.....	3-5
Format Header Options .....	3-5
Generate Fmt Name.....	3-6

Format Text Options .....	3-6
Use Default Gap .....	3-6
Use Default Color .....	3-7
Set Default Color .....	3-7
Use Default Character Rotation .....	3-7
Format Bar Code Options .....	3-8
Use Default UPC Appearance .....	3-8
Set Default UPC Appearance .....	3-8
Use Default Alignment.....	3-8
Designing a Format .....	4-1
Design Overview .....	4-1
Determining Format Data .....	4-1
Determining the Print Area .....	4-2
Drawing Rough Sketches .....	4-2
Using Supply Layout Grids .....	4-3
Considering Field Types.....	4-4
Starting the Design Process .....	4-6
Placing Fields on a Format.....	4-7
Defining Text Fields.....	5-1
About Text Fields .....	5-1
Entering a Sample Text Field.....	5-6
Printing the Sample Text Format.....	5-9
Using a Combo Text Field .....	5-10
Entering a Sample Combo Text Field .....	5-12
Printing the Sample Combo Format.....	5-17
Defining Bar Code Fields .....	6-1
About Bar Code Fields .....	6-1
Setting the Appearance .....	6-5
Setting the Density .....	6-6
Entering Simple Bar Code Fields .....	6-6
Sample 1: Simple Fixed Bar Code .....	6-7
Printing the Simple Fixed Bar Code Format .....	6-9
Sample 2: Simple Variable Bar Code .....	6-10
Printing the Simple Variable Bar Code Format .....	6-13

About Combo Bar Code Fields .....	6-14
Entering a Sample Combo Bar Code Field .....	6-15
Printing the Sample Combo Bar Code Format .....	6-22
Bar Code Specifications .....	6-24
UPC Bar Codes .....	6-24
EAN Bar Codes .....	6-25
Code 128 Bar Codes .....	6-25
MSI .....	6-26
Interleaved 2 of 5 Bar Codes .....	6-26
Code 39 Bar Codes .....	6-26
Codabar Bar Codes .....	6-27
Code 93 .....	6-27
Defining Constant Text Fields .....	7-1
About Constant Text Fields .....	7-1
Entering a Sample Constant Text Field .....	7-5
Printing the Sample Constant Text Format .....	7-8
Defining Line Fields .....	8-1
About Line Fields .....	8-1
Entering a Sample Line Field (Segments) .....	8-3
Printing the Sample Line (Segment) Format .....	8-5
Entering a Sample Line Field (Vectors) .....	8-5
Entering a Sample Line Field (Vectors) .....	8-6
Printing the Sample Line (Vector) Format .....	8-8
Defining Special Fields .....	9-1
About Price and System Date/Time Fields .....	9-1
Entering a Sample Price Field .....	9-7
Printing the Sample Price Format .....	9-9
Entering a Sample Date/Time Field .....	9-11
Printing the Sample Date/Time Format .....	9-14
Applying Data Edits .....	10-1
Using Data Edits .....	10-2
Printing the Format .....	10-5
Padding Data .....	10-6
Printing the Format .....	10-9

Extracting Characters .....	10-10
Printing the Format .....	10-13
Stripping Characters .....	10-14
Printing the Format .....	10-17
Extracting Characters from the Middle .....	10-18
Printing the Format .....	10-21
Inserting Characters .....	10-21
Inserting Characters .....	10-22
Printing the Format .....	10-25
Make Into Price .....	10-26
Printing the Format .....	10-27
Make Into Shoe Size .....	10-27
Printing the Format .....	10-31
Editing a Format.....	11-1
Copying a Format .....	11-1
Editing a Field.....	11-2
Adding a Field .....	11-2
Printing the Format .....	11-4
Deleting a Field .....	11-4
Printing the Format .....	11-6
Modifying an Existing Field.....	11-6
Printing the Format .....	11-9
Changing Header Information .....	11-9
Printing the Format .....	11-12
Deleting a Format.....	11-13
Troubleshooting .....	12-1
Troubleshooting Information .....	12-2
If You Receive an Error Message.....	12-2
Calling Technical Support.....	12-2

Data Errors .....	12-3
Format Errors (1 - 99) .....	12-3
Batch Errors (100 - 199) .....	12-5
Option Errors (200 - 249) .....	12-5
Online Configuration Errors (250 - 299) .....	12-6
Check Digit Errors (300 - 324) .....	12-7
General Packet Errors (400 - 435) .....	12-8
Data Formatting Failures .....	12-9
Machine Faults .....	12-10
Sample Formats .....	A-1
Item Pricing .....	A-1
Item Identification .....	A-12
Receiving/Inventory .....	A-19
Using Fonts .....	A-1
Monospaced Font Magnification .....	B-2
Height Magnification .....	B-2
Proportional Font Magnification .....	B-3
Height Magnification .....	B-3
Height Magnification .....	B-4
Height Magnification .....	B-4
Height Magnification .....	B-5
Height Magnification .....	B-5
Height Magnification .....	B-6
Height Magnification .....	B-7
Height Magnification .....	B-7
Height Magnification .....	B-8
Height Magnification .....	B-8
Height Magnification .....	B-9
Height Magnification .....	B-10





# INTRODUCTION

# 1

The Monarch DOS-based Pathfinder Ultra Configurable printer lets you design custom labels to fit your needs. You can use the printer for a variety of applications.

- ◆ Print in-store merchandise marking labels to mark every item in your store with scannable bar codes for increased data accuracy.
- ◆ Print shelf labels with the product bar code number, description, and price.
- ◆ Print labels for restocking of merchandise. Just scan a bar-coded product and the printer duplicates the bar code.
- ◆ Print warehouse carton labels for easy carton sorting.

## Features

---

The flexibility of this printer also provides you with the ability to:

- ◆ Print a variety of tags ranging from .55 to 4.0 inches in length.
- ◆ Print numeric, alphanumeric, or special characters. You can print 14 fonts: monospaced or proportionally spaced fonts.
- ◆ Use 24 different bar codes.
- ◆ Print horizontally or vertically on the label.
- ◆ Design data entry prompts for the Operator.
- ◆ Scan bar codes.
- ◆ Select different currency symbols for International use.
- ◆ Print combination fields. This feature allows the Operator to enter data once, and use it in multiple fields.

## Terms to Know

---

<b>Barrier bar</b>	The horizontal bars above and below 12of5 bar codes used to ensure a clean scan and avoid partial scans.
<b>Baseline</b>	Bottom of the font.
<b>Check digit</b>	A number added to a bar code ensuring that the bar code data is read accurately.
<b>Fixed length bar code</b>	A bar code with a fixed character length: UPC-A, UPC-E, EAN-8, and EAN-13.
<b>Font</b>	The print style of text.
<b>Format</b>	The layout of data on a label. The format determines where and how data appears on a label.
<b>Horizontal bar code or text</b>	Data that prints across the width of a label.
<b>Human Readable characters</b>	The characters that are visible such as a text field. Bar codes embed characters.
<b>Intercharacter gap</b>	Default spacing between characters in monospaced fonts.
<b>Monospaced font</b>	Font with fixed character spacing such as Letter Gothic.
<b>Number system code</b>	A number added to a bar code ensuring that the bar code data is read accurately.
<b>Overlay</b>	The placement of one field over another such as a line on top of a price signifying a price reduction. <del>79.99</del>
<b>Pad Characters</b>	Characters that are added to the left or right of a field allowing you to fill in empty spaces when the entered data does not fill an entire field. For example, the Operator enters "23" and the format automatically adds zeros: 2300.
<b>Prompt</b>	A message on the printer's screen that tells you to enter/scan data.

<b>Proportionally spaced font</b>	Font with variable character spacing – all characters have different widths. For example, an “i” versus a “w.” Proportionally spaced fonts include CG Triumvirate, CG Triumvirate Condensed, and CG Triumvirate Bold.
<b>Quiet Zone</b>	An area of white space required at the beginning and end of a bar code to allow scanning. Also at the beginning/end and edges of a label. Also know as non-print zone.
<b>Segment line type</b>	A line type with a starting point and an end point.
<b>Start/stop character</b>	Distinct characters used at the beginning and end of each bar code symbol that provides initial timing references and indicates the direction of scanning.
<b>Variable length bar code</b>	A bar code of variable character length: I2 of 5, Code 39, Codabar, Code 128, MSI, PostNet, and Code 93.
<b>Vector line type</b>	A line type with a starting point, angle, and length of line.
<b>Vertical bar code or text</b>	Data that is rotated and prints down the length of a label.
<b>Void</b>	Light area on a label in a bar code or text.

## Label Sizes

---

The printer allows you to print the following label sizes.

Supported Supply Widths:	Supported Supply Lengths:
1.20 Inches	.55 inches
1.50 Inches	.785 inches
2.00 Inches	1.1 inches
	1.5 inches
	2.0 inches
	3.0 inches
	4.0 inches

**NOTE:** Most of the sample formats in this manual use 2” X 2” labels unless indicated otherwise.

Call **1-800-543-6650** for more information about the various label sizes and label types available with this printer.

## How this Manual is Organized

---

<b>Chapter 1</b>	Introduction	Provides an overview of the printer and terms to know.
<b>Chapter 2</b>	Getting Started	Provides a checklist to get you started, keypad tips, and a sample format.
<b>Chapter 3</b>	Configuring the Printer	Tells you how set defaults for your printer and select print methods.
<b>Chapter 4</b>	Designing a Format	Provides instructions on how to determine the kind of data you want on a label and where to place the data.
<b>Chapter 5</b>	Defining Text Fields	Tells you how to design a text field.
<b>Chapter 6</b>	Defining Bar Code Fields	Tells you how to design a bar code field.
<b>Chapter 7</b>	Defining Constant Text Fields	Tells you how to design a constant text field.
<b>Chapter 8</b>	Defining Line Fields	Tells you how to design lines and borders.
<b>Chapter 9</b>	Defining Special Fields	Tells you how to design time, date, and price fields.
<b>Chapter 10</b>	Applying Data Edits	Tells you how to pad data, extract data, and insert it into another field.
<b>Chapter 11</b>	Editing a Format	Tells you how to change a format.
<b>Chapter 12</b>	Troubleshooting	Provides solutions to the most common errors and provides a list of all error codes.
<b>Appendix A</b>	Sample Formats	Provides sample formats of various applications.
<b>Appendix B</b>	Using Fonts	Provides information about fonts.

# GETTING STARTED

# 2

This chapter tells you how to start using the printer and provides a sample format to show you how easy it is to create your labels.

**NOTE:** Before you begin, read the Equipment Manual that came with your printer.

Use this checklist when creating a format.


- ✓ Load labels into the printer.
- ✓ Charge the battery handle.
- ✓ Configure the printer. Refer to Chapter 3, “Configuring the Printer.”
- ✓ Create a format, which is the layout of your data on a label. Refer to Chapter 4, “Designing a Format.”
- ✓ Print and test your label.
- ✓ Prepare an Operator Data Entry form for the Operator. Refer to “Using the Operator Data Entry Form” at the end of this chapter.

## Using the Keypad and the Display

---









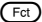
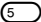
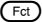
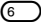
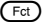
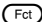
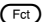
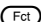
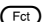
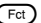

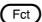
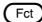
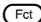
Your printer has an 8-line display and a 48-key keypad. This section provides tips on

- ◆ Navigating through the screens on the display
- ◆ Using the most commonly used keys.

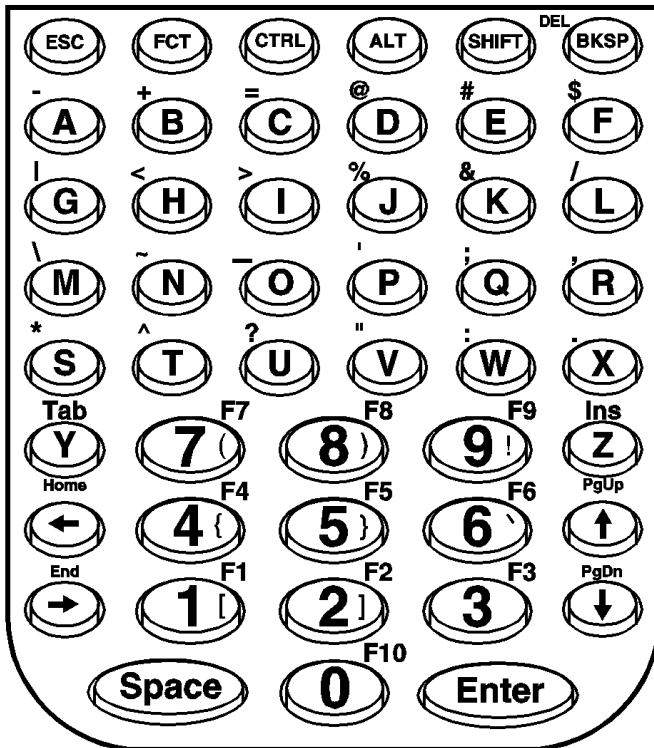

## Using the Function Keys

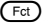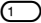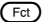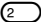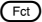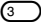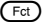







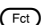

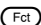

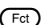
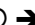
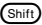
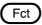
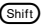
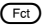
The key combinations on the list below make scrolling and navigating easier.

Key Combination	Description
 	Turns the backlight on the display on or off.
 	Sets the print method.
 	Select the currency symbol.
 	Battery Level Status
 	Exit
 	Set the supply type.
 <Home>	Takes you to the beginning of a list. <b>NOTE:</b> If you have 11 formats, pressing  <Home> takes you to format 1.
 <End>	Takes you to the end of a list. <b>NOTE:</b> If you have 11 formats, pressing  <End> takes you to format 11.
 <PgUp>	Takes you to the beginning of a list on the display. Pressing  <PgUp> again moves one full screen length up. <b>NOTE:</b> If you see options 3 through 10 on the display, pressing  <PgUp> takes you to option 3.
 <PgDn>	Takes you to the end of a list on the display. Pressing  <PgDn> again moves one full screen length down. <b>NOTE:</b> If you see options 3 through 10 on the display, pressing  <PgDn> takes you to option 10.

**NOTE:** See the Equipment Manual for information about using special characters.

## Using the Most Common Keys

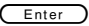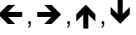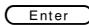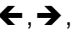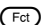


The keys listed below are the most commonly used.

Key	Description
	Returns you to the previous screen.
	Moves the cursor the left and deletes the character on the left.
	Accepts your selection.
	Scrolls left, right, up, or down through the options on the display. When your selection is highlighted, press  .
    	Left and right move the cursor inside an entry. When inside an entry,   moves the cursor to the extreme left (beginning of data) and   moves the cursor to the extreme right (end of data).
	Toggles between upper case and lower case/numeric.
 	Enters Caps lock.
 Ins	Toggles between overwrite mode and normal mode. In overwrite mode, when you type, it replaces characters.

**NOTE:** See the Equipment Manual for more information.

## Reading the Display

The icons listed below tell you what data entry mode you are in.

If you see	You are in
<b>F</b>	Function Key Mode.
	Upper-case Alpha Mode.
<b>X</b>	Delete Mode. Pressing  deletes the current character.
	Caps Lock Mode.

**NOTE:** See the Equipment Manual for more information.




## Entering a Sample Format

---

Turn on the printer. You will see the Main Menu.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format


Enter Format Name  
> -----  


Enter Length of  
supply (55 – 400)  
(eg. 400 = 4 inches)  
> \_ \_ \_

Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches

Select Type: Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Complex (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > \_  


Enter Max. Length  
> \_ \_ \_

1. Press  to design your formats.
2. Press  to create a new format.
3. Type **SIZE**. Press .
4. Type **200** for a 2-inch long label. Press .
5. Press  for the supply width.
6. Press  to define a text field.
7. Press  to define a simple field.
8. Press **A** (alpha-numeric).
9. Type **10** as the maximum number of characters in the field. Press .

Enter Min. Length

> \_ \_ \_ \_

**10.** Type **1** as the minimum number of characters in the field. Press  .

Enter Field Prompt

> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



**11.** Type **ENTER SIZE**. Press  .

Enter Fixed Data  
Press ENTER if none

> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



**12.** Type **/TL** for the fixed data. Press  .

Add fixed data  
Before or After  
entry chars? B/A

> \_



**13.** Press **A** to print the fixed data after the entry characters.

Enter Row #

> \_ \_ \_ \_

**14.** Type **100** for the row location. Press  .

Enter Col. #

> \_ \_ \_ \_

**15.** Type **10** for the column location. Press  .

- = Select Font = -

1. CG Trium 6.5 1000
2. CG Trium 8 pt 1001
3. CG Trium 10p 1002
4. CG Trium 12p 1003
5. CG Trium 18 p 1004
6. CG Trium 22p 1005
7. CG TrCon 6.5 1006

8. CG TrCon 8 pt 1007
9. CG TrCon 10p 1008
10. CG TrCon 12p 1009
11. CG TrCon 18p 1010
12. CG TrCon 22p 1011
13. LetGoth 6.5 1012
14. LetGoth 9pt 1013

**16.** Select **CG Trium 8 pt 1001**. Press  .

Enter Height Mag for  
this font (1-7) > \_

**17.** Press  for the height magnification.

Enter Width Mag for  
this font (1-7) > \_

**18.** Press  for the width magnification.

Set Justification

1. Left (L)
2. Right (E)
3. Center (B)

**19.** Press  for the alignment of characters in the field.

Top of Field at:

1. Top of Supply
2. Left of Supply
3. Bottom of Supply
4. Right of Supply

**20.** Press  for the field rotation.

Select Edit #1

1. None
2. Make into Price
3. Pad Data Field
4. Extract Chars
5. Strip Chars
6. Extract from Mid
7. Insert Chars

8. Make Shoe Size

**21.** Press  for no data edits. See Chapter 10, “Applying Data Edits,” for more information.

Select Type:Fld#2

1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished

**22.** Press .

Save current  
format? Y/N > \_

**23.** Press **Y** to save the format. You return to the Design Menu.

## Printing the Sample Format

---

After designing your format, print it to see how it looks.

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```

```
- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration
```

```
Select Format  
to Print
```

```
- = Format Menu - =  
01 SIZE
```

```
ENTER SIZE  
-----
```

```
Printed: 1
```

1. Press **Esc** to exit the Design Menu.
2. Press **2** to print your format.
3. Select **SIZE** and press **Enter**.
4. Type **XLarge**. Press **Enter**. The label prints.
5. Press the trigger to print another label or press **Esc** to return to the prompt and print a different label.



**XLarge/TL**

## Using the Operator Data Entry Form

---

After you create a format, fill out the operator data entry form. This form can be used as an instruction sheet for your operators to follow while they print labels. Record the data entry prompts that the operator will see when using the printer.

Follow these steps to record the data entry procedures.

- 1. Format Name**                      Enter the Format Name in the upper right corner of the form.
- 2. Supply Type**                      Enter information about the supply type the Operator must use.
- 3. Supply Size**                      Enter the supply size to use.
- 4. Purpose**                            Enter the purpose of the label on the next line. For example, you can write standard label or 25% markdowns.
- 5. Print Sample**                      Apply a sample of the label.
- 6. Prompt**                             Enter the first data entry prompt in the empty box at left.
- 7. Response**                          Enter the response for the prompt. Continue entering prompts and responses until you reach the end of the format.
- 8. Special Instructions**            In the "Special Instructions" section at the bottom of the form, record any special instructions to the Operator. For example, you can tell them to load the labels for peel mode.

Blank forms are provided at the end of the chapter for you to copy.

# Sample Operator Data Entry Form

## Operator Data Entry

Format Name: 25 % Markdown

Print Sample

Supply Type: Red fluorescent

Supply Size: 2 x2

Purpose: \_\_\_\_\_

To reduce merchandise by 25 %.



### Prompt

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

### Response

Press 2 to print your format.

- = Format Menu = -  
1. 1 for 3 Pricing  
2. 25% Markdown  
3. Re-ticket

Select 25 % Markdown.

Press Enter.

SCAN BAR CODE  
\_\_\_\_\_

Scan the bar code on the label you want to markdown.

Printed: 1  
\_\_\_\_\_

Press Enter or the trigger to print another label or press Esc to scan another bar code.

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

### Special Instructions:

# Operator Data Entry Form Page 1

## Operator Data Entry

**Format Name:** \_\_\_\_\_ **Print Sample**

**Supply Type:** \_\_\_\_\_

**Supply Size:** \_\_\_\_\_

**Purpose:** \_\_\_\_\_

\_\_\_\_\_

### Prompt

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Format Menu = -  
1.

### Response

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**Special Instructions:**

## Operator Data Entry Form Page 2

Prompt	Response
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>
	<hr/> <hr/> <hr/>



# CONFIGURING THE PRINTER

# 3

The printer's configuration sets both hardware and software options. For example, you can set defaults for the printer to use during format design and printing. This chapter describes the configurable options.

To get started, go to the Main Menu. When you see:

```
--Main Menu--  
1. Design Formats  
2. Print Labels  
3. Configuration
```

```
-Config. Main Menu-  
1.General Options  
2.Fmt Header Optns  
3.Fmt Text Options  
4.Fmt Barcode Optns
```

1. Press . The Configuration Main Menu.

2. Select the option you want to configure.

Selections on the Configuration Main Menu are:

## General Options

Sets up the printer's backlight, print method, date, time, scan lengths for I2 of 5 bar codes, currency symbol, and supply type. It also deletes formats and turns off warning messages.

## Format Header Options


Sets up how you can identify the format you are printing or editing.

## Format Text Options

Sets up the default settings for text fields during Format Design.

## Format Barcode Options

Sets up the default settings for bar code fields during Format Design.

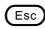**NOTE:** When you finish configuring the printer, press  until you return to the Main Menu.

## General Options

---

To set miscellaneous options, go to the General Options Menu. When you see:

-=General Options=-  
1. Toggle Backlight  
2. Set Print Method  
3. Set Date  
4. Set Time  
5. Set I2of5 ScanLen  
6. Reset/Clear Fmts  
7. Select Currency

Select an option (1-9).

8. Set Supply Type  
9. Suppress Warnings

### Toggle Backlight

Turn the backlight on or off. The General Options Menu remains on the screen.

## Set Print Method

Select Print Method  
Auto Print 1 Label  
Print Strips  
Print Loop – Trigger  
On-Demand Printing  
On-Demand w/Limit  
Full Auto

Scroll to select a print method (described below) and press . The General Options Menu appears. **Default:** Print Loop - Trigger.

### Auto Print 1 Label

Prints one label.

### Print Strips

Prints a strip of labels, prompting the operator for a quantity.

### Print Loop – Trigger

Prints one label at a time, printing another at the press of any key or the trigger. Press  to end.

### On-Demand Printing

**Peel Mode Only.** Prints labels one at a time, continuing only after you remove the previous one. Press  to end.

### On-Demand w/Limit

**Peel Mode Only.** Prints labels one at a time, continuing only after you remove the previous one. The software prompts the operator for a quantity.

### Full Auto

Prints a strip of labels at one time. Press  to end.

## Set Date

Current date is Thu  
2-08-2001  
Enter new date (mm-d  
d-yy):

Enter the date (with a four-digit year), and press . If the date is correct, press . The General Options Menu appears.

## Set Time

Current time is 03:0  
0:34.65p  
Enter new time:

Enter the time (including a colon to separate the hour and minute). To indicate a.m. or p.m., include an **a** or **p** at the end. For example, 5:00p. 24-hour mode also works. When finished, press . If the time is already correct, press . The General Options Menu appears.

## Set I2 of 5 Scan Lengths

I2 of 5 bar codes are used in industrial environments and contain only numeric data. This menu option specifies the two valid data lengths (number of digits) when you scan this bar code. See Chapter 6, “Defining Bar Code Fields,” for more information about I2 of 5 bar codes.

Enter I2of5 Scan  
Length #1 >\_ \_

1. Enter the first length and press .

Enter I2of5 Scan  
Length #2 >\_ \_

2. Enter the second length and press . The General Options Menu appears.

**NOTE:** Both lengths must be an even number.

## Reset/Clear Formats

Delete All Formats?  
Are you sure? Y/N

Press **Y** to delete all formats in the printer. Press **N** to keep the formats. The General Options Menu appears.

**CAUTION:** You cannot undo a deletion.

## Select Currency

-Select Currency-  
US Dollars  
French Francs  
Spanish Pesetas  
Belgian Francs  
German Marks  
British Pounds  
Euro

Scroll to select the currency symbol to use with price fields and press . The General Options Menu appears. **Default:** US Dollars.

Swedish Krona  
Danish Marks  
Austrian Schilling  
Japanese Yen

## Set Supply Type

Select Supply Type  
1. Paper Label/Tag  
2. Fax Paper  
3. Synthetic Label

Select the type of supplies (1-3) you are using. The General Options Menu appears. **Default:** Paper Label/Tag.

## Suppress Warnings

Suppress Warnings:  
**Disabled**  
Change? Y/N:

Specify whether to display warning messages. **Default:** Disabled.

Press **Y** to enable or disable the option. Then, press  to return to the General Options Menu.

Setting	Description
Enabled	Warning messages will not appear on the display.
Disabled	Warnings messages will appear on the display. This value is the default.

Press **N** to cancel and return to the General Options Menu.

See Chapter 4, “Designing a Format,” to learn about a case where you might want to suppress warnings.

## Format Header Options


Format Header Options allow operators to select the format label they want to print and allow you to edit a format you have created. When you see:

Format Header Optns  
1. Generate MPCL Num  
2. Generate Fmt Name  
3. Skip Desc. Prompt

Press  to select Generate Fmt Name.

**NOTE:** Generate MPCL Num and Skip Desc. Prompt are for future use.

## Generate Fmt Name

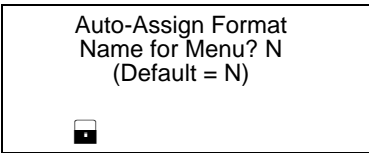


Press **Y** for the software to automatically assign format names, or press **N** to prompt the operator for a name. The Format Header Options Menu appears. **Default:** N.

When you assign a name, we recommend that you use a meaningful name that the operator can easily identify, such as “20% Sale.”

## Format Text Options

---


To set options for text fields, you must go to the Format Text Options Menu. When you see:

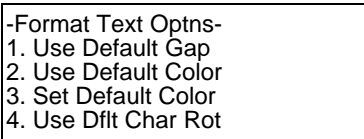

Select an option (**1-4**).

**NOTE:** See Chapter 5, “Defining Text Fields”, for more information on these options.


## Use Default Gap

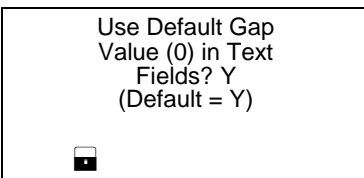

The gap is the number of dots (basic units of print) between characters. Press **Y** to use the default gap value of 0 in the formats, or press **N** to prompt the operator for a value. The Format Text Options Menu appears. **Default:** Y.

## Use Default Color

Use Default Color  
(0) in Text  
Fields? Y  
(Default = Y)



Press **Y** to use the default color for text fields, or press **N** to prompt the operator for a value. The Format Text Options Menu appears. **Default:** Y.

**NOTE:** You set the default color with the next menu selection—Set Default Color.


## Set Default Color

Sel. Default Color  
1. Black –Opaque  
2. White –Opaque  
3. Black –Transpar.  
4. White –Transpar.

Select the color (**1-4**) to you want to use. The Format Text Options Menu appears. For more information about font colors, see Chapter 5, “Defining Text Fields.” **Default:** Black -Transpar.

## Use Default Character Rotation

Use Default Char.  
Rotation (0) in  
Text Fields? Y  
(Default = Y)



Press **Y** to use the default character rotation (0) in text fields, or press **N** to prompt the operator for a value. The Format Text Options Menu appears. For more information about character rotation, see Chapter 5, “Defining Text Fields.” **Default:** Y.

## Format Bar Code Options

---

To set options for bar code fields, go to the Format Bar Code Options Menu. When you see:

-Fmt Barcode Optns-  
1. Use Dflt UPC Appr  
2. Set Dflt UPC Appr  
3. Use Default Align

Select an option (1-3).

**NOTE:** See Chapter 6, “Defining Bar Code Fields”, for more information on these options.

### Use Default UPC Appearance

Use Default  
Appearance (8) for  
UPC/EAN Barcodes? Y  
(Default = Y)



Press **Y** to use the default bar code appearance in UPC and EAN bar code fields (others use non-human readable only), or press **N** to prompt the operator during field definition. The Format Bar Code Options Menu appears. **Default:** Y.

**NOTE:** You set the default appearance with the next menu selection—Set Default UPC Appearance.

### Set Default UPC Appearance

Sel Dflt Appearance  
1. No C/D or Num Sys  
2. Number Sys. Only  
3. Check Digit Only  
4. Chk Dig & Num Sys  
5. No Human Readable

Select a bar code appearance for UPC and EAN bar code fields. The Format Bar Code Options Menu appears. See Chapter 6, “Defining Bar Code Fields,” for more information about bar code appearances. **Default:** No Human Readable.

### Use Default Alignment

Use Default  
Alignment (L) in  
Barcode Fields? Y  
(Default = Y)



Press **Y** to use the default alignment (L = left justification) in bar code fields, or press **N** to prompt the operator for the justification. The Format Bar Code Options Menu appears. **Default:** Y.



# DESIGNING A FORMAT

# 4

This chapter describes how to

- ◆ determine what kind of information to use in your format.
- ◆ draw a rough sketch of your label or tag using the Supply Layout Grid before you create the format.
- ◆ categorize data into field types (text, bar code, price, etc.).
- ◆ select fonts to use in your format.

## Design Overview

---

Before you create a format, you must design your label.

1. Decide which fields should appear on your label. See "Determining Format Contents" for more information.
2. Determine your label size. Labels are available from Monarch in a wide variety of sizes. Your application and the amount of data you need to print determines the supply size. Contact Monarch Marking for more information.
3. Draw a rough sketch of your label. You may want to draw several variations to see what works best. See "Drawing Rough Sketches" for more information.
4. Identify the field types that appear on your label. See "Considering Field Types" for more information.
5. Decide which fonts you want to use. See "Considering Fonts" for more information.

## Determining Format Data

---

Before you lay out your format, you need to make a few decisions. What data do you want to print on your label? For example:

- ◆ How large is your supply?
- ◆ Which fonts do you want to use?
- ◆ Do you want to include a bar code?

## Determining the Print Area

The print area varies, depending on the size of your supply. Below are the maximum and minimum print areas. Notice that the top edge of the supply exits the printer first.

Unit of Measure	Maximum Supply Size	Maximum Print Area	Minimum Supply Size	Minimum Print Area
English (1/100")	200 x 400	183 x 365	120 x 55	109 x 46

**NOTE:** You receive a “field off tag” error if you try to place a field in the quiet zone (non-printable area).

**Supported Supply Lengths:** .55 inches, .785 inches, 1.1 inches, 1.5 inches, 2.0 inches, 3.0 inches, and 4.0 inches


**Supported Supply Widths:** 1.20 inches, 1.50 inches, and 2.0 inches

## Drawing Rough Sketches

As you sketch your design, you should:

- ◆ Identify the items you want on the label, such as a price and bar code.
- ◆ Select a label size.
- ◆ Determine the direction of printing.
- ◆ Place items on the label roughly where you would like them to appear in the finished design.
- ◆ Mark any areas that are preprinted on the label, such as a logo.

As soon as you know what information to include on the label, and you have a rough sketch, you can use a supply layout grid to help you layout and size your label.

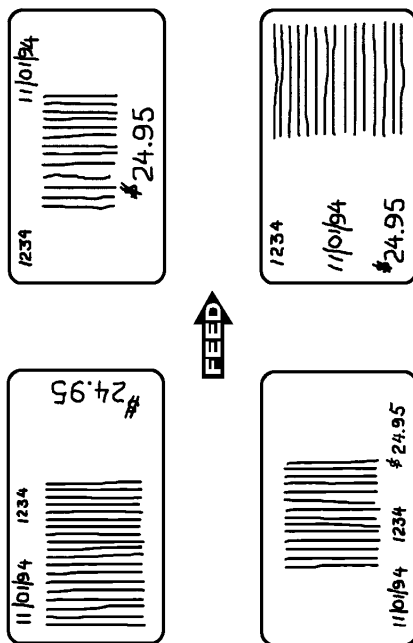


## Using Supply Layout Grids

---

A supply layout grid contains measurement markers. These markers help you accurately position information on your label.

If you want to use supply layout grids, a copy is shown on this page. Make copies of this page for each of your formats.

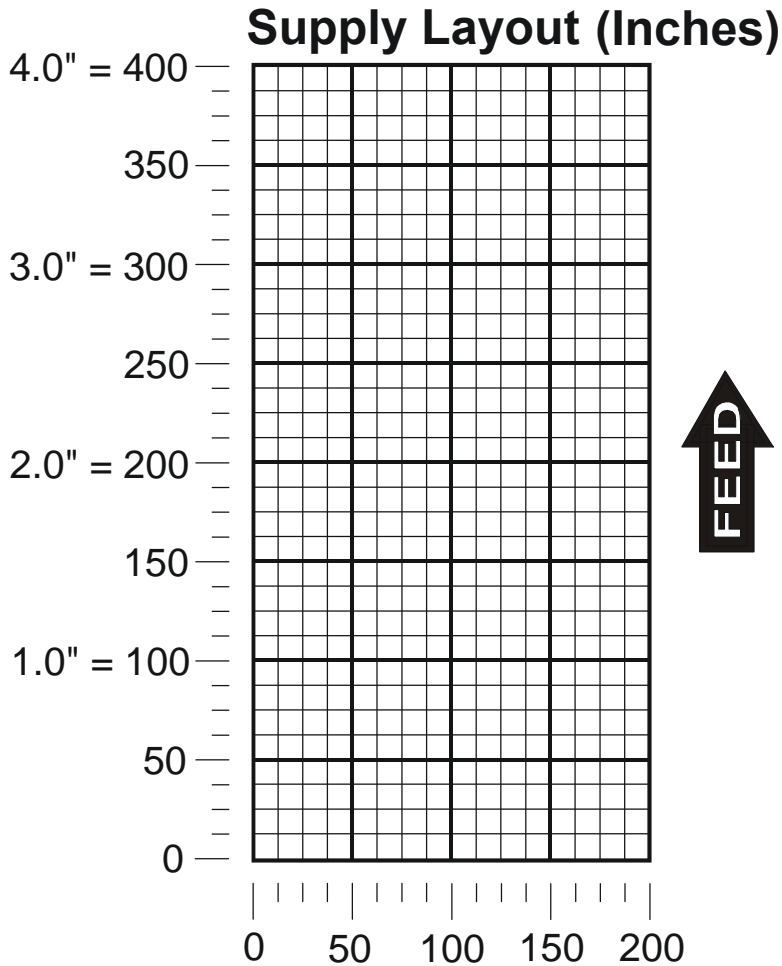

## Considering Field Types

---

After you select a supply size, the next step in designing a format is to decide what information you want to print on the label. For example, you may want to print your company name, price of an item, and a bar code that combines information from other places. Everything you want to print falls into one of the following categories.

Field Type	Field Class	Description	Examples
Text	Simple Price Date/Time Combo	Contains letters, numbers, or symbols you want to print.	Item number, item description, department number, price, date
Bar Code	Simple Price Date/Time Combo	Used for printing bar codes that can be scanned.	Item or serial numbers, zip codes, information you do not want to have visible to customers
Constant Text	N/A	Prints fixed characters that print without changing.	Company name or company address
Line	N/A	Highlights or separates items.	Line marking out the regular price

For each field type, keep the following in mind:

**Maximum field length** The maximum number of characters in the field. The number of characters depends on the font size, label size, whether you are using a check digit, or if the field is printed horizontally or vertically. If your data is a price, remember to include the currency symbol (dollar sign, Franc, etc.) in the length of your field. See Chapter 3, “Configuring the Printer” for more information about setting a currency symbol. The range is **0 – 40**.

<b>Font and Font Size</b>	<p>When working with fonts, you have three considerations:</p> <ul style="list-style-type: none"><li>◆ font appearance</li><li>◆ font size</li><li>◆ font spacing (monospaced or proportional)</li></ul> <p>See Appendix B, "Using Fonts," for more information.</p>
<b>Rotation</b>	<p>The rotation of your field or individual characters. Fields and characters can be rotated 0, 90, 180, or 270 degrees.</p>
<b>Row</b>	<p>The horizontal line where printing begins. The number of rows available depends on the label size you use. You can begin a field at any row. However, towards the top and bottom of the label, you must make sure there are enough rows to print the font size or bar code selected.</p>
<b>Column</b>	<p>The vertical line where printing begins. You can begin a field at any column. However, on the edges of the label, you must make sure there are enough columns to print all the characters in a field. Bar codes require a "quiet zone" (non-printing zone) on each side of the bars for scanning. The quiet zone is .10 inches per side. For more information about bar codes, see Chapter 6, "Defining Bar Code Fields."</p>

**NOTE:** All samples shown in the "Defining Fields" chapters are created using 2.0-inch long by 2.0-inch wide supplies.


# Starting the Design Process

---

Turn on the printer. You will see the Main Menu.

```
- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration
```

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```

```
Enter Format Name  
> -----  

```

```
Enter Length of  
supply (55 – 400)  
(eg. 400 = 4 inches)  
> ----
```

```
Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches
```

```
Select Type: Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished
```

```
Save current  
format? Y/N > _
```

1. From the Main Menu, press **1** to design your formats.
2. Press **1** to create a new format.
3. Type **UPCA** for the format name. Press **Enter**.
4. Type **200**. Press **Enter**.
5. Press **3** for your supply width.
6. Select a field type (**1-5**) for field 1.
  - ◆ To define text fields, see Chapter 5, “Defining Text Fields.”
  - ◆ To define bar code fields, see Chapter 6, “Defining Bar Code Fields.”
  - ◆ To define constant text fields, see Chapter 7, “Defining Constant Text Fields.”
  - ◆ To define line fields, see Chapter 8, “Defining Line Fields.”
  - ◆ Select **5** when finished designing your format (after all fields are defined).
7. Press **Y** to save the format or press **N** to exit without saving the format. You return to the Design Menu.

## Placing Fields on a Format

---

You must be careful where you place a field on a format to ensure it does not go off the format. There are two ways this can occur. You have placed the field

- ◆ on the format, but based on its maximum length, it may go off the edge.

This way causes the software to display a warning, which you can ignore. See Chapter 3, “Configuring the Printer,” to learn how to suppress the display of warnings if you prefer to do so.

- ◆ completely off the format.

This way causes an error. You must redefine the field.

**NOTE:** Remember that the field can go off the format on any of the four sides (top, bottom, left, right).

See Chapter 12, “Troubleshooting,” to learn about this error and warning.





Create a separate definition for each text field. There are two types of text fields:

**Simple**                      Contains data entered specifically for that field.

**Combo  
(combination)**              Contains data pulled from up to 10 other fields.

**NOTE:** If text falls on two lines, each line of text requires a separate definition.

All samples shown in this chapter are created using 2.0-inch long by 2.0-inch wide supplies.

## About Text Fields

---

Read the following information to become familiar with the prompts for text fields. Valid ranges for the prompts are listed as well as information about using text fields.

**Format Name**              Depending on your printer's configuration, enter a name for the format. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." The maximum number of characters for the format name is 16.

**Format Number**            Reserved for future use. (Depending on your printer's configuration, enter a number for the format. The format number range is **1 – 99**.)


**Format  
Description**                Reserved for future use. (Depending on your printer's configuration, enter a description for the format.)

**Supply Length**            The length of your loaded supply. Measure from the top of one black mark to the top of the next black mark. The standard supply lengths are: **55, 78, 110, 150, 200, 300, or 400** inches.

<b>Supply Width</b>	The width of your loaded supply. Choices include 1.20, 1.50, or 2.00 inches.
<b>Field Type</b>	Choices include text, bar code, constant text, and line.
<b>Field Class</b>	Choices include simple, price, system date/time, and combo. Price and system date/time fields are explained in Chapter 9, “Defining Special Fields.” Combo (combination) fields are explained later in this chapter. Simple fields are the most commonly used.
<b>Type of Data</b>	Choices include alphanumeric and numeric. Decide if you need letters or letters and numbers in your field. When selecting a font for your data, keep in mind that point sizes greater than 12 include only the following characters: <b>0123456789#\$\$%&amp;(),./@DFKLMPS\kpröç£¥€</b>
<b>Maximum Length</b>	The maximum number of characters in the field. The number of characters depends on the font size, label size, whether you are using a check digit, or if the field is printed horizontally or vertically. If your data is a price, remember to include the currency symbol (dollar sign, cent sign, etc.) in the length of your field. The range is <b>0 – 40</b> .
<b>Minimum Length</b>	The minimum number of characters in the field. The range is <b>0 – 40</b> .
<b>Field Prompt</b>	Contains the prompt displayed during data entry. The maximum number of characters is <b>40</b> .
<b>Fixed Data</b>	In situations where the same data appears on all labels, you can enter the repetitive data as fixed data. The operator does not enter the data. The maximum number of characters is 40; however, each field has a maximum length defined, so the fixed data must be below that maximum.  Fixed data is stored with the format and automatically displayed with the prompt during data entry. Fixed data can also be added <b>before</b> or <b>after</b> entry characters.  An example of fixed data is the manufacturer’s code in a UPCA bar code.


**Row**

The horizontal line where printing begins. For monospaced fonts, distance from the bottom of print area to the pivot point. The pivot point varies depending on how text is justified.

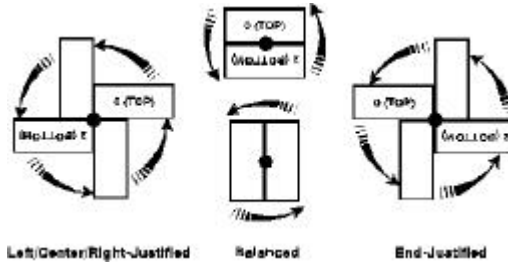

For proportionally spaced fonts, distance from the bottom of print area to baseline of characters in field. The range is **0 – 365**.


**Baseline**

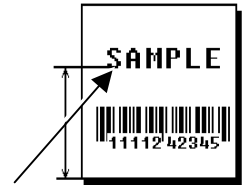

**Column**

The vertical line where printing begins. Type the column position for the field. The distance from the left edge of the print area to the pivot point is the column location. The range is **0 – 183**.

**Baseline**

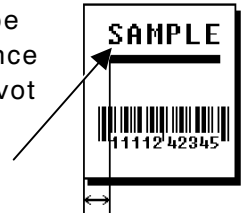

**Gap**

Depending on your printer’s configuration, enter the number of dots between characters. For more information about your printer’s configuration, see Chapter 3, “Configuring the Printer.”

The gap range is **0 – 9**. For mono-spaced fonts, the additional spacing is added to the existing inter-character gap. This is also true for proportionally spaced fonts, but the inter-character gap varies with character combinations. Any number other than 0 affects your field width. Default spacing:  
Letter Gothic Bold 6pt 1 dot  
Letter Gothic Bold 9pt 2 dots  
All other fonts vary with each letter  
Use the default unless you want to create a special effect, such as P R I C E (additional character spacing) in a field.

## Font

The style of font for your format. Choices include CG Triumvirate Bold 6.5, 8, 10, 12, 18, or 22 point; CG Triumvirate Bold Condensed 6.5, 8, 10, 12, 18, and 22 point; and Letter Gothic 6.5 and 9 point.

## Height Magnification


Height magnifier for the selected font. Use a magnifier of 1 with proportionally spaced fonts, because characters lose smoothness at higher magnifications. The range is **1 – 7**.

## Width Magnification

Width magnifier for the selected font. Proportionally spaced fonts do not have a set width. The range is **1 – 7**.


## Font Color

Depending on your printer's configuration, enter the color of the selected font. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."

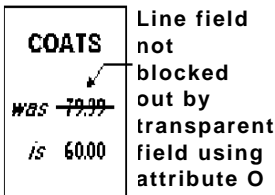

Solid black print should not exceed 30% on a given square inch of the label, or printhead life may be decreased. There are two types of field color overlay attributes:

**Transparent** The overlay field (text or constant text) does not block out or "erase" existing fields.

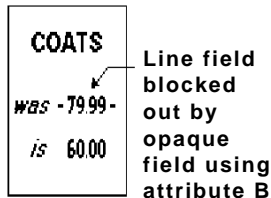

**Opaque** The overlay field blocks out or "erases" existing fields.

Field placement is an important consideration when using field color attributes. If a line field is defined before the overlay (text or constant text) field, the line field is blocked out by the overlay field, depending on the overlay field's color attribute. If a line field is defined after the overlay field, the line field is not blocked out by the overlay field, regardless of the overlay field's color attribute.

Choices include Black Opaque, White Opaque, Black Transparent and White Transparent.


## Justification

Alignment of the text within the field. Choices include Left (L), Right (E), and Center (B). Fonts 1012 and 1013 (Letter Gothic 6.5 and 9 pt) default to L (left), regardless of selection.

## Character Rotation


Depending on your printer's configuration, enter the character rotation of the selected field. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." Choices include Top of Field, Left of Field, Bottom of Field, and Right of Field.

The field or supply does not rotate, only the characters do. See "ABCD" in the example below.

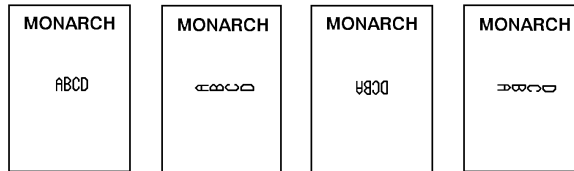

## Field Rotation

Rotation of the selected field. Choices include: Top of Supply, Left of Supply, Bottom of Supply, and Right of Supply.

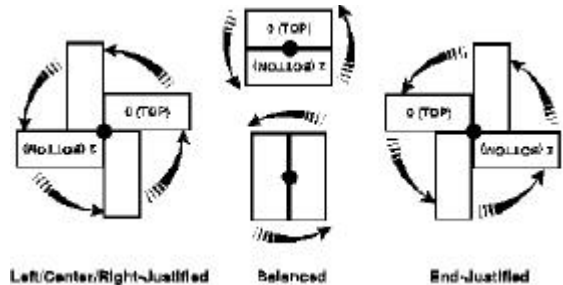

## Data Edits


Data edits are used on text and bar code (simple and combo) fields only. For more information about data edits, see Chapter 10, "Applying Data Edits," for more information. Choices include: none, Make into Price, Pad Data Field, Extract Characters, Extract from Middle, Insert Characters, and Make Shoe Size.

Only two data edits are allowed per field. Shoe size and price edits are not allowed for bar code fields.

## Entering a Sample Text Field


We will create a sample format, **SIZE** (2.0-inch long by 2.0-inch wide) and a sample text field, **TEXT**.

**NOTE:** This sample uses the printer's factory-set defaults. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."

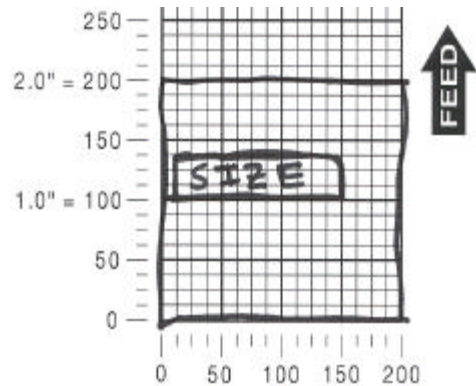

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Enter Format Name  
> -----  


Enter Length of supply (55 – 400)  
(eg. 400 = 4 inches)  
> ---

Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches

1. Press  to design your formats.
2. Press  to create a new format.
3. Type **SIZE** for the format name. Press .
4. Type **200** for the length of your supply. Press .
5. Press  for the supply width.



- = Select Font = -  
1. CG Trium 6.5 1000  
2. CG Trium 8 pt 1001  
3. CG Trium 10p 1002  
4. CG Trium 12p 1003  
5. CG Trium 18 p 1004  
6. CG Trium 22p 1005  
7. CG TrCon 6.5 1006

8. CG TrCon 8 pt 1007  
9. CG TrCon 10p 1008  
10. CG TrCon 12p 1009  
11. CG TrCon 18p 1010  
12. CG TrCon 22p 1011  
13. LetGoth 6.5 1012  
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > \_

Enter Width Mag for  
this font (1-7) > \_

Set Justification  
1. Left (L)  
2. Right (E)  
3. Center (B)

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
1. None  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

**16.** Select **CG Trium 8 pt 1001**. Press  .

**17.** Press  for the height magnification.

**18.** Press  for the width magnification.

**19.** Press  for the alignment of characters in the field.

**20.** Press  for the field rotation.

**21.** Press  for no data edits.



```
Select Type:Fld#2
1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished
```

22. Press **5** .

```
Save current
format? Y/N > _
```

23. Press **Y** to save the format. You return to the Design Menu.

- ◆ To print the format, see “Printing the Sample Text Format.”
- ◆ To define a combo (combination) text field, see “Using a Combo Text Field,” for more information.
- ◆ To define bar code fields, see Chapter 6, “Defining Bar Code Fields.”
- ◆ To define constant text fields, see Chapter 7, “Defining Constant Text Fields.”
- ◆ To define line fields, see Chapter 8, “Defining Line Fields.”

## Printing the Sample Text Format

---

After designing your format, print it to see how it looks.

```
- = Design Menu = -
1. Create New Format
2. Edit Old Format
3. Copy Format
4. Delete Format
```

1. Press **Esc** to exit the Design Menu.

```
- = Main Menu = -
1. Design Formats
2. Print Labels
3. Configuration
```

2. Press **2** to print your format.

```
Select Format
to Print
```

3. Select **SIZE** and press **Enter** .

```
- = Format Menu - =
01 SIZE
```


```
ENTER SIZE
-----
```

4. Type **XLarge**. Press **Enter** . The label prints.

Printed: 1

5. Press the trigger to print another label or press **(Esc)** to return to the prompt and print a different label.

This sample prints the following label.

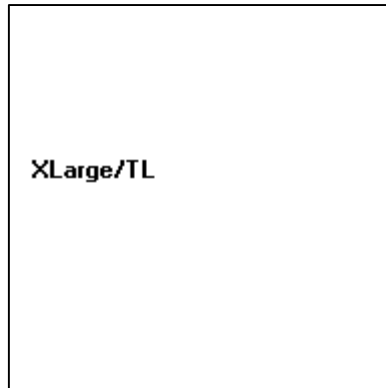

## Using a Combo Text Field

---

Combo (combination) fields pull data from other fields (text or bar code), eliminating the data from being entered by an operator more than once. These are also known as merged fields. Each combo field can pull data from up to 10 different fields. Combo fields have three parameters:

<b>Field Number</b>	Field number from which data is copied. For example, 3 is field #3.
<b>Starting Position</b>	Position number in the source field of the first character to be copied. Character positions are numbered <b>1</b> to <b>99</b> , starting from the left. For example, 1 is the character in the first position to be copied.
<b>Number of Digits to use</b>	Number of characters to copy. The range is <b>1</b> to <b>99</b> . For example, 3 copies three characters. In cases where the source field is shorter than the combo field, you have the option of filling (padding) data from the left or right or none. You are also prompted for the fill character.

**Fill Direction**


Specifies whether to fill a short source field from the left, right, or not fill the field. For example, if the source field only contains 5 characters, but the combo field contains 10, you can fill the field from the left or right with zeroes or another character.

**Fill Character**

Specifies which character to use for filling a field.

An example of using text fields to create a combo text field can be seen in multi-part tags. If you need a two-part identical tag, use combo text fields to mirror the data. The operator only has to answer the prompts one time for both tags.

Use combo fields to copy data from one part of tag to the other.

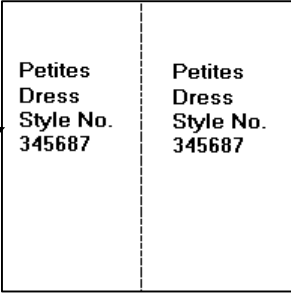

Petites Dress Style No. 345687	Petites Dress Style No. 345687
---	---

**NOTE:** When creating your combo field, remember that lines and constant text fields do not count as fields, even though they appear in the list as fields when editing a format.

For example, the constant text field, "Pretzels," does not count as field 01, the bar code field is field 01, if the fields were defined in this order: pretzels, bar code, combo field (for human readable), and price field.

**NOTE:** You will receive an error or unexpected data may print in the combo field if you use the wrong field number.



## Entering a Sample Combo Text Field

---


To use a combo field, you must already have created the field(s) you want to copy or use data from.

We will create a sample format **COMBO** (2.0-inch long by 2.0-inch wide) that includes a text field (**SIZE**), and then create a combo text field (**COPY**) that copies the data from **SIZE**.

**NOTE:** This sample uses the printer's factory-set defaults. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration







- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Enter Format Name  
> -----  


Enter Length of  
supply (55 – 400)  
(eg. 400 = 4 inches)  
> ---

Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches

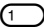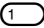Select Type: Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

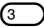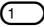1. Press  to design your formats.
2. Press  to create a new format.
3. Type **COMBO** for the format name. Press .
4. Type **200** for the length of your supply. Press .
5. Press  for the supply width.
6. Press  to define a text field.

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > \_



Enter Max. Length  
> \_ \_ \_

Enter Min. Length  
> \_ \_ \_

Enter Field Prompt  
> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



Enter Fixed Data  
Press ENTER if none  
> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



Enter Row #  
> \_ \_ \_

Enter Col. #  
> \_ \_ \_

7. Press  to define a simple field.
8. Press **A** (alpha-numeric).
9. Type **10** as the maximum number of characters in the field. Press .
10. Type **1** as the minimum number of characters in the field. Press .
11. Type **ENTER SIZE**. Press .
12. Press  for no fixed data.
13. Type **100** for the row location. Press .
14. Type **10** for the column location. Press .

- = Select Font = -  
1. CG Trium 6.5 1000  
2. CG Trium 8 pt 1001  
3. CG Trium 10p 1002  
4. CG Trium 12p 1003  
5. CG Trium 18 p 1004  
6. CG Trium 22p 1005  
7. CG TrCon 6.5 1006

8. CG TrCon 8 pt 1007  
9. CG TrCon 10p 1008  
10. CG TrCon 12p 1009  
11. CG TrCon 18p 1010  
12. CG TrCon 22p 1011  
13. LetGoth 6.5 1012  
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > \_

Enter Width Mag for  
this font (1-7) > \_

Set Justification  
1. Left (L)  
2. Right (E)  
3. Center (B)

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
1. None  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

Select Type:Fld#2  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

**15.** Select **CG Trium 8 pt 1001**. Press  .

**16.** Press  for the height magnification.

**17.** Press  for the width magnification.

**18.** Press  for the alignment of characters in the field.

**19.** Press  for the field rotation.

**20.** Press  for no data edits.

**21.** Press  to define your other text field.

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Enter Max. Length  
> \_ \_ \_ \_

Enter Min. Length  
> \_ \_ \_ \_

For Combo Fields  
Enter up to 10  
User Field sources.  
(Press key) \_

Enter Field#  
(First is Fld One)  
(ENTER when done)  
> \_ \_

Enter Start Position  
(First is One)  
> \_ \_ \_ \_

Enter # of Chars  
> \_ \_ \_ \_

Enter Field#  
(First is Fld One)  
(ENTER when done)  
> \_ \_

Enter Fill Direction  
for short  
Source Fields:  
1 Fill from Left  
2 Fill from Right  
3 Do not Fill

Enter Fill  
Character for  
source fields: \_

Enter Fixed Data  
Press ENTER if none  
> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



22. Press  to define a combo field.

23. Type **10** as the maximum number of characters in the field. Press .

24. Type **1** as the minimum number of characters in the field. Press .

25. Press any key to continue.

26. Type **1**. Press .

27. Type **1**. Press .

28. Type **6**. Press .

29. Press  to continue.

30. Press  to fill the field from the left.

31. Type a dash (-).

32. Press  for no fixed data.

Enter Row #

> \_ \_ \_ \_

33. Type **100** for the row location. Press  .

Enter Col. #

> \_ \_ \_ \_

34. Type **90** for the column location. Press  .

- = Select Font = -

1. CG Trium 6.5 1000
2. CG Trium 8 pt 1001
3. CG Trium 10p 1002
4. CG Trium 12p 1003
5. CG Trium 18 p 1004
6. CG Trium 22p 1005
7. CG TrCon 6.5 1006

35. Select **CG Trium 8 pt 1001**. Press  .

8. CG TrCon 8 pt 1007
9. CG TrCon 10p 1008
10. CG TrCon 12p 1009
11. CG TrCon 18p 1010
12. CG TrCon 22p 1011
13. LetGoth 6.5 1012
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > \_

36. Press  for the height magnification.

Enter Width Mag for  
this font (1-7) > \_

37. Press  for the width magnification.

Set Justification

1. Left (L)
2. Right (E)
3. Center (B)

38. Press  for the alignment of characters in the field.

Top of Field at:

1. Top of Supply
2. Left of Supply
3. Bottom of Supply
4. Right of Supply

39. Press  for the field rotation.

Select Edit #1

1. None
2. Make into Price
3. Pad Data Field
4. Extract Chars
5. Strip Chars
6. Extract from Mid
7. Insert Chars

40. Press  for no data edits.

8. Make Shoe Size



```
Select Type:Fld#3
1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished
```

41. Press .

```
Save current
format? Y/N > _
```

42. Press **Y** to save the format. You return to the Design Menu.

## Printing the Sample Combo Format

---

After designing your format, print it to see how it looks.

```
- = Design Menu = -
1. Create New Format
2. Edit Old Format
3. Copy Format
4. Delete Format
```

1. Press  to exit the Design Menu.

```
- = Main Menu = -
1. Design Formats
2. Print Labels
3. Configuration
```

2. Press  to print your format.

```
Select Format
to Print
```

3. Select **COMBO** and press .

```
- = Format Menu - =
01 COMBO
02 SIZE
```


```
ENTER SIZE
-----
```

4. Type **Small**. Press . The label prints.

```
Printed: 1
```

5. Press the trigger to print another label or press  to return to the prompt and print a different label.

This sample prints the following label.

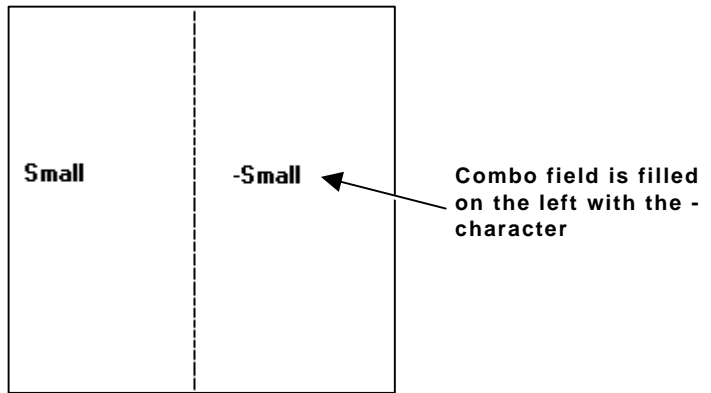

# DEFINING BAR CODE FIELDS

# 6

Create a separate definition for each bar code field. There are two types of bar code fields:

**Simple**                      Contains data entered specifically for that field.

**Combo  
(combination)**              Contains data pulled from up to 10 other fields.

See "Bar Code Specifications" for information about each bar code that can be used with these bar code field types.

## About Bar Code Fields

---

Read the following information to become familiar with the prompts for bar code fields. Ranges for the prompts are listed as well as more information about using bar code fields.

**Format Name**                      Depending on your printer's configuration, enter a name for the format. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." The maximum number of characters for the format name is 16.

**Format Number**                      Reserved for future use. (Depending on your printer's configuration, enter a number for the format. The format number range is **1 – 99**.)

**Format Description**                      Reserved for future use. (Depending on your printer's configuration, enter a description for the format.)

**Supply Width**                      The width of your loaded supply. Choices include 1.20 inches, 1.50 inches, and 2.00 inches.

**Field Type**                      Choices include: text, bar code, constant, and line.

**Bar Code Type** Choices include: UPC-A, UPC-E, Interleaved 2 of 5, Code 39 (with no check digit), Codabar, EAN-8, EAN-13, Code 128, MSI, UPC-A +2, UPC-A +5, UPC-E +2, UPC-E +5, EAN-8 +2, EAN-8 +5, EAN-13 +2, EAN-13 +5, Code 93, Code 39-Mod 43, UPC-A & Price CD, EAN-13 & Price CD, and I2 of 5 with Barrier Bar.

**Field Class** Choices include simple, price, system date/time, and combo. For bar codes, select either simple or combo. Combo (combination) fields are explained later in this chapter. Simple fields are the most commonly used.

**Field Prompt** Contains the prompt displayed during data entry. The maximum number of characters is 20.

**Using Fixed Data** In situations where the same data appears on all labels, you can enter the repetitive data as fixed data. The operator does not enter the data. The maximum number of characters is 40; however, each field has a maximum length defined, so the fixed data must be below that maximum.

Fixed data is stored with the format and automatically displayed with the prompt during data entry. Fixed data can also be added **before** or **after** entry characters.

An example of fixed data is the manufacturer's code in a UPC-A bar code.

## Row

Distance from the bottom of print area to the pivot point of the field. The pivot point varies, depending on how the field is justified. Pivot points:




### Left/Center/Right-Justified Fields



Balanced Fields

End-Justified Fields

Remember to include text or numbers that may appear with the bar code for the row measurement.

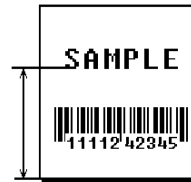

## Column

The vertical line where printing begins. Type the column position for the field. The distance from the left edge of the print area to the pivot point is the column location. The range is **0 – 183**.

Allow a minimum of **1/10** inch between the scan edge of bar code and label edges or other data.

## Density

The density of the bar code. The possible values vary by the bar code selected.

**Bar Height** Height of the bar code in 1/100 inches. For example, 100 = 1 inch. The value is dependent on the length of the label used. The minimum value is 1.

**Appearance** Depending on your printer's configuration, enter the appearance of the bar code (UPC and EAN family only). For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." See "Setting the Appearance" for information about the appearance choices.

**Justification** Depending on your printer's configuration, enter an alignment for the field. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." Choices include Left (L), Right (E), and Center (B).

**Field Rotation** Rotation of the selected field. Choices include: Top of Supply, Left of Supply, Bottom of Supply, and Right of Supply.



Left/Center/Right-Justified Fields



Balanced Fields

End-Justified Fields

**Data Edits**

Only two data edits are allowed per field. Data edits are used on text and bar code (simple and combo) fields only. For more information about data edits, see Chapter 10, "Applying Data Edits," for more information. Choices include: none, Make into Price, Pad Data Field, Extract Characters, Extract from Middle, Insert Characters, and Make Shoe Size.

**NOTE:** Make Shoe size and Make into Price are not allowed for bar code fields.

**Setting the Appearance**

**UPC and EAN bar codes only.** The appearance of the bar code is the combination of number system and/or check digits shown with the bar code. You are prompted for the appearance during format creation, unless the configuration specifies to use the default. The number system appears on the left and the check digit appears on the right.

**NOTE:** The appearance that prints does not change unless you redefine the field. You cannot change only the configuration and have the printing change.



Following are the appearance options.

**No C/D or Num Sys**



**Number Sys Only**



**Check Digit Only**



**Complete HR Text  
(human-readable)**



**No Human Readable**




## Setting the Density

The density is the amount of data per unit length in a bar code. Generally, you measure the density in characters per inch or as percentages of the nominal size. Density values vary by bar code. The following table lists these values.

Bar Code	Density Values
UPC and EAN	80% and 120%
Interleaved 2 of 5	1.0, 2.0, 3.0, 4.0, 5.3, 6.0, 7.1, 8.3, 9.1, 10.6, 12.0, and 13.7
Code 39 – no c/d	1.3, 1.7, 2.8, 3.3, 3.7, 4.0, 6.0, 6.6, and 12.0.
Codabar	2.0, 2.9, 4.3, 4.7, 7.7, 8.4, and 9.6
Code 128	3.5/7.0, 4.4/8.7, 5.8/11.7, and 8.7/17.5
MSI	4.0, 5.3, and 6.9
Code 93	3.6, 4.3, 5.3, 7.1, and 10.7
Code 39 – Mod43	1.3, 1.7, 2.8, 3.3, 3.7, 4.0, 6.0, 6.6, and 12.0
I2of5 – Barrier Bar	1.0, 2.0, 3.0, 4.0, 5.3, 6.0, 7.1, 8.3, 9.1, 10.6, 12.0 and 13.7

## Entering Simple Bar Code Fields

Follow the steps to create sample bar code fields.

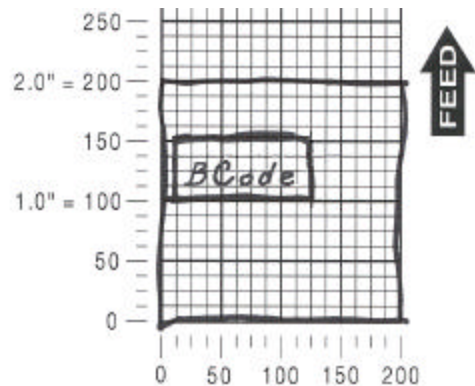




## Sample 1: Simple Fixed Bar Code

The following procedure creates a UPC-A bar code on a 2.0-inch long by 2.0-inch wide supply.

**NOTE:** This sample uses the printer's factory-set defaults. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."

```
--Main Menu--  
1. Design Formats  
2. Print Labels  
3. Configuration
```

```
--Design Menu--  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```




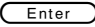
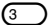
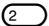
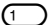
```
Enter Format Name  
>-----  

```

```
Enter Length of  
Supply (55-400)  
(eg.400 = 4 inches)  
>---
```

```
Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches
```

```
Select Type: Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished
```
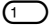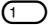
```
--Select Bar Code--  
1. UPC-A  
2. UPC-E  
3. Interleaved2of5  
4. Code 39 --no c/d  
5. Codabar  
6. EAN-8  
7. EAN-13
```

1. From the Main Menu, press .
2. Press  to create a new format.
3. Type **UPCA** for the format name. Press .
4. Type **200** for the length of your supply. Press .
5. Press  for the supply width.
6. Press  to define a bar code field.
7. Press  for UPC-A.

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Enter Field Prompt  
-----  
[ ]

Enter Fixed Data  
Press ENTER if none  
> -----  
[ ]

Enter Row #  
> \_ \_ \_

Enter Col. #  
> \_ \_ \_

Enter Density  
1. 80/ 2. 120  
> \_

Enter Bar Height  
(Units = Inch/100)  
> \_ \_ \_

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

8. Press  to define a simple field.

9. Type "SCAN UPC#." Press .

10. Press  for no fixed data.

11. Type **80** for the row location. Press .

12. Type **15** for the column location. Press .

13. Press  for the density (80%).

14. Type **40** for the bar code height (.4"). Press .

15. Type  for the field rotation.

16. Press  for no edits.

```
Select Type:Fld #2
1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished
```

17. Press **6** .

```
Save current
format? Y/N > _
```

18. Press **Y** to save the format. You return to the Design Menu.

- ◆ To print the format, see "Printing the Simple Fixed Bar Code Format"
- ◆ To define a combo (combination) bar code field, see "Entering a Sample Combo Bar Code Field" for more information.
- ◆ To define text fields, see Chapter 5, "Defining Text Fields."
- ◆ To define constant text fields, see Chapter 7, "Defining Constant Text Fields."
- ◆ To define line fields, see Chapter 8, "Defining Line Fields."

## Printing the Simple Fixed Bar Code Format

---

After designing your format, print it to see how it looks.

```
--Design Menu--
1.Create New Format
2.Edit Old Format
3.Copy Format
4.Delete Format
```

1. Press **Esc** to exit the Design Menu.

```
--Main Menu--
1. Design Formats
2. Print Labels
3. Configuration
```

2. Press **2** to print your format.

```
Select Format
to Print
```

3. Select **UPCA**. Press **Enter** .

```
--Format Menu--
01 UPCA
```


```
SCAN UPC#
-----
```

4. Type **028028796302**. Press **Enter** . The label prints.

Printed : 1

5. Press the trigger to print another label or press **Esc** to return to the prompt and print another label.

This sample prints the following label.

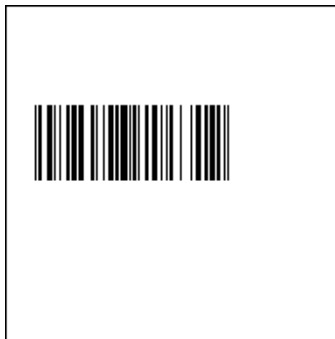


## Sample 2: Simple Variable Bar Code

The following procedure creates a Code 128 bar code on a 2.0-inch long by 2.0-inch wide supply.

**NOTE:** This sample uses the printer's factory-set defaults. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."

--Main Menu--  
1. Design Formats  
2. Print Labels  
3. Configuration

--Design Menu--  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Enter Format Name  
>-----  


Enter Length of  
Supply (55-400)  
(eg.400 = 4 inches)  
>---

1. From the Main Menu, press **1**.
2. Press **1** to create a new format.
3. Type **CODE128** for the format name. Press **Enter**.
4. Type **200** for the length of your supply. Press **Enter**.

Select Supply Width

1. 1.20 Inches
2. 1.50 Inches
3. 2.00 Inches

5. Press  for the supply width.

Select Type: Fld #1

1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished

6. Press  to define a bar code field.

--Select Bar Code--

1. UPC-A
2. UPC-E
3. Interleaved2of5
4. Code 39 --no c/d
5. Codabar
6. EAN-8
7. EAN-13

7. Press  for Code 128.

8. Code 128
9. MSI
10. UPC-A +2
11. UPC-A +5
12. UPC-E +2
13. UPC-E +5
14. EAN-8 +2
15. EAN-8 +5

16. EAN-13 +2
17. EAN-13 +5
23. Code 93
40. Code 39 --Mod 43
41. UPCA & Price CD
44. EAN-13 & Price CD
50. I2of5 -- Barr. Bar

Select Field Class

1. Simple Field
2. Price Field
3. System Date/Time
4. Combo (Merged)

8. Press  to define a simple field.

Numeric or  
Alpha-Numeric Data?

A/N >\_



9. Press **N** to specify numeric data.

Enter Max. Length

>\_ \_ \_

10. Type **10** as the maximum number of characters in the field. Press .

Enter Min. Length  
> \_ \_ \_

11. Type **10** as the minimum number of characters in the field. Press .

Enter Field Prompt  
-----  
[ ]

12. Type "SCAN DATA." Press .

Enter Fixed Data  
Press ENTER if none  
> -----  
[ ]

13. Press  for no fixed data.

Enter Row #  
> \_ \_ \_

14. Type **80** for the row location. Press .

Enter Col. #  
> \_ \_ \_

15. Type **15** for the column location. Press .

--Select Density--  
3.5/7.0 CPI 5 dots  
4.4/8.7 CPI 4 dots  
5.8/11.7 CPI 3 dots  
8.7/17.5 CPI 2 dots

16. Select 8.7/17.5 characters per inch.

Enter Bar Height  
(Units = Inch/100)  
> \_ \_ \_

17. Type **40** for the bar code height (.4"). Press .

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

18. Type  for the field rotation.

Select Edit #1  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

19. Press  for no edits.

8. Make Shoe Size

```
Select Type:Fld #2
1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished
```

20. Press **6** .

```
Save current
format? Y/N > _
```

21. Press **Y** to save the format. You return to the Design Menu.

- ◆ To print the format, see "Printing the Simple Variable Bar Code Format."
- ◆ To define a combo (combination) bar code field, see "Entering a Sample Combo Bar Code Field" for more information.
- ◆ To define text fields, see Chapter 5, "Defining Text Fields."
- ◆ To define constant text fields, see Chapter 7, "Defining Constant Text Fields."
- ◆ To define line fields, see Chapter 8, "Defining Line Fields."

## Printing the Simple Variable Bar Code Format

---

After designing your format, print it to see how it looks.

```
-=Design Menu=-
1.Create New Format
2.Edit Old Format
3.Copy Format
4.Delete Format
```

1. Press **Esc** to exit the Design Menu.

```
-=Main Menu=-
1. Design Formats
2. Print Labels
3. Configuration
```

2. Press **2** to print your format.

```
Select Format
to Print
```



3. Select **CODE128**. Press **Enter** .

```
-=Format Menu=-
01 CODE128
02 UPCA
```


SCAN DATA

-----

Printed : 1

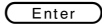4. Type **8520147963**. Press . The label prints.
5. Press the trigger to print another label or press  to return to the prompt and print another label.

This sample prints the following label.

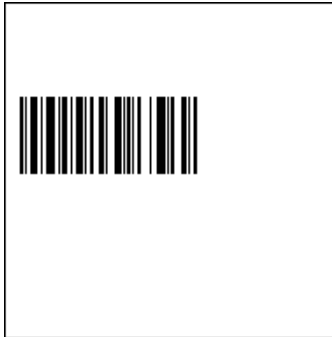

## About Combo Bar Code Fields

---

Combo bar code fields pull data from other fields, eliminating the data from being entered by the operator more than once. Combo fields have three parameters:

**Field Number  
(two digits)**

Field number from which data is copied. For example, 3 is field #3.

**Starting Position  
(two digits)**

Position number in the source field of the first character to be copied. Character positions are numbered **1** to **99**, starting from the left. For example, 1 is the character in the first position to be copied.


**Number of Digits to  
use (two digits)**

Number of characters to copy. The range is **1** to **99**. For example, 3 copies three characters.

In cases where the source field is shorter than the combo field, you have the option of filling (padding) data from the left or right or none. You are also prompted for the fill character.



Each combo field pulls data from up to 10 different text or bar code fields. An example of using bar code fields to create a combo text field can be seen in the following tag. To show human readable data with a bar code that does not allow human readable characters, create a combo text field from the bar code data field.

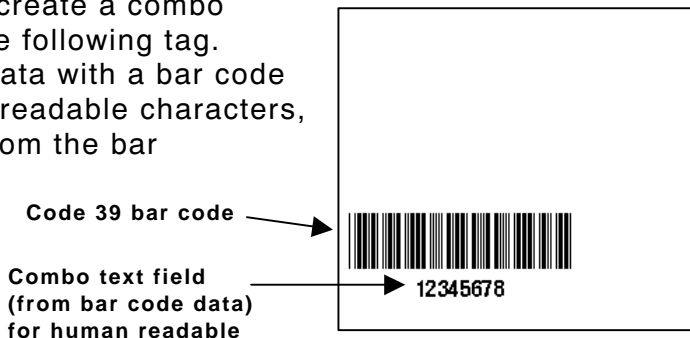

## Entering a Sample Combo Bar Code Field

Follow the steps for entering combo bar code fields on 2.0-inch long by 2.0-inch wide supplies.

**NOTE:** This sample uses the printer’s factory-set defaults. For more information about your printer’s configuration, see Chapter 3, “Configuring the Printer.”

```
--Main Menu--
1. Design Formats
2. Print Labels
3. Configuration
```

```
--Design Menu--
1.Create New Format
2.Edit Old Format
3.Copy Format
4.Delete Format
```

```
Enter Format Name
>-----
  [OK]
```

```
Enter Length of
Supply (55-400)
(eg.400 = 4 inches)
>---
```

```
Select Supply Width
1. 1.20 Inches
2. 1.50 Inches
3. 2.00 Inches
```

1. From the Main Menu, press **1**.
2. Press **1** to create a new format.
3. Type **COMBO** for the format name. Press **Enter**.
4. Enter **200** for the length of your supply. Press **Enter**.
5. Press **3** for the supply width.

Select Type: Fld #1

1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished

Select Field Class

1. Simple Field
2. Price Field
3. System Date/Time
4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?

A/N > \_



Enter Max. Length

> \_ \_ \_

Enter Min. Length

> \_ \_ \_

Enter Field Prompt

> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



Enter Fixed Data

Press ENTER if none

> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_




Enter Row #

> \_ \_ \_

Enter Col. #

> \_ \_ \_

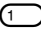6. Press  to define a text field.


7. Press  to define a simple field.

8. Press **N** (alpha-numeric).


9. Type **6** as the maximum number of characters in the field. Press .

10. Type **6** as the minimum number of characters in the field. Press .

11. Type **ENTER DATA 1**. Press .

12. Press , for no fixed data.

13. Type **10** for the row location. Press .

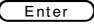14. Type **10** for the column location. Press .

- = Select Font = -  
1. CG Trium 6.5 1000  
2. CG Trium 8 pt 1001  
3. CG Trium 10p 1002  
4. CG Trium 12p 1003  
5. CG Trium 18 p 1004  
6. CG Trium 22p 1005  
7. CG TrCon 6.5 1006

8. CG TrCon 8 pt 1007  
9. CG TrCon 10p 1008  
10. CG TrCon 12p 1009  
11. CG TrCon 18p 1010  
12. CG TrCon 22p 1011  
13. LetGoth 6.5 1012  
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > \_

Enter Width Mag for  
this font (1-7) > \_

Set Justification  
1. Left (L)  
2. Right (E)  
3. Center (B)

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
1. None  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

Select Type: Fld #2  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

**15.** Select **CG Trium 8 pt 1001** font.

**16.** Press  for the height magnification.

**17.** Press  for the width magnification.

**18.** Press  for the alignment of characters in the field.

**19.** Press  for the field rotation.

**20.** Press  for no data edits.

**21.** Press  to define a text field.

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > \_



Enter Max. Length  
> \_ \_ \_

Enter Min. Length  
> \_ \_ \_

Enter Field Prompt  
> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



Enter Fixed Data  
Press ENTER if none  
> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



Enter Row #  
> \_ \_ \_

Enter Col. #  
> \_ \_ \_

- = Select Font = -  
1. CG Trium 6.5 1000  
2. CG Trium 8 pt 1001  
3. CG Trium 10p 1002  
4. CG Trium 12p 1003  
5. CG Trium 18p 1004  
6. CG Trium 22p 1005  
7. CG TrCon 6.5 1006

8. CG TrCon 8 pt 1007  
9. CG TrCon 10p 1008  
10. CG TrCon 12p 1009  
11. CG TrCon 18p 1010  
12. CG TrCon 22p 1011  
13. LetGoth 6.5 1012  
14. LetGoth 9pt 1013

22. Press  to define a simple field.

23. Press **N** (alpha-numeric).

24. Type **6** as the maximum number of characters in the field. Press .

25. Type **6** as the minimum number of characters in the field. Press .

26. Type **ENTER DATA 2**. Press .

27. Press , for no fixed data.

28. Type **50** for the row location. Press .

29. Type **10** for the column location. Press .

30. Select **CG Trium 8 pt 1001** font.

Enter Height Mag for  
this font (1-7) > \_

31. Press  for the height magnification.

Enter Width Mag for  
this font (1-7) > \_

32. Press  for the width magnification.

Set Justification

1. Left (L)
2. Right (E)
3. Center (B)

33. Press  for the alignment of characters in  
the field.

Top of Field at:

1. Top of Supply
2. Left of Supply
3. Bottom of Supply
4. Right of Supply

34. Press  for the field rotation.

Select Edit #1

1. None
2. Make into Price
3. Pad Data Field
4. Extract Chars
5. Strip Chars
6. Extract from Mid
7. Insert Chars

35. Press  for no data edits.

8. Make Shoe Size

Select Type: Fld #3

1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished

36. Press  to define a bar code field.

- = Select Bar Code = -

1. UPC-A
2. UPC-E
3. Interleaved2of5
4. Code 39 -no c/d
5. Codabar
6. EAN-8
7. EAN-13

37. Press  for UPC-A.

Select Field Class

1. Simple Field
2. Price Field
3. System Date/Time
4. Combo (Merged)

38. Press  to define a combo field.

For Combo Fields  
Enter up to 10  
User Field sources.  
(Press key) \_

39. Press any key to continue.

Enter Field #  
(First is Fld One)  
( ENTER when done )  
> \_ \_

40. Type **1** and press  for source field 1.

Enter Start Position  
(First is One)  
> \_ \_

41. Type **1** and press  for copy start position 1.

Enter # of Chars  
> \_ \_

42. Type **6** and press  for 6 characters to copy.

Enter Field #  
(First is Fld One)  
( ENTER when done )  
> \_ \_

43. Type **2** and press  for source field 2.

Enter Start Position  
(First is One)  
> \_ \_

44. Type **1** and press  for copy start position 1.

Enter # of Chars  
> \_ \_


45. Type **6** and press  for 6 characters to copy.

Enter Field #  
(First is Fld One)  
( ENTER when done )  
> \_ \_

46. Press  to continue.

Enter Fill-Direction  
for short  
Source Fields:  
1 Fill from Left  
2 Fill from Right  
3 Do not Fill

47. Press  to not fill the field.

Enter Fixed Data  
Press ENTER if none  
> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_  


48. Press  for no fixed data.

Enter Row #  
> \_ \_ \_

49. Type **100** for the row location. Press .

Enter Col. #  
> \_ \_ \_

50. Type **10** for the column location. Press .

Enter Density  
1. 80/ 2. 120  
>\_

51. Press  for the density (80%).

Enter Bar Height  
(Units = Inch/100)  
> \_ \_ \_

52. Type **40** for the bar code height (.4"). Press .

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

53. Type  for the field rotation.

Select Edit #1  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

54. Press  for no edits.

8. Make Shoe Size

Select Type:Fld #4  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

55. Press .

Save current  
format? Y/N > \_

56. Press **Y** to save the format. You return to the Design Menu.

- ◆ To print the format, see "Printing the Sample Combo Bar Code Format."
- ◆ To define text fields, see Chapter 5, "Defining Text Fields."
- ◆ To define constant text fields, see Chapter 7, "Defining Constant Text Fields."
- ◆ To define line fields, see Chapter 8, "Defining Line Fields."

## Printing the Sample Combo Bar Code Format

---

After designing your format, print it to see how it looks.

```
--Design Menu--
1.Create New Format
2.Edit Old Format
3.Copy Format
4.Delete Format
```

```
--Main Menu--
1. Design Formats
2. Print Labels
3. Configuration
```

```
Select Format
to Print
```

```
--Format Menu--
01 COMBO
02 CODE128
03 UPCA
```

```
ENTER DATA 1
-----
```

```
ENTER TEXT2
-----
```

```
Printed : 1
```

1. Press **Esc** to exit the Design Menu.
2. Press **2** to print your format.
3. Select COMBO. Press **Enter** .
4. Type **028028**. Press **Enter** .
5. Type **885452**. Press **Enter** . The label prints.
6. Press the trigger to print another label or press **Esc** to return to the prompt and print another label.



This sample prints the following label.



## Bar Code Specifications

---

This section contains information specific to the various bar codes you can select. This information helps you correctly enter the information to create a bar code field for your format.

### UPC Bar Codes

- ◆ Retailers use UPC (Universal Product Code) bar codes to identify merchandise.
- ◆ Maximum and minimum lengths for +2 and +5 bar codes must be equal.

Bar Code	Length (in characters)
UPC-A	12
UPC-A +2	14
UPC-A +5	17
UPC-A & Price CD	12
UPC-E	7
UPC-E +2	9
UPC-E +5	12



UPCA



UPCE

## EAN Bar Codes

- ◆ Some retailers use EAN (European Article Number) bar codes to identify merchandise.
- ◆ Maximum and minimum lengths for +2 and +5 bar codes must be equal.

Bar Code	Length (in characters)
EAN-8	8
EAN-8 +2	10
EAN-8 +5	13
EAN-13	13
EAN-13 +2	15
EAN-13 +5	18
EAN-13 & Price CD	13



EAN-8



EAN-13

## Code 128 Bar Codes

- ◆ Length: **0 – 2710** characters
- ◆ Characters are alphanumeric, including any ASCII characters.



## MSI

MSI is a Modified Plessey bar code.

- ◆ Length: **0 – 14** characters
- ◆ Uses only numeric data.
- ◆ Can use a second optional check digit.



## Interleaved 2 of 5 Bar Codes

Interleaved 2 of 5 is an industrial bar code. You can use it with or without a barrier bar.

- ◆ Length: **0 – 2710** characters (must be numeric)
- ◆ The length must be even. If not, the software adds a zero at the end.



**Interleaved 2 of 5**



**Interleaved 2 of 5  
with the Barrier Bar**

## Code 39 Bar Codes

Code 39 is an industrial bar code. You can use Code 39 with no check digit and Code 39 – Mod 43.

- ◆ Uses alphanumeric data, certain symbols, and start/stop characters.
- ◆ Length: **0 – 2710** characters



## Codabar Bar Codes

Codabar is an industrial bar code with numeric printing and special start/stop characters. You can use the start/stop characters to join multiple bar codes when scanning.

- ◆ To join two bar codes, the last character of one bar code and the first character of the other bar code must be **d**.
- ◆ Other start and stop characters can be **a**, **b**, and **c**.
- ◆ Length: **0 – 26** characters



## Code 93

- ◆ Uses data from the 128 character ASCII set.
- ◆ Uses two check digits.
- ◆ Length: **0 - 2710** characters





# DEFINING CONSTANT TEXT FIELDS

A constant text field is a set of fixed characters that prints on all labels. Define each constant text field separately. Use constant text fields for data that is the same, so the operator does not have to enter the repetitive data for each label. For example, a store number should be in a constant text field, whereas the department number should be in a text field. The store number is the same for each label. The department number varies per label.

**NOTE:** The constant text field is not assigned a field number, but is counted as a field (keep this in mind, as the printer allows a maximum of **50** fields per format). Data edits do not apply to constant text fields.

Constant text fields are very similar to text fields.

**NOTE:** All samples shown in this chapter are created using 2.0-inch long by 2.0-inch wide supplies.

## About Constant Text Fields

---

Read the following information to become familiar with the prompts for constant text fields. Valid ranges for the prompts are listed as well as information about using constant text fields.

<b>Format Name</b>	Depending on your printer's configuration, enter a name for the format. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." The maximum number of characters for the format name is 16.
<b>Format Number</b>	Reserved for future use. (Depending on your printer's configuration, enter a number for the format. The format number range is <b>1 – 99</b> .)
<b>Format Description</b>	Reserved for future use. (Depending on your printer's configuration, enter a description for the format.)
<b>Supply Length</b>	The length of your loaded supply. Measure from the top of one black mark to the top of the next black mark. The standard supply lengths are: <b>55, 78, 110, 150, 200, 300, or 400</b> inches.

## Supply Width

The width of your loaded supply. Choices include 1.20, 1.50, or 2.00 inches.

## Field Type

Choices include text, bar code, constant text, and line.


## Fixed Data

In situations where the same data appears on all labels, you can enter the repetitive data as fixed data. The operator does not enter the data. The maximum number of characters is 40; however, each field has a maximum length defined, so the fixed data must be below that maximum.

Fixed data is stored with the format and automatically displayed with the prompt during data entry.


## Row

The horizontal line where printing begins. For monospaced fonts, distance from the bottom of print area to the pivot point. The pivot point varies depending on how text is justified.

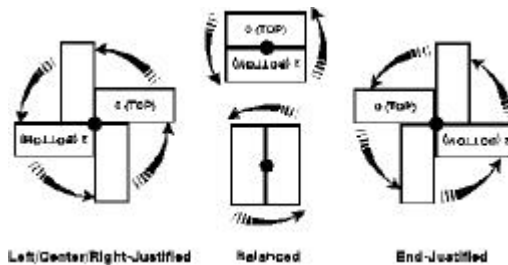

For proportionally spaced fonts, distance from the bottom of print area to baseline of characters in field. The range is **0 – 365**.


**Baseline**

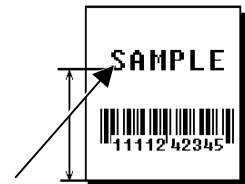

## Column

The vertical line where printing begins. Type the column position for the field. The distance from the left edge of the print area to the pivot point is the column location. The range is **0 – 183**.

**Baseline**

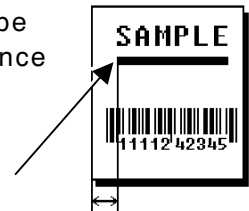



**Gap**

Depending on your printer's configuration, enter the number of dots between characters. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."

The gap range is **0 – 9**. For mono-spaced fonts, the additional spacing is added to the existing inter-character gap. This is also true for proportionally spaced fonts, but the inter-character gap varies with character combinations. Any number other than 0 affects your field width. Default spacing:

Letter Gothic Bold 6pt 1 dot

Letter Gothic Bold 9pt 2 dots

All other fonts vary with each letter

Use the default unless you want to create a special effect, such as P R I C E (additional character spacing) in a field.

**Font**

The style of font for your format. Choices include CG Triumvirate Bold 6.5, 8, 10, 12, 18, or 22 point; CG Triumvirate Bold Condensed 6.5, 8, 10, 12, 18, and 22 point; and Letter Gothic 6.5 and 9 point.



**Height  
Magnification**

Height magnifier for the selected font. Use a magnifier of 1 with proportionally spaced fonts, because characters lose smoothness at higher magnifications. The range is **1 – 7**.

**Width  
Magnification**

Width magnifier for the selected font. Proportionally spaced fonts do not have a set width. The range is **1 – 7**.

## Font Color

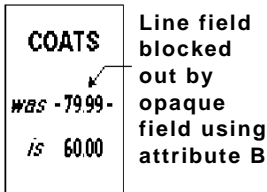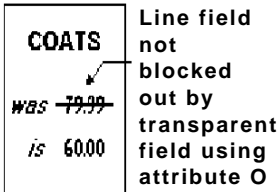

Depending on your printer's configuration, enter the color of the selected font. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."

Solid black print should not exceed 30% on a given square inch of the label, or printhead life may be decreased. There are two types of field color overlay attributes:

**Transparent** The overlay field (text or constant text) does not block out or "erase" existing fields.

**Opaque** The overlay field blocks out or "erases" existing fields.

Field placement is an important consideration when using field color attributes. If a line field is defined before the overlay (text or constant text) field, the line field is blocked out by the overlay field, depending on the overlay field's color attribute. If a line field is defined after the overlay field, the line field is not blocked out by the overlay field, regardless of the overlay field's color attribute.

Choices include Black Opaque, White Opaque, Black Transparent and White Transparent.


## Justification

Alignment of the text within the field. Choices include Left (L), Right (E), and Center (B). Fonts 1012 and 1013 (Letter Gothic 6.5 and 9 pt) default to L (left).

## Character Rotation


Depending on your printer's configuration, enter the character rotation of the selected field. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." Choices include Top of Field, Left of Field, Bottom of Field, and Right of Field.

The field or supply does not rotate, only the characters do. See "ABCD" in the example below.

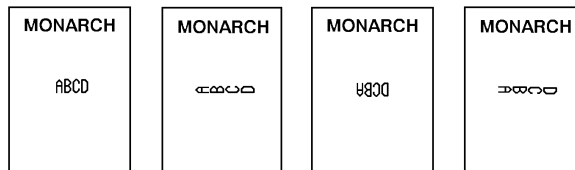


## Field Rotation

Rotation of the selected field. Choices include: Top of Supply, Left of Supply, Bottom of Supply, and Right of Supply.

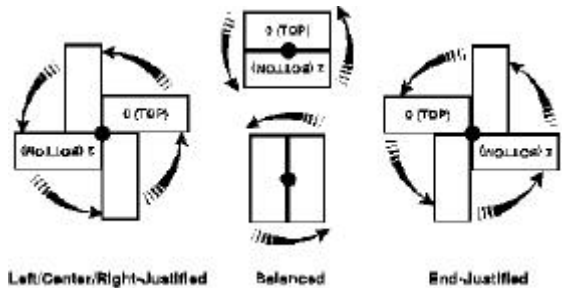


## Entering a Sample Constant Text Field

We will create a sample format, **CONSTANT** (2.0-inch long by 2.0-inch wide) and a sample constant text field.

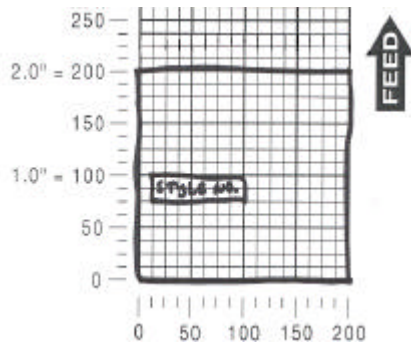

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Enter Format Name  
> -----  


Enter Length of supply (55 – 400)  
(eg. 400 = 4 inches)  
> ---

Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches

1. Press  to design your formats.
2. Press  to create a new format.
3. Type **CONSTANT**. Press .
4. Type **200** for the length of your supply. Press .
5. Press  for the supply width.

Select Type: Fld #1

1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished

Enter Fixed Data  
Press ENTER if none

> -----



Enter Row #

> \_ \_ \_

Enter Col. #

> \_ \_ \_

- = Select Font = -

1. CG Trium 6.5 1000
2. CG Trium 8 pt 1001
3. CG Trium 10p 1002
4. CG Trium 12p 1003
5. CG Trium 18 p 1004
6. CG Trium 22p 1005
7. CG TrCon 6.5 1006

8. CG TrCon 8 pt 1007
9. CG TrCon 10p 1008
10. CG TrCon 12p 1009
11. CG TrCon 18p 1010
12. CG TrCon 22p 1011
13. LetGoth 6.5 1012
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > \_

Enter Width Mag for  
this font (1-7) > \_

Set Justification

1. Left (L)
2. Right (E)
3. Center (B)

Top of Field at:

1. Top of Supply
2. Left of Supply
3. Bottom of Supply
4. Right of Supply

6. Press  to define a constant text field.

7. Type **STYLE NO.** and press .

8. Type **70** for the row location. Press .

9. Type **10** for the column location. Press .

10. Select **CG Trium 8 pt 1001**. Press .

11. Press  for the height magnification.

12. Press  for the width magnification.

13. Press  for the alignment of characters in the field.

14. Press  for the field rotation.

Select Type:Fld#2

1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished

Save current  
format? Y/N > \_

**15.** Press  .

**16.** Press **Y** to save the format. You return to the Design Menu.

- ◆ To print the format, see “Printing the Sample Constant Text Format.”
- ◆ To define text fields, see Chapter 5, “Defining Text Fields.”
- ◆ To define bar code fields, see Chapter 6, “Defining Bar Code Fields.”
- ◆ To define line fields, see Chapter 8, “Defining Line Fields.”

## Printing the Sample Constant Text Format

---

After designing your format, print it to see how it looks.

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```

```
- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration
```

```
Select Format  
to Print
```

```
- = Format Menu - =  
01 CONSTANT  
02 COMBO  
03 SIZE
```

```
Printed: 1
```

1. Press **Esc** to exit the Design Menu.
2. Press **2** to print your format.
3. Select **CONSTANT** and press **Enter**. The label prints.
4. Press the trigger to print another label or press **Esc** until you return to the Format Menu.

This sample prints the following label.

```
STYLE NO.
```

# DEFINING LINE FIELDS

# 8

Use lines to form borders or mark out original prices. Define each line separately.

**NOTE:** This field is not assigned a field number, but is counted as a field (keep this in mind, as the printer allows a maximum of 50 fields per format).

You can define any line length and a thickness up to **10** dots, as long as the solid black print does not exceed 30% of any given square inch of the label. Data edits do not apply to line fields.

**NOTE:** All samples shown in this chapter are created using 2.0-inch long by 2.0-inch wide supplies.

## About Line Fields

---

Read the following information to become familiar with the prompts for line fields. Valid ranges for the prompts are listed as well as information about using line fields.

<b>Format Name</b>	Depending on your printer's configuration, enter a name for the format. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." The maximum number of characters for the format name is 16.
<b>Format Number</b>	Reserved for future use. (Depending on your printer's configuration, enter a number for the format. The format number range is <b>1 – 99</b> .)
<b>Format Description</b>	Reserved for future use. (Depending on your printer's configuration, enter a description for the format.)
<b>Supply Length</b>	The length of your loaded supply. Measure from the top of one black mark to the top of the next black mark. The standard supply lengths are: <b>55, 78, 110, 150, 200, 300, or 400</b> inches.
<b>Supply Width</b>	The width of your loaded supply. Choices include 1.20, 1.50, or 2.00 inches.
<b>Field Type</b>	Choices include text, bar code, constant text, and line.


<b>Line Type</b>	Choices include segment or vector. With segments, you choose the starting point and ending point. With vectors, you choose the starting point, the angle, and the length of the line.
<b>Start Row</b>	The horizontal line where printing begins. The range is <b>0 – 365</b> .
<b>Start Column</b>	The vertical line where printing begins. The range is <b>0 – 183</b> .
<b>End Row</b>	For segment lines only, the horizontal ending point for the line. The range is <b>0 – 365</b> . On horizontal lines, this value <b>must match</b> the value for row.
<b>End Column</b>	For segment lines only, the vertical ending point for the line. The range is <b>0 – 183</b> . On vertical lines, this value <b>must match</b> the value for column.
<b>Line Angle</b>	For vector lines only, choices include rotating the line 0, 90, 180, or 270 degrees to the left.
<b>Line Length</b>	For vector lines only, specifies how long the line is. The range depends on the length and/or width of your supply and the non-print zone.
<b>Thickness</b>	The thickness of the line. The range is <b>1 – 10</b> . As thickness increases, the line fills upward on horizontal lines or to the right on vertical lines.






## Entering a Sample Line Field (Segments)

We will create a sample format, **LINE** (2.0-inch long by 2.0-inch wide) and a sample segment line field.

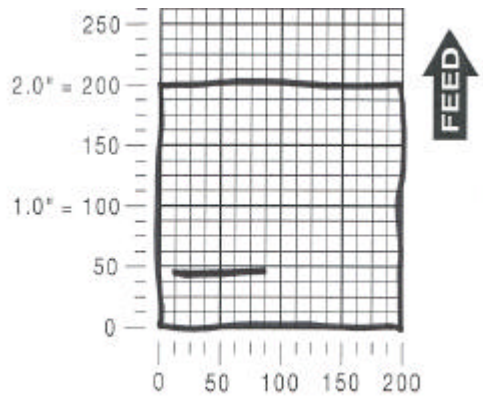

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Enter Format Name  
> -----  


Enter Length of  
supply (55 – 400)  
(eg. 400 = 4 inches)  
> ---

Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches

1. Press  to design your formats.
2. Press  to create a new format.
3. Type **LINE** for the format name. Press .
4. Type **200** for the length of your supply. Press .
5. Press  for the supply width.

Select Type: Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

Is line Segment or  
Vector? S/V >

Enter Row #  
for First Point  
> \_ \_ \_

Enter Col. #  
for First Point  
> \_ \_ \_

Enter Row #  
for Last Point  
> \_ \_ \_

Enter Col. #  
for Last Point  
> \_ \_ \_

Enter Thickness  
(2 = 0.01 inch)  
> \_ \_

Select Type:Fld#2  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

Save current  
format? Y/N > \_

6. Press  to define a line field.

7. Press **S**.

8. Type **48** for the row location. Press .

9. Type **10** for the column location. Press .

10. Type **48** for the end row location. Press .

11. Type **80** for the end column location. Press .

12. Type **3** and press .

13. Press .

14. Press **Y** to save the format. You return to the Design Menu.

- ◆ To print the format, see “Printing the Sample Line (Segment) Format.”
- ◆ To define a text field, see Chapter 5, “Defining a Text Field,” for more information.
- ◆ To define bar code fields, see Chapter 6, “Defining Bar Code Fields.”
- ◆ To define constant text fields, see Chapter 7, “Defining Constant Text Fields.”

## Printing the Sample Line (Segment) Format

---

After designing your format, print it to see how it looks.

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```

```
- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration
```


```
Select Format  
to Print
```

```
- = Format Menu - =  
01 LINE  
02 CONSTANT  
03 COMBO  
04 SIZE
```

```
Printed: 1
```


1. Press **Esc** to exit the Design Menu.
2. Press **2** to print your format.
3. Select **LINE** and press **Enter**. The label prints.
4. Press the trigger to print another label or press **Esc** until you return to the Format Menu.

This sample prints the following label.




## Entering a Sample Line Field (Vectors)

We will create a sample format,  
**LINE** (2.0-inch long by 2.0-inch  
wide) and a sample vector line field.

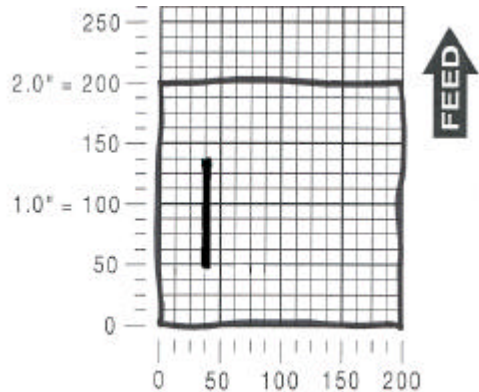

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Enter Format Name  
> \_\_\_\_\_  


Enter Length of  
supply (55 – 400)  
(eg. 400 = 4 inches)  
> \_\_\_\_\_

Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches

Select Type: Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

1. Press  to design your formats.
2. Press  to create a new format.
3. Type **LINE2** for the format name. Press .
4. Type **200** for the length of your supply. Press .
5. Press  for the supply width.
6. Press  to define a line field.

Is line Segment or  
Vector? S/V > \_

Enter Row #  
for First Point  
> \_ \_ \_

Enter Col. #  
for First Point  
> \_ \_ \_

Select Line Angle:  
1. 0 Degree  
2. 90 Degrees Left  
3. 180 Degrees Left  
4. 270 Degrees Left

Enter Line Length  
> \_ \_ \_

Enter Thickness  
(2 = 0.01 inch)  
> \_ \_

Select Type:Fld#2  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

Save current  
format? Y/N > \_

7. Press **V**.

8. Type **48** for the row position. Press .

9. Type **50** for the column position. Press .

10. Press  to rotate the line 90 degrees to the left.

11. Type **70**. Press .

12. Type **3**. Press .

13. Press .

14. Press **Y** to save the format. You return to the Design Menu.

- ◆ To print the format, see “Printing the Sample Line (Vector) Format.”
- ◆ To define a text field, see Chapter 5, “Defining a Text Field,” for more information.
- ◆ To define bar code fields, see Chapter 6, “Defining Bar Code Fields.”
- ◆ To define constant text fields, see Chapter 7, “Defining Constant Text Fields.”

## Printing the Sample Line (Vector) Format

---

After designing your format, print it to see how it looks.

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```

```
- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration
```


```
Select Format  
to Print
```

```
- = Format Menu - =  
01 LINE2  
02 LINE  
03 CONSTANT  
04 COMBO  
05 SIZE
```

```
Printed: 1
```

1. Press **Esc** to exit the Design Menu.
2. Press **2** to print your format.
3. Select **LINE2** and press **Enter**. The line prints.
4. Press the trigger to print another label or press **Esc** until you return to the Format Menu.

This sample prints the following label.



This chapter includes information about creating price and system/date time fields. Create a separate definition for each price and date/time field.

For price fields, you define the way your price appears in the printed format, for example £98.00. You can configure the printer to print using: US Dollars, French Francs, Spanish Pesetas, Belgian Francs, German Marks, British Pounds, Euro-Dollars, Swedish Krona, Danish Marka, Austrian Schilling, and Japanese Yen. See Chapter 3, “Configuring the Printer” for more information. For date/time fields, you define the way the system date and time appear in the printed format, for example 10-15-01 4:00 PM.

**NOTE:** All samples shown in this chapter are created using 2.0-inch long by 2.0-inch wide supplies.

## About Price and System Date/Time Fields

---

Read the following information to become familiar with the prompts for price and date/time fields. Valid ranges for the prompts are listed as well as information about using price and date/time fields.

<b>Format Name</b>	Depending on your printer’s configuration, enter a name for the format. For more information about your printer’s configuration, see Chapter 3, “Configuring the Printer.” The maximum number of characters for the format name is 16.
<b>Format Number</b>	Reserved for future use. (Depending on your printer’s configuration, enter a number for the format. The format number range is <b>1 – 99</b> .)
<b>Format Description</b>	Reserved for future use. (Depending on your printer’s configuration, enter a description for the format.)
<b>Supply Length</b>	The length of your loaded supply. Measure from the top of one black mark to the top of the next black mark. The standard supply lengths are: <b>55, 78, 110, 150, 200, 300, or 400</b> .

<b>Supply Width</b>	The width of your loaded supply. Choices include 1.20, 1.50, or 2.00 inches.
<b>Field Type</b>	Choices include text, bar code, constant text, and line.
<b>Field Class</b>	Choices include simple, price, system date/time, and combo. For price fields, you can specify a different monetary symbol (\$ or £) by selecting a different configuration option. See Chapter 3, “Configuring the Printer” for more information. The price is automatically formatted in your selected currency. For date/time fields, the operator is allowed to format the appearance of date/time fields. However, the system date and time are set when configuring the printer. See Chapter 3, “Configuring the Printer” for more information.
<b>Maximum Length</b>	The maximum number of characters in the field. The number of characters depends on the font size, label size, whether you are using a check digit, or if the field is printed horizontally or vertically. For price fields, remember to include the currency symbol (dollar sign, decimal point, etc.) in the length of your field. For date/time fields, remember to include any dashes, slashes, colons, etc. in the length of your field. The range is <b>0 – 40</b> .
<b>Minimum Length</b>	The minimum number of characters in the field. The range is <b>0 – 40</b> .
<b>Field Prompt</b>	Contains the prompt displayed during data entry. The maximum number of characters is <b>40</b> .



## Using Fixed Data


In situations where the same data appears on all labels, you can enter the repetitive data as fixed data. The operator does not enter the data. The maximum number of characters is 40; however, each field has a maximum length defined, so the fixed data must be below that maximum.

Fixed data is stored with the format and automatically displayed with the prompt during data entry. Fixed data can also be added **before** or **after** entry characters.

An example of fixed data is the manufacturer's code in a UPCA bar code.


## Row

The horizontal line where printing begins. For monospaced fonts, distance from the bottom of print area to the pivot point. The pivot point varies depending on how text is justified.

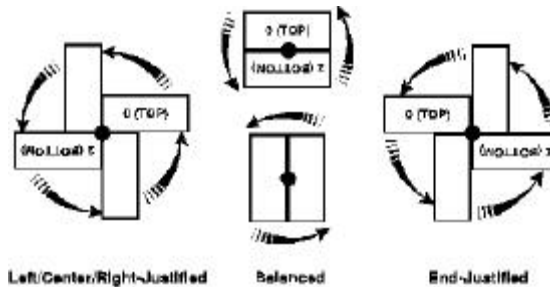

For proportionally spaced fonts, distance from the bottom of print area to baseline of characters in field. The range is **0 – 365**.


baseline

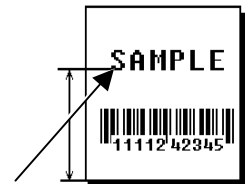

## Column



The vertical line where printing begins. Type the column position for the field. The distance from the left edge of the print area to the pivot point is the column location. The range is **0 – 183**.

baseline

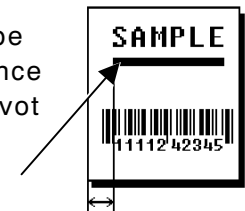

<b>Gap</b>	<p>Depending on your printer's configuration, enter the number of dots between characters. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."</p> <p>The gap range is <b>0 – 9</b>. For mono-spaced fonts, the additional spacing is added to the existing inter-character gap. This is also true for proportionally spaced fonts, but the inter-character gap varies with character combinations. Any number other than 0 affects your field width. Default spacing:  Letter Gothic Bold 6pt 1 dot  Letter Gothic Bold 9pt 2 dots  All other fonts vary with each letter  Use the default unless you want to create a special effect, such as P R I C E (additional character spacing) in a field.</p>
<b>Font</b>	<p>The style of font for your format. Choices include CG Triumvirate Bold 6.5, 8, 10, 12, 18, or 22 point; CG Triumvirate Bold Condensed 6.5, 8, 10, 12, 18, and 22 point; and Letter Gothic 6.5 and 9 point.</p>
<b>Height Magnification</b>	<p>Height magnifier for the selected font. Use a magnifier of 1 with proportionally spaced fonts, because characters lose smoothness at higher magnifications. The range is <b>1 – 7</b>.</p>
<b>Width Magnification</b>	<p>Width magnifier for the selected font. Proportionally spaced fonts do not have a set width. The range is <b>1 – 7</b>.</p>

## Font Color

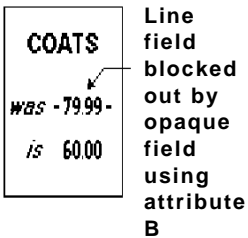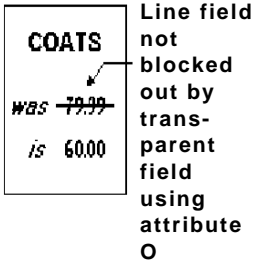

Depending on your printer's configuration, enter the color of the selected font. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer."

Solid black print should not exceed 30% on a given square inch of the label, or printhead life may be decreased. There are two types of field color overlay attributes:

**Transparent** The overlay field (text or constant text) does not block out or "erase" existing fields.

**Opaque** The overlay field blocks out or "erases" existing fields.

Field placement is an important consideration when using field color attributes. If a line field is defined before the overlay (text or constant text) field, the line field is blocked out by the overlay field, depending on the overlay field's color attribute. If a line field is defined after the overlay field, the line field is not blocked out by the overlay field, regardless of the overlay field's color attribute.

Choices include Black Opaque, White Opaque, Black Transparent and White Transparent.


## Justification

Alignment of the text within the field. Choices include Left (L), Right (E), and Center (B). Fonts 1012 and 1013 (Letter Gothic 6.5 and 9 pt) default to L (left), regardless of selection.

## Character Rotation


Depending on your printer's configuration, enter the character rotation of the selected field. For more information about your printer's configuration, see Chapter 3, "Configuring the Printer." Choices include Top of Field, Left of Field, Bottom of Field, and Right of Field.

The field or supply does not rotate, only the characters do. See "ABCD" in the example below.

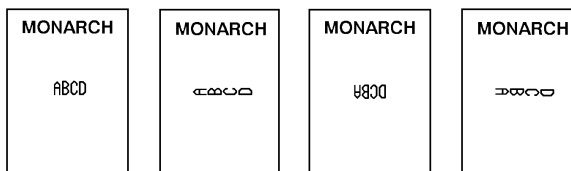

## Field Rotation

Rotation of the selected field. Choices include: Top of Supply, Left of Supply, Bottom of Supply, and Right of Supply.

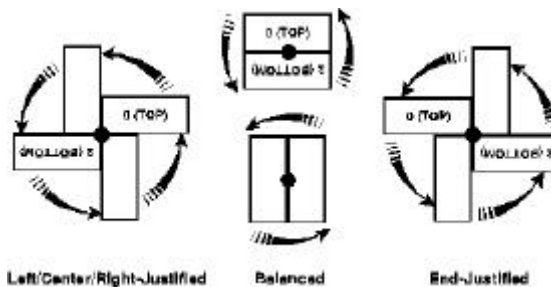


## Entering a Sample Price Field

---

We will create a sample format, **PRICE** (2.0-inch long by 2.0-inch wide) and a sample price field.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Enter Format Name  
> -----  


Enter Length of  
supply (55 – 400)  
(eg. 400 = 4 inches)  
> ----

Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches

Select Type: Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished


Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Enter Max. Length  
> ----


Enter Min. Length  
> ----

1. Press  to design your formats.
2. Press  to create a new format.
3. Type **PRICE** for the format name. Press .
4. Type **200** for the length of your supply. Press .
5. Press  for the supply width.
6. Press  to define a text field.
7. Press  to define a price field.
8. Type **8** as the maximum number of characters in the field. Press .
9. Type **1** as the minimum number of characters in the field. Press .

Enter Field Prompt

> -----  


Enter Fixed Data  
Press ENTER if none

> -----  


Enter Row #

> \_ \_ \_

Enter Col. #

> \_ \_ \_

- = Select Font = -

1. CG Trium 6.5 1000
2. CG Trium 8 pt 1001
3. CG Trium 10p 1002
4. CG Trium 12p 1003
5. CG Trium 18 p 1004
6. CG Trium 22p 1005
7. CG TrCon 6.5 1006

8. CG TrCon 8 pt 1007
9. CG TrCon 10p 1008
10. CG TrCon 12p 1009
11. CG TrCon 18p 1010
12. CG TrCon 22p 1011
13. LetGoth 6.5 1012
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > \_

Enter Width Mag for  
this font (1-7) > \_

Set Justification

1. Left (L)
2. Right (E)
3. Center (B)

Top of Field at:

1. Top of Supply
2. Left of Supply
3. Bottom of Supply
4. Right of Supply

10. Type **KEY IN PRICE**. Press  .

11. Press  for no fixed data.

12. Type **25** for the row location. Press  .

13. Type **10** for the column location. Press  .

14. Select **CG Trium 8 pt 1001**. Press  .

15. Press  for the height magnification.

16. Press  for the width magnification.

17. Press  for the alignment of characters in the field.

18. Press  for the field rotation.

```
Select Type:Fld#2
1. Text Field
2. Bar Code Field
3. Constant Text
4. Line
5. Finished
```

19. Press **5**.

```
Save current
format? Y/N > _
```

20. Press **Y** to save the format. You return to the Design Menu.

- ◆ To print the format, see “Printing the Sample Price Format.”
- ◆ To define a text field, see Chapter 1, “Defining a Text Field,” for more information.
- ◆ To define bar code fields, see Chapter 6, “Defining Bar Code Fields.”
- ◆ To define constant text fields, see Chapter 7, “Defining Constant Text Fields.”
- ◆ To define line fields, see Chapter 8, “Defining Line Fields.”

## Printing the Sample Price Format

---

After designing your format, print it to see how it looks.

```
- = Design Menu = -
1. Create New Format
2. Edit Old Format
3. Copy Format
4. Delete Format
```

1. Press **Esc** to exit the Design Menu.

```
- = Main Menu = -
1. Design Formats
2. Print Labels
3. Configuration
```


2. Press **2** to print your format.

```
Select Format
to Print
```

3. Select **PRICE** and press **Enter**.

```
- = Format Menu = -
01 PRICE
02 LINE2
03 LINE
04 CONSTANT
05 COMBO
06 SIZE
```


KEY IN PRICE  
\$.00

4. Type **2999** and press  . The label prints.

The price field varies depending on the number of characters entered. For example,

2 prints as	\$ .02
29 prints as	\$ .29
299 prints as	\$ 2.99
2999 prints as	\$ 29.99

Printed: 1

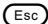5. Press the trigger to print another label or press  to return to the prompt and print a different label.

This sample prints the following label.



**\$29.99**




## Entering a Sample Date/Time Field

We will create a sample format, **DATE/TIME** (2.0-inch long by 2.0-inch wide) and a sample system date/time field.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Enter Format Name  
> -----  


Enter Length of  
supply (55 – 400)  
(eg. 400 = 4 inches)  
> \_ \_ \_

Select Supply Width  
1. 1.20 Inches  
2. 1.50 Inches  
3. 2.00 Inches

Select Type: Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Define Time Stamp  
Build Template with  
Menu Selections  
Press any key


1. Press  to design your formats.
2. Press  to create a new format.
3. Type **DATE/TIME** for the format name. Press .
4. Type **200** for the length of your supply. Press .
5. Press  for the supply width.
6. Press  to define a text field.
7. Press  to define a system date/time field.
8. Press .

- Select Component -  
(Done)  
Slash (/)  
Dash (-)  
Colon (:)  
Blank Space  
4 Digit Year  
2 Digit Year

Numeric Month  
3-Char. Alpha Month  
2 Digit Day  
Julian Day of Year  
Hour (Base 24)  
Hour (Base 12)  
Minutes

Seconds  
AM/PM Indicator

- > **HH:MM** ←  
(Done)  
Slash (/)  
Dash (-)  
Colon (:)  
Blank Space  
4 Digit Year  
2 Digit Year

Enter Fixed Data  
Press ENTER if none  
> -----  


Enter Row #  
> ---

Enter Col. #  
> ---

9. Start building your date/time stamp. Write down the way you want your date/time stamp to appear. For example, to create a date/time stamp that looks like this:

**HH:MM**

and prints like this:  
**(18:21)**

10. Select **Hour (Base 24)**. Press  .

Select **Colon (:)**. Press  .

Select **Minutes**. Press  .

The date/time stamp appears on the top line while you are creating it.

If you make a mistake while entering the date/time stamp, press   to backup one position.

11. Press  for no fixed data.

12. Type **40** for the row location. Press  .

13. Type **10** for the column location. Press  .

- = Select Font = -  
1. CG Trium 6.5 1000  
2. CG Trium 8 pt 1001  
3. CG Trium 10p 1002  
4. CG Trium 12p 1003  
5. CG Trium 18 p 1004  
6. CG Trium 22p 1005  
7. CG TrCon 6.5 1006

8. CG TrCon 8 pt 1007  
9. CG TrCon 10p 1008  
10. CG TrCon 12p 1009  
11. CG TrCon 18p 1010  
12. CG TrCon 22p 1011  
13. LetGoth 6.5 1012  
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > \_

Enter Width Mag for  
this font (1-7) > \_

Set Justification  
1. Left (L)  
2. Right (E)  
3. Center (B)

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Type:Fld#2  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

Save current  
format? Y/N > \_

**14.** Select **CG Trium 6.5 1000**. Press  .

**15.** Press  for the height magnification.

**16.** Press  for the width magnification.

**17.** Press  for the alignment of characters in the field.

**18.** Press  for the field rotation.

**19.** Press  .

**20.** Press **Y** to save the format. You return to the Design Menu.

## Printing the Sample Date/Time Format

---

After designing your format, print it to see how it looks.

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```


```
- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration
```

```
Select Format  
to Print
```

```
- = Format Menu - =  
01 DATE/TIME  
02 PRICE  
03 LINE2  
04 LINE  
05 CONSTANT  
06 COMBO  
07 SIZE
```

1. Press **Esc** to exit the Design Menu.
2. Press **2** to print your format.
3. Select **DATE/TIME** and press **Enter**. The label prints.

This sample prints the following label.

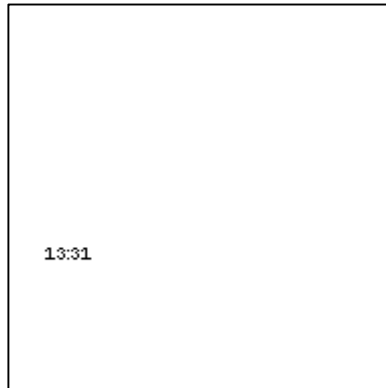

# APPLYING DATA EDITS

10

Data edits are available for both **text** and **bar code fields** (simple and combo). You can define two edits per field. For example, use the strip characters to remove the cents from a price field (\$12.50 becomes \$12) and then pad data on the right with nines (\$12.99).

You can use data edits on fields where fixed data is defined.

**NOTE:** Fixed data can be added before or after performing the data edit. You will be prompted, “perform data edit before or after including fixed data?” Unexpected results may occur if you perform the data edit before including fixed data or vice versa.

You can select from the following data edits:

- |                                       |  |
|---------------------------------------|--|
| <b>Make into price</b>                | Reformats the data as a price by adding the currency symbol (selected at the Configuration menu) and decimal point (decimal point, comma, etc.).<br><b>NOTE:</b> Use on text fields only.            |
| <b>Pad data field</b>                 | Adds pad characters to fill in the specified field. Use this data edit to add leading or trailing zeros in bar code or price fields. For example, the operator enters 1 and the price prints as .01. |
| <b>Extract Characters</b>             | Extracts the specified number of characters from the left or right side of the current field. The remaining characters are discarded.  |
| <b>Strip Characters</b>               | Removes the specified number of characters from the left or right side of the current field. The remaining characters are printed.   |
| <b>Extract Characters from Middle</b> | Extracts the specified number of characters from the specified position. The remaining characters are discarded.   |
| <b>Insert Character</b>               | Inserts one character at the specified position in the current field.  |

**Make Into Shoe Size**      Removes the last character in the specified field and if the character was a five (5), prints ½ at the end of the field. If the last character was a zero (0), the last character is removed and not printed. For example, 90 prints as 9  
65 prints as 6½  
**NOTE:** Use on text fields only.

## Using Data Edits

Data edits are defined as the last step in text and bar code fields. We will create a new format, **AUTOPART** (4.0 long x 2.0 wide), which contains **two**

- ◆ constant text fields.
- ◆ Code 39 bar code fields.
- ◆ combo text fields to print the human readable bar code characters.

Then, we will apply some data edits to manipulate the format. Use the following information to create the two constant text fields. See Chapter 5, “Defining Text Fields” or Chapter 7, “Defining Constant Text Fields” for more information.

Prompts	Constant Text Field 1	Constant Text Field 2
Fixed data	PART#	SERIAL#
Row	315	180
Column	15	15
Font	4. CG Trium 12p 1003	4. CG Trium 12p 1003
Height Magnification	1	1
Width Magnification	1	1
Justification	1	1
Field Rotation	1	1

Use the following information to create the two bar code fields. See Chapter 6, “Defining Bar Code Fields” for more information.

<b>Prompts</b>	<b>Bar Code Field 1</b>	<b>Bar Code Field 2</b>
Bar Code	4. Code 39 –no c/d	4. Code 39 –no c/d
Field Class	1. Simple	1. Simple
Data Type	Alphanumeric	Alphanumeric
Maximum Length	10	10
Minimum Length	1	1
Field Prompt	KEY PART#	SCAN SERIAL#
Fixed Data	None	None
Row	255	120
Column	15	15
Density	12.0cpi 1:3.0 1 dot	12.0cpi 1:3.0 1 dot
Bar Height	50	50
Field Rotation	1	1
Data Edit	None	None

Use the following information to create the two combo text fields. See Chapter 5, “Defining Text Fields” for more information about creating combination text fields.

<b>Prompts</b>	<b>Combo Field 1</b>	<b>Combo Field 2</b>
Field Class	4. Combo (Merged)	4. Combo (Merged)
Maximum Length	10	10
Minimum Length	1	1
Field Number	1	2
Start Position	1	1
Number of Characters	10	10
Fill Direction	3 Do not fill	3 Do not fill
Fixed Data	None	None
Row	240	105
Column	15	15
Font	3. CG Trium 10p 1002	3. CG Trium 10p 1002
Height Magnification	1	1
Width Magnification	1	1
Justification	1	1
Field Rotation	1	1
Data Edit	None	None



## Printing the Format

From the Main Menu, select **Print Labels**, and the **AUTOPART** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.



## Padding Data

In our **AUTOPART** sample, we will pad data in the PART# bar code field.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Select Format  
for Editing

- = Format Menu = -  
01 AUTOPART  
02 PRICE  
03 LINE2  
04 LINE  
05 CONSTANT  
06 COMBO  
07 SIZE

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Select Edit Field  
Fld: 1 Constant  
Fld: 2 Constant  
Fld: 3 Ufld: 1 Smpl  
Fld: 4 Ufld: 2 Smpl  
Fld: 5 Ufld: 3 Cmbo  
Fld: 6 Ufld: 4 Cmbo

Select Type:Fld #3  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line

1. Press  to design your formats.

2. Press  to edit an existing format.

3. Select **AUTOPART**. Press  .

4. Press  .

5. Select **Fld: 3 Ufld 1 Smpl** to edit the PART# bar code field. Press  .

6. Press  .

- = Select Bar Code = -  
4. Code 39 –no c/d  
5. Codabar  
6. EAN-8  
7. EAN-13  
8. Code 128  
9. MSI

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > A \_

Enter Max. Length  
> 10 \_

Enter Min. Length  
> 1 \_

Enter Field Prompt  
KEY PART# \_ \_ \_ \_ \_

Edit Fixed Data  
Press ENTER to  
retain  
> \_ \_ \_ \_ \_

Enter Row #  
> 255 \_

Enter Col. #  
> 15 \_

- = Select Density = -  
3.3 cpi 1:2.5 4 dots  
4.0 cpi 1:3.0 3 dots  
6.0 cpi 1:3.0 2 dots  
6.6 cpi 1:2.5 2 dots  
3.7 cpi 1:2.0 4 dots  
12.0cpi 1:3.0 1 dot  
2.8 cpi 1:2.2 5 dots

7. Press  to keep Code 39 as the bar code.
8. Press  to keep the field defined as simple.
9. Press  to keep Alphanumeric as the data type.
10. Press . Type 2 (so the maximum length for the field is 12). Press .
11. Press  to keep the current minimum length.
12. Press  to keep the current field prompt.
13. Press  for no fixed data.
14. Press  to keep the current row location.
15. Press  to keep the current column location.
16. Press  to keep the current density.

Enter Bar Height  
(Units = Inch/100)  
> 50 \_

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

Pad Characters on  
Left or Right? L/R \_



Enter Pad  
character: \_

Select Edit #2  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Save changes? Y/N > \_



17. Press  to keep the current bar code height.

18. Press  to keep the current field rotation.

19. Select **Pad Data Field**. Press .

20. Press **L** to pad characters on the left.

21. Type **0** for the pad character.

22. Press  for no additional data edits.

23. Press .

24. Press **Y**. You return to the Format Menu.  
Press  until you return to the Main Menu.

## Printing the Format

From the Main Menu, select **Print Labels**, and the **AUTOPART** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

This graphic shows the padded PART# bar code field and the copied data for the human readable combo text field.

Notice that the combo text field only contains 10 characters, not 12, because the combo field was set up for a maximum of 10 characters. It includes the two zero pad characters and the next eight characters of the bar code (entered by the user).



## Extracting Characters

In our **AUTOPART** sample, we will extract five characters from the PART# bar code field and only these five extracted characters will print.

```
- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration
```

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```

```
Select Format  
for Editing
```

```
- = Format Menu = -  
01 AUTOPART  
02 PRICE  
03 LINE2  
04 LINE  
05 CONSTANT  
06 COMBO  
07 SIZE
```

```
- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit
```

```
Select Edit Field  
Fld: 1 Constant  
Fld: 2 Constant  
Fld: 3 Ufld: 1 Smpl  
Fld: 4 Ufld: 2 Smpl  
Fld: 5 Ufld: 3 Cmbo  
Fld: 6 Ufld: 4 Cmbo
```

```
Select Type:Fld #3  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line
```

1. Press  to design your formats.
2. Press  to edit an existing format.
3. Select **AUTOPART**. Press  .
4. Press  to edit the PART# bar code field.
5. Select **Fld: 3 Ufld 1 Smpl**. Press  .
6. Press  .

- = Select Bar Code = -  
4. Code 39 —no c/d  
5. Codabar  
6. EAN-8  
7. EAN-13  
8. Code 128  
9. MSI

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > A \_

Enter Max. Length  
> 12 \_

Enter Min. Length  
> 1 \_

Enter Field Prompt  
KEY PART# \_ \_ \_ \_ \_

Edit Fixed Data  
Press ENTER to  
retain  
> \_ \_ \_ \_ \_

Enter Row #  
> 255 \_

Enter Col. #  
> 15 \_

- = Select Density = -  
3.3 cpi 1:2.5 4 dots  
4.0 cpi 1:3.0 3 dots  
6.0 cpi 1:3.0 2 dots  
6.6 cpi 1:2.5 2 dots  
3.7 cpi 1:2.0 4 dots  
12.0cpi 1:3.0 1 dot  
2.8 cpi 1:2.2 5 dots

7. Press  to keep Code 39 as the bar code.
8. Press  to keep the field defined as simple.
9. Press  to keep Alphanumeric as the data type.
10. Press . Type 0 (so the maximum length for the field is 10). Press .
11. Press  to keep the current minimum length.
12. Press  to keep the current field prompt.
13. Press  for no fixed data.
14. Press  to keep the current row location.
15. Press  to keep the current column location.
16. Press  to keep the current density.

Enter Bar Height  
(Units = Inch/100)  
> 50 \_

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

Extract chars from  
Left or Right? L/R \_



Enter number  
of characters: \_ \_

Select Edit #2  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Save changes? Y/N > \_



17. Press  to keep the current bar code height.

18. Press  to keep the current field rotation.

19. Select **Extract Chars**. Press .

20. Press **R** to extract characters from the right.

21. Type **5**. Press .

22. Press  for no additional data edits.

23. Press .

24. Press **Y**. You return to the Format Menu.  
Press  until you return to the Main Menu.



## Printing the Format

From the Main Menu, select **Print Labels**, and the **AUTOPART** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

This graphic shows the five extracted characters from the PART# bar code field and the copied data for the human readable combo text field.

Notice that the bar code field contains the last five characters entered, since we extracted characters from the right. The combo text field also contains those five characters.



## Stripping Characters

In our **AUTOPART** sample, we will strip three characters from the PART# bar code field and only the remaining characters will print.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Select Format  
for Editing

- = Format Menu = -  
01 AUTOPART  
02 PRICE  
03 LINE2  
04 LINE  
05 CONSTANT  
06 COMBO  
07 SIZE

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Select Edit Field  
Fld: 1 Constant  
Fld: 2 Constant  
Fld: 3 Ufld: 1 Smpl  
Fld: 4 Ufld: 2 Smpl  
Fld: 5 Ufld: 3 Cmbo  
Fld: 6 Ufld: 4 Cmbo

Select Type:Fld #3  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line

1. Press  to design your formats.
2. Press  to edit an existing format.
3. Select **AUTOPART**. Press  .
4. Press  to edit the PART# bar code field.
5. Select **Fld: 3 Ufld 1 Smpl**. Press  .
6. Press  .

- = Select Bar Code = -

- 4. Code 39 —no c/d
- 5. Codabar
- 6. EAN-8
- 7. EAN-13
- 8. Code 128
- 9. MSI

Select Field Class

- 1. Simple Field
- 2. Price Field
- 3. System Date/Time
- 4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > A \_

Enter Max. Length  
> 10 \_

Enter Min. Length  
> 1 \_

Enter Field Prompt  
KEY PART# \_ \_ \_ \_ \_

Edit Fixed Data  
Press ENTER to  
retain  
> \_ \_ \_ \_ \_

Enter Row #  
> 255 \_

Enter Col. #  
> 15 \_

- = Select Density = -  
3.3 cpi 1:2.5 4 dots  
4.0 cpi 1:3.0 3 dots  
6.0 cpi 1:3.0 2 dots  
6.6 cpi 1:2.5 2 dots  
3.7 cpi 1:2.0 4 dots  
12.0cpi 1:3.0 1 dot  
2.8 cpi 1:2.2 5 dots

- 7. Press  to keep Code 39 as the bar code.
- 8. Press  to keep the field defined as simple.
- 9. Press  to keep Alphanumeric as the data type.
- 10. Press  to keep the current maximum length.
- 11. Press  to keep the current minimum length.
- 12. Press  to keep the current field prompt.
- 13. Press  for no fixed data.
- 14. Press  to keep the current row location.
- 15. Press  to keep the current column location.
- 16. Press  to keep the current density.

Enter Bar Height  
(Units = Inch/100)  
> 50 \_

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

Strip chars from  
Left or Right? L/R \_



Enter number  
of characters: \_ \_

Select Edit #2  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Save changes? Y/N > \_



17. Press  to keep the current bar code height.

18. Press  to keep the current field rotation.

19. Select **Strip Chars**. Press .

20. Press **L** to remove characters from the left.

21. Type **3**. Press .

22. Press  for no additional data edits.

23. Press .

24. Press **Y**. You return to the Format Menu.  
Press  until you return to the Main Menu.

## Printing the Format

From the Main Menu, select **Print Labels**, and the **AUTOPART** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

This graphic shows the seven remaining characters in the PART# bar code field, after the first three characters were stripped.

Notice that the bar code field contains the last seven characters entered, since we stripped the first three characters entered (from the left). The combo text field also contains the remaining seven characters.



## Extracting Characters from the Middle

In our **AUTOPART** sample, we will extract four characters from the PART# bar code field and only these four extracted characters will print.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Select Format  
for Editing

- = Format Menu = -  
01 AUTOPART  
02 PRICE  
03 LINE2  
04 LINE  
05 CONSTANT  
06 COMBO  
07 SIZE

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Select Edit Field  
Fld: 1 Constant  
Fld: 2 Constant  
Fld: 3 Ufld: 1 Smpl  
Fld: 4 Ufld: 2 Smpl  
Fld: 5 Ufld: 3 Cmbo  
Fld: 6 Ufld: 4 Cmbo

Select Type:Fld #3  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line

1. Press  to design your formats.

2. Press  to edit an existing format.

3. Select **AUTOPART**. Press .

4. Press .

5. Select **Fld: 3 Ufld 1 Smpl** to edit the PART# bar code field. Press .

6. Press .

- = Select Bar Code = -

- 4. Code 39 —no c/d
- 5. Codabar
- 6. EAN-8
- 7. EAN-13
- 8. Code 128
- 9. MSI

Select Field Class

- 1. Simple Field
- 2. Price Field
- 3. System Date/Time
- 4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > A \_

Enter Max. Length  
> 10 \_

Enter Min. Length  
> 1 \_

Enter Field Prompt  
KEY PART# \_ \_ \_ \_ \_

Edit Fixed Data  
Press ENTER to  
retain  
> \_ \_ \_ \_ \_

Enter Row #  
> 255 \_

Enter Col. #  
> 15 \_

- = Select Density = -
- 3.3 cpi 1:2.5 4 dots
  - 4.0 cpi 1:3.0 3 dots
  - 6.0 cpi 1:3.0 2 dots
  - 6.6 cpi 1:2.5 2 dots
  - 3.7 cpi 1:2.0 4 dots
  - 12.0cpi 1:3.0 1 dot
  - 2.8 cpi 1:2.2 5 dots

- 7. Press  to keep Code 39 as the bar code.
- 8. Press  to keep the field defined as simple.
- 9. Press  to keep Alphanumeric as the data type.
- 10. Press  to keep the current maximum length.
- 11. Press  to keep the current minimum length.
- 12. Press  to keep the current field prompt.
- 13. Press  for no fixed data.
- 14. Press  to keep the current row location.
- 15. Press  to keep the current column location.
- 16. Press  to keep the current density.

Enter Bar Height  
(Units = Inch/100)  
> 50 \_

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

Enter character  
Position: \_\_

Enter number  
of characters: \_\_

Select Edit #2  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Save changes? Y/N > \_



17. Press  to keep the current bar code height.

18. Press  to keep the current field rotation.

19. Select **Extract from Mid**. Press .

20. Type 4. Press .

21. Type 4. Press .

22. Press  for no additional data edits.

23. Press .

24. Press **Y**. You return to the Format Menu.  
Press  until you return to the Main Menu.



## Printing the Format

From the Main Menu, select **Print Labels**, and the **AUTOPART** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

This graphic shows the four extracted characters from the PART# bar code field. The first three and last three characters were stripped.

Notice that the bar code field contains the four middle characters entered, since we extracted four characters starting with the fourth position. The combo text field also contains the four extracted characters.



## Inserting Characters

In our **AUTOPART** sample, we will insert one character at the beginning of the PART# bar code field, but not print that character in the combo text field.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Select Format  
for Editing

- = Format Menu = -  
01 AUTOPART  
02 PRICE  
03 LINE2  
04 LINE  
05 CONSTANT  
06 COMBO  
07 SIZE

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Select Edit Field  
Fld: 1 Constant  
Fld: 2 Constant  
Fld: 3 Ufld: 1 Smpl  
Fld: 4 Ufld: 2 Smpl  
Fld: 5 Ufld: 3 Cmbo  
Fld: 6 Ufld: 4 Cmbo

Select Type:Fld #3  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line

1. Press  to design your formats.
2. Press  to edit an existing format.
3. Select **AUTOPART**. Press .
4. Press .
5. Select **Fld: 3 Ufld 1 Smpl** to edit the PART# bar code field. Press .
6. Press .

- = Select Bar Code = -  
4. Code 39 –no c/d  
5. Codabar  
6. EAN-8  
7. EAN-13  
8. Code 128  
9. MSI

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > A \_

Enter Max. Length  
> 10 \_

Enter Min. Length  
> 1 \_

Enter Field Prompt  
KEY PART# \_ \_ \_ \_ \_

Edit Fixed Data  
Press ENTER to  
retain  
> \_ \_ \_ \_ \_

Enter Row #  
> 255 \_

Enter Col. #  
> 15 \_

- = Select Density = -  
3.3 cpi 1:2.5 4 dots  
4.0 cpi 1:3.0 3 dots  
6.0 cpi 1:3.0 2 dots  
6.6 cpi 1:2.5 2 dots  
3.7 cpi 1:2.0 4 dots  
12.0cpi 1:3.0 1 dot  
2.8 cpi 1:2.2 5 dots

7. Press  to keep **Code 39 –no c/d** as the bar code.
8. Press  to keep the field defined as simple.
9. Press  to keep Alphanumeric as the data type.
10. Press  to keep the current maximum length.
11. Press  to keep the current minimum length.
12. Press  to keep the current field prompt.
13. Press  for no fixed data.
14. Press  to keep the current row location.
15. Press  to keep the current column location.
16. Press  to keep the current density.

Enter Bar Height  
(Units = Inch/100)  
> 50 \_

Top of Field at:  
1. Top of Supply  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars  
8. Make Shoe Size

Enter character  
to Insert: \_

Enter character  
Position: \_\_

Select Edit #2  
1. (None)  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Save changes? Y/N > \_



17. Press  to keep the current bar code height.

18. Press  to keep the current field rotation.

19. Select **Insert Chars**. Press .

20. Type **P**.

21. Type **1**. Press .

22. Press  for no additional data edits.

23. Press  to edit the combo text field containing the human readable characters (for the PART# bar code) so the maximum number of characters is **9**, the start position to copy from is **02** (does not copy the inserted "P" character), the number of characters to copy is **9**, and do not fill the field if it is short.

24. Press **Y**. You return to the Format Menu. Press  until you return to the Main Menu.

## Printing the Format

From the Main Menu, select **Print Labels**, and the **AUTOPART** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

This graphic shows the PART# bar code field, with a “P” as the first character.

Notice that the bar code field contains the maximum number of 10 characters, while the combo field contains a maximum of 9 characters. The combo field does not display the “P.”



## Make Into Price

We will create a new format, **SHOE-PRICE** (2.0 long x 2.0 wide) that contains three text fields and apply the “make into price” edit on the second text field.

**NOTE:** Use this edit only on text fields.

Use the following information to create the text field. See Chapters 5, “Defining Text Fields,” and Chapter 7, “Defining Constant Text Fields” for more information.

Prompts	Text Field 1	Constant Text Field	Text Field 2
Field Class	Simple	N/A	Simple
Data Type	Alpha-numeric	N/A	Numeric
Max. Length	16	N/A	6
Min. Length	1	N/A	1
Field Prompt	ENTER ITEM	N/A	KEY PRICE
Fixed data	None	PRICE	None
Row	130	75	75
Column	10	30	75
Font	3. CG Trium 10p 1002	2. CG Trium 8pt 1001	2. CG Trium 8pt 1001
Height Mag.	1	1	1
Width Mag.	1	1	1
Justif.	1	1	1
Field Rot.	1	1	1
Data Edit	None	N/A	2 Make into Price

## Printing the Format

From the Main Menu, select **Print Labels**, and the **SHOE-PRICE** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

This graphic shows the second text field automatically formatted to include the selected currency (set through Configuration menu) symbols. See Chapter 3, “Configuring the Printer,” for more information.



## Make Into Shoe Size

In our **SHOE-PRICE** sample, we will add one more text field, containing the fixed data “SIZE” and apply the “make into shoe size” edit on that text field. This example also shows how to apply a data edit to a field that includes fixed data.

This edit transforms a size that ends in **5** into a “1/2” size when printed on a label. For example, if you enter 65 as the size, **6 ½** appears on the label.

**NOTE:** Use this edit only on text fields.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

1. Press  to design your formats.

2. Press  to edit an existing format.

Select Format  
for Editing

- = Format Menu = -  
01 SHOE-PRICE  
02 AUTOPART  
03 PRICE  
04 LINE2  
05 LINE  
06 CONSTANT  
07 COMBO  
08 SIZE

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

New Field Location  
Fld: 1 Ufld: 1 Smpl  
Fld: 2 Constant  
Fld: 3 Ufld: 2 Smpl

Add new field  
1. Before or  
2. After  
selected field? > \_

Select Type: Fld #4  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line  
5. Finished

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Complex (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > \_



Enter Max. Length  
> \_ \_ \_

3. Select **SHOE-PRICE**. Press  .

4. Press  to add a field.

5. Select **Fld: 3 Ufld: 2 Smpl**.  .

6. Press  (After selected field).

7. Press  to define a text field.

8. Press  to define a simple field.

9. Press **A** (alpha-numeric).

10. Type **12** as the maximum number of characters in the field. Press  .



Enter Min. Length

> \_ \_ \_ \_

11. Type **1** as the minimum number of characters in the field. Press .

Enter Field Prompt

> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



12. Type **ENTER SIZE**. Press .

Enter Fixed Data  
Press ENTER if none

> \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



13. Type **SIZE**, then press **Space** for the fixed data. Press .

Add fixed data  
Before or After  
entry chars? B/A

> \_



14. Press **B** to print the fixed data before the entry characters.

Enter Row #

> \_ \_ \_ \_

15. Type **95** for the row location. Press .

Enter Col. #

> \_ \_ \_ \_

16. Type **30** for the column location. Press .

- = Select Font = -

1. CG Trium 6.5 1000
2. CG Trium 8 pt 1001
3. CG Trium 10p 1002
4. CG Trium 12p 1003
5. CG Trium 18 p 1004
6. CG Trium 22p 1005
7. CG TrCon 6.5 1006

17. Select **CG Trium 8 pt 1001**. Press .

8. CG TrCon 8 pt 1007
9. CG TrCon 10p 1008
10. CG TrCon 12p 1009
11. CG TrCon 18p 1010
12. CG TrCon 22p 1011
13. LetGoth 6.5 1012
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > \_

18. Press  for the height magnification.

Enter Width Mag for  
this font (1-7) > \_

19. Press  for the width magnification.

Set Justification

1. Left (L)
2. Right (E)
3. Center (B)

Top of Field at:

1. Top of Supply
2. Left of Supply
3. Bottom of Supply
4. Right of Supply

Select Edit #1

1. None
2. Make into Price
3. Pad Data Field
4. Extract Chars
5. Strip Chars
6. Extract from Mid
7. Insert Chars

8. Make Shoe Size

Select Edit #2

1. None
2. Make into Price
3. Pad Data Field
4. Extract Chars
5. Strip Chars
6. Extract from Mid
7. Insert Chars

8. Make Shoe Size

Perform Edits  
Before or After  
including Fixed  
Data? (B/A) > \_

- = Edit Menu = -

1. Edit Header Info
2. Edit a Field
3. Add a Field
4. Delete a Field
5. Quit Edit

Save current  
format? Y/N > \_

20. Press  for the alignment of characters in the field.

21. Press  for the field rotation.

22. Select **Make Shoe Size**. Press .

23. Press  for no additional data edits.

24. Press **A**.

25. Press .

26. Press **Y** to save the format. You return to the Design Menu. Press  until you return to the Main Menu.

## Printing the Format

From the Main Menu, select **Print Labels**, and the **SHOE-PRICE** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

These graphics show the SIZE text field automatically formatted to include the “1/2” shoe size designation, if necessary.

<b>PATENT SANDAL</b>	
<b>SIZE</b>	<b>6 1/2</b>
<b>PRICE</b>	<b>\$19.99</b>

<b>PATENT SANDAL</b>	
<b>SIZE</b>	<b>9</b>
<b>PRICE</b>	<b>\$19.99</b>



# EDITING A FORMAT

11

This chapter includes information about editing a format, copying a format, and deleting a format. Depending on the size of your memory card, you can store up to 80 formats in your printer.

When editing a format, you can modify the header information (format name, supply length and width), add a field, delete a field, or edit an existing field.

We will copy our **SHOE-PRICE** format, add a line field, and delete the text field formatted as price field.

## PATENT SANDAL

SIZE 6 1/2

PRICE \$19.99

## Copying a Format

We will copy our **SHOE-PRICE** format and name the new format **SHOE-SIZE**.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Select Format  
to Copy \_

- = Format Menu = -  
01 SHOE-PRICE  
02 AUTOPART  
03 PRICE  
04 LINE2  
05 LINE  
06 CONSTANT  
07 COMBO  
08 SIZE

1. Press  to design your formats.
2. Press  to copy an existing format.
3. Select **SHOE-PRICE**. Press .

```
Enter Format Name
> -----
  █
```

```
Format Copied!
```

```
- = Design Menu = -
1. Create New Format
2. Edit Old Format
3. Copy Format
4. Delete Format
```

4. Type **SHOE-SIZE** and press  .
5. The format is copied and you return to the Design menu.

## Editing a Field

---

When you edit a field, you can add, delete, or modify existing fields as well as change the format name, supply length, or supply width.

### Adding a Field

In our new **SHOE-SIZE** format, we will add a line field.

```
- = Main Menu = -
1. Design Formats
2. Print Labels
3. Configuration
```

```
- = Design Menu = -
1. Create New Format
2. Edit Old Format
3. Copy Format
4. Delete Format
```

```
Select Format
for Editing _
```

```
- = Format Menu = -
01 SHOE-SIZE
02 SHOE-PRICE
03 AUTOPART
04 PRICE
05 LINE2
06 LINE
07 CONSTANT
```

1. Press  to design your formats.
2. Press  to edit an existing format.
3. Select **SHOE-SIZE**. Press  .

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

New Field Location  
Fld: 1 Ufld: 1 Smpl  
Fld: 2 Constant  
Fld: 3 Ufld: 2 Smpl  
Fld: 4 Ufld: 3 Smpl

Add new field  
1. Before or  
2. After  
selected field? > \_

Select Type: Fld #5  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line

Is line Segment or  
Vector? S/V > \_

Enter Row #  
for First Point  
> \_ \_ \_

Enter Col. #  
for First Point  
> \_ \_ \_

Enter Row #  
for Last Point  
> \_ \_ \_

Enter Col. #  
for Last Point  
> \_ \_ \_

Enter Thickness  
(2 = 0.01 inch)  
> \_ \_

4. Press  to add a field.

5. Select **Fld: 4 Ufld: 3 Smpl**. Press .

6. Press  (After selected field).

7. Press  for a line field.

8. Press **S**.

9. Type **122** for the row location. Press .

10. Type **10** for the column location. Press .

11. Type **122** for the end row location. Press .

12. Type **130** for the end column location. Press .

13. Type **3** and press .

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Save changes? Y/N > \_

14. Press  to exit the Edit menu.

15. Press **Y**. You return to the Format menu.

## Printing the Format

From the Main Menu, select **Print Labels**, and the **SHOE-SIZE** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

This graphic shows the copied **SHOE-SIZE** format with the line field added.

### PATENT SANDAL

**SIZE**    6 1/2

**PRICE**    \$19.99

## Deleting a Field

In our **SHOE-SIZE** format, we will delete the text field formatted as a price field.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

1. Press  to design your formats.

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

2. Press  to edit an existing format.



Select Format  
for Editing \_

- = Format Menu = -  
01 SHOE-SIZE  
02 SHOE-PRICE  
03 AUTOPART  
04 PRICE  
05 LINE2  
06 LINE  
07 CONSTANT

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Select Fld to Erase  
Fld: 1 Ufld: 1 Smpl  
Fld: 2 Constant  
Fld: 3 Ufld: 2 Smpl  
Fld: 4 Ufld: 3 Smpl  
Fld: 5 Line

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Select Fld to Erase  
Fld: 1 Ufld: 1 Smpl  
Fld: 2 Constant  
Fld: 3 Ufld: 3 Smpl  
Fld: 4 Line

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

Save changes? Y/N > \_

3. Select **SHOE-SIZE**. Press  .

4. Press  to delete a field.

5. Select **Fld: 3 Ufld: 2 Smpl** to erase the text field formatted as a price field. Press  .

6. Press  .

7. Select **Fld: 2 Constant** to delete the constant text field containing "PRICE." Press  . The constant text field is erased and you return to the Edit menu.

8. Press  to exit the Edit menu.


9. Press **Y**. You return to the Format menu.

## Printing the Format

From the Main Menu, select **Print Labels**, and the **SHOE-SIZE** format. Follow the field prompts as necessary.

Depending on the data you enter for the bar code fields, this sample prints the following label.

This graphic shows the **SHOE-SIZE** format with the text field formatted as a price field and the constant text field "PRICE" deleted.

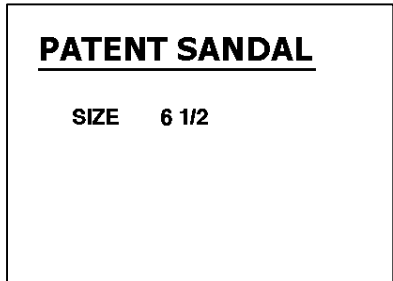

## Modifying an Existing Field

In our **SHOE-SIZE** format, we will modify the text field.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format

Select Format  
for Editing \_

- = Format Menu = -  
01 SHOE-SIZE  
02 SHOE-PRICE  
03 AUTOPART  
04 PRICE  
05 LINE2  
06 LINE  
07 CONSTANT

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

1. Press  to design your formats.
2. Press  to edit an existing format.
3. Select **SHOE-SIZE**. Press .
4. Press  to edit an existing field.

Select Edit Field  
Fld: 1 Ufld: 1 Smpl  
Fld: 2 Ufld: 2 Smpl  
Fld: 3 Line

Select Type:Fld #1  
1. Text Field  
2. Bar Code Field  
3. Constant Text  
4. Line

Select Field Class  
1. Simple Field  
2. Price Field  
3. System Date/Time  
4. Combo (Merged)

Numeric or  
Alpha-Numeric Data?  
A/N > A\_



Enter Max. Length  
> 16 \_

Enter Min. Length  
> 1 \_ \_

Enter Field Prompt  
> ENTER ITEM \_ \_ \_ \_ \_



Enter Fixed Data  
Press ENTER if none  
> \_ \_ \_ \_ \_



Enter Row #  
> 130

Enter Col. #  
> 10 \_

5. Select **Fld: 1 Ufld: 1 Smpl**. Press  .
6. Press  .
7. Press  to keep the field defined as simple.
8. Press  to keep Alphanumeric as the data type.
9. Press  to keep the current maximum length.
10. Press  to keep the current minimum length.
11. Press  to keep the current field prompt.
12. Press  for no fixed data.
13. Press  to keep the current row location.
14. Press  twice and type **5** to change the column location. Press  .

- = Select Font = -  
2. **CG Trium 8 pt 1001**  
3. CG Trium 10p 1002  
4. CG Trium 12p 1003  
5. CG Trium 18 p 1004  
6. CG Trium 22p 1005  
7. CG TrCon 6.5 1006  
8. CG TrCon 8 pt 1007

9. CG TrCon 10p 1008  
10. CG TrCon 12p 1009  
11. CG TrCon 18p 1010  
12. CG TrCon 22p 1011  
13. LetGoth 6.5 1012  
14. LetGoth 9pt 1013

Enter Height Mag for  
this font (1-7) > 1\_

Enter Width Mag for  
this font (1-7) > 1\_

Set Justification

1. **Left (L)**  
2. Right (E)  
3. Center (B)

Top of Field at:

1. **Top of Supply**  
2. Left of Supply  
3. Bottom of Supply  
4. Right of Supply

Select Edit #1

1. **None**  
2. Make into Price  
3. Pad Data Field  
4. Extract Chars  
5. Strip Chars  
6. Extract from Mid  
7. Insert Chars

8. Make Shoe Size

- = Edit Menu = -

1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit

15. Select **CG TrCon 10p 1008**. Press  .

16. Press  to keep the current height magnification.

17. Press  to keep the current width magnification.

18. Press  to keep the current alignment of characters in the field.

19. Press  to keep the current field rotation.

20. Press  for no additional data edits.

21. Press  to exit the Edit menu.

Save changes? Y/N > \_

22. Press **Y**. You return to the Format menu.

## Printing the Format

From the Main Menu, select **Print Labels**, and the **SHOE-SIZE** format. Follow the field prompts as necessary.

Depending on the data you enter for the text fields, this sample prints the following label.

This graphic shows the **SHOE-SIZE** format with the new column location and font in the text field.

PATENT SANDAL

SIZE 6 1/2

## Changing Header Information

When editing a format, you can change the header information: format name, supply length, and supply width.

In our **SHOE-SIZE** format, we will change the format name, supply length, and supply width.

**NOTE:** Before you change the supply length or width, make sure the supply loaded in the printer matches the supply sizes specified in the header information.

- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration

1. Press **1** to design your formats.

- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format


2. Press **2** to edit an existing format.

Select Format  
for Editing \_

- = Format Menu = -  
01 SHOE-SIZE  
02 SHOE-PRICE  
03 AUTOPART  
04 PRICE  
05 LINE2  
06 LINE  
07 CONSTANT

- = Edit Menu = -  
1. Edit Header Info  
2. Edit a Field  
3. Add a Field  
4. Delete a Field  
5. Quit Edit


- Edit Header Menu -  
1. Change Menu Name  
2. Edit MPCL Number  
3. Edit Description  
4. Change Length  
5. Change Width

Edit Format Name  
>SHOE-SIZE \_ \_ \_ \_ \_  




- Edit Header Menu -  
1. Change Menu Name  
2. Edit MPCL Number  
3. Edit Description  
4. Change Length  
5. Change Width

Edit Length of  
Supply (55 – 400)  
>200 \_

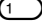
3. Select **SHOE-SIZE**. Press  .



4. Press  to edit the header information.

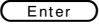5. Select **Change Menu Name**. Press  .

6. Press  four times and type **TAG**. Press  . The format name has been changed to SHOE-TAG. You return to the Edit Header menu.

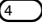**NOTE:** Duplicate names are not allowed.

7. Press  to change the supply length.

8. Press  three times and type **150**. Press  .

Warning: New Length  
less than old length

Press a key to  
continue. Or ESC to  
Abort> \_

- Edit Header Menu -  
1. Change Menu Name  
2. Edit MPCL Number  
3. Edit Description  
4. Change Length  
5. Change Width

Select Supply Width  
1. 1.20 Inches  
2. 1.5 Inches  
3. 2.00 Inches

Warning: New Width  
less than old width

Press a key to  
continue. Or ESC to  
Abort > \_

- Edit Header Menu -  
1. Change Menu Name  
2. Edit MPCL Number  
3. Edit Description  
4. Change Length  
5. Change Width

Save changes? Y/N > \_

9. Press  to continue. You return to the Edit Header menu.

**NOTE:** If your format has fields defined that are close to the non-print zones (top or bottom of the label) and you change the supply length, those fields may print off the label (causing this warning).

10. Press  to change the supply width.

11. Press  to change the supply width to 1.50 inches, instead of 2.0 inches.

12. Press  to continue. You return to the Edit Header menu.

**NOTE:** If your format has fields defined that are close to the non-print zones (edges of the label) and you change the supply width, those fields may print off the label (causing this warning).

13. Press  to return to the Edit menu. Press  to exit the Edit menu.

14. Press Y. You return to the Format menu.

**NOTE:** The row and column locations need to be modified for each field (to fit on 1.5 inch by 1.5 inch supply) as follows:

<b>Field</b>	<b>Row</b>	<b>Column</b>
Text field (item)	90	10
Text field (size)	65	30
Line field	82 start 82 end	82 start 110 end

### **Printing the Format**

From the Main Menu, select **Print Labels**, and the **SHOE-SIZE** format. Follow the field prompts as necessary.

Depending on the data you enter for the text fields, this sample prints the following label. This graphic shows the **SHOE-TAG** format with the new supply length and width dimensions.

**NOTE:** The selections:  
2. Edit MPCL Number  
3. Edit Description  
are reserved for future use.





## Deleting a Format

---

We will delete our **SHOE-TAG** format.

```
- = Main Menu = -  
1. Design Formats  
2. Print Labels  
3. Configuration
```

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```

```
Select Format  
for Deletion _
```

```
- = Format Menu = -  
01 SHOE-TAG  
02 SHOE-PRICE  
03 AUTOPART  
04 PRICE  
05 LINE2  
06 LINE  
07 CONSTANT
```

```
Delete Format:  
01 SHOE-TAG  
Are you sure? Y/N _
```



```
Format Deleted!
```

```
- = Design Menu = -  
1. Create New Format  
2. Edit Old Format  
3. Copy Format  
4. Delete Format
```

1. Press  to design your formats.
2. Press  to delete an existing format.
3. Select **SHOE-TAG**. Press .
4. Press **Y**.
5. The format is deleted and you return to the Design menu.




# TROUBLESHOOTING

# 12

This chapter explains how to reset the printer, call Technical Support, and gives explanations of your printer's errors. The errors are classified by type and are listed in order. Call Technical Support if you receive any error message not listed in this chapter.

If you have trouble loading supplies or performing maintenance, refer to your Equipment Manual.

Problem	Solution
Error:Field off tag MPCL Error #614 Redefine current field	The field you are defining has run off the tag. You must redefine it.
Warning: Possible Field off tag error. Do you wish to redefine current field? (Y)es / (N)o > _	The field you are defining may run off the tag. You can, but it is not necessary, to redefine the field. Press <b>Y</b> to redefine or <b>N</b> to continue. When you print, one or more fields may not print if they are off the supply.
No fields in fmt	You saved the format without entering any fields. Delete the format, and recreate it.
Warning: Low Battery Save changes and exit to Main Menu (Press any key)	Replace the current battery handle with a fully charged one. See your Equipment Manual for battery charging information.
Duplicate Name ReEnter _	Type a new format name and press <input type="button" value="Enter"/> . You cannot have duplicate format names.
If you see the "Hot Key List"	Press <input type="button" value="Enter"/> or <input type="button" value="Esc"/> to return to the Main Menu.
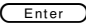
<b>Problem</b>	<b>Solution</b>
If you see the DOS prompt B:\	Type <b>g</b> and press  to start the application.
I2 of 5 bar codes do not scan.	Refer to the Equipment Manual for proper scanning techniques.  Verify that the I2 of 5 bar code scan lengths specified in the printer configuration are even numbers of characters.

---

## **Troubleshooting Information**

---

If you experience problems using your printer, refer to this section.

### **If You Receive an Error Message**

Any time you receive a message that is not described in this manual, or the recommended action does not solve the problem, call Technical Support.

### **Calling Technical Support**

Technical support representatives are available Monday through Friday during regular business hours at 1-800-543-6650. Follow these steps before you call:

1. Record any error messages that occurred.
2. Try to recreate the problem, if you can.
3. List any changes that have recently been made to the system. Try to record what you did when the problem occurred.

If these steps do not solve the problem, call Technical Support.

Have the following information ready before you call:

- ◆ Monarch printer model
- ◆ support agreement, contract number, or invoice information
- ◆ customer number
- ◆ printer serial number

## Data Errors

---

Errors 001 to 499 are data errors. A data error indicates that incorrect data was received from the host, causing the printer to ignore the entire print job. After checking the packet and correcting the problem, transmit the print job again.

The following is a list of data errors. These errors occur because data in the format, batch, check digit, font, or graphic packet is invalid.

### Format Errors (1 - 99)

Error Code	Description
------------	-------------

001	Format ID number must be <b>1</b> to <b>99</b> .
002	Name must be <b>1</b> to <b>8</b> characters inside quotes or a printer-assigned name ("").
003	Action must be <b>A</b> (add) or <b>C</b> (clear).
004	Supply length is invalid (maximum is 4").
005	Supply width is invalid (maximum is 2").
006	Storage device must be <b>R</b> (volatile RAM).
007	Unit of measure must be <b>E</b> (English).
010	Field ID number is outside the range <b>0</b> to <b>999</b> .
011	Field length exceeds <b>2710</b> .
012	Row field position is greater than the maximum stock dimension.
013	Column field position is greater than the maximum stock dimension.

- 014** Font style is invalid. See Chapter 5, "Defining Text Fields," for more information.
- 015** Character rotation must be **0** (0 degrees), **1** (90 degrees), **2** (180 degrees), or **3** (270 degrees). See Chapter 5, "Defining Text Fields," for information.
- 016** Field rotation must be **0** (0 degrees), **1** (90 degrees), **2** (180 degrees), or **3** (270 degrees). See Chapter 5, "Defining Text Fields" for information.
- 017** Field restriction must be **V** (variable) or **F** (fixed).
- 018** Code page selection defined in the field must be **1** (ASCII).
- 020** Vertical magnification must be **1** to **7**.
- 021** Horizontal magnification must be **1** to **7**.
- 022** Color must be **Black Opaque**, **White Opaque**, **Black Transparent**, or **White Transparent**. See Chapter 5, "Defining Text Fields," for more information.
- 023** Intercharacter gap must be **0** to **9** dots.
- 024** Field justification must be **B** (balanced), **L** (left), or **R** (right). See Chapter 5, "Defining Text Fields," for more information.
- 025** Data length is too long.
- 030** Bar code height must be at least **1** or is not within the supply dimensions.
- 031** Human readable option must be
- 1** no CD or NS
  - 5** NS at bottom, no CD
  - 6** CD at bottom, no NS
  - 7** CD and NS at bottom
  - 8** no text
- 032** Bar code type is invalid. See Chapter 6, "Defining Bar Code Fields," for valid options.

- 033** Bar code density is invalid. See Chapter 6, "Defining Bar Code Fields," for the bar code density values.
- 040** Line thickness must be **1** to **10**.
- 041** Line angle must be **0**, **90**, **180**, or **270**.
  
- 042** End row is invalid. Line segment end row is defined outside of printable area. See Chapter 8, "Defining Line Fields," for more information.
- 043** End column is invalid. Line segment end column is defined outside of printable area. See Chapter 8, "Defining Line Fields," for more information.
- 044** Dot pattern for line or box must be "".
- 045** Line length is defined beyond the maximum length of 3.72". See Chapter 8, "Defining Line Fields," for valid lengths.
- 046** Line type must be **S** (segment) or **V** (vector).
- 051** Imaging mode in the graphic header must be **0**.

### **Batch Errors (100 - 199)**

- 101** The format referenced by batch is not in memory.
- 102** Print quantity is outside the range **0** to **25**.
- 104** Batch mode must be **N** (new) or **U** (update).
- 105** Batch separator in a batch control field must be **0** (Off).
- 106** Print multiple is not **1**.
- 108** Multiple part supply is outside the range **1** to **5**.

### **Option Errors (200 - 249)**

- 200** Option number must be **1**, **4**, **31**, or **50**.
- 201** Copy length is outside the range **0** to **255**.

- 202 Copy start position must be **1** to **255**.
- 203 Destination start position must be **1** to **255**.
- 204 Source field must be **0** to **999**.
- 205 Copy type must be **1** (copy after rules) or **2** (copy before rules).
- 211 Narrow element value is less than **1** or greater than **99**. Correct the value and resend the format to the printer.
- 212 Wide element value is less than **1** or greater than **99**. Correct the value and resend the format to the printer.
- 214 Truncation code must be **S** (standard) or **T** (truncated bar code).
- 215 Aspect code must be **C** (columns) or **R** (rows).
- 216 Option definition must be **S** (set) or **T** (template).
- 217 Input device must be **D** (Default), **H** (Host), **K** (Keyboard), **N** (None), or **S** (Scanner).
- 220 Check digit selection must be **G** to generate check digit.
- 221 Primary or secondary price format is outside the range **1** to **15**.
- 222 Data type restriction is outside the range of **1** to **6**.
- 223 Option is not valid for the field.

### **Online Configuration Errors (250 - 299)**

- 251 Power up mode must be **0** (online).
- 252 Language selection must be **0** (English).
- 253 Batch separator code in a supply setup packet must be **0** (off).
- 254 Slash zero selection must be **0** (standard zero).
- 255 Supply type must be **0** (black mark) or **1** (die cut).
- 256 Ribbon selection must be **0** (direct) or **1** (transfer).
- 257 Feed mode must be **0** (continuous) or **1** (on-demand).



- 258 Supply position is outside the range.
- 259 Contrast adjustment must be **-28** to **11**.
- 260 Print adjustment must be **-99** to **99**.
- 261 Margin adjustment must be **-99** to **99**.
- 262 Speed adjustment must be **0** (1.0 IPS).
- 263 Primary monetary symbol is invalid.
- 264 Secondary symbol selection must be **0** (none) or **1** (print secondary sign).
- 265 Monetary decimal places must be **0** to **3**.
- 272 Internal code page selection must be **1** (ASCII).
- 273 Cut adjustment must be **-99** to **99** dots.
- 282 RS232 Trailer string is too long. Use a maximum of **3** characters.
- 283 ENQ Trailer string is too long. Use a maximum of **3** characters.
- 284 The buffer type must be **T** (Transmit), **R** (Receive), **I** (Image), **F** (Format), or **D** (Downloadable Fonts).
- 285 The storage device type in the memory configuration packet must be **R** (volatile RAM).
- 286 The buffer size is invalid.
- 287 The printhead width must be **1.83** inches.
- 288 The battery voltage must be **1** (12-volt battery).
- 289 The printer address specified in the communication settings packet must use exactly six characters.

### **Check Digit Errors (300 - 324)**

- 310 Check digit scheme number must be **1** to **10**.
- 311 Modulus must be **2** to **11**.

**314** Check digit algorithm must be **D** (sum of digits) or **P** (sum of products).

### **General Packet Errors (400 - 435)**

- 400** The character immediately following { is invalid.
- 401** Internal data error. Call Technical Support.
- 402** Field separator is not in the expected location.
- 403** Field separator was not found.
- 404** The number or string that is currently being processed is too long.
- 405** Too many fields exist in the format. You cannot have more than **50** fields in the format. Lines and constant text fields count as fields.
- 406** Packet is incomplete, attempted to delete or overwrite a format used by the current batch, or attempted to load a graphic while the printer was busy.
- 407** Parser timed out- no data. Resend packet to the printer.
- 408** No data. Resend packet to the printer.
- 409** The printer memory is full. Delete unnecessary formats from memory.
- 415** The buffer size you defined exceeds the total available in your machine.
- 420** Internal software error relating to list sync. Call Technical Support.
- 421** Internal software error relating to location name. Call Technical Support.
- 422** Internal software error relating to duplicate name. Call Technical Support.
- 423** Internal mailbox error. Call Technical Support.
- 424** Item in use. Call Technical Support.
- 425** Item already checked out. Call Technical Support.

- 426** Item not checked out. Call Technical Support.
- 427** Format name is invalid. Valid name is **1 - 8** characters inside quotes or "" for a printer-assigned name. If the error reappears, call Technical Support.
- 428** Batch name is invalid. If the error reappears, call Technical Support.
- 429** The field number appears more than once in a format.
- 431** The format file cannot be found.
- 433** The batch references a field number that does not exist in the format.
- 434** Internal software error caused by a downloaded task that is not executable. Turn off the printer. Wait two seconds and turn it back on. If the error persists, call Technical Support.
- 435** Internal software error caused by a downloaded task that already exists. Turn off the printer. Wait two seconds and turn it back on. If the error persists, call Technical Support.

## **Data Formatting Failures**

---

Formatting errors indicate that a field will print incorrectly. After you have checked the data stream and corrected the data, retransmit the format and batch.

For errors 571-619, the batch will still print, but the field, font, bar code, or density may be incomplete, missing or contain incorrect data.

- 571** UPC or EAN bar code data length is invalid. The bar code data length in the batch does not fit the format.
- 573** Price field length is invalid. The price field length in the batch does not fit the format or the field contains blanks.
- 574** No CD scheme or room for CD. The CD scheme in the batch does not fit the format or the field contains blanks.
- 580** Out of memory. Try to reallocate memory. Resend the packet. If the error persists, call Technical Support.

- 603** Internal software error caused by the batch not being held. Turn off the printer. Wait two seconds and turn it back on. If the error persists, call Technical Support.
- 611** Font, bar code or density is invalid. The font, bar code or density in the batch does not fit the format.
- 612** The data in this line of the batch is either missing or does not match the format.
- 613** Reference point off tag.
- 614** Portion of field off tag. There may be an invalid character in the packet. Make sure you did not enter **O** for  $\emptyset$ .
- 615** Bar code width is greater than 16 inches or the number of keywords for your PDF 417 bar code exceeds **928**. Decrease the density or shorten the amount of data to print the bar code.
- 616** Dot shifting failed. A bad dot falls on a bar code that cannot be shifted. Call Technical Support.
- 618** Magnification must be **1** to **7**.

## Machine Faults

---

Errors 700 to 799 occur when there is a problem with the printer.

- 703** The printer sensed a calibration of different-sized black marks. Make sure the correct supply is loaded.
- 704** Printer has not sensed a supply mark within the specified number of inches or out of supplies. Check the supply tracking, supply marks, black mark sensor position, and supply roll for binding. If the error continues to appear, change the supply.
- 730** A memory allocation error occurred during initialization.
- 750** Printhead is overheated. Turn off the printer to let the printhead cool. If the error persists, call Technical Support.

- 751** Printer did not sense a black mark when expected. The supply may be jammed. For errors 751-753, Check the supply tracking, supply marks, black mark sensor position, and supply roll for binding. If the error continues to appear, change the supply.
- 752** Printer sensed a mark in the wrong place.
- 753** Printer sensed a mark that is too long.
- 755** Printhead is open. Close the printhead before continuing. If the error persists, call Technical Support.
- 756** The printer is out of supplies. Load supplies.
- 757** Load supplies. The calibrated supply length differs by plus or minus .25 inches from the format.
- 758** Check supply. Either the supply is not seen or the on-demand sensor is broken. Check for a label jam. Clear the supply path or reload supplies. This error may occur if you remove a label too quickly in on-demand mode. The printer does not recalibrate after this error.
- 762** Low battery. Recharge the battery.
- 763** Waiting to dispense label. Press the trigger.
- 765** Printhead failure. You need a new printhead. Call Technical Support.
- 770** The print motor is not ready. Call Technical Support.
- 771** The format was not found. Recreate the format, and try again. If the problem continues, call Technical Support.
- 790** The printer is busy. Turn off the printer. Wait two seconds and turn it back on. Resend the packets. If the problem continues, call Technical Support.
- 791** The printer has an error pending. Turn off the printer. Wait two seconds and turn it back on. Resend the packets. If the problem continues, call Technical Support.

**792** The printer is not initialized. Call Technical Support.

**793** The printer job queue is full. Turn off the printer. Wait two seconds and turn it back on. Resend the packets. If the problem continues, call Technical Support.

Errors numbered 900-999 are hard printer failures. Call Technical Support if you receive these messages.

# SAMPLE FORMATS

A

The following pages include several samples of different applications, such as item pricing, item identification and receiving/inventory. You can customize any of these formats to meet your needs.

## Item Pricing

The following sample, **PRETZELS** (2.0 long x 2.0 wide), contains two text fields, one bar code field, and one price field.

The human readable characters under the bar code are automatically generated using a combo text field that copies the data entered from the bar code field. Use the following information to create the bar code field:



Prompts	Bar Code Field 1
Bar Code	1. UPC-A
Field Class	1. Simple
Field Prompt	SCAN UPC#
Fixed Data	None
Row	80
Column	15
Density	1. 80
Bar Height	40
Field Rotation	1. Top of Supply
Edits	None

Use the following information to create the text and combo text field for human readable characters:

<b>Prompts</b>	<b>Text Field 2</b>	<b>Combo Field 3</b>
Field Class	1. Simple	2. Combo
Data Type	Alpha-numeric	N/A
Max. Length	10	12
Min. Length	1	1
Field Prompt	ENTER ITEM	N/A
Field Number	N/A	01
Start Position	N/A	01
Num. of Chars.	N/A	12
Fill Direction	N/A	3. Do not Fill
Fixed Data	None	None
Row	135	65
Column	35	15
Font	2. CG Trium 8pt 1001	2. CG Trium 8pt 1001
Height Mag.	1	1
Width Mag.	1	1
Justification	1. Left	1. Left
Field Rotation	1. Top of Supply	1. Top of Supply
Edits	None	None



Use the following information to create the price field:

<b>Prompts</b>	<b>Price Field 4</b>
Field Class	2. Price Field
Max. Length	5 (including the \$ and . point)
Min. Length	1
Field Prompt	ENTER PRICE
Fixed Data	None
Row	40
Column	35
Font	2. CG Trium 8pt 1001
Height Mag.	1
Width Mag.	1
Justification	1. Left
Field Rotation	1. Top of Supply

The following sample, **DETERGENT** (2.0 long x 2.0 wide), contains two text fields, one bar code field, and one price field.

To print the human readable characters, you must set the default UPC appearance from the configuration menu.

Use the following information to create the bar code field:



Prompts	Bar Code Field 1
Bar Code	1. UPC-A
Field Class	1. Simple
Field Prompt	SCAN UPC#
Fixed Data	None
Row	80
Column	25
Density	2. 120
Bar Height	45
Field Rotation	1. Top of Supply
Edits	None

Use the following information to create the text (item) and text (dept.) fields:

<b>Prompts</b>	<b>Text Field 2</b>	<b>Text Field 3</b>
<b>Field Class</b>	1. Simple Field	1. Simple Field
<b>Data Type</b>	Alpha-numeric	Alpha-numeric
<b>Max. Length</b>	12	5
<b>Min. Length</b>	1	1
<b>Field Prompt</b>	ENTER ITEM	ENTER DEPT#
<b>Fixed Data</b>	None	None
<b>Row</b>	55	25
<b>Column</b>	50	15
<b>Font</b>	2. CG Trium 8pt 1001	2. CG Trium 8pt 1001
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	1. Top of Supply	1. Top of Supply
<b>Edits</b>	None	None

Use the following information to create the price field:

<b>Prompts</b>	<b>Price Field 4</b>
<b>Field Class</b>	2. Price Field
<b>Max. Length</b>	5 (including the \$ and . point)
<b>Min. Length</b>	1
<b>Field Prompt</b>	ENTER PRICE
<b>Fixed Data</b>	None
<b>Row</b>	25
<b>Column</b>	140
<b>Font</b>	2. CG Trium 8pt 1001
<b>Height Mag.</b>	1
<b>Width Mag.</b>	1
<b>Justification</b>	1. Left
<b>Field Rotation</b>	1. Top of Supply

The following sample, **SALE**  
 (4.0 long x 2.0 wide), contains two constant  
 text fields, four text fields, one bar code  
 field, and two price fields with fixed data.  
 To print the human readable characters, you  
 must set the default UPC (and EAN)  
 appearance from the configuration menu.  
 Use the following information to create the  
 two constant text fields for store# and dept.#.



Prompts	Constant Text Field 1	Constant Text Field 2
Fixed Data	063	DEPT#25
Row	300	300
Column	15	125
Font	1. CG Trium 6.5 1000	1. CG Trium 6.5 1000
Height Mag.	1	1
Width Mag.	1	1
Justification	1. Left	1. Left
Field Rotation	1. Top of Supply	1. Top of Supply

Use the following information to create the four text fields for the item description:

<b>Prompts</b>	<b>Text Field 1</b>	<b>Text Field 2</b>
<b>Field Class</b>	1. Simple Field	1. Simple Field
<b>Data Type</b>	Alpha-numeric	Alpha-numeric
<b>Max. Length</b>	12	8
<b>Min. Length</b>	1	1
<b>Field Prompt</b>	ENTER ITEM	ENTER SIZE
<b>Fixed Data</b>	None	None
<b>Row</b>	265	245
<b>Column</b>	50	55
<b>Font</b>	3. CG Trium 10p 1002	3. CG Trium 10p 1002
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	1. Top of Supply	1. Top of Supply
<b>Edits</b>	None	None

<b>Prompts</b>	<b>Text Field 3</b>	<b>Text Field 4</b>
<b>Field Class</b>	1. Simple Field	1. Simple Field
<b>Data Type</b>	Alpha-numeric	Alpha-numeric
<b>Max. Length</b>	8	14
<b>Min. Length</b>	1	1
<b>Field Prompt</b>	ENTER COLOR	ENTER FABRIC
<b>Fixed Data</b>	None	None
<b>Row</b>	225	205
<b>Column</b>	60	30
<b>Font</b>	3. CG Trium 10p 1002	3. CG Trium 10p 1002
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	1. Top of Supply	1. Top of Supply
<b>Edits</b>	None	None

Use the following information to create the bar code field:

<b>Prompts</b>	<b>Bar Code Field 5</b>
<b>Bar Code</b>	7. EAN-13
<b>Field Class</b>	1. Simple
<b>Field Prompt</b>	SCAN BAR CODE
<b>Fixed Data</b>	None
<b>Row</b>	150
<b>Column</b>	35
<b>Density</b>	1. 80
<b>Bar Height</b>	40
<b>Field Rotation</b>	1. Top of Supply
<b>Edits</b>	None



Use the following information to create the two price fields.

<b>Prompts</b>	<b>Price Field 6</b>	<b>Price Field 7</b>
<b>Field Class</b>	2. Price Field	2. Price Field
<b>Max. Length</b>	14	14
<b>Min. Length</b>	1	1
<b>Field Prompt</b>	ENTER ORIG PRICE	ENTER SALE PRICE
<b>Fixed Data</b>	WAS	NOW
<b>Before or After</b>	B	B
<b>Row</b>	105	80
<b>Column</b>	10	10
<b>Font</b>	4. CG Trium 12p 1003	4. CG Trium 12p 1003
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	1. Top of Supply	1. Top of Supply

## Item Identification

The following sample, **SWEATER** (2.0 long x 2.0 wide), contains four text fields and two date/time fields with fixed data.

Use the following information to create the four text fields for the item description:

**SWEATER  
SMALL  
RED  
COTTON-RAMIE**

**STOCK 7/1  
SALE 7/4-7/11**

Prompts	Text Field 1	Text Field 2
<b>Field Class</b>	1. Simple Field	1. Simple Field
<b>Data Type</b>	Alpha-numeric	Alpha-numeric
<b>Max. Length</b>	12	8
<b>Min. Length</b>	1	1
<b>Field Prompt</b>	ENTER ITEM	ENTER SIZE
<b>Fixed Data</b>	None	None
<b>Row</b>	120	100
<b>Column</b>	10	10
<b>Font</b>	3. CG Trium 10p 1002	3. CG Trium 10p 1002
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	1. Top of Supply	1. Top of Supply
<b>Edits</b>	None	None

<b>Prompts</b>	<b>Text Field 3</b>	<b>Text Field 4</b>
<b>Field Class</b>	1. Simple Field	1. Simple Field
<b>Data Type</b>	Alpha-numeric	Alpha-numeric
<b>Max. Length</b>	8	14
<b>Min. Length</b>	1	1
<b>Field Prompt</b>	ENTER COLOR	ENTER FABRIC
<b>Fixed Data</b>	None	None
<b>Row</b>	80	60
<b>Column</b>	10	10
<b>Font</b>	3. CG Trium 10p 1002	3. CG Trium 10p 1002
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	1. Top of Supply	1. Top of Supply
<b>Edits</b>	None	None


Use the following information to create the two date/time fields with fixed data.

<b>Prompts</b>	<b>Date/Time Field 5</b>	<b>Date/Time Field 6</b>
<b>Field Class</b>	3. System Date/Time	3. System Date/Time
<b>Template</b>	MM/DD	MM/DD
<b>Fixed Data</b>	STOCK(space)	SALE 7/4-
<b>Before or After</b>	B	B
<b>Row</b>	30	10
<b>Column</b>	10	10
<b>Font</b>	1. CG Trium 6.5 1000	1. CG Trium 6.5 1000
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	1. Top of Supply	1. Top of Supply

The following sample, **MEDICAL** (2.0 long x 2.0 wide), contains two text fields, one bar code field, one combo text field, and one date/time field.

The human readable characters under the bar code are automatically generated using a combo text field that copies the data entered from the bar code field.

Use the following information to create the two text fields:

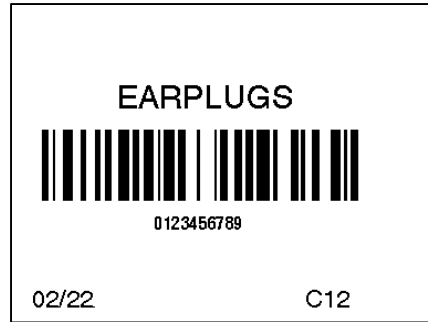

Prompts	Text Field 1	Text Field 2
<b>Field Class</b>	1. Simple Field	1. Simple Field
<b>Data Type</b>	Alpha-numeric	Alpha-numeric
<b>Max. Length</b>	12	4
<b>Min. Length</b>	1	1
<b>Field Prompt</b>	ENTER ITEM	ENTER DEPT#
<b>Fixed Data</b>	None	None
<b>Row</b>	100	5
<b>Column</b>	50	130
<b>Font</b>	3. CG Trium 10p 1002	1. CG Trium 6.5 1000
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	1. Top of Supply	1. Top of Supply
<b>Edits</b>	None	None

Use the following information to create the bar code field:

<b>Prompts</b>	<b>Bar Code Field 3</b>
<b>Bar Code</b>	8. Code 128
<b>Field Class</b>	1. Simple
<b>Data Type</b>	Numeric
<b>Max. Length</b>	10
<b>Min. Length</b>	1
<b>Field Prompt</b>	SCAN BAR CODE
<b>Fixed Data</b>	None
<b>Row</b>	60
<b>Column</b>	10
<b>Density</b>	5.8/11.7 cpi 3 dots
<b>Bar Height</b>	30
<b>Field Rotation</b>	1. Top of Supply
<b>Edits</b>	None

Use the following information to create the combo field.

<b>Prompts</b>	<b>Combo Field 4</b>
<b>Field Class</b>	4. Combo
<b>Max. Length</b>	10
<b>Min. Length</b>	1
<b>Field Number</b>	03
<b>Start Position</b>	01
<b>Num. of Chars.</b>	10
<b>Fill Direction</b>	3. Do not Fill
<b>Fixed Data</b>	None
<b>Row</b>	45
<b>Column</b>	50
<b>Font</b>	1. CG Trium 6.5 1000
<b>Height Mag.</b>	1
<b>Width Mag.</b>	1
<b>Justification</b>	1. Left
<b>Field Rotation</b>	1. Top of Supply
<b>Edits</b>	None

Use the following information to create the date/time field.

<b>Prompts</b>	<b>Date/Time Field 5</b>
<b>Field Class</b>	3. System Date/Time
<b>Template</b>	MM/DD
<b>Fixed Data</b>	None
<b>Row</b>	5
<b>Column</b>	5
<b>Font</b>	1. CG Trium 6.5 1000
<b>Height Mag.</b>	1
<b>Width Mag.</b>	1
<b>Justification</b>	1. Left
<b>Field Rotation</b>	1. Top of Supply



## Receiving/Inventory

The following sample, **CODE39-LOT** (4.0 long x 2.0 wide), contains three text fields (2 with fixed data), one bar code field, one combo field, and one date/time field.

The human readable characters under the bar code are automatically generated using a combo text field that copies the data entered from the bar code field.

Use the following information for the three text fields:

<b>LOT# 6741</b>	<b>QTY 48</b>
	
67414022201	
02/22/01	
BULK TOMATO PASTE	

Prompts	Text Field 1	Text Field 2
<b>Field Class</b>	1. Simple Field	1. Simple Field
<b>Data Type</b>	Alpha-numeric	Alpha-numeric
<b>Max. Length</b>	10	8
<b>Min. Length</b>	1	1
<b>Field Prompt</b>	ENTER LOT#	ENTER QTY
<b>Fixed Data</b>	LOT#(space)	QTY(space)
<b>Before or After</b>	B	B
<b>Row</b>	280	65
<b>Column</b>	165	165
<b>Font</b>	2. CG Trium 8pt 1001	2. CG Trium 8pt 1001
<b>Height Mag.</b>	1	1
<b>Width Mag.</b>	1	1
<b>Justification</b>	1. Left	1. Left
<b>Field Rotation</b>	4. Right of Supply	4. Right of Supply
<b>Edits</b>	None	None

Use the following information to create the third text field:

<b>Prompts</b>	<b>Text Field 3</b>
<b>Field Class</b>	1. Simple Field
<b>Data Type</b>	Alpha-numeric
<b>Max. Length</b>	20
<b>Min. Length</b>	1
<b>Field Prompt</b>	ENTER ITEM
<b>Fixed Data</b>	None
<b>Row</b>	215
<b>Column</b>	30
<b>Font</b>	1. CG Trium 6.5 1000
<b>Height Mag.</b>	1
<b>Width Mag.</b>	1
<b>Justification</b>	1. Left
<b>Field Rotation</b>	4. Right of Supply
<b>Edits</b>	None

Use the following information to create the bar code field:

<b>Prompts</b>	<b>Bar Code Field 4</b>
<b>Bar Code</b>	4. Code 39 – no c/d
<b>Field Class</b>	1. Simple
<b>Data Type</b>	Numeric
<b>Max. Length</b>	12
<b>Min. Length</b>	1
<b>Field Prompt</b>	SCAN BAR CODE
<b>Fixed Data</b>	None
<b>Row</b>	260
<b>Column</b>	100
<b>Density</b>	6.6 cpi 1:2.5 2 dots
<b>Bar Height</b>	50
<b>Field Rotation</b>	4. Right of Supply
<b>Edits</b>	None

Use the following information to create the combo text field:

<b>Prompts</b>	<b>Combo Field 5</b>
<b>Field Class</b>	2. Combo
<b>Max. Length</b>	12
<b>Min. Length</b>	1
<b>Field Number</b>	04
<b>Start Position</b>	01
<b>Num. of Chars.</b>	12
<b>Fill Direction</b>	3. Do not Fill
<b>Fixed Data</b>	None
<b>Row</b>	260
<b>Column</b>	85
<b>Font</b>	2. CG Trium 8pt 1001
<b>Height Mag.</b>	1
<b>Width Mag.</b>	1
<b>Justification</b>	1. Left
<b>Field Rotation</b>	4. Right of Supply
<b>Edits</b>	None

Use the following information to create the date/time field:

<b>Prompts</b>	<b>Date/Time Field 6</b>
<b>Field Class</b>	3. System Date/Time
<b>Template</b>	MM/DD/YY
<b>Fixed Data</b>	None
<b>Row</b>	200
<b>Column</b>	50
<b>Font</b>	1. CG Trium 6.5 1000
<b>Height Mag.</b>	1
<b>Width Mag.</b>	1
<b>Justification</b>	1. Left
<b>Field Rotation</b>	4. Right of Supply



# USING FONTS

# B

This appendix contains the information you need to work with fonts. These fonts are standard in your printer.

Number	Font Size and Appearance	Type of Spacing	# of Dots Between Characters
1000	CG Triumvirate Bold 6.5 pt	proportional	varies w/each letter
1001	CG Triumvirate Bold 8 pt	proportional	varies w/each letter
1002	CG Triumvirate Bold 10 pt	proportional	varies w/each letter
1003	CG Triumvirate Bold 12 pt	proportional	varies w/each letter
1004	CG Triumvirate Bold 18 pt	proportional	varies w/each letter
1005	CG Triumvirate Bold 22 pt	proportional	varies w/each letter
1006	CG Triumvirate Bold Condensed 6.5 pt	proportional	varies w/each letter
1007	CG Triumvirate Bold Condensed 8 pt	proportional	varies w/each letter
1008	CG Triumvirate Bold Condensed 10 pt	proportional	varies w/each letter
1009	CG Triumvirate Bold Condensed 12 pt	proportional	varies w/each letter
1010	CG Triumvirate Bold Condensed 18 pt	proportional	varies w/each letter
1011	CG Triumvirate Bold Condensed 22 pt	proportional	varies w/each letter
1012	Letter Gothic Bold 6 pt	monospaced	1
1013	Letter Gothic Bold 9 pt	monospaced	2

**NOTE:** Point sizes greater than 12 include only the following characters:  
**0123456789#\$\$%&(),./@DFKLMPS\kpröç£¥**

Refer to the following pages for illustrations of these fonts.

## Monospaced Font Magnification

---

Monospaced characters occupy the same amount of space within a magnification. Use monospaced fonts for price fields and data you want to list in a column. Decide how wide and tall you want the characters to appear on the labels. The following two tables show the width and height of each of the monospaced fonts after magnification.

This table includes the default gap spacing for Letter Gothic 6 pt and Letter Gothic 9 pt.

Width Mag.	Letter Gothic 6 pt		Letter Gothic 9 pt	
Units	Character Width	Sample	Character Width	Sample
1x 1/100 in.	4.69	L	7.29	█
7x 1/100 in.	32.81	L	51.04	█

## Height Magnification

Letter Gothic

L

L







1/100 in	6.9	48.28
----------	-----	-------









## Proportional Font Magnification

Each character in a proportionally spaced font is a different width. You may be able to place more characters on a line using proportionally spaced fonts. You may want to experiment with these fonts and adjust field measurements in your format as needed. The following tables provide height and width magnification of sample characters.


### CG Triumvirate Bold (8 pt.)

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	1.56    ' 	5.73    L 	10.94    w 
7x 1/100 in.	6.9    ■ 	20.7    ■ 	41.4 







### CG Triumvirate Bold (6.5 pt.) Font #1000

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	1.56    ' 	4.69    L 	9.90    w 
7x 1/100 in.	10.94    ■ 	32.81    ■ 	69.27 


### Height Magnification

	1x	w	7x	
1/100 in	6.77		47.40	







**CG Triumvirate Bold (8 pt.) Font #1001**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	1.56 	5.73 	10.94 
7x 1/100 in.	6.9 	20.7 	41.4 


**Height Magnification**

	1x	w	7x	
1/100 in	8.33		58.33	




**CG Triumvirate Bold (10 pt.) Font #1002**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	1.56 	6.77 	13.02 
1/10 mm	3.97	17.20	33.07
Dots	3	13	25
7x 1/100 in.	10.94 	47.40 	91.15 
1/10 mm	27/78	120.39	231.51
Dots	21	91	175


**Height Magnification**

	1x	w	7x	
1/100 in	10.42		72.92	




**CG Triumvirate Bold (12 pt.) Font #1003**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	2.60 <b>I</b>	8.85 <b>L</b>	16.15 <b>W</b>
7x 1/100 in.	18.23 	67.94 	113.02 



**Height Magnification**

	1x	W	7x
1/100 in	12.50		87.50

**CG Triumvirate Bold (18 pt.) Font #1004**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	7.81 <b>1</b>	12.50 <b>8</b>	22.92 <b>%</b>
7x 1/100 in.	54.69 	87.50 	160.42 

**Height Magnification**

	1x	8	7x
1/100 in	19.27		134.90 

**CG Triumvirate Bold (22 pt.) Font #1005**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	9.38 <b>1</b>	15.63 <b>8</b>	27.08 <b>0%</b>
7x 1/100 in.	65.63 <b>1</b>	109.38 <b>8</b>	189.58 <b>0%</b>







**Height Magnification**

1x                      8                      7x



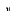

1/100 in	23.44	164.05
----------	-------	--------







**CG Triumvirate Bold Cond (6.5 pt.) Font #1006**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	1.04 	3.65 	6.25 
7x 1/100 in.	7.29 	25.52 	43.75 



**Height Magnification**

	1x	7x
1/100 in	6.77 	47.40 







**CG Triumvirate Bold Cond (8 pt.) Font #1007**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	1.56 	4.69 	8.85 
7x 1/100 in.	10.94 	32.81 	67.94 

**Height Magnification**


	1x	7x
1/100 in	8.85 	61.98 

**CG Triumvirate Bold Cond (10 pt.) Font #1008**







Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	2.08 	5.73 	11.98 
7x 1/100 in.	14.58 	40.10 	83.85 

**Height Magnification**

	1x	7x
1/100 in	10.94	76.56




**CG Triumvirate Bold Cond (12 pt.) Font #1009**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	2.60 	7.29 	14.58 
7x 1/100 in.	18.23 	51.04 	96.88 

**Height Magnification**

	1x	7x
1/100 in	13.02	91.15



**CG Triumvirate Bold Cond (18 pt.) Font #1010**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	7.81 <b>1</b>	10.94 <b>8</b>	21.88 <b>0/0</b>
7x 1/100 in.	54.69 <b>1</b>	76.56 <b>8</b>	153.12 <b>0/0</b>

**Height Magnification**

	1x	<b>8</b>	7x
1/100 in	20.31		142.19



**CG Triumvirate Bold Cond (22 pt.) Font #1011**

Width Mag.	Minimum	Average	Maximum
1x 1/100 in.	9.38 <b>1</b>	13.02 <b>8</b>	26.56 <b>0/0</b>
7x 1/100 in.	65.63 <b>1</b>	91.15 <b>8</b>	185.94 <b>0/0</b>

**Height Magnification**

1x

**8**

7x



1/100 in	24.48	171.35
----------	-------	--------





For supplies, service, or assistance call toll free:

**1-800-543-6650 (In the U.S.A.)**

**1-800-263-4650 (In Canada)**

**[www.monarch.com](http://www.monarch.com)**