



LS 1004 Scanner



Product Reference Guide



LS 1004 Scanner Product Reference Guide



70-33806-01
Revision B — April 2001

***LS 1004 Scanner
Product Reference Guide***

70-33806-01

Revision B

April 2001



© 1998 - 2001 by Symbol Technologies, Inc. All rights reserved.

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission in writing from Symbol. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an “as is” basis. All software, including firmware, furnished to the user is on a licensed basis. Symbol grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Symbol. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Symbol. The user agrees to maintain Symbol’s copyright notice on the licensed programs delivered hereunder, and to include the same on any authorized copies it makes, in whole or in part. The user agrees not to decompile, disassemble, decode, or reverse engineer any licensed program delivered to the user or any portion thereof.


Symbol reserves the right to make changes to any software or product to improve reliability, function, or design.

Symbol does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any Symbol Technologies, Inc., intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in Symbol products.

Symbol, Spectrum One, and Spectrum24 are registered trademarks of Symbol Technologies, Inc. Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, New York 11742-1300
<http://www.symbol.com>

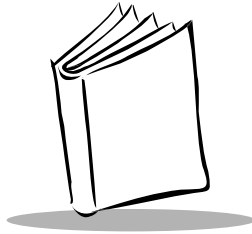

Contents

About This Guide


Notational Conventions	vii
Related Publications	vii
Service Information	viii
Symbol Support Center	viii
Warranty	x
Warranty Coverage and Procedure	x
General	x

Chapter 1. Introduction and Setup

Chapter Contents	1-1
Introduction 1-3	
Audience	1-3
Set-Up	1-3
Unpacking	1-3
Installing the Cable	1-4
Switching Cables	1-5
Connecting to a Host	1-5
RS-232C	1-5
IBM 468X/9X	1-8
Wand Emulation, IBM 468x, IBM 469x, OCIA, and OCR	1-8

Chapter 2. Scanning

Chapter Contents	2-1
Introduction 2-3	
Scanning with the LS 1004	2-3
Aiming	2-4
Scan the Entire Symbol	2-4
Hold at an Angle	2-4



Chapter 3. Maintenance & Specifications

Chapter Contents.....	3-1
Introduction 3-3.....	
Maintaining the LS 1004 Scanner.....	3-3
Battery Box Operation.....	3-3
Maintenance.....	3-4
Accessories.....	3-4
Required Accessories.....	3-4
Optional Accessories.....	3-4
What If.....	3-5
LS 1004 Technical Specifications.....	3-6
LS 1004 Decode Zone.....	3-6

Chapter 4. Programming The LS 1004


Chapter Contents.....	4-1
Introduction 4-3.....	
RS-232 Host Type Defaults.....	4-6
RS-232C Code ID Characters.....	4-7
Scanning Sequence.....	4-7
Scanning Sequence Example.....	4-7
Errors While Scanning.....	4-8
Parameter Menus.....	4-9
Set Parameter Defaults.....	4-9
Host Interface Select.....	4-9
RS-232 Host Type.....	4-10
Power On Beep Enable/Disable.....	4-11
Beeper after Decode.....	4-11
Beeper Tone.....	4-12
Beeper Volume.....	4-12
Decode Attempt Time.....	4-13
Decode Attempt Time (cont'd).....	4-14
Operating Mode.....	4-14
Aggressive Scan Mode.....	4-14
Transmit “No Decode” Message.....	4-15
Decode Redundancy.....	4-15
Code Types.....	4-15
UPC/EAN.....	4-17
Code 128.....	4-22
Code 39.....	4-23
Code 93.....	4-24
Interleaved 2 of 5.....	4-24
Discrete 2 of 5.....	4-27
Codabar.....	4-29

Data Options	4-30
RS-232C	4-34


Appendix A. ASCII Character Set

Glossary

Index

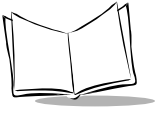

LS 1004 Product Reference Guide

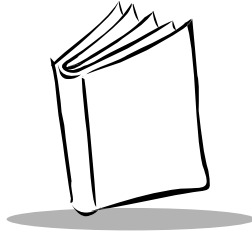

About This Guide

The *LS 1004 Product Reference Guide* provides general instructions for setup, programming, operation, troubleshooting, and maintenance of the LS 1004 scanner.


Notational Conventions

The following conventions are used in this document:

- ◆ Bullets (◆) indicate:
 - ◆ action items
 - ◆ lists of alternatives
 - ◆ lists of required steps that are not necessarily sequential
- ◆ Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

Related Publications

- | | |
|---|-----------------|
| ◆ <i>LS 1000 Series Quick Reference Guide</i> | p/n 70-17422-xx |
| ◆ <i>LS 1000 Product Reference Guide</i> | p/n 70-17529-xx |

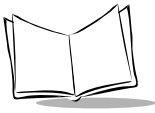

Service Information

If you have a problem with your equipment, contact the *Symbol Support Center* for your region. See page viii for contact information. Before calling, have the model number, serial number, and several of your bar code symbols at hand.

Call the Support Center from a phone near the scanning equipment so that the service person can try to talk you through your problem. If the equipment is found to be working properly and the problem is symbol readability, the Support Center will request samples of your bar codes for analysis at our plant.

If your problem cannot be solved over the phone, you may need to return your equipment for servicing. If that is necessary, you will be given specific directions.

Note: *Symbol Technologies is not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty. If the original shipping container was not kept, contact Symbol to have another sent to you.*

Symbol Support Center

For service information, warranty information or technical assistance contact or call the Symbol Support Center in:

United States

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, New York 11742-1300
1-800-653-5350

United Kingdom

Symbol Technologies
Symbol Place
Winnersh Triangle, Berkshire RG41 5TP
United Kingdom
0800 328 2424 (Inside UK)
+44 208 945 7529 (Outside UK)

Australia

Symbol Technologies Pty. Ltd.
432 St. Kilda Road
Melbourne, Victoria 3004
1-800-672-906 (Inside Australia)
+61-3-9866-6044 (Outside Australia)

Canada

Symbol Technologies Canada, Inc.
2540 Matheson Boulevard East
Mississauga, Ontario, Canada L4W 4Z2
905-629-7226

Asia/Pacific

Symbol Technologies Asia, Inc.
230 Victoria Street #04-05
Bugis Junction Office Tower
Singapore 188024
337-6588 (Inside Singapore)
+65-337-6588 (Outside Singapore)

Austria

Symbol Technologies Austria GmbH
Prinz-Eugen Strasse 70
Suite 3
2.Haus, 5.Stock
1040 Vienna, Austria
1-505-5794 (Inside Austria)
+43-1-505-5794 (Outside Austria)

Denmark

Symbol Technologies AS
Gydevang 2,
DK-3450 Allerød, Denmark
7020-1718 (Inside Denmark)
+45-7020-1718 (Outside Denmark)

Finland

Oy Symbol Technologies
Kaupintie 8 A 6
FIN-00440 Helsinki, Finland
9 5407 580 (Inside Finland)
+358 9 5407 580 (Outside Finland)

Germany

Symbol Technologies GmbH
Waldstrasse 68
D-63128 Dietzenbach, Germany
6074-49020 (Inside Germany)
+49-6074-49020 (Outside Germany)

Latin America Sales Support

7900 Glades Road
Suite 340
Boca Raton, Florida 33434 USA
1-800-347-0178 (Inside United States)
+1-561-483-1275 (Outside United States)

Netherlands

Symbol Technologies
Kerkplein 2, 7051 CX
Postbus 24 7050 AA
Varsseveld, Netherlands
315-271700 (Inside Netherlands)
+31-315-271700 (Outside Netherlands)

South Africa

Symbol Technologies Africa Inc.
Block B2
Rutherford Estate
1 Scott Street
Waverly 2090 Johannesburg
Republic of South Africa
11-4405668 (Inside South Africa)
+27-11-4405668 (Outside South Africa)

Sweden

Symbol Technologies AB
Albygatan 109D
Solna
Sweden
84452900 (Inside Sweden)
+46 84452900 (Outside Sweden)

Europe/Mid-East Distributor Operations

Contact your local distributor or call
+44 208 945 7360

France

Symbol Technologies France
Centre d'Affaire d'Antony
3 Rue de la Renaissance
92184 Antony Cedex, France
01-40-96-52-21 (Inside France)
+33-1-40-96-52-50 (Outside France)

Italy

Symbol Technologies Italia S.R.L.
Via Cristoforo Colombo, 49
20090 Trezzano S/N Naviglio
Milano, Italy
2-484441 (Inside Italy)
+39-02-484441 (Outside Italy)

Mexico


Symbol Technologies Mexico Ltd.
Torre Picasso
Boulevard Manuel Avila Camacho No 88
Lomas de Chapultepec CP 11000
Mexico City, DF, Mexico
5-520-1835 (Inside Mexico)
+52-5-520-1835 (Outside Mexico)

Norway

Symbol Technologies
Trollasveien 36
Postboks 72
1414 Trollasen, Norway
66810600 (Inside Norway)
+47-66810600 (Outside Norway)

Spain

Symbol Technologies S.A.
Edificio la Piovera Azul
C. Peonias, No. 2 - Sexta Planta
28042 Madrid, Spain
9-1-320-39-09 (Inside Spain)
+34-9-1-320-39-09 (Outside Spain)

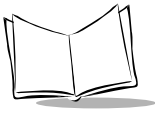

Warranty

Symbol Technologies, Inc (“Symbol”) manufactures its hardware products in accordance with industry-standard practices. Symbol warrants that for a period of five (5) years from date of shipment, products will be free from defects in materials and workmanship. This warranty is provided to the original owner only and is not transferable to any third party. It shall not apply to any product (i) which has been repaired or altered unless done or approved by Symbol, (ii) which has not been maintained in accordance with any operating or handling instructions supplied by Symbol, (iii) which has been subjected to unusual physical or electrical stress, misuse, abuse, power shortage, negligence or accident or (iv) which has been used other than in accordance with the product operating and handling instructions. Preventive maintenance is the responsibility of customer and is not covered under this warranty.

Wear items and accessories having a Symbol serial number, will carry a 90-day limited warranty. Non-serialized items will carry a 30-day limited warranty.

Warranty Coverage and Procedure

During the warranty period, Symbol will repair or replace defective products returned to Symbol’s manufacturing plant in the US. For warranty service in North America, call the Symbol Support Center at 1-800-653-5350. International customers should contact the local Symbol office or support center. If warranty service is required, Symbol will issue a Return Material Authorization Number. Products must be shipped in the original or comparable packaging, shipping and insurance charges prepaid. Symbol will ship the repaired or replacement product freight and insurance prepaid in North America. Shipments from the US or other locations will be made F.O.B. Symbol’s manufacturing plant.

Symbol will use new or refurbished parts at its discretion and will own all parts removed from repaired products. Customer will pay for the replacement product in case it does not return the replaced product to Symbol within 3 days of receipt of the replacement product. The process for return and customer’s charges will be in accordance with Symbol’s Exchange Policy in effect at the time of the exchange.

Customer accepts full responsibility for its software and data including the appropriate backup thereof.

Repair or replacement of a product during warranty will not extend the original warranty term.


Symbol’s Customer Service organization offers an array of service plans, such as on-site, depot, or phone support, that can be implemented to meet customer’s special operational requirements and are available at a substantial discount during warranty period.

General

Except for the warranties stated above, Symbol disclaims all warranties, express or implied, on products furnished hereunder, including without limitation implied warranties of merchantability and fitness for a particular purpose. The stated express warranties are in lieu of all obligations or liabilities on part of Symbol for damages, including without limitation, special, indirect, or consequential damages arising out of or in connection with the use or performance of the product.

Seller’s liability for damages to buyer or others resulting from the use of any product, shall in no way exceed the purchase price of said product, except in instances of injury to persons or property.

Some states (or jurisdictions) do not allow the exclusion or limitation of incidental or consequential damages, so the proceeding exclusion or limitation may not apply to you.

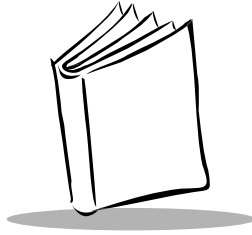


Chapter 1

Introduction and Setup

Chapter Contents

Introduction	1-3
Audience	1-3
Set-Up	1-3
Unpacking	1-3
Installing the Cable	1-4
Switching Cables	1-5
Connecting to a Host	1-5
RS-232C	1-5
IBM 468X/9X	1-8
Wand Emulation, IBM 468x, IBM 469x, OCIA, and OCR	1-8



LS 1004 Scanner Product Reference Guide

Introduction

Symbol Technologies Inc., the world leader in hand-held laser scanning now offers 21st century technology, while maintaining compatibility with today's existing systems. The LS 1000 Series of hand-held laser scanners offers good performance in retail and light industrial applications. The ergonomic design ensures comfortable use for extended periods of time.

The LS 1004 hand-held scanner is based on the Visible Laser Diode (VLD). This state of the art technology gives the scanner a wider decode zone, greater depth of field, and a visible scan beam. This model reads color bar codes and symbols printed on all substrates. See the **LS 1004 Decode Zone** on page 3-6.

The LS 1004 is compatible with:

- ◆ RS 232C asynchronous terminals
- ◆ Synapse™ “Smart Cables”, which allow you to connect to:
 - ◆ Wand Emulation terminals
 - ◆ IBM 4683/4, 4693/4 series of terminals
 - ◆ All leading OCIA terminals, including NCR, Nixdorf, and ICL terminals.
 - ◆ Dual RS-232 hosts
 - ◆ Popular OCR terminals, such as Fujitsu and ICL.

The LS 1004 scans automatically at the rate of 36 scans per second. For decode capability, see **Technical Specifications** beginning on page 3-6.

Audience

The intended audience for this manual is personnel performing installation/setup and programming of LS 1004 scanners.

Set-Up

Unpacking

Remove the scanner from its packing and inspect it for damage. If the scanner was damaged in transit, call the **Symbol Support Center** at one of the telephone numbers listed in the front of this manual. KEEP THE PACKING. It is the approved shipping container and should be used if you ever need to return your equipment for servicing.



Installing the Cable

1. Insert the cable into the receptacle on the bottom of the scanner, as shown below:

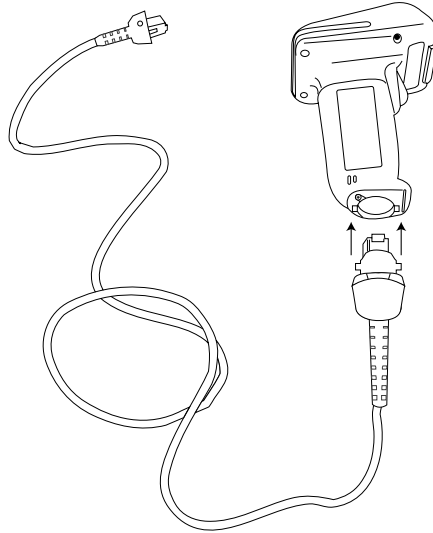


Figure I-1. Installing the Cable

2. Twist the cable to the left to lock in place, as shown below:

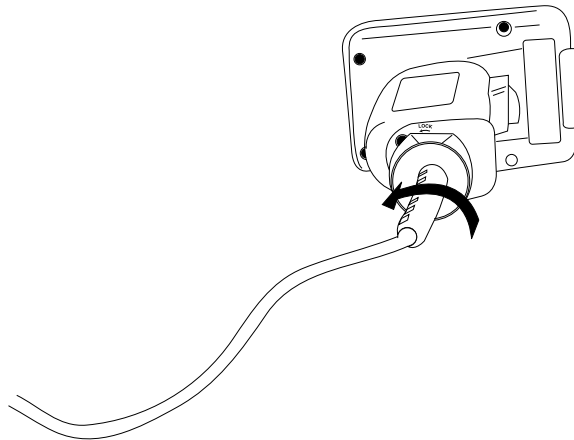


Figure I-2. Installing the Cable:Twistlock Mechanism

Switching Cables

Different cables are required for different hosts. To change the scanner cable:

1. “Unlock” the cable by twisting to the right.
2. Pull the cable out of the receptacle on the bottom of the scanner.

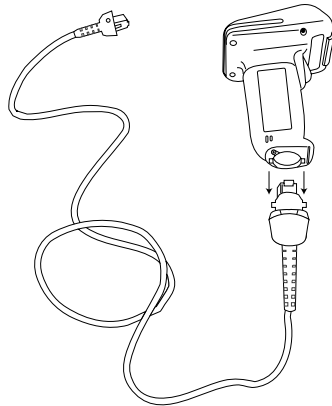


Figure I-3. Removing the Cable

3. Insert a new cable in the receptacle.
4. Twist to the left to lock the new cable in place.

Connecting to a Host

With some terminal types, the LS 100x is unable to answer host terminal polls until the appropriate host type is selected. This may result in an error message generated by the host. To correct this situation, select proper parameter values and initialize the host terminal. See Chapter 4 for more information.

RS-232C

For external power operation with Synapse “Smart Cable”

1. Plug the Synapse adapter cable into the scanner .
2. Connect the Synapse “Smart Cable” with the host connector.
3. If required, connect the power supply to the input receptacle located on the Synapse cable.

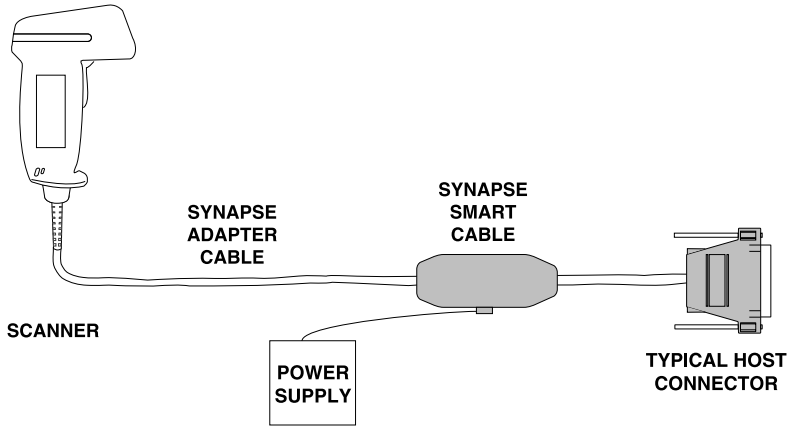


Figure I-4. External Power Connection using Synapse Cable

For RS-232C Operation External Power via Flying Lead Connector

1. Plug the cable into the scanner.
2. Plug the Power Supply into the receptacle on the Flying Lead connector.

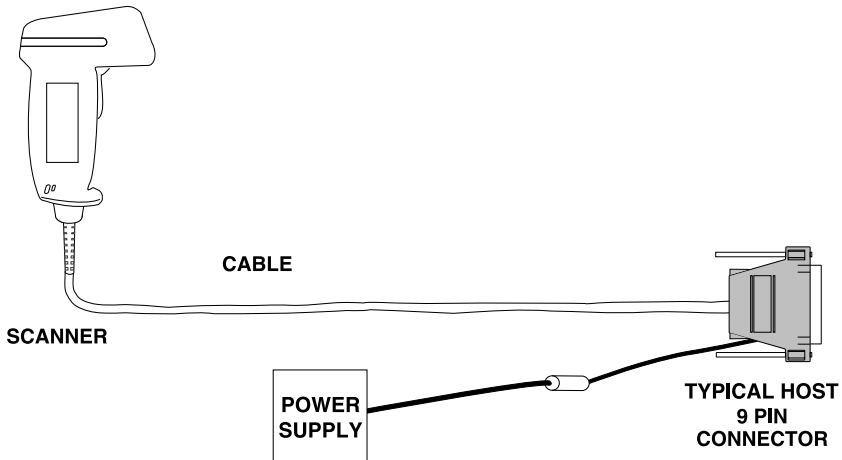


Figure I-5. RS-232C External Power Connection: Flying Lead Connector to a 9-pin Host Connector

For External Power Operation with 25-pin Host Connector

1. Plug the cable into the scanner.
2. Plug the Power Supply into the receptacle on the side of the 25-pin host connector.

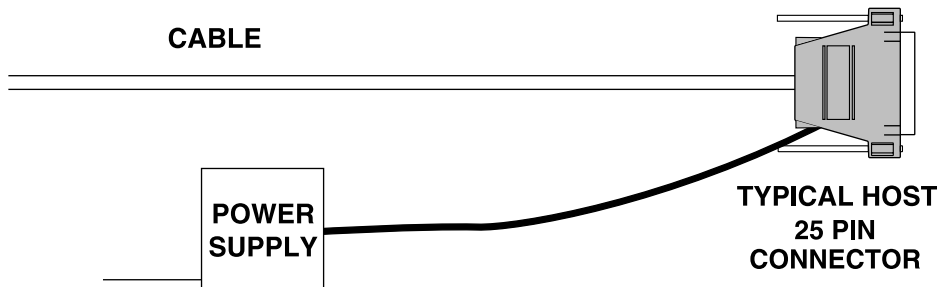


Figure I-6. RS-232C External Power Connection: 25-pin Host Connector

For Battery Operation:

1. Insert a 9-volt battery into the battery box. See the *Battery Box Operation* section on page 3-3.
2. Plug the scanner's 9-pin connector at the end of the cord into one end of the battery box.
3. An output cable from the battery box connects the LS 1004 to the RS-232C input device. Connect one end of this cable to the battery box and the other to the appropriate port on the host device.

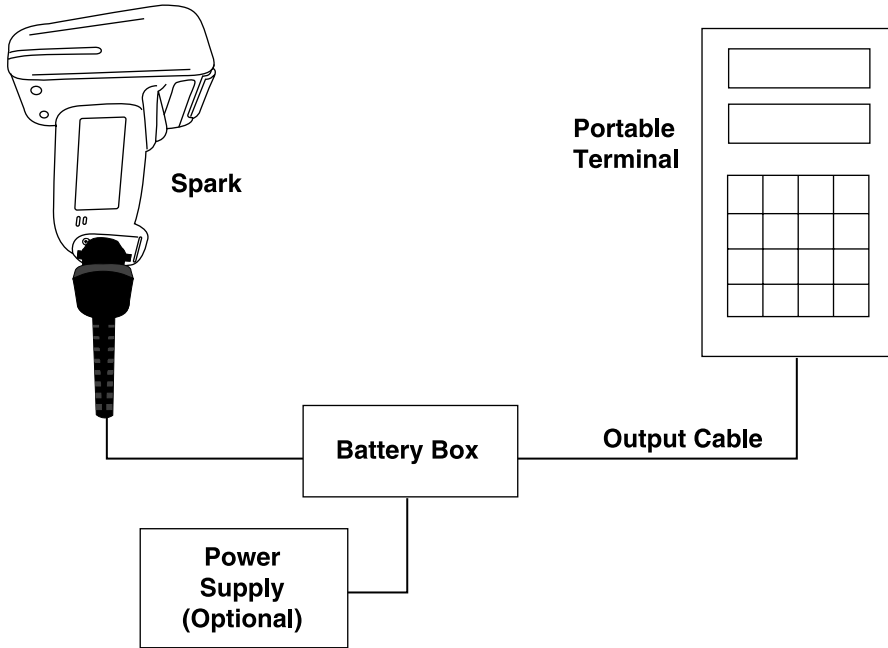
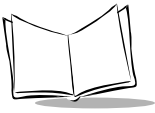


Figure I-7. RS-232C Operation


IBM 468X/9X

Plug the SDL modular connector at the end of the selected Synapse “Smart” cable into the appropriate port (5B, 9B, 9C, 9E, or 17). Check that the connection is secure. To install an LS 1004 on an IBM 468X/469X host:

1. Connect a synapse adapter cable to the scanner, using the procedure described in “Installing the Cable” on page 1-4.
2. Plug the other end of the adaptor cable into the synapse cable’s female connector.
3. Scan the appropriate port address (see your Synapse Guide for details).

Wand Emulation, IBM 468x, IBM 469x, OCIA, and OCR


A Synapse Adapter Cable is required when connecting the LS 1004 to any of these hosts using Synapse. See the instructions packed with the appropriate Synapse cable.

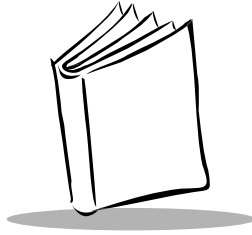

Chapter 2 *Scanning*

Chapter Contents

Introduction	2-3
Scanning with the LS1004	2-3
Aiming	2-4
Scan the Entire Symbol	2-4
Hold at an Angle.....	2-4



LS 1004 Product Reference Guide

Introduction

This chapter covers the techniques involved in scanning bar codes. Included are specific instructions on how to hold the scanner at the appropriate angle to ensure an accurate decode.


Scanning with the LS 1004

1. Make sure all connections are secure.
2. Aim the scanner away from you and press the trigger. When you press the trigger, the scanning beam is energized for approximately 1 second (default).
3. Make sure the symbol you want to scan is within the scanning range. See the **LS 1004 Decode Zone** diagram on page 3-6.

Aim and press the trigger. On the LS 1004, if you use the scanner in default Low Power operating mode, the DECODE LED remains on until power down (maximum of 1 second). If the unit is programmed for Continuous power operating mode, the DECODE LED stays on until the next trigger pull.

The scanner has read the symbol when:

- ◆ You hear a short, high tone beep (if the beeper is enabled).
- ◆ The DECODE LED lights.



Aiming

Scan the Entire Symbol

- ◆ Your scan beam must cross every bar and space on the symbol.
- ◆ The larger the symbol, the farther away you should hold the scanner.
- ◆ Hold the scanner closer for symbols with bars that are close together.
- ◆ A short, high tone beep indicates a good decode.



Hold at an Angle

Do not hold the scanner directly over the bar code. Laser light reflecting *directly* back into the scanner from the bar code is known as specular reflection. This strong light can “blind” the scanner and make decoding difficult. The area where specular reflection occurs is known as a “dead zone”.

You can tilt the scanner up to 65° forward or back and achieve a successful decode. Simple practice quickly shows what tolerances to work within.


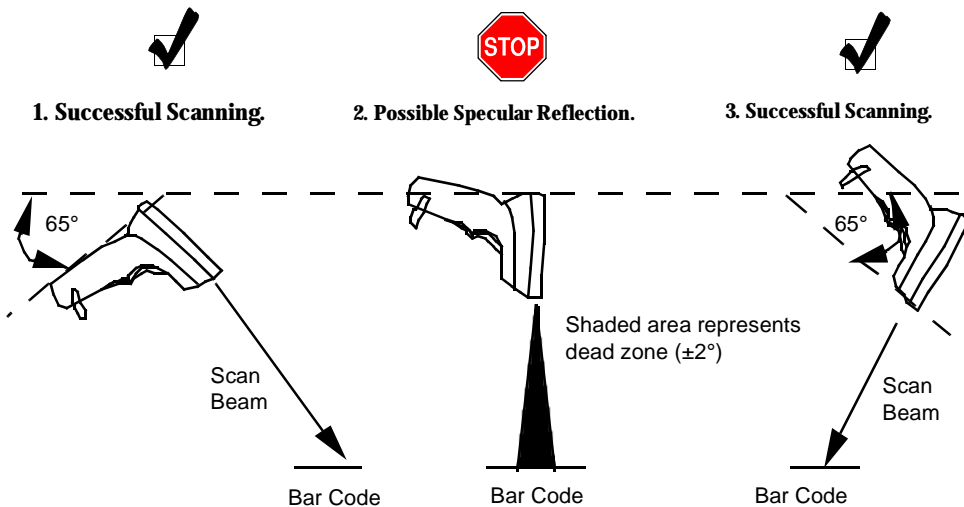


Figure 2-1. Appropriate Angles for Scanning



LS 1004 Product Reference Guide

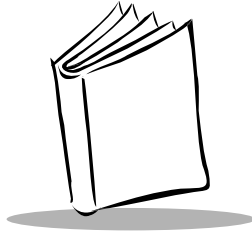

Chapter 3

Maintenance & Specifications

Chapter Contents

Introduction	3-3
Maintaining the LS 1004 Scanner.....	3-3
Battery Box Operation	3-3
Maintenance.....	3-4
Accessories	3-4
Required Accessories.....	3-4
Optional Accessories.....	3-4
What If... ..	3-5
LS 1004 Technical Specifications	3-6
LS 1004 Decode Zone.....	3-6



LS 1004 Product Reference Guide

Introduction

This chapter covers the suggested maintenance of the LS 1004 scanner, as well as the technical specifications, available accessories, pinouts, and beeper definitions.

Maintaining the LS 1004 Scanner

Battery Box Operation


When using the LS 1000 Series with a battery box, you can use either an alkaline battery (recommended), or a nickel-cadmium rechargeable battery. Low power is signalled by 4 short, high-tone beeps, coupled with scanning interruptions. If this occurs, change or recharge the battery as soon as possible. For battery box operation:

1. Insert a 9-volt battery into the battery box.
2. Plug the scanner's 9-pin connector at the end of the coil cord into the end of the battery box.
3. An output cable from the battery box connects the LS 1004 to the host device. Connect one end of this cable to the battery box and the other to the appropriate port on the host device.

Note: Not all applications require a power supply or battery box. The output cable depends on the wand being replaced.

Changing the Battery

1. Disconnect the battery box.
2. To open the battery box, push up on the flanges at one end of the pack.
3. Remove the old battery.
4. Insert the new or recharged 9-volt battery into the battery box. Match the positive (+) and negative (-) terminals on the battery with the corresponding terminals in the battery box.



Recharging a Nickel-Cadmium Battery

- ◆ Remove the battery from the battery box and place it in the recharging unit (not supplied by Symbol).
- ◆ To recharge the battery, follow the instructions supplied with the recharging unit.

Maintenance

Cleaning the exit window is the only maintenance required.

- ◆ Do not allow any abrasive material to touch the window.
- ◆ Remove any dirt particles with a damp cloth.
- ◆ Wipe the window using a damp cloth, and if necessary, a non-ammonia based detergent.
- ◆ Do not spray water or other cleaning liquids directly into the window.

Accessories

Required Accessories

Required accessories are listed below. Optional accessories are available at extra cost.

Table 3-1. LS 1004 Required Accessories

Part Number	Description
ND1222	Synapse Adapter Cable
ND1223	One RS-232 Cable 9-pin female TxD pin 2, or
ND1224	One RS-232 Cable 25-pin male TxD pin 3, or
ND1225	One RS-232 Cable 25-pin TxD pin 3
70-17422-01	LS 1000 Series Quick Reference Guide

Optional Accessories

Optional accessories include various stands and holders, which are supplied at extra cost. Additional units of standard accessories may also be purchased at extra cost.

What If...

Nothing happens when you follow the operating instructions?

You Should

- ◆ Check the system power; is there a battery in the battery box?
- ◆ Be sure the scanner is programmed for the terminal in use.
- ◆ Make sure the scanner is programmed to read the type of bar code you are scanning.
- ◆ Check for loose cable connections.
- ◆ Check the symbol to make sure it is not defaced.
- ◆ Try scanning test symbols of the same code type.
- ◆ Be sure you are within the proper scanning range.

Symbol is decoded, but not transmitted to the host terminal?

You Should

- ◆ Be sure the proper host type is selected (See Chapter 4).

Scanned data is incorrectly displayed on the terminal?

You Should

- ◆ Make sure the system is programmed for the correct keyboard type.
- ◆ Make sure the CAPS LOCK key is off.
- ◆ Be sure the proper host is selected.
- ◆ Be sure editing options (e.g., UPC-E to UPC-A Conversion) are properly programmed.

If after performing these checks the symbol still does not scan, contact your distributor or call the Symbol Support Center. See page viii for the telephone number.



LS 1004 Technical Specifications

LS 1004 Decode Zone

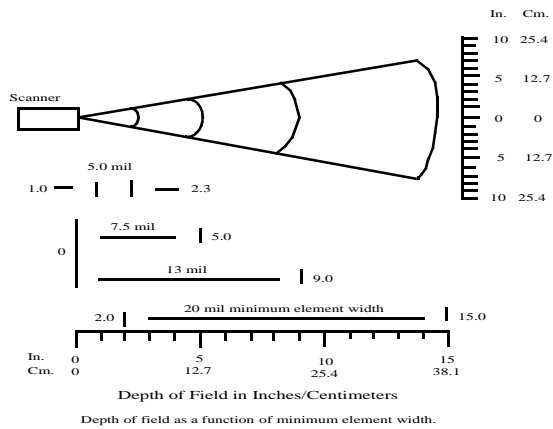


Figure 3-1. LS 1004 Decode Zone

Table 3-2. Technical Specifications

Item	Description				
Power Requirements* RS-232C/Synapse Low Power	4.75 to 14.5 VDC (max) 100mA @ 5VDC typical 4.75 to 14 VDC (max) 200 mA @ 5V typical				
Decode Capability	The LS 1004 can be programmed to decode the following code types: UPC/EAN, Code 39, Code 39 Full ASCII, Code 93, Codabar, Interleaved 2 of 5, Code 128, EAN 128, and Discrete 2 of 5. Set code length(s) for any linear code type. The LS 1004 can auto-discriminate between all of the above code types except for Code 39 and Code 39 Full ASCII.				
Beeper Operation	User-selectable: Enabled, Disabled, Volume, Tone				
Scan Repetition Rate	36 (\pm 3) scans/sec (bidirectional)				
Skew Tolerance	\pm 65° from normal				
Pitch	\pm 60° from normal				
Decode Depth of Field	See Decode Zone				
Print Contrast Minimum	25% absolute dark/light differential, measured at 670 nm.				
Ambient Light Immunity Artificial Lighting Sunlight	<table border="0"> <tr> <td data-bbox="589 1000 757 1027">450 ft. candles</td> <td data-bbox="808 1000 902 1027">4844 lux</td> </tr> <tr> <td data-bbox="589 1036 757 1063">8000 ft. candles</td> <td data-bbox="808 1036 915 1063">86112 lux</td> </tr> </table>	450 ft. candles	4844 lux	8000 ft. candles	86112 lux
450 ft. candles	4844 lux				
8000 ft. candles	86112 lux				

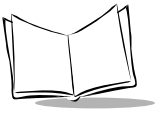


Table 3-2. Technical Specifications (Continued)

Item	Description
Operating Temperature	32° to 104°F 0° to 40°C
Storage Temperature	-40° to 140°F -40° to 60°C
Humidity	5% to 95% (non-condensing)
Durability	4-ft. drop to concrete 1.2 m
Dimensions	
Height	4.8 in. 122 mm
Length	3.7 in. 93 mm
Width	2.4 in. 60 mm
Laser Classifications	CDRH Class II IEC 825 Class 2
Start-Up Time	<50 msec from scan enable
Data Acquisition Time	<110 msec from scan enable
Minimum Element Width	0.005 in 0.127 mm
Maximum Element Width	0.020 in 5.08 mm

*For direct host power connection, make sure the host terminal supplies sufficient power for the specified operation. Symbol is not responsible for damage to host equipment or system mis-operation due to an insufficient power condition.

Table 3-3. Pinouts

Pin	LS 1004	Function
1	Data	Data Line (for synapse)
2	VBAT	Power Supply
3	GND	Ground
4	RTS	Request to Send (for RS-232C)
5	RXD*	Receive Data Input (for RS-232C)


Table 3-3. Pinouts (Continued)

Pin	LS 1004	Function
6	N.C.	Non-Connected (for RS-232C)
7	DTR	Data Terminal Ready (for RS-232C)
8	TXD*	Transmit Data Output (for RS-232C)
9	CTS	Clear to Send (for RS-232C)
10	Clock	Clock Line (for Synapse)


* active low

Table 3-4. Beeper Indications

Standard Use Beeper Sequence	Indication
1 Beep - short high tone	A bar code symbol was decoded (if decode beeper is enabled).
4 Beeps - long low tone	A transmission error has been detected in a scanned symbol. The last data scanned was lost. Scan the last data again.
4 Beeps - short high tone	Low power indication; no further scanning is possible. Change or recharge battery.
3 Beeps - short high tone	Power-up (continuous power mode only)
Parameter Menu Scanning	
1 Beep - short high tone	Appropriate menu within the scanning sequence has been read
1 Beep - warble sound	Parameter value entered successfully
2 Beeps - long low tone	Parameter not entered, or incorrect sequence performed. Scan CANCEL and restart the scanning sequence.

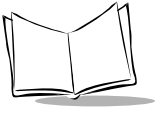

LS 1004 Product Reference Guide

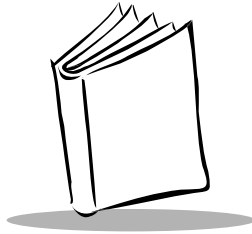


Chapter 4

Programming The LS 1004

Chapter Contents

Introduction	4-3
RS-232 Host Type Defaults	4-6
RS-232C Code ID Characters	4-7
Scanning Sequence	4-7
Scanning Sequence Example	4-7
Errors While Scanning	4-8
Parameter Descriptions	4-9
Set Parameter Defaults	4-9
Host Interface Select	4-9
RS-232 Host Type	4-10
Power On Beep Enable/Disable	4-11
Beeper after Decode	4-11
Beeper Tone	4-12
Beeper Volume	4-12
Decode Attempt Time	4-13
Operating Mode	4-14
Aggressive Scan Mode	4-14
Transmit “No Decode” Message	4-15
Decode Redundancy	4-15
Code Types	4-15
UPC/EAN	4-17
Code 128	4-22
Code 39	4-23
Code 93	4-24
Interleaved 2 of 5	4-24
Discrete 2 of 5	4-27



LS 1004 Product Reference Guide

Codabar	4-29
Data Options	4-30
RS-232C.....	4-34

Introduction

This chapter provides information on how to program the LS 1004 scanner. Before programming the scanner, follow the instructions in *Set-Up* on page 1-3.

The Table 4-1 illustrates the default values with which the scanner is shipped. If the default values suit your requirements, scan the **SET ALL DEFAULTS** barcode. This will set the scanner to the default parameters. Changing the scanner's programmable parameters is accomplished by scanning the bar codes provided in this section.

The following table lists the defaults for all parameters. If you wish to change any option, scan the appropriate bar code(s).

Table 4-1. Default Table

Parameter	Default	Page Number
Set Default Parameter	All Defaults	4-9
Host Interface Select	RS-232C	4-9
Power On Beep	Disable	4-11
Beep after Decode	Enable	4-11
Beeper Tone	Middle	4-12
Beeper Volume	High Level	4-12
Decode Attempt Time	1 second	4-13
Operating Mode	Low Power	4-14
Aggressive Scan Mode	Disable	4-14
Transmit "No Decode" message	No Message	4-15
Decode Redundancy	Disable	4-15
Code Types	All	4-16
UPC/EAN		
Enable/Disable UPC/EAN	Enable	4-17
Transmit UPC-A Check Digit	Enable	4-17
Transmit UPC-E Check Digit	Enable	4-17





Table 4-1. Default Table (Continued)

Parameter	Default	Page Number
Decode UPC Only	Disable	4-17
Convert UPC-E to UPC-A	Disable	4-18
EAN Zero Extend	Disable	4-18
Decode UPC/EAN Supplemental	No Supplemental	4-19
UPC-E Preamble	System Character	4-20
UPC-A Preamble	System Character	4-20
UPC/EAN Security Level	Level 0	4-21
Code 128		
Enable/Disable Code 128	Enable	4-22
Send Code 128 Function Character	Disable	4-22
Code 39		
Enable/Disable Code 39	Enable	4-23
Code 39 modulo 43 check	Disable	4-23
Transmit Code 39 Check Digit	Disable	4-23
Enable/Disable Code 39 Full ASCII	Enable	4-24
Code 93		
Enable/Disable Code 93	Enable	4-24
I 2 of 5		
Enable/Disable Code I 2 of 5	Enable	4-24
Set I 2 of 5 Lengths	14 (length 1) 0 (length 2)	4-24
Modulo 10 Check Digit	Disable	4-26
ITF14/EAN13 Conversion	Disable	4-26
D 2 of 5		
Enable/Disable Code D 2 of 5	Enable	4-27
Modulo 10 Check Digit	Disable	4-27

Table 4-1. Default Table (Continued)

Parameter	Default	Page Number
Set D 2 of 5 Lengths	12 (length 1) 0 (length 2)	4-27
Codabar		
Enable/Disable Codabar	Enable	4-29
CLSI Editing	Disable	4-29
NOTIS Editing	Disable	4-29
Data Options		
Transmit Code ID Character	Disable	4-30
Prefix	None	4-31
Suffix	CR/LF	4-31
RS-232C		
Baud Rate	9600	4-34
Parity	Even	4-35
Data Format	7 Data Bits (with Parity)	4-36
Stop Bit Select	Two	4-36
Check Parity of Received Data	Enable	4-36
Hardware Handshaking	None	4-37
Software Handshaking	None	4-37
Intercharacter Delay	0msec	4-41

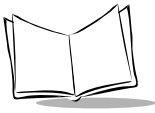

RS-232 Host Type Defaults

Three RS-232C hosts are set up with their own parameter default settings (See Table 4-2.). Selecting the ICL, Fujitsu, or Nixdorf RS-232C terminal sets the defaults listed below. These defaults take precedence over standard defaults. So if you select Fujitsu RS-232C, then select the standard defaults, the Fujitsu defaults still take precedence.

Table 4-2. Terminal-Specific RS-232C Defaults

Parameter	Standard	ICL	FUJITSU	NIXDORF Mode A/ Mode B
Transmit Code ID	No	Yes	Yes	Yes
Data Transmission Format	Data as is	Data/Suffix	Data/Suffix	Data/Suffix
Suffix	CR/LF (7013)	CR (1013)	CR (1013)	CR (1013)
Baud Rate	9600	9600	9600	9600
Parity	None	Even	None	Odd
Hardware Handshaking	None	RTS/CTS Option 3	None	RTS/CTS Option 3
Software Handshaking	None	None	None	None
Serial Response Time-out	2 Sec.	9.9 Sec.	2 Sec.	9.9 Sec.
Stop Bit Select	One	One	One	One
ASCII Format	8-Bit	8-Bit	8-Bit	8-Bit
Beep On <BEL>	Disabled	Disabled	Disabled	Disabled
RTS Line State	Low	High	Low	*Low = No data to send

*In the Nixdorf Mode B, if CTS is Low, scanning is disabled. When CTS is High, the user can scan bar codes.

RS-232C Code ID Characters

Selecting the ICL, Fujitsu, or Nixdorf RS-232C terminal enables the transmission of Code ID Characters listed in Table 4-3. These Code ID Characters are not programmable and are separate from the Transmit Code ID feature. The Transmit Code ID feature should not be enabled for these terminals.

Table 4-3. Terminal Specific Code ID Characters

	ICL	FUJITSU	NIXDORF
UPC-A	"A"	"A"	"A"
UPC-E	"E"	"E"	"C0"
EAN-8	"FF"	"FF"	"B"
EAN-13	"F"	"F"	"A"
Code 39	"C" <len>	None	"M"
Codabar	"N" <len>	None	"N"
Code 128	"L" <len>	None	"K"
I 2 of 5	"I" <len>	None	"I"
Code 93	None	None	"L"
D 2 of 5	"H" <len>	None	"H"
UCC/EAN 128	"L" <len>	None	"P"

Scanning Sequence

A scanning sequence establishes a value for one parameter type. During a scanning sequence, bar codes are scanned to select a parameter. All bar codes necessary for programming the scanner are provided in *Parameter Menus*, beginning on page 4-9.

Scanning Sequence Example

In this example, assume you want to program the scanner for all default settings except for two parameters, DECODE UPC ONLY and INTERCHARACTER DELAY.

Since you want to keep the majority of the default settings, scan the SET ALL DEFAULTS bar code. The default for DECODE UPC ONLY is DISABLED, but in this example, you need it



enabled. To do this, scan the DECODE UPC ONLY ENABLE bar code. You'll hear hi/lo/hi/low warble. The warble sound indicates that the scanner has been successfully programmed for the selected parameter. Other beeper indications are listed in Chapter 3.

The default for INTERCHARACTER DELAY is 0 msec, but you need it set to 2 msec. To program the scanner for a 2msec intercharacter delay, scan the bar codes listed below. This sequence includes a two-digit entry; single-digit entries require a leading zero.

- | | |
|------------------------------|--------------------|
| | You'll hear... |
| 1. Scan INTERCHARACTER DELAY | Short high tone |
| 2. Scan 0 | Short high tone |
| 3. Scan 2 | Hi/Lo/Hi/Lo warble |

Errors While Scanning

Don't worry if you make an error during a scanning sequence. If you're scanning a multi-step sequence, scanning CANCEL removes you from that sequence so that you can start again.

Otherwise, simply scan the single correct bar code for the desired parameter.

Parameter Menus

Refer to the Default table in the front of this chapter for the default settings for each parameter type.

Set Parameter Defaults

Scanning the SET ALL DEFAULTS bar code returns all parameters to the default values listed in the Default Table.



Set All Defaults

Host Interface Select


Scan the bar code corresponding to your host type. You must select a host type when you first set up the scanner and whenever you change host type.



Set RS-232C Host



Set Synapse Host

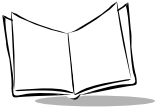

RS-232 Host Type

Use this option to select an RS-232 host type. **Note:** Synapse hosts are autodetected; no bar codes need to be scanned for hosts using Synapse.

1. Scan the bar code corresponding to the desired host type.
2. Scan ENTER.



Standard RS-232 Host Type



ICL Host Type



Fujitsu Host Type



Nixdorf Mode A Host Type



Nixdorf Mode B Host Type

Power On Beep Enable/Disable

This option, if selected, causes the beeper to sound at power-up (in continuous power mode only).



Power On Beep Enable



Power On Beep Disable

Beeper after Decode

This option determines whether the beeper sounds during normal scanning. Usually, it is desirable to operate the unit with the beeper enabled. In all cases, the beeper operates during parameter menu scanning and indicates error conditions. See Table 3-4 on page 3-9.



Beeper Enable



Beeper Disable



Beeper Tone

Three options are available for beeper tone (frequency); low, middle, and high.



Beeper Tone Low



Beeper Tone Middle



Beeper Tone High

Beeper Volume

Three options are available for beeper volume; low, middle, and high.



Beeper Volume Low



Beeper Volume Middle



Beeper Volume High

Decode Attempt Time

This parameter sets the length of time the scanner laser beam remains on while attempting to scan a symbol.



0.5 seconds



3.5 seconds



1.0 seconds



4.0 seconds



1.5 seconds



4.5 seconds




2.0 seconds



5.0 seconds




2.5 seconds




5.5 seconds



3.0 seconds



6.0 seconds

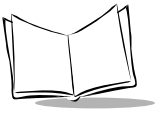

Decode Attempt Time (cont'd)



6.5 seconds



7.0 seconds

Operating Mode

This parameter determines whether or not power remains on after a decode attempt. The LOW POWER option provides for power-down after each scan attempt, while the CONTINUOUS option provides for power to remain on after each scan attempt.



Continuous



Low Power

Aggressive Scan Mode

This parameter is available in the continuous operation mode only. When you set this parameter to be enabled, the scanner scans the mirror continuously, even if it does not illuminate the laser diode.



Aggressive Scan
Enable



Aggressive Scan
Disable

Transmit “No Decode” Message

This feature gives you the option to transmit “NR” when a symbol does not decode. Prefixes and suffixes enabled will be appended around this character.



**Transmit “NO DECODE”
Message**



**Do Not Transmit “NO
DECODE” Message**

Decode Redundancy

When you select ENABLE CODABAR DECODE REDUNDANCY, a Codabar symbol must be decoded in both directions before being accepted as a successful decode. If you select ENABLE ALL CODE TYPES DECODE REDUNDANCY, all bar code symbols must be decoded in both directions before being accepted as successful decodes.



**Enable CODABAR
Decode Redundancy**



**Enable ALL CODE
TYPES
Decode Redundancy**



**Disable CODABAR
Decode Redundancy**




**Disable ALL CODE
TYPES
Decode Redundancy**

Code Types

Selecting the ENABLE ALL CODE TYPES bar code below enables the following symbologies:

- ◆ UPC Versions A and E (EAN 8 and 13)
- ◆ Code 39
- ◆ Interleaved 2 of 5

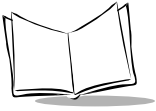

- ◆ Code 93
- ◆ Codabar
- ◆ Discrete 2 of 5
- ◆ Code 128
- ◆ Code 39 Full ASCII

The scanner autodiscriminates between all of the above symbologies, except for Code 39 and Code 39 Full ASCII.



Enable All Code Types



Disable All Code Types

UPC/EAN

Enable/Disable UPC/EAN



Enable UPC/EAN



Disable UPC/EAN

Transmit UPC-E/UPC-A

Select this option if decoded UPC-E or UPC-A symbols are transmitted with or without the check digit.



Transmit UPC-A check digit



Do Not Transmit
UPC-A Check Digit



Transmit UPC-E check digit



Do Not Transmit
UPC-E Check Digit

Decode UPC Only (Not EAN)


If selected, this option limits the scanner’s capability to UPC versions only. It disables EAN decode capability.



Decode UPC Only Enable



Decode UPC Only Disable

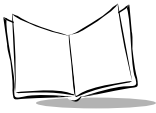

Convert UPC-E to UPC-A

Select this option to convert UPC-E (zero suppressed) decode data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).



**Convert UPC-E to
UPC-A**



**Do Not Convert
UPC-E to UPC-A**

EAN Zero Extend

This parameter adds five leading zeros to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols.



**Enable EAN Zero
Extend**



**Disable EAN Zero
Extend**

Decode UPC/EAN Supplemental

This option is used to select whether UPC/EAN is decoded with or without supplemental characters, or whether the unit autodiscriminates between the two. Supplementals are additionally appended characters, according to specific code format conventions (e.g., UPC A+2, UPC E+2, EAN 8+5).

If UPC/EAN with supplemental characters 2-digit or 5-digit only is selected, UPC/EAN symbols without supplemental characters won't be decoded. If UPC/EAN without supplemental characters is selected and the scanner is presented with a UPC/EAN plus supplemental symbol, the UPC/EAN is decoded and the supplemental characters are ignored. If autodiscrimination is chosen, the scanner will, after additional processing to ensure a good decode, transmit either. If UPC/EAN with supplemental characters is selected, UPC/EAN without supplemental characters is ignored.



**Decode UPC/EAN
Supplementals**



**Ignore UPC/EAN
Supplementals**



**Autodiscriminate UPC/
EAN Supplementals**



**Decode UPC/EAN 2-digit
Supplementals Only**



**Decode UPC/EAN 5-digit
Supplementals Only**



UPC A and E Preamble(s)

Three options are available for the lead-in characters for decoded UPC-A or UPC-E symbols transmitted to the host device. Select one preamble for UPC-A decodes and one for UPC-E decodes. These lead-in characters are considered part of the symbol itself. The three options are:

- ◆ a system character only
- ◆ the country code and system character
- ◆ no preamble

The system character is the digit printed to the extreme left of a UPC symbol. The country code for UPC is always zero, and it cannot be transmitted without the system character.

UPC-A Preambles



None



System Character



System Character
and
Country Code

UPC-E Preambles



None



System Character



System Character
and
Country Code

UPC/EAN Security Level

The scanner offers four levels of decode security for UPC/EAN bar codes. Increasing levels of security are provided for decreasing levels of bar code quality. There is an inverse relationship between security and scanner aggressiveness, so be sure to choose only that level of security necessary for any given application.

Security Level 0 - This is the default setting which allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding in spec UPC/EAN bar codes.

Security Level 1 - As bar code quality levels diminish, certain characters become prone to mis-decodes before others (i.e., 1, 2, 7, 8). If you are experiencing mis-decodes of poorly printed bar codes, and the mis-decodes are limited to these characters, select this security level.

Security Level 2 - If you are experiencing mis-decodes on poorly printed bar codes, and the mis-decodes are not limited to characters 1, 2, 7 and 8, select this security level.



**UPC/EAN Security
Level 0**



**UPC/EAN Security
Level 1**



**UPC/EAN Security
Level 2**



Code 128

Enable/Disable Code 128



Enable Code 128



Disable Code 128

Send Code 128 Function Character

If selected, Code 128 function characters are sent as:

- ◆ FN1=0X1D
- ◆ FN2=0X81
- ◆ FN3=0X82
- ◆ FN4=0X83

This option is enabled when data format is 8 bits. Even if this option is disabled or data format is 7 bits, FN1 is still set as 0X1D, unless FN1 is in the first or second character in a bar code message.




**Transmit Code 128
Function Character
Enabled**



**Transmit Code 128
Function Character
Disabled**

Code 39

Enable/Disable Code 39



Enable Code 39



Disable Code 39

Code 39 Modulo 43 Check

When enabled, this parameter checks the integrity of a Code 39 symbol to ensure it complies with specified algorithms.



**Verify Code 39
Check Digit**



**Do Not Verify Code
39 Check Digit**

Transmit Code 39 Check Digit


When enabled, Code 39 Check Digit will be sent to the host.



**Transmit Code 39
Check Digit Enable**



**Transmit Code 39
Check Digit Disable**

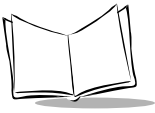

Enable/Disable Code 39 Full ASCII



**Enable Code 39
Full ASCII**



**Disable Code 39
Full ASCII**

Code 93

Enable/Disable Code 93



Enable Code 93



Disable Code 93

Interleaved 2 of 5

Enable/Disable Code I 2 of 5



Enable Code I 2 of 5



Disable Code I 2 of 5

Fixed Lengths for Code I 2 of 5

Select one or two lengths for the Interleaved 2 of 5 codes. If you set both Length 1 and Length 2 to 0, the scanner can read any length within 36 characters. It is recommended that you set the I 2 of 5 modulus 10 check to enabled when you set both Length 1 and Length 2 to 0.

If any default setting is in effect and is an appropriate length, it need not be reset. Length 1 may range from 00-36 and Length 2 may range from 00-36.



**I 2 of 5 Length 1
(Range 00-36)**



**I 2 OF 5 Length 2
(Range 00-36)**

Fixed Lengths for Code 2 of 5 (cont'd)



0



1



2



3



4



5



6



7




8



9



Cancel

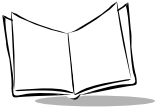

I 2 of 5 Modulo 10 Check

When enabled, this parameter checks the integrity of an Interleaved 2 of 5 symbol to ensure it complies with specific algorithms.



**I 2 of 5 Modulo 10
Check Digit Enable**



**I 2 of 5 Modulo 10
Check Digit Disable**

ITF-14/EAN-13 Conversion

This feature converts a 14-character I 2 of 5 code into EAN-13, and transmits to the host as EAN-13. In order to accomplish this, the I 2 of 5 code must be enabled, one length (either LENGTH 1 or LENGTH 2) must be set to 14, the code must have a leading zero and proper trailing check digit.



**ITF-14/EAN-13
Conversion Enable**



**ITF-14/EAN-13
Conversion Disable**

Discrete 2 of 5

Enable/Disable D 2 of 5



Enable Code D 2 of 5



Disable Code D 2 of 5

D 2 of 5 Modulo 10 Check

When enabled, this parameter checks the integrity of a Discrete 2 of 5 symbol to ensure it complies with specific algorithms.



D 2 of 5 Modulo 10
Check Digit Enable



D 2 of 5 Modulo 10 Check
Digit Disable

Fixed Lengths for Code 2 of 5

Select one or two lengths for the Discrete 2 of 5 codes. If you set the both of them (Length 1 and Length 2) to 0, the scanner can read any length within 36 characters. It is recommended that you set the D 2 of 5 modulus 10 check to enabled when you set both Length 1 and Length 2 to 0.

If any default setting is in effect and is an appropriate length, it need not be reset. Length 1 may range from 00-36 and Length 2 may range from 00-36



D 2 of 5 Length 1
(Range 00-36)



D 2 OF 5 Length 2
(Range 00-36)



Fixed Lengths for Code 2 of 5 (cont'd)



0



1



2



3



4



5



6



7



8



9



CANCEL

Codabar

Enable/Disable Codabar



Enable Codabar



Disable Codabar

CLSI Editing

Use this parameter to insert a space after the 1st, 5th, and 10th characters of a 14-character Codabar symbol. This symbol length includes start and stop characters.



Enable CLSI Editing



Disable CLSI Editing

NOTIS Editing


This option strips the start and stop characters from decoded Codabar symbols.



Enable NOTIS Editing



Disable NOTIS Editing

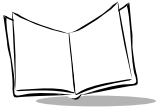

Data Options

Transmit Code ID Character

A code ID character identifies the code type of a scanned bar code. This may be useful when the scanner is decoding more than one code type. In addition to any single-character prefixes already selected, the code ID character is appended as a prefix to the decode. The code ID characters are:

ID Character	Meaning
A	UPC-A, UPC-E, EAN-13, EAN-8
B	Code 39
C	Codabar
D	Code 128
E	Code 93
F	Interleaved 2 of 5
G	Discrete 2 of 5 or Discrete 2 of 5 IATA



**Transmit Code ID
Character**



**Do Not Transmit Code
ID**

Prefix

The scanner adds one of the following start-of-text characters to transmitted data.

- ◆ None
- ◆ Start-of-text (STX)
- ◆ One user-defined prefix (can be any ASCII character). See Appendix A, *ASCII Character Set* for more information.



Prefix None



Prefix STX




User's Choice Prefix Character

Suffix

Select one or two end-of-text characters to be added to transmitted data.

- ◆ None
- ◆ CR (Carriage Return) - Returns the cursor to the same position on the line after each decode.
- ◆ LF (Line Feed) - Moves the cursor down a line after each decode.

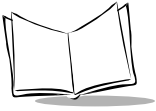

- ◆ CR & LF - Allow you to select where the cursor on a display terminal returns to after it displays each decoded symbol. Selecting both CR and LF returns the cursor to the same position on successive lines after each decode. If you select no control code, the cursor remains where it stopped after the last transmission.
- ◆ HT (Horizontal Tab) - Moves the cursor one tab space.
- ◆ End -of-text <ETX> - One or two characters, user-defined. Refer to Appendix A, *ASCII Character Set* for more information.



Suffix None



Suffix ETX



Suffix CR



Suffix CR/LF



Suffix LF



Suffix HT



**User's Choice Suffix
Character 1**



**User's Choice Suffix
Character 2**

Prefix/Suffix Values



0



1



2



3



4



5



6



7




8



9



Cancel

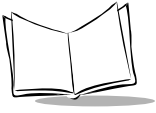

RS-232C

Baud Rate

Baud Rate is the number of bits of data transmitted per second. The unit's baud rate setting should match the data rate setting of the host device. If not, data may not reach the host device, or may reach it in distorted form.



300



2400



600



4800



1200



9600



19200

Parity

A parity check bit is the most significant bit of each ASCII coded character. If you select ODD parity, the parity bit will have a value of 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.

If you select EVEN parity, the parity bit will have a value, 0 or 1, to ensure that an even number of 1 bits are contained in the coded character.

If you select MARK parity, the parity bit will always be 1.

If you select SPACE parity, the parity bit will always be 0.

Select the parity type according to the host device requirements.



Odd



Even



Mark



Space



None



Data Format

This parameter sets the transmit data format. The options are:

- ◆ 7 Data Bits (With Parity) (default)
- ◆ 8 Data Bits (With Parity)
- ◆ 8 Data Bits (Without Parity)



7-Bit



8-Bit

Stop Bit Select

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. The number of stop bits (one or two) selected depends on the number the receiving terminal is programmed to accommodate. Set the number of stop bits to match host device requirements.



1 Stop Bit



2 Stop Bits

Check Parity

This option determines whether the parity of received characters is checked. The type of parity used is selectable through the PARITY parameter.



**Check Parity of Receive
Data Enable**



**Check Parity of Receive
Data Disable**

Hardware Handshaking

Hardware handshaking allows you to check the readiness of the receiving device before data is transmitted. If the receiving device is periodically occupied with other tasks, hardware handshaking is needed to prevent loss of transmitted data.

Select whether the scanned data is to be transmitted as soon as it is available or whether transmission should follow the RTS/CTS procedure.



None



RTS/CTS

Software Handshaking

This parameter offers control of the data transmission process in addition to, or instead of, that offered by hardware handshaking. These options may be combined; for example, ACK/NAK with ENQ.

- ◆ No software handshaking



None

- ◆ ACK/NAK only

The ACK/NAK option checks the success or failure of transmission. The scanner expects one of the following host responses after a data transmission:


<ACK> acknowledges a valid and successful transmission.

<NAK> indicates a problem with the transmission.

Whenever a NAK is received, the unit retransmits the same data and awaits an ACK/NAK response. After three unsuccessful attempts to transmit the same data, the scanner aborts any further communication attempts of that message.



ACK/NAK

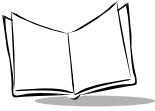

- ◆ **ENQ ONLY**

The ENQ option needs the host to request data before it is transmitted to the host. This ensures that data transmission occurs only when the host is ready to receive.

When you select the wait for ENQ option, the scanner waits for an ENQ from the host before it transmits data; otherwise, the unit transmits data without waiting for an ENQ character from the host. With ENQ enabled, the scanner must receive an ENQ from the host within a 2-second period after the last activity, or a transmission error occurs.



ENQ Only


- ◆ **ACK/NAK with ENQ**


This option combines both handshaking options.



ACK/NAK with ENQ

Hardware and Software Handshaking Sequence

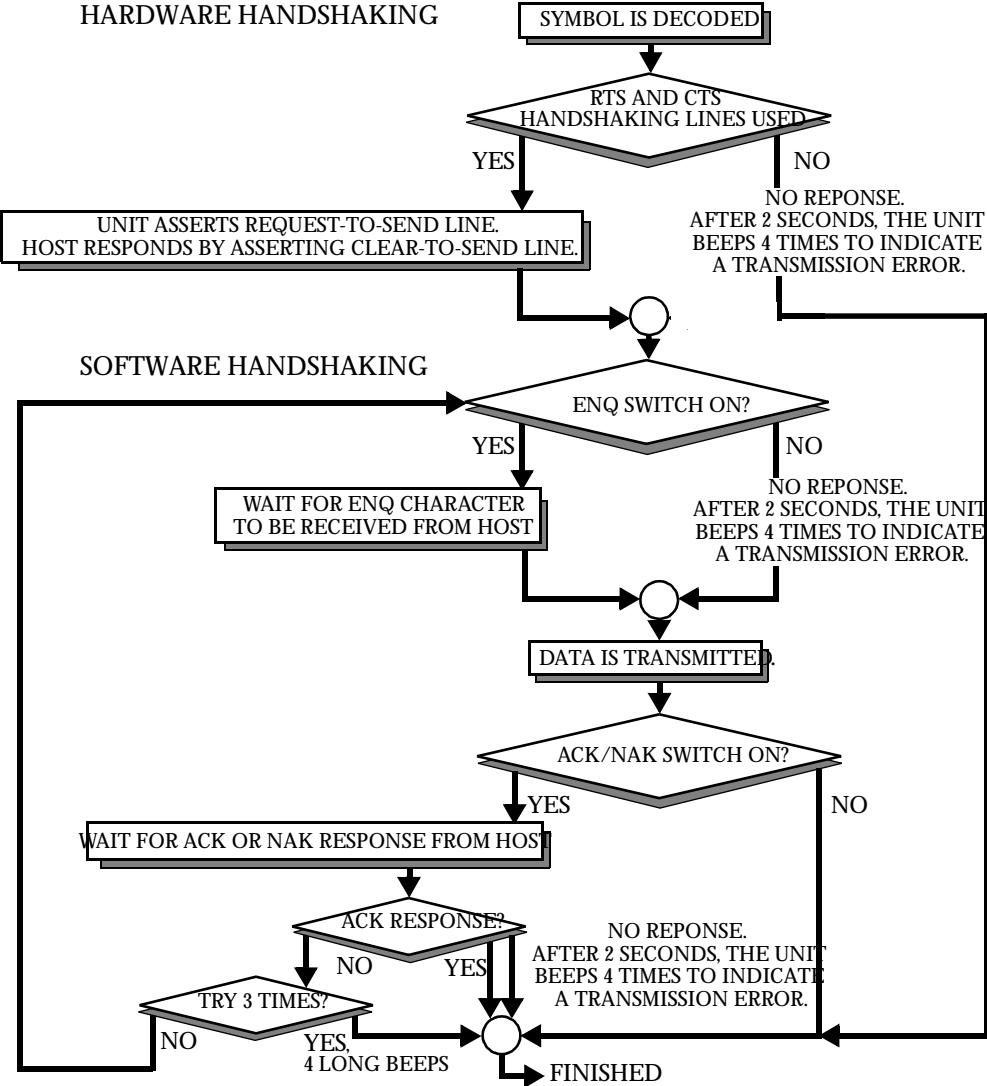

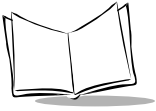

Communications Delays and Time-Outs (Intercharacter Delay)

Selecting the intercharacter delay gives the host system time to service its receiver and perform other tasks between characters. Select from no delay to a 99 msec. delay between transmission of each character.



Intercharacter Delay

Intercharacter Delay Values (cont'd)



0



1



2



3



4



5



6



7



8




9



Cancel



LS 1004 Product Reference Guide

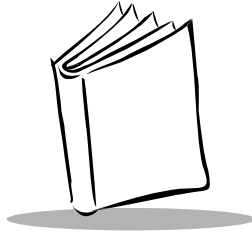

Appendix A

ASCII Character Set

Table A-1. ASCII Character Set

ASCII Value	Full ASCII Code 39 Encode Char.	Keystroke	ASCII Value	Full ASCII Code 39 Encode Char	Keystroke
000	%U	CTRL 2	024	\$X	CTRL X
001	\$A	CTRL A	025	\$Y	CTRL Y
002	\$B	CTRL B	026	\$Z	CTRL Z
003	\$C	CTRL C	027	%A	CTRL [
004	\$D	CTRL D	028	%B	CTRL \
005	\$E	CTRL E	029	%C	CTRL]
006	\$F	CTRL F	030	%D	CTRL 6
007	\$G	CTRL G	031	%E	CTRL -
008	\$H	CTRL H	032	Space	Space
009	\$I	CTRL I	033	/A	!
010	\$J	CTRL J	034	/B	'
011	\$K	CTRL K	035	/C	#
012	\$L	CTRL L	036	/D	\$
013	\$M	CTRL M	037	/E	%
014	\$N	CTRL N	038	/F	&
015	\$O	CTRL O	039	/G	'
016	\$P	CTRL P	040	/H	(




Table A-1. (Continued) ASCII Character Set


017	\$Q	CTRL Q	041	/I)
018	\$R	CTRL R	042	/J	*
019	\$S	CTRL S	043	/K	+
020	\$T	CTRL T	044	/L	,
021	\$U	CTRL U	045	-	-
022	\$V	CTRL V	046	.	.
023	\$W	CTRL W	047	/	/
ASCII Value	Full ASCII Code 39 Encode Char.	Keystroke	ASCII Value	Full ASCII Code 39 Encode Char	Keystroke
048	0	0	073	I	I
049	1	1	074	J	J
050	2	2	075	K	K
051	3	3	076	L	L
052	4	4	077	M	M
053	5	5	078	N	N
054	6	6	079	O	O
055	7	7	080	P	P
056	8	8	081	Q	Q
057	9	9	082	R	R
058	/Z	:	083	S	S
059	%F	;	084	T	T
060	%G	<	085	U	U
061	%H	=	086	V	V
062	%I	>	087	W	W
063	%J	?	088	X	X
064	%V	@	089	Y	Y
065	A	A	090	Z	Z
066	B	B	091	%K	[
067	C	C	092	%L	\

Table A-1. (Continued) ASCII Character Set

068	D	D	093	%M]
069	E	E	094	%N	^
070	F	F	095	%O	_
071	G	G	096	%W	'
072	H	H	097	+A	a
ASCII Value	Full ASCII Code 39 Encode Char.	Keystroke	ASCII Value	Full ASCII Code 39 Encode Char	Keystroke
098	+B	b	113	+Q	q
099	+C	c	114	+R	r
100	+D	d	115	+S	s
101	+E	e	116	+T	t
102	+F	f	117	+U	u
103	+G	g	118	+V	v
104	+H	h	119	+W	w
105	+I	i	120	+X	x
106	+J	j	121	+Y	y
107	+K	k	122	+Z	z
108	+L	l	123	%P	{
109	+M	m	124	%Q	
110	+N	n	125	%R	}
111	+O	o	126	%S	~
112	+P	p	127		Undefined

Table A-2. ASCII Character Set


264	ALT 2	275	ALT K	286	ALT V
265	ALT A	276	ALT L	287	ALT W
266	ALT B	277	ALT M	288	ALT X
267	ALT C	278	ALT N	289	ALT Y

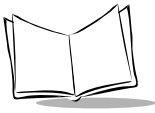

LS 1004 Product Reference Guide


268	ALT D	279	ALT O	290	ALT Z
269	ALT E	280	ALT P	291	ALT [
270	ALT F	281	ALT Q	292	ALT \
271	ALT G	282	ALT R	293	ALT]
272	ALT H	283	ALT S	294	ALT 6
273	ALT I	284	ALT T	295	ALT -
274	ALT J	285	ALT U		
Misc. Key	Keystroke	Misc. Key	Keystroke	Misc. Key	Keystroke
301	PA 1	309	CMD 7	317	°
302	PA 2	310	CMD 8	318	1/2
303	CMD 1	311	CMD 9	319	¶
304	CMD 2	312	CMD 10	320	§
305	CMD 3	313	¥	321	
306	CMD 4	314	£	322	0/00
307	CMD 5	315	¤		
308	CMD 6	316	¬		

PF Keys	Keystroke	PF Keys	Keystroke	PF Keys	Keystroke
401	PF 1	409	PF 9	417	PF 17
402	PF 2	410	PF 10	418	PF 18
403	PF 3	411	PF 11	419	PF 19
404	PF 4	412	PF 12	420	PF 20
405	PF 5	413	PF 13	421	PF 21
406	PF 6	414	PF 14	422	PF 22
407	PF 7	415	PF 15	423	PF 23
408	PF 8	416	PF 16	424	PF 24
F Keys	Keystroke	F Keys	Keystroke	F Keys	Keystroke
501	F 1	514	F 14	527	F 27
502	F 2	515	F 15	528	F 28
503	F 3	516	F 16	529	F 29
504	F 4	517	F 17	530	F 30
505	F 5	518	F 18	531	F 31
506	F 6	519	F 19	532	F 32
507	F 7	520	F 20	533	F 33
508	F 8	521	F 21	534	F 34
509	F 9	522	F 22	535	F 35
510	F 10	523	F 23	536	F 36
511	F 11	524	F 24	537	F 37
512	F 12	525	F 25	538	F 38
513	F 13	526	F 26	539	F 39

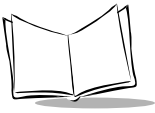

Numeric Keypad	Keystroke	Numeric Keypad	Keystroke	Numeric Keypad	Keystroke
642	*	649	1	656	8
643	+	650	2	657	9
644	Undefined	651	3	658	Enter
645	-	662	4	659	Num Lock
646	.	663	5	660	00
647	/	664	6		
648	0	665	7		
Extended Keypad	Keystroke	Extended Keypad	Keystroke	Extended Keypad	Keystroke
701	Break	708	Backspace	715	Up Arrow
702	Delete	709	Tab	716	Dn Arrow
703	Pg Up	710	Print Screen	717	Left Arrow
704	End	711	Insert	718	Right Arrow
705	Pg Dn	712	Home	719	Back Tab
706	Pause	713	Enter		
707	Scroll Lock	714	Escape		

Note: Table A-1 applies to the LS 1004-I000. Tables A-1 and A-2 apply to the LS 1004-I100 only.

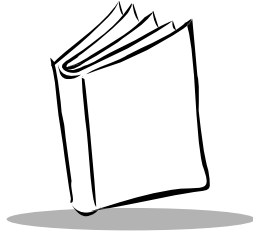

Glossary

ASCII - American Standard Code for Information Interchange. A 7 bit code representing 128 letters, numerals, punctuation marks, and control characters. It is a standard data transmission code in the U.S.

BIT - Binary digit. One bit is the basic unit of binary information. Generally, eight consecutive bits compose one byte of data. The pattern of 0 and 1 values within the byte determines its meaning.


BOOKLAND EAN - A specially-formatted European Article Numbering symbol with 13 characters (EAN-13), the first 3 of which are “978”.

BYTE - On an addressable boundary, eight adjacent binary digits (0 and 1) combined in a pattern to represent a specific character or numeric value. Bits are numbered from the right, 0 through 7, with bit 0 the low-order bit. One byte in memory can be used to store one ASCII character.

CDRH - Center for Devices and Radiological Health. A federal agency responsible for regulating laser product safety. This agency specifies various laser operation classes based on power output during operation.

CHECK DIGIT - A digit used to verify a correct symbol decode. The scanner inserts the decoded data into an arithmetic formula and checks that the resulting number matches the encoded check digit. Check digits are required for UPC but are optional for other symbologies. Using check digits decreases the chance of substitution errors when a symbol is decoded.

CODABAR - A discrete self-checking code with a character set consisting of digits 0 to 9 and six additional characters: (- \$: / , +).

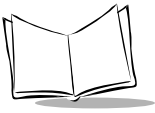

CODE 128 - A high density symbology which allows the controller to encode all 128 ASCII characters without adding extra symbol elements.

CODE 3 OF 9 (CODE 39) - A versatile and widely used alphanumeric bar code symbology with a set of 43 character types, including all uppercase letters, numerals from 0 to 9, and 7 special characters (- . / + % \$ and space). The code name is derived from the fact that 3 of 9 elements representing a character are wide, while the remaining 6 are narrow.

CODE 93 - An industrial symbology compatible with Code 39 but offering a full character ASCII set and a higher coding density than Code 39.

CONTINUOUS SYMBOLOGY - A bar code or symbol in which all spaces within the symbol are parts of characters. There are no intercharacter gaps in a continuous code. The absence of gaps allows for greater information density.

DECODE - To recognize a bar code symbology (e.g., UPC/EAN) and then analyze the content of the specific bar code scanned.

DECODE ALGORITHM - A decoding scheme that converts pulse widths into data representation of the letters or numbers encoded within a bar code symbol.

DISCRETE SYMBOLOGY - A bar code or symbol in which the spaces between characters (intercharacter gaps) are not part of the code.

DISCRETE 2 OF 5 - A binary bar code symbology representing each character by a group of five bars, two of which are wide. The location of wide bars in the group determines which character is encoded; spaces are insignificant. Only numeric characters (0 to 9) and START/STOP characters may be encoded.

EAN - European Article Number. This European/International version of the UPC provides its own coding format and symbology standards. Element dimensions are specified metrically. EAN is used primarily in retail.

HOST COMPUTER - A computer that serves other terminals in a network, providing such services as computation, database access, supervisory programs, and network control.

IEC - International Electrotechnical Commission. This international agency regulates laser safety by specifying various laser operation classes based on power output during operation.

IEC CLASS I (IEC 825 Class I) - This is the lowest power IEC laser classification. Conformity is ensured through a software restriction of 25 seconds of laser operation within any 100 second window and an automatic laser shutdown if the scanner's oscillating mirror fails.

INTERCHARACTER GAP - The space between two adjacent bar code characters in a discrete bar code.

INTERLEAVED BAR CODE - A bar code in which characters are paired together, using bars to represent the first character and the intervening spaces to represent the second.

INTERLEAVED 2 OF 5 - A binary bar code symbology representing character pairs in groups of five bars and five interleaved spaces. Interleaving provides for greater information density. The location of wide elements (bar/spaces) within each group determines which characters are encoded. This continuous code type uses no intercharacter spaces. Only numeric (0 to 9) and START/STOP characters may be encoded.


LASER - An acronym for Light Amplification by Stimulated Emission of Radiation. The laser is an intense light source. Light from a laser is all the same frequency, unlike the output of an incandescent bulb. Laser light is typically coherent and has a high energy density.

LASER DIODE - A semiconductor type of laser connected to a power source to generate a laser beam. This laser type is a compact source of coherent light.

PARAMETER - A variable that can have different values assigned to it.

PROGRAMMING MODE - The state in which a scanner is configured for parameter values. See **SCANNING MODE**.

QUIET ZONE - A clear space, containing no dark marks, which precedes the start character of a bar code symbol and follows the stop character.

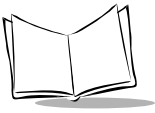

REDUNDANCY - A decoding method which requires a bar code be recognized redundantly on a number of sweeps of the scan beam before a decode is declared. While slowing the time-to-decode, redundancy can help lower the possibility of a mis-decode of poorly printed symbols.

SCANNER - An electronic device used to scan bar code symbols and produce a digitized pattern that corresponds to the bars and spaces of the symbol. Its three main components are:

1. Light source (laser or photoelectric cell) - illuminates a bar code.
2. Photodetector - registers the difference in reflected light (more light reflected from spaces).
3. Signal conditioning circuit - transforms optical detector output into a digitized bar pattern.

SCANNING MODE - The scanner is energized, programmed, and ready to read a bar code.

SCANNING SEQUENCE - A method of programming or configuring parameters for a bar code reading system by scanning bar code menus.


SELF-CHECKING CODE - A symbology that uses a checking algorithm to detect encoding errors within the characters of a bar code symbol.

START/STOP CHARACTER - A pattern of bars and spaces that provides the scanner with start and stop reading instructions and scanning direction. The start and stop characters are normally to the left and right margins of a horizontal code.


SYMBOL - A scannable unit that encodes data within the conventions of a certain symbology, usually including start/stop characters, quiet zones, data characters, and check characters.

SYMBOLOLOGY - The structural rules and conventions for representing data within a particular bar code type (e.g. UPC/EAN, Code 39).

UPC - Universal Product Code. A relatively complex numeric symbology. Each character consists of two bars and two spaces, each of which can be any of four widths. The standard symbology for retail food packages in the United States.

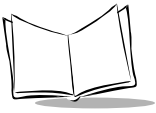

LS 1004 Product Reference Guide

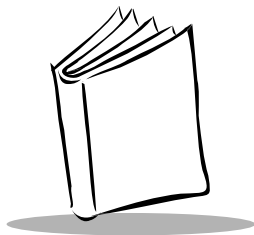

Index

A

Accessories	3-4
Optional	3-4
Required	3-4
Aggressive Scan Disable	4-14
Aggressive Scan Enable	4-14
Aggressive Scan Mode	4-14
Aiming	2-4
Ambient Light Immunity	3-7
ASCII Character Set	A-1

B

Battery Box Operation	3-3
Changing the Battery	3-3
Recharging a Ni-Cd Battery	3-3
Battery Operation	1-7
Baud Rate	4-34
Beeper after Decode	4-11
Beeper Disable	4-11
Beeper Enable	4-11
Beeper Indications	3-9
Beeper Operation	3-7
Beeper Tone	4-12
Beeper Tone High	4-12
Beeper Tone Low	4-12
Beeper Tone Mid	4-12
Beeper Volume	4-12
Beeper Volume High	4-12
Beeper Volume Low	4-12
Beeper Volume Mid	4-12

C

Changing Battery	3-3
------------------------	-----

Check Parity	4-36
CLSI Editing	4-29
Codabar	4-29
Code 128	4-22
Code 39	4-23
CODE 39 Modulo 43 Check	4-23
Code 93	4-24
code ID characters	4-7
Code Types	4-15
Connecting to Host	1-5
RS-232C	1-5
Convert UPC-E to UPC-A	4-18

D

D 2 of 5 Modulo 10 Check	4-27
Data Acquisition Time	3-8
Data Format	4-36
Data Options	4-30
Decode Attempt Time	4-13
Decode Capability	3-7
Decode Depth of Field	3-7
Decode Redundancy	4-15
Decode UPC Only (Not EAN)	4-17
Decode UPC/EAN Supplemental	4-19
Decode Zone	3-6
Default Table	4-3
default table	
RS-232 host type	4-6
Dimensions	3-8
Disable All Code Types 4-16	
Disable ALL CODE TYPES	
Decode Redundancy	4-15
Disable CODABAR Decode Redundancy .	4-15
Discrete 2 of 5	4-27



Do Not Transmit “NO DECODE”
 Message 4-15
 Durability 3-8

E

EAN Zero Extend 4-18
 Enable All Code Types 4-16
 Enable ALL CODE TYPES Decode
 Redundancy 4-15
 Enable CODABAR Decode Redundancy 4-15
 Enable/Disable Codabar 4-29
 Enable/Disable Code 128 4-22
 Enable/Disable Code 39 4-23
 Enable/Disable Code 39 Full ASCII 4-24
 Enable/Disable Code 93 4-24
 Enable/Disable Code I 2 of 5 4-24
 Enable/Disable D 2 of 5 4-27
 Enable/Disable UPC/EAN 4-17
 Errors While Scanning 4-8

F

Fixed Lengths for Code 2 of 5 4-27
 Fixed Lengths for Code I 2 of 5 4-24
 Flying Lead Connector 1-6

H

Hardware Handshaking 4-37
 Host Interface Select 4-9
 hosts
 RS-232 defaults 4-6
 RS-232 host type 4-10
 Humidity 3-8

I

I 2 of 5 Modulo 10 Check 4-26
 IBM 468X/9X 1-8
 Installing the Cable 1-4
 Intercharacter Delay 4-40
 Interleaved 2 of 5 4-24
 ITF14/EAN13 Conversion 4-26

K

Keyboard Wedges 1-8

L

Laser Classifications 3-8
 LS 1004

Ambient Light Immunity 3-7
 Beeper Indications 3-9
 Beeper Operation 3-7
 Data Acquisition Time 3-8
 Decode Capability 3-7
 Decode Depth of Field 3-7
 Dimensions 3-8
 Durability 3-8
 Humidity 3-8
 Laser Classifications 3-8
 Maximum Element Width 3-8
 Minimum Element Width 3-8
 Operating Temperature 3-8
 Pinouts 3-8
 Pitch 3-7
 Power Requirements 3-7
 Print Contrast Minimum 3-7
 Scan Repetition Rate 3-7
 Skew Tolerance 3-7
 Start-Up Time 3-8
 Storage Temperature 3-8

LS 100x

Accessories 3-4
 Battery Box Operation 3-3
 Changing Battery 3-3
 Decode Zone 3-6
 Default Table 4-3
 Installing the Cable 1-4
 Maintaining 3-3
 Maintenance 3-4
 Optional Accessories 3-4
 Required Accessories 3-4
 Setup 1-3
 Switching Cables 1-5
 Technical Specifications 3-6
 Unpacking 1-3

LS 100x Decode Zone 2-3, 3-6

M

Maintenance	3-4
Maximum Element Width	3-8
Minimum Element Width	3-8

N

NOTIS Editing	4-29
---------------------	------


O

OCIA	1-8
OCR	1-8
Operating Mode	4-14
Operating Mode Continuous	4-14
Operating Mode Low Power	4-14
Operating Temperature	3-8
Optional Accessories	3-4

P

Parameter Descriptions	4-9
Aggressive Scan Mode	4-14
Baud Rate	4-34
Beeper After Decode	4-11
Beeper Tone	4-12
Beeper Volume	4-12
Check Parity	4-36
CLSI Editing	4-29
Codabar	4-29
Code 128	4-22
Code 39	4-23
Code 39 Modulo 43 Check	4-23
Code 93	4-24
Code Types	4-15
Convert UPC-E to UPC-A	4-18
D 2 of 5 Modulo 10 Check	4-27
Data Format	4-36
Data Options	4-30
Decode Attempt Time	4-13
Decode Redundancy	4-15
Decode UPC Only (Not EAN)	4-17
Decode UPC/EAN Supplemental	4-19
Discrete 2 of 5	4-27
EAN Zero Extend	4-18

Enable/Disable Codabar	4-29
Enable/Disable Code 128	4-22
Enable/Disable Code 39	4-23
Enable/Disable Code 39 Full ASCII ..	4-24
Enable/Disable Code 93	4-24
Enable/Disable Code I 2 of 5	4-24
Enable/Disable D 2 of 5	4-27
Fixed Lengths for Code 2 of 5	4-27
Fixed Lengths for Code I 2 of 5	4-24
Hardware Handshaking	4-37
Host Interface Select	4-9
I 2 of 5 Modulo 10 Check	4-26
Intercharacter Delay	4-40
Interleaved 2 of 5	4-24
ITF14/EAN13 Conversion	4-26
NOTIS Editing	4-29
Operating Mode	4-14
Parity	4-35
Power On Beep Enable/Disable	4-11
Prefix	4-31
Prefix/Suffix Values	4-33
RS-232C	4-34
Send Code 128 Function Character ..	4-22
Set Parameter Defaults	4-9
Software Handshaking	4-37
Stop Bit Select	4-36
Suffix 4-31	
Transmit "No Decode" Message	4-15
Transmit Code 39 Check Digit	4-23
Transmit Code ID Character	4-30
Transmit UPC-E/UPC-A	4-17
UPC A and E Preambles	4-20
UPC/EAN	4-17
UPC/EAN Security Level	4-21
parameter menus	
RS-232 host type	4-10
Parity	4-35
Pinouts - LS 1004	3-8
Pitch	3-7
Power On Beep Disable	4-11
Power On Beep Enable	4-11
Power On Beep Enable/Disable	4-11
Power Requirements	3-7
Prefix	4-31

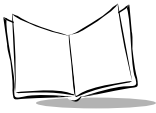

Prefix None 4-31
Prefix STX 4-31
User's Choice Prefix Character 4-31
Prefix/Suffix Values 4-33
Print Contrast Minimum 3-7

R

Ready, Test, Scan 2-3
Recharging a Ni-Cd Battery 3-3
RS-232
 code ID characters 4-7
 host type 4-10
 host type defaults 4-6
RS-232C 1-5, 4-34
 Battery Operation 1-7
 External Power Connection
 Flying Lead Connector 1-6
 External Power Connection - 25-pin
 connector 1-7
 External Power Connection - Synapse 1-5

S

Scan Repetition Rate 3-7
Scanning Sequence Example 4-7
Send CODE 128 Function Character 4-22
SET ALL DEFAULTS 4-9
Set Parameter Defaults 4-9
SET RS-232C HOST 4-9
Set Synapse Host 4-9
Set-Up 1-3
 Installing the Cable 1-4
 Switching Cables 1-5
Setup
 Unpacking 1-3
Skew Tolerance 3-7
Software Handshaking 4-37

specular reflection 2-4
Start-Up Time 3-8
Stop Bit Select 4-36
Storage Temperature 3-8
Suffix 4-31
 Suffix CR 4-32
 Suffix CR/LF 4-32
 Suffix ETX 4-32
 Suffix HT 4-32
 Suffix LF 4-32
 Suffix None 4-32
Switching the Cable 1-5
Synapse 1-5, 1-8

T

Technical Specifications 3-6
Transmit "NO DECODE" Message 4-15
Transmit "No Decode" Message 4-15
Transmit CODE 39 Check Digit 4-23
Transmit Code ID Character 4-30
Transmit UPC-E/UPC-A 4-17
Troubleshooting' 3-5

U

UPC A and E Preamble(s) 4-20
UPC/EAN 4-17
UPC/EAN Security Level 4-21

W

Wand Emulation 1-8
Wand Emulation, OCIA, OCR, and Keyboard
 Wedges 1-8
What If 3-5

Tell Us What You Think...

We'd like to know what you think about this Manual. Please take a moment to fill out this questionnaire and fax this form to: (631) 738-3318, or mail to:

Symbol Technologies, Inc.
One Symbol Plaza M/S B-4
Holtsville, NY 11742-1300
Attn: Technical Publications Manager

IMPORTANT: If you need product support, please call the appropriate customer support number provided. Unfortunately, we cannot provide customer support at the fax number above.

User's Manual Title: _____
(please include revision level)

How familiar were you with this product before using this manual?

Very familiar Slightly familiar Not at all familiar

Did this manual meet your needs? If not, please explain. _____

What topics need to be added to the index?, if applicable _____

What topics do you feel need to be better discussed? Please be specific. _____

What can we do to further improve our manuals? _____

Thank you for your input—We value your comments.



LS 1000 Series Product Reference Guide
