



# Instructions

This document provides instructions on installing the interface cable on the P300 Series Scanner.


Slide the cable boot downward.

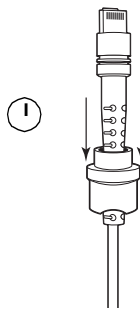



Insert the connector into the bottom of the scanner.

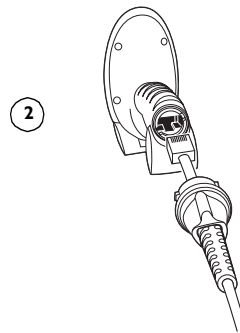

Slide the cable boot up and line up the connector tabs with the tabs on scanner.

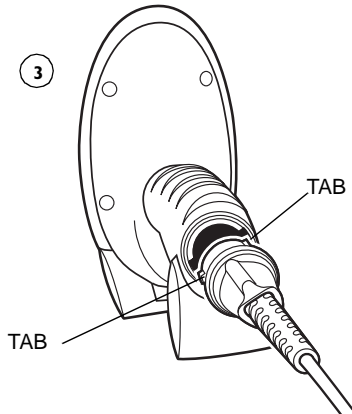

Push the boot into the scanner and twist the boot clockwise to lock into place.

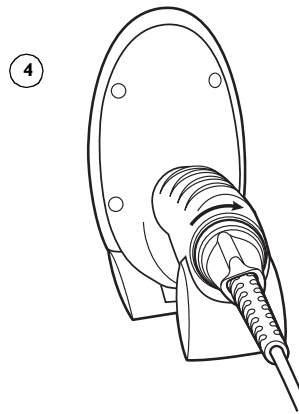

72-50298-01  
Revision A - October 2001