

**Metrologic®**



# **ScanSelect™ Scanner Programming Guide**

**MLPN 2186**

## **Locations:**

### **USA Corporate Headquarters**

Metrologic Instruments, Inc.  
Blackwood, NJ 08012  
Customer Service: 1-800-ID-METRO  
Tel: 609-228-8100  
Fax: 609-228-6673

### **South America**

Metrologic Instruments  
CEP 04571-090, São Paulo-SP, Brasil  
Outside Brazil:  
Tel: 55-11-5505-6568  
Fax: 55-11-5505-1681  
In Brazil:  
Tel: 55-11-5505-2396  
Fax: 55-11-5507-2301

### **Europe**

Metrologic Instruments GmbH  
Munich, Germany  
Tel: 49-89-89018-0  
Fax: 49-89-89019-200

### **ASIA**

Metrologic Asia (PTE) Ltd.  
Singapore 417818  
Tel: 65-842-7155  
Fax: 65-842-7166

## **Copyright**

© 1998 by Metrologic® Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

## Enter/Exit Program Mode



### Load Defaults



Introduction	
Section A	Code Types
Section B	Communication Protocol
Section C	Scanner Operation
Section D	General Format Options
Section E	RS-232 Parameters
Section F	Keyboard Wedge Parameters
Section G	Reserved Features
Section H	Supplemental/UCC Codes
Section I	Code Bytes
Section J	6720 Specific Codes

## Introduction

---

The scanner is shipped from the factory programmed to a set of default conditions noted in this guide by an asterisk that appears before the brief definition. Since each host system is unique, configure the scanner to match the specific host system requirements.

1. Connect the scanner to the host system. (Refer to the Installation and User's Guide)
2. Enter the program mode by scanning the ENTER/EXIT program mode bar code.
3. Scan the appropriate the bar code(s) that appear in this guide. (Reveal only one bar code to the scanner each time.)
4. Exit the program mode by scanning the ENTER/EXIT bar code again.

### Enter/Exit Program Mode



### Load Defaults



If the original factory settings are needed during the programming the scanner, scan the LOAD DEFAULTS bar code. Any settings selected during that session or any previous session will be lost. **1 will return the scanner to the RS-232 communication protocol.**

For other communications activate the protocol, i.e., OCIA, Keyboard Wedge, IBM. Then change all necessary parameters for the protocol. Verify that the scanner hardware is equipped/configured for the appropriate interface.

**Note:** The default settings for the non-RS232 protocols are different when enabled via ScanSelect™ versus ScanSet™.

Cloning allows the configuration of a scanner by making its settings the same as another scanner. This is done by connecting the cloning cable between the two scanners.

1. Turn off both scanners.
2. Connect the cloning cable between the two scanners.
3. Turn both the scanners on by plugging in the transformers.
4. Once each scanner is ready, scan the cloning bar code with the scanner that has the settings that need to be transferred to the other scanner.

### Cloning



### Configuration



While in the Program Mode, scan the Configuration bar code to a the scanner to transmit the current scanner configuration to an R 232 host. The scanner will transmit a sequential list of bar code d that can be printed as UPC bar codes and used to configure ano scanner to match the first scanner.

## Section A

---

### Code Types

This section provides various bar codes that can be enabled or disabled that are needed for a specific application.

E/D = Enable/Disable

CD = Check Digit

E/D UPC/EAN	(A - 1)	E/D MSI Plessey	(A - 6)	E/D EAN-8	(A - 10)
E/D Code 128	(A - 1)	E MSI Plessey 10/10 CD	(A - 6)	E/D EAN-13	(A - 11)
E/D Code 93	(A - 2)	E MSI Plessey Mod 10 CD	(A - 6)	E/D UPC-E	(A - 11)
E/D Codabar	(A - 2)	D Both MSI Plessey CD	(A - 7)	E/D UPC-A	(A - 12)
E/D ITF	(A - 3)	E/D UK Plessey	(A - 7)	ITF Symbol Length 1 (Byte 1)	(A - 12)
E/D Mod 10 Check on ITF	(A - 3)	E/D Airline 2 of 5	(A - 8)	ITF Symbol Length 2 (Byte 2)	(A - 12)
E/D Code 11	(A - 4)	E/D Telepen	(A - 8)	Minimum Symbol Length (Byte)	(A - 13)
E/D Code 39	(A - 4)	E/D MECCA	(A - 9)	Symbol Length Lock (Byte)	(A - 13)
E/D Full ASCII Code 39	(A - 5)	E/D Paraf Support	(A - 9)		
E/D Mod 43 Check Code 39	(A - 5)	E/D Matrix 2 of 5	(A - 10)		



**\*Enable UPC/EAN**



When this option is enabled, the scanner will scan UPC/EAN bar codes.

**\*Enable Code 128**



When this option is enabled, the scanner will scan Code 128 bar codes.

**Disable UPC/EAN**



When this option is disabled, the scanner will not scan UPC/EAN bar codes.

**Disable Code 128**



When this option is disabled, the scanner will not scan Code 128 bar codes.

**\*Enable Code 93**



When this option is enabled, the scanner will scan Code 93 bar codes.

**\*Enable Codabar**



When this option is enabled, the scanner will scan Codabar bar codes.

**Disable Code 93**



When this option is disabled, the scanner will not scan Code 93 bar codes.

**Disable Codabar**



When this option is disabled, the scanner will not scan Codabar bar codes.

**\*Enable Interleaved 2 of 5 (ITF)**



When this option is enabled, the scanner will scan Interleaved 2 of 5 (ITF) bar codes.

**Enable MOD 10 Check on ITF**



When this option is enabled, the scanner will scan Interleaved 2 of 5 (ITF) bar codes that have a Modulo 10 check digit.

**Disable Interleaved 2 of 5 (ITF)**



When this option is disabled, the scanner will not scan Interleaved 2 of 5 (ITF) bar codes.

**\*Disable MOD 10 Check on ITF**



When this option is disabled, the scanner will not scan ITF bar codes that have a Modulo 10 check digit.

**Enable Code 11**



When this option is enabled, the scanner will scan Code 11 bar codes.

**\*Enable Code 39**



When this option is enabled, the scanner will scan Code 39 bar codes.

**\*Disable Code 11**



When this option is disabled, the scanner will not scan Code 11 bar codes.

**Disable Code 39**



When this option is disabled, the scanner will not scan Code 39 bar codes.

**Enable Full ASCII Code 39**



When this option is enabled, the scanner will scan Full ASCII Code 39 bar codes.

**Enable MOD 43 Check on Code 39**



When this option is enabled, the scanner will scan Code 39 bar codes that have a Modulo 43 check digit.

**\*Disable Full ASCII Code 39**



When this option is disabled, the scanner will not scan Full ASCII Code 39 bar codes.

**\*Disable MOD 43 Check on Code 39**




When this option is disabled, the scanner will not scan Code 39 bar codes that have a Modulo 43 check digit.

**Enable MSI Plessey**



When this option is enabled, the scanner will scan MSI Plessey bar codes.

**Enable MSI Plessey 10/10 Check Digits**

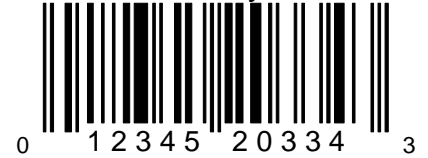

When this option is enabled, the scanner will scan MSI Plessey bar codes that have a double Modulo 10 check digit.

**\*Disable MSI Plessey**



When this option is disabled, the scanner will not scan MSI Plessey bar codes.

**\*Enable MSI Plessey MOD 10 Check Di**



When this option is enabled, the scanner will scan MSI Plessey bar codes that have a single Modulo 10 check digit.

### Disable Both MSI Plessey Check Digits



When this option is chosen, the scanner will not scan MSI Plessey bar codes that have a single or double Modulo 10 check digit.

### Enable UK Plessey



When this option is enabled, the scanner will scan UK Plessey bar codes.

### \*Disable UK Plessey



When this option is disabled, the scanner will not scan UK Plessey bar codes.

**Enable Airline 2 of 5**



When this option is enabled, the scanner will scan Airline 2 of 5 bar codes.

**Enable Telepen**



When this option is enabled, the scanner will scan Telepen bar codes.

**\*Disable Airline 2 of 5**



When this option is disabled, the scanner will not scan Airline 2 of 5 bar codes.

**\*Disable Telepen**



When this option is disabled, the scanner will not scan Telepen bar codes.



### Enable MECCA



When this option is enabled Metrologic Enhanced Code Correcting Algorithm (MECCA) will be activated. This feature allows for increased accuracy in reading poor quality bar codes, but may slightly reduce the aggressiveness of the scanner.

### Enable Paraf Support



When this option is enabled, the scanner will convert Code 39 bar codes to paraf format.

### \*Disable MECCA



When this option is chosen, MECCA will not be active.

### \*Disable Paraf Support



When this option is disabled, the scanner will not convert Code 39 bar codes to paraf format.

**Enable Matrix 2 of 5**



When this option is enabled, the scanner will scan Matrix 2 of 5 bar codes

**\*Enable EAN-8**



When this option is enabled, the scanner will scan EAN-8 bar codes.

**\*Disable Matrix 2 of 5**



When this option is disabled, the scanner will not scan Matrix 2 of 5 bar codes.

**Disable EAN-8**



When this option is chosen, the scanner will not scan EAN-8 bar codes.

**\*Enable EAN-13**



When this option is enabled, the scanner will scan EAN-13 bar codes.

**\*Enable UPC-E**



When this option is enabled, the scanner will scan UPC-E bar codes.

**Disable EAN-13**



When this option is chosen, the scanner will not scan EAN-13 bar codes.

**Disable UPC-E**



When this option is chosen, the scanner will not scan UPC-E bar codes.

**\*Enable UPC-A**



When this options enabled, the scanner will scan UPC-A bar codes.

**Disable UPC-A**



When this option is chosen, the scanner will not scan UPC-A bar codes.

**ITF Symbol Length 1 (Byte 1)**



To specify the number of ITF (Interleaved 2 digits) in the bar codes that will be scanned, the above bar code and the appropriate Cc Byte bar code in Section I.

**ITF Symbol Length 2 (Byte 2)**



To specify a second number, scan the above bar code and the appropriate Code Byte bar code in Section I. Only scan the above bar when a second ITF number needs to be specified.

### Minimum Symbol Length (Byte)



To specify the minimum number of characters in the bar codes that will be scanned, scan the above bar code and the appropriate Code Byte bar code in Section I.

### Symbol Length Lock (Byte)



When the scanner will always scan bar codes that are the same length, the length of the bar code can be locked into place by scanning the above bar code and the appropriate Code Byte bar code in Section I.

## Section B

---

### Communication Protocol

This section provides bar codes that can be enabled or disabled for the proper communication interface for a specific host device.

Enable RS-232	(B - 1)	RS-232 Protocols	(B - 3)
Enable IBM 4680 Communication	(B - 1)	Parallel Protocols	(B - 3)
Enable Parallel Communication	(B - 1)	Light Pen Protocols	(B - 3)
Enable Light Pen Emulation	(B - 1)	OCIA Protocols	(B - 3)
Enable No Communication Mode	(B - 2)	Poll Light Pen Source	(B - 4)
OCIA Output	(B - 2)	*Do Not Poll Light Pen Source	(B - 4)
Multi-drop Network	(B - 2)	E/D Light Pen Extra Transition	(B - 5)
Enable Keyboard Wedge Emulation	(B - 4)	Multi-drop Address	(B - 5)

**\*Enable RS-232**



When this option is enabled, the scanner will work with RS-232 +-12V serial output.

**Enable Parallel Communication**



This option should be selected if the scanner will provide parallel output to various cash registers. This is not Centronics parallel and should not be connected to such an interface. For the most part, parallel registers allow input of UPC/EAN bar codes only.

**Enable IBM 4680 Communication**



This option should be selected if communications with an IBM 46XX register is needed. This will enable RS-485 communications. Not all scanners support this interface as the correct interface board is required.

**Enable Light Pen Emulation**



This option should be selected if the scanner will be used in place of a light pen. It will provide light pen emulation of each bar code that is scanned.

### Enable No Communication Mode



This option should be selected if the scanner will not interface with a host device.

### Multi-drop Network



This option should be selected if the scanner will provide RS-422 type output for National Semi-conductor/ICL cash registers. This is a specific format which is only supported when the proper interface board is being used.

### OCIA Output



This option should be selected if the communications requirement is OCIA (Optically Coupled Interface Adaptor). This is a clocked (by the host) serial interface.

### Enable Keyboard Wedge Emulation



This option should be selected if the scanner will provide keyboard emulation by converting the scanned bar code data to the PC keyboard scan code equivalent.





When using one of the following, this feature will work as indicated:

RS-232	-	Odd Parity
Parallel	-	IBM
Light Pen	-	Spaces High as Code 39
OCIA	-	DTS/SIEMENS



When using one of the following communications, this feature will work as indicated:

RS-232	=	*Space Parity
Parallel	-	*SWEDA
Light Pen	=	*Bars High as Code 39
OCIA	=	*DTS/NIXDORF



When using one of the following, this feature will work as indicated:

RS-232	=	Even Parity
Parallel	=	Fujitsu
Light Pen	=	Spaces High/ as Sca
OCIA	=	NCR F



When using one of the following communications, this feature will work as indicated:

RS-232	=	Mark Parity
Parallel	=	OMRON
Light Pen	=	Bars High/ as Scann
OCIA	=	NCR S

### Poll Light Pen Source



When this option is chosen, the scanner will wait for an active source voltage before transmitting the data.

### Enable Light Pen Extra Transition Before Bar



When this option is enabled, the scanner will toggle the light pen data line prior to transmitting the bar code. This may be needed for certain decode devices.

### \*Do Not Poll Light Pen Source



When this option is chosen, the scanner will not wait for an active source voltage before transmitting the data.

### \*Disable Light Pen Extra Transition Before Bar



When this option is disabled, the scanner will not toggle the light pen data line prior to transmitting the bar code.

### Multi-drop Address



When using Multi-drop communication, scan the above bar code and the appropriate Code Byte in Section I to specify the address.

### Enable Keyboard Wedge Emulation



This option should be selected if the scanner will provide keyboard emulation by converting the scanned bar code data to the PC keyboard scan code equivalent.

## Section C

---

### Scanner Operation

This section provides bar codes that can change the general operating characteristics of the scanner. These include beeper operation, time-out options, depth of field, and test modes.

E/D = Enable/Disable

Normal Tone	(C - 1)	E/D No Same Symbol Time-out	(C - 6)
Alternate Tone 1	(C - 1)	E/D Infinite Same Symbol Time-out	(C - 7)
Alternate Tone 2	(C - 1)	E/D Same Symbol Rescan Time-out: 100 msec	(C - 7)
No Beep	(C - 1)	Same Symbol Rescan Time-out: 200 msec	(C - 8)
E/D Fast Beep	(C - 2)	Same Symbol Rescan Time-out: 500 msec	(C - 8)
Loudest Volume Setting	(C - 2)	Same Symbol Rescan Time-out: 1250 msec	(C - 8)
Medium Volume Setting	(C - 2)	Same Symbol Rescan Time-out: 2000 msec	(C - 8)
Lowest Volume Setting	(C - 3)	Scanability On/Off	(C - 9)
Quietest (No Volume)	(C - 3)	Scan Count Mode On/Off	(C - 9)
Beep Before/After Transmit	(C - 3)	Extended Depth of Field	(C - 10)
E/D Communication Time-outs	(C - 4)	Normal Depth of Field	(C - 10)
Razz Tone on Time-out	(C - 4)	Close Depth of Field	(C - 10)
No Razz Tone on Time-out	(C - 4)	Intercharacter Delay:	
Three Beeps on Time-out	(C - 5)	RS-232 Protocols	(C - 11, C - 12)
No Beeps on Time-out	(C - 5)	Parallel Protocols	(C - 11, C - 12)
10 Min Touchplate/IR Time-out	(C - 5)	OCIA Protocols	(C - 11, C - 12)
2 Min Touchplate/IR Time-out	(C - 5)	KB Wedge Protocols	(C - 11, C - 12)
30 Min Touchplate/IR Time-out	(C - 6)	1 Scan Buffer	(C - 13)
No Touchplate/IR Time-out	(C - 6)	2 Scan Buffers	(C - 13)

**\*Normal Tone**



The following beeper tone options are available: Normal, Alt 1, Alt 2, and No Beep. When No Beep is chosen, the scanner will not emit an audible beep.

**Alternate Tone 2**



The following beeper tone options are available: Normal, Alt 1, Alt 2, and No Beep. When No Beep is chosen, the scanner will not emit an audible beep.

**Alternate Tone 1**



The following beeper tone options are available: Normal, Alt 1, Alt 2, and No Beep. When No Beep is chosen, the scanner will not emit an audible beep.

**No Beep**



The following beeper tone options are available: Normal, Alt 1, Alt 2, and No Beep. When No Beep is chosen, the scanner will not emit an audible beep.

### Enable Fast Beep



When this option is selected, the scanner will use the selected tone but shorten the duration of the beep.

### \*Disable Fast Beep



When this option is selected, the scanner will not shorten the beep duration.

### \*Loudest Volume Setting



The following beeper volume options are available: Quietest (No Volume), Lowest, Medium, and Loudest. When Quietest is chosen, the scanner will not emit an audit beep.

### Medium Volume Setting



The following beeper volume options are available: Quietest (No Volume), Lowest, Medium, and Loudest. When Quietest is chosen, the scanner will not emit an audit beep.

### Lowest Volume Setting



The following beeper volume options are available: Quietest (No Volume), Lowest, Medium, and Loudest. When Quietest is chosen, the scanner will not emit an audible beep.

### Quietest (No Volume)



The following beeper volume options are available: Quietest (No Volume), Lowest, Medium, and Loudest. When Quietest is chosen, the scanner will not emit an audible beep.

### \*Beep Before Transmit



When this option is chosen, the scanner will beep before each label is transmitted.

### Beep After Transmit



When this option is chosen, the scanner will beep after each label is transmitted.

### Enable Communication Time-outs



When this option is enabled, the scanner will time-out if it does not transmit its data to the host after two seconds during communication. This is only valid in modes where some type of handshaking is involved.

### \*Disable Communication Time-outs



When this option is disabled, the scanner will not time-out if it does not transmit its data to the host after two seconds during communication. This is only valid in modes where some type of handshaking is involved.

### Razzberry Tone on Time-out



When this option is chosen, the scanner will produce an audible razzberry tone when communications have timed out.

### No Razzberry Tone on Time-out



When this option is chosen, the scanner will not produce an audible razzberry tone when communications have timed out.



**Three Beeps on Time-out**



When this option is chosen, the scanner will beep three times when communications have timed out.

**No Beeps on Time-out**



When this option is chosen, the scanner will not beep when communications have timed out.

**\*10 Minutes Touchplate/IR Time-outs**



This time represents the duration of time inactivity from the last scan until the scanner enters a "standby" mode. The scanner will return to scanning until either the scanner touchplate is pressed or an object is waved in front of the IR sensor.

**Two Minutes Touchplate/IR Time-outs**



This time represents the duration of time inactivity from the last scan until the scanner enters a "standby" mode. The scanner will return to scanning until either the scanner touchplate is pressed or an object is waved in front of the IR sensor.

### Thirty Minutes Touchplate/IR Time-outs



This time represents the duration of time of inactivity from the last scan until the scanner enters a “standby” mode. The scanner will not return to scanning until either the scanner’s touchplate is pressed or an object is waved in front of the IR sensor.

### No Touchplate/IR Time-outs



When this option is chosen, the scanner will not enter a “standby” mode. When using a Tech scanner, select this option since these units do not have an IR sensor or a touchplate.

### Enable No Same Symbol Time-out



When this option is enabled, the same bar code is scanned again without any time delay. When enabled, this option overrides any selected same symbol rescan time-out option.

### \*Disable No Same Symbol Time-out



When this option is disabled, there is a same symbol rescan time-out.

### Enable Infinite Same Symbol Time-out



When this option is enabled, the scanner never scans the same bar code repetitively during a scanning session. When enabled, this option overrides all of the same symbol rescan time-outs.

### \*Disable Infinite Same Symbol Time-out



When this option is disabled, the same bar code can be scanned again after a rescan time-out.

### Enable Same Symbol Rescan Time-out msec



The available same symbol time-outs are 100, 200, 500, 1250 and 2000 milliseconds. These numbers represent the amount of time that a bar code must be out of the scan field before that bar code can be scanned again.

### \*Disable Same Symbol Rescan Time-out 100 msec



When this option is disabled, any other selected same symbol rescan time-out will be recognized. Note: If 100 msec is enabled, the time-out will override all other rescan time-outs until the above bar code is scanned.

**Same Symbol Rescan Time-out 200 msecs**



The available same symbol time-outs are 200, 500, 1250 and 2000 milliseconds. These numbers represent the amount of time that a bar code must be out of the scan field before that bar code can be scanned again.

**Same Symbol Rescan Time-out: 1250**



The available same symbol time-outs are 200, 500, 1250 and 2000 milliseconds. These numbers represent the amount of time that a bar code must be out of the scan field before that bar code can be scanned again.

**\*Same Symbol Rescan Time-out: 500 msecs**



The available same symbol time-outs are 200, 500, 1250 and 2000 milliseconds. These numbers represent the amount of time that a bar code must be out of the scan field before that bar code can be scanned again.

**Same Symbol Rescan Time-out 2000 n**



The available same symbol time-outs are 200, 500, 1250 and 2000 milliseconds. These numbers represent the amount of time that a bar code must be out of the scan field before that bar code can be scanned again.

### Scanability On



When this option is enabled, the scanner will enter scanability test mode. Do not enable this feature unless instructed to do so by a Metrologic representative.

### Scan Count Mode On



When this option is enabled, the scanner will enter scan count test mode. The firmware number of the scanner will also be transmitted to the host device. Do not enable this feature unless instructed to do so by a Metrologic representative.

### \*Scanability Off



Do not enable this feature unless instructed to do so by a Metrologic representative.

### \*Scan Count Mode Off



Do not enable this feature unless instructed to do so by a Metrologic representative.

**Extended Depth of Field**



Do not change this setting unless instructed to do so by a Metrologic representative.

**Close Depth of Field**



Do not change this setting unless instructed to do so by a Metrologic representative.

**\*Normal Depth of Field**



Do not change this setting unless instructed to do so by a Metrologic representative.

### Intercharacter Delay



If the host device does not require an intercharacter delay, choose this option.

RS-232 - None      OCIA - None  
Parallel - None    KB Wedge - None

### Intercharacter Delay



The time specified represents the interim of time in between transmission of charac

RS-232 - 5 msec      OCIA - 5 msec  
Parallel - 2 msec    KB Wedge - 10 me

### Intercharacter Delay



The time specified represents the interim of time in between transmission of characters.

RS-232 - \*1 msec    OCIA - \*1 msec  
Parallel - \*1 msec    KB Wedge - \*1 msec

### Intercharacter Delay



The time specified represents the interim of time in between transmission of charac

RS-232 - 20 msec    OCIA - 20 msec  
Parallel - 5 msec    KB Wedge - 100 m

### Intercharacter Delay



The time specified represents the interim of time in between transmission of characters.

RS-232 - Reserved OCIA - Reserved  
Parallel - Reserved KB Wedge - 5 msec

### Intercharacter Delay



The time specified represents the interim of time in between transmission of character.

RS-232 - Reserved OCIA - Reserved  
Parallel - Reserved KB Wedge - 50 msec

### Intercharacter Delay



The time specified represents the interim of time in between transmission of characters.

RS-232 - Reserved OCIA - Reserved  
Parallel - Reserved KB Wedge - 25 msec

### Intercharacter Delay



The time specified represents the interim of time in between transmission of character.

RS-232 - Reserved OCIA - Reserved  
Parallel - Reserved KB Wedge - 75 msec



### \*1 Scan Buffer



When this option is enabled, the scanner will scan continuously if two different labels are in the scan field.

### 2 Scan Buffers



When this option is enabled, the scanner will scan two different labels in the scan field once. It will not scan the bar code again until the same symbol time-out has elapsed.

## Section D

---

### General Format Options

This section provides bar codes that can be chosen to select the output format for UPC/EAN bar codes and transmission formats for Non-UPC scanned data. Many of the formatting options are dependent upon which interface is being used.

DN/T = Do Not Transmit/Transmit

DN/T UPC-A Check Digit	(D - 1)	DN/T Codabar Start/Stop Characters	(D - 5)
DN/T UPC-E Check Digit	(D - 1)	DN/Enable CLSI Editing	(D - 6)
DN/Expand UPC - E	(D - 2)	DN/T Mod 43 Check Digit on Code 39	(D - 6)
DN/Convert UPC-A to EAN-13	(D - 2)	DN/T Code 39 Start/Stop Characters	(D - 7)
DN/T Lead Zero on UPC-E	(D - 3)	DN/T Mod 10/ITF	(D - 7)
DN/Convert EAN-8 to EAN-13	(D - 3)	DN/T Code 11 Check Digit	(D - 8)
DN/T EAN-13 Check Digit	(D - 4)	DN/T MSI Plessey Check Digits	(D - 8)
DN/T EAN-8 Check Digit	(D - 4)	DN/T UK Plessey Check Digits	(D - 9)
DN/T UPC-A Number System	(D - 5)		

**\*Transmit UPC-A Check Digit**



When this option is chosen, the scanner will transmit the UPC-A check digit.

**Transmit UPC-E Check Digit**



When this option is chosen, the scanner will transmit the UPC-E check digit.

**Do not Transmit UPC-A Check Digit**



When this option is chosen, the scanner will not transmit the UPC-A check digit.

**\*Do not Transmit UPC-E Check Digit**



When this option is chosen, the scanner will not transmit the UPC-E check digit.

**Expand UPC-E**



When this option is chosen, the scanner will expand UPC-E to the 12 digit equivalent UPC-A.

**Convert UPC-A to EAN-13**



When this option is chosen, the scanner will convert UPC-A to EAN-13 by transmitting a leading zero before the bar code.

**\*Do not Expand UPC-E**



When this option is chosen, the scanner will not expand UPC-E to the 12 digit equivalent UPC-A.

**\*Do not Convert UPC-A to EAN-13**



When this option is chosen, the scanner will not convert UPC-A to EAN-13.

**Transmit Lead Zero on UPC-E**



When this option is chosen, the scanner will output a zero before each UPC-E bar code.

**Convert EAN-8 to EAN-13**



When this option is chosen, the scanner will convert EAN-8 to EAN-13 by transmitting five zeroes before the bar code.

**\*Do not Transmit Lead Zero on UPC-E**



When this option is chosen, the scanner will not output a zero before each UPC-E bar code.

**\*Do not Convert EAN-8 to EAN-13**



When this option is chosen, the scanner will convert EAN-8 to EAN-13.

**\*Transmit EAN-13 Check Digit**



When this option is chosen, the scanner will transmit the EAN-13 check digit.

**\*Transmit EAN-8 Check Digit**



When this option is chosen, the scanner will transmit the EAN-8 check digit.

**Do not Transmit EAN-13 Check Digit**



When this option is chosen, the scanner will not transmit the EAN-13 check digit.

**Do not Transmit EAN-8 Check Digit**



When this option is chosen, the scanner will not transmit the EAN-8 check digit.

**\*Transmit UPC-A Number System**



When this option is chosen, the scanner will transmit the UPC-A number system character.

**Transmit Codabar Start/Stop Character**



When this option is chosen, the scanner will transmit Codabar's start and stop character before and after each bar code.

**Do not Transmit UPC-A Number System**



Metrologic strongly discourages the disabling of this feature because duplicate numbers may result in the database when the scanner is programmed not to transmit the UPC-A number system character.

**\*Do not Transmit Codabar Start/Stop Character**



When this option is chosen, the scanner will not transmit Codabar's start and stop character before and after each bar code.

### Enable CLSI Editing



When this option is enabled, the scanner will perform CLSI library type editing before the information is transmitted to the host. This editing only works with 14 digit Codabar type labels.

### Transmit Mod 43 Check Digit on Code 39



When this option is chosen, the scanner will transmit Code 39's Mod 43 check character. This feature works in conjunction with the Mod 43 Check on Code 39 option in Section A. This option must be enabled in order for this feature to work.

### \*Do not Enable CLSI Editing



When this option is chosen, the scanner will not perform CLSI library type editing before the information is transmitted to the host.

### \*Do not Transmit Mod 43 Check Digit on Code 39



When this option is chosen, the scanner will not transmit Code 39's Mod 43 check character.



### Transmit Code 39 Stop/Start Characters



When this option is chosen, the scanner will transmit Code 39's start and stop characters before and after each bar code.

### \*Do not Transmit Code 39 Start/Stop Characters



When this option is chosen, the scanner will not transmit Code 39's start and stop characters before and after each bar code.

### Transmit Mod 10/ITF



When this option is chosen, the scanner will transmit the Interleaved 2 of 5 (ITF) mod 10 check character. This feature works in conjunction with the Mod 10 Check on ITF Section A. Both must be enabled in order for the feature to work.

### \*Do not Transmit Mod 10/ITF



When this option is chosen, the scanner will not transmit the Interleaved 2 of 5 (ITF) mod 10 check character.

### Transmit Code 11 Check Digit



When this option is chosen, the scanner will transmit Code 11 check characters. This feature works in conjunction with the Enable Code 11 option in Section A. Both must be enabled in order for this feature to work.

### Transmit MSI Plessey Check Digits



When this option is chosen, the scanner will transmit MSI Plessey's check digit character. This feature works in conjunction with the Plessey options in Section A. This option and one or both of the MSI Plessey Mod options must be enabled in order for this feature to work.

### \*Do not Transmit Code 11 Check Digit



When this option is chosen, the scanner will not transmit Code 11 check characters.

### \*Do not Transmit MSI Plessey Check D



When this option is chosen, the scanner will not transmit MSI Plessey's check digit character.

### Transmit UK Plessey Check Digits



When this option is chosen, the scanner will transmit UK Plessey's check digit characters. This feature works in conjunction with the UK Plessey option in Section A.

### \*Do not Transmit UK Plessey Check Digits



When this option is chosen, the scanner will not transmit UK Plessey's check digit characters.

## Section E

---

### RS-232 Parameters

All of the options in this section are available with RS-232 communication. However, some of the data formatting options also apply for keyboard wedge mode.

E/D = Enable/Disable

DN/T = Do Not Transmit/Transmit

Odd/Space Parity	(E - 1)	E/D UPC Suffix	(E - 9)
Even/Mark Parity	(E - 1)	E/D STX Prefix	(E - 9)
19200/9600 Baud Rate	(E - 2)	E/D ETX Suffix	(E - 10)
4800/2400 Baud Rate	(E - 2)	E/D Carriage Return	(E - 10)
1200/600 Baud Rate	(E - 3)	E/D Line Feed	(E - 11)
300/38400 Baud Rate	(E - 3)	E/D Tab Prefix	(E - 11)
8/7 Data Bits	(E - 4)	E/D Tab Suffix	(E - 12)
DN/T Sanyo ID Characters	(E - 4)	E/D DE Disable Command	(E - 12)
E/D Shell/Schulmberger Formatting	(E - 5)	E/D FL Laser Enable Command	(E - 13)
E/D SNI Beetle Mode	(E - 5)	E/D DTR Handshaking Support	(E - 13)
E/D French PC Term	(E - 6)	E/D RTS/CTS Handshaking	(E - 14)
DN/T AIM ID Characters (Chrs.)	(E - 6)	Character/Message RTS/CTS	(E - 14)
E/D Nixdorf ID	(E - 7)	E/D XON/XOFF Handshaking	(E - 15)
Program Prefix Chrs., RS-232 (Byte 1)/(Byte 2)	(E - 7)	E/D ACK/NAK	(E - 15)
Program Suffix Chrs., RS-232 (Byte 1)/(Byte 2)	(E - 8)	E/D 5 Retries ACK/NAK Time-out	(E - 16)
E/D UPC Prefix	(E - 8)		

### Odd Parity



Parity is an extra bit attached to the transmitted data byte which is used to catch potential single-bit data transmission errors. The scanner's parity must match the host's parity. Select odd to make the additional parity bit either a 0 or 1 to guarantee that an odd number of bits are ones.

### \*Space Parity



Parity is an extra bit attached to the transmitted data byte which is used to catch potential single-bit data transmission errors. The scanner's parity must match the host's parity. Select space to make the parity bit always 0.

### Even Parity



The scanner's parity must match the host's parity. Select even to make the additional parity bit either a 0 or 1 to guarantee that an even number of bits are ones.

### Mark Parity



Parity is an extra bit attached to the transmitted data byte which is used to catch potential single-bit data transmission error. The scanner's parity must match the host's parity. Select mark to make the parity bit always 1.

### 19200 Baud Rate



A baud rate is a unit that measures the speed with which information is transferred. The baud rate of the scanner must equal the baud rate of the host device. Select the rate that matches the host device's requirements.

### 4800 Baud Rate



A baud rate is a unit that measures the speed with which information is transferred. The rate of the scanner must equal the baud rate of the host device. Select the rate that matches the host device's requirements.

### \*9600 Baud Rate



A baud rate is a unit that measures the speed with which information is transferred. The baud rate of the scanner must equal the baud rate of the host device. Select the rate that matches the host device's requirements.

### 2400 Baud Rate



A baud rate is a unit that measures the speed with which information is transferred. The rate of the scanner must equal the baud rate of the host device. Select the rate that matches the host device's requirements.

### 1200 Baud Rate



A baud rate is a unit that measures the speed with which information is transferred. The baud rate of the scanner must equal the baud rate of the host device. Select the rate that matches the host device's requirements.

### 300 Baud Rate



A baud rate is a unit that measures the speed with which information is transferred. The rate of the scanner must equal the baud rate of the host device. Select the rate that matches the host device's requirements.

### 600 Baud Rate



A baud rate is a unit that measures the speed with which information is transferred. The baud rate of the scanner must equal the baud rate of the host device. Select the rate that matches the host device's requirements.

### 38400 Baud Rate



A baud rate is a unit that measures the speed with which information is transferred. The rate of the scanner must equal the baud rate of the host device. Select the rate that matches the host device's requirements.

### 8 Data Bits



RS-232 serial communication requires ASCII data to be transmitted in either 7 or 8 data bits. In addition, one parity bit will be transmitted. If the host device requires 8 data bits, select this option.

### \*7 Data Bits



RS-232 serial communication requires ASCII data to be transmitted in either 7 or 8 data bits. In addition, one parity bit will be transmitted.

### Transmit Sanyo ID Characters



When this option is chosen, the scanner will transmit code identifiers before each bar code. These identifiers are expected by many Sanyo registers.

### \*Do not Transmit Sanyo ID Characters



When this option is chosen, the scanner will not transmit code identifiers before each bar code.



### Enable Shell/Schulmberger Formatting



When this option is chosen, the scanner will output an LRC (check character) after the bar code. In addition, ETX suffix and STX prefix must be enabled while CR and LF must be disabled.

### \*Disable Shell/ Schulmberger Formatting



When this option is chosen, the scanner will not output an LRC (check character) after the bar code.

### Enable SNI Beetle Mode



When this option is enabled, the scanner will transmit the ID characters that SNI Beetle cash register expects.

### \*Disable SNI Beetle Mode



When this option is disabled, the scanner will not transmit the ID characters that the SNI Beetle cash register expects.

**Enable French PC Term**



When this option is enabled, the scanner will transmit PC type make/break scan codes instead of ASCII data characters.

**Transmit AIM ID Characters**



When this option is chosen, the scanner will transmit AIM symbology identifiers. Currently, the scanners do not support this feature.

**\*Disable French PC Term**



When this option is disabled, the scanner will not transmit PC type make/break scan codes instead of ASCII data characters.

**\*Do not Transmit AIM ID Characters**



When this option is chosen, the scanner will not transmit AIM symbology identifiers. Currently, the scanners do not support this feature.

### Enable Nixdorf ID



When this option is enabled, the scanner will transmit the code identifiers before each bar code. Many Siemens/Nixdorf registers require these code identifiers.

### \*Disable Nixdorf ID



When this option is chosen, the scanner will not transmit the code identifiers before each bar code.

### Programmable Prefix Characters, RS-2 (Byte1)



When this option is chosen, one program prefix ID character can be assigned and added to the scanned data transmission. To specify the character, scan the above bar code and the appropriate Code Byte in Section I.

### Programmable Prefix Characters, RS-2 (Byte 2)



When this option is chosen, a second programmable prefix ID character can be assigned and added to the scanned data transmission. To specify the second character, scan the above bar code and the appropriate Code Byte in Section I.

### Programmable Suffix Characters, RS-232 (Byte1)



When this option is chosen, one programmable suffix ID character can be assigned and added to the scanned data transmission. To specify the character, scan the above bar code and the appropriate Code Byte in Section I.

### Programmable Suffix Characters, RS-232 (Byte2)



When this option is chosen, a second programmable suffix ID character can be assigned and added to the scanned data transmission. To specify the second character, scan the above bar code and the appropriate Code Byte in Section I.

### Enable UPC Prefix



When this option is enabled, the scanner will transmit a prefix before any UPC/EAN bar code. The prefixes are A (UPC-A), EO (UI E), F (EAN-13) and FF (EAN-8).

### \*Disable UPC Prefix



When this option is chosen, the scanner will not transmit a prefix before any UPC/EAN code.

### Enable UPC Suffix



When this option is enabled, the scanner will transmit a suffix after any UPC/EAN bar code. The suffixes are A (UPC-A), EO (UPC-E), F (EAN-13) and FF (EAN-8).

### \*Disable UPC Suffix



When this option is chosen, the scanner will not transmit a suffix after any UPC/EAN bar code.

### Enable STX Prefix



When this option is enabled, the scanner will transmit a Start of Text (ASCII 02H) before each bar code.

### \*Disable STX Prefix



When this option is chosen the scanner will not transmit a Start of Text (ASCII 02H) before each bar code.

### Enable ETX Suffix



When this option is enabled, the scanner will transmit an End of Text (ASCII 03H) after each bar code.

### \*Enable Carriage Return (CR)



When this option is enabled, the scanner will transmit a Carriage Return (CR) after each bar code.

### \*Disable ETX Suffix



When this option is chosen, the scanner will not transmit an End of Text (ASCII 03H) after each bar code.

### Disable Carriage Return (CR)



When this option is chosen, the scanner will not transmit a Carriage Return (CR) after each bar code.

### \*Enable Line Feed



When this option is enabled, the scanner will transmit a Line Feed (LF) after each bar code.

### Enable Tab Prefix



When this option is enabled, the scanner will transmit a TAB (ASCII 09H) before each bar code.

### Disable Line Feed



When this option is chosen, the scanner will not transmit a Line Feed (LF) after each bar code.

### \*Disable Tab Prefix



When this option is chosen, the scanner will not transmit a TAB (ASCII 09H) before each bar code.

### Enable Tab Suffix



When this option is enabled, the scanner will transmit a TAB (ASCII 09H) after each bar code.

### \*Disable Tab Suffix



When this option is chosen, the scanner will not transmit a TAB (ASCII 09H) after each bar code.

### Enable "DE" Disable Command



When this option is enabled, the scanner will stop scanning when it receives an ASCII "D" from the host device. Scanning will resume when the scanner receives an ASCII "E". This feature will only work with RS-232 communication.

### \*Disable "DE" Disable Command



When this option is chosen, the scanner will not stop scanning when it receives an ASCII "D" from the host device.



### Enable "FL" Laser Enable Command



When this option is enabled, the laser will turn off when the scanner receives an ASCII "F" from the host device. The laser will turn on when the scanner receives an ASCII "L". This feature will only work with RS-232 communication.

### \*Disable "FL" Laser Enable Command



When this option is chosen, the laser will not turn off when the scanner receives an ASCII "F" from the host device.

### Enable DTR Handshaking Support



When this option is enabled, the scanner will stop scanning when the Data Terminal Ready (DTR) signal goes inactive.

### \*Disable DTR Handshaking Support



When this option is chosen, the scanner will not stop scanning when the Data Terminal Ready (DTR) signal goes inactive.

### Enable RTS/CTS Handshaking



When this option is enabled, the scanner will output a Requ<sup>e</sup>st To Send (RTS) signal and wait for a Clear To Send (CTS) signal before any data is transmitted.

### \*Character RTS/CTS



When this option is chosen, the scanner will activate and deactivate its RTS signal on each character that it transmits.

### \*Disable RTS/CTS Handshaking



When this option is chosen, the scanner will not output a Requ<sup>e</sup>st To Send (RTS) signal and wait for a Clear To Send (CTS) signal before any data is transmitted.

### Message RTS/CTS



When this option is chosen, the scanner will activate and deactivate its RTS signal on each message that it transmits. This mode should normally be enabled for Sanyo registers.

### Enable XON/XOFF Handshaking



When this option is enabled, the scanner will stop transmission whenever an XOFF (ASCII 13H) is received. Transmission will resume after an XON (ASCII 11H) is received.

### \*Disable XON/XOFF Handshaking



When this option is chosen, the scanner will not stop transmission whenever an XOFF (ASCII 13H) is received.

### Enable ACK/NAK



When ACK/NAK is enabled, the scanner will not scan again unless an ACK (ASCII 06H) is received after transmission of a bar code. If a NAK (ASCII 15H) is received, the scanner retransmits the bar code.

### \*Disable ACK/NAK



When this option is chosen, ACK/NAK handshaking will not occur.

### Enable 5 Retries on ACK/NAK Time-out



When this option is enabled, the scanner will transmit five times when an ACK/NAK communication time-out is reached.

### \*Disable 5 Retries on ACK/NAK Time-out



When this option is enabled, the scanner will transmit one time when an ACK/NAK communication time-out is reached.

## Section F

---

### Keyboard Wedge Parameters

This section provides bar codes that can be chosen for various options available with keyboard emulation. This protocol is only available with a version 17 scanner.

E/D = Enable/Disable

Enable Keyboard Wedge Emulation	(F - 1)	Reserved Keyboard	(F - 4)
USA Keyboard	(F - 1)	E/D Caps Lock	(F - 4)
Spain Keyboard	(F - 1)	E/D Alt Mode	(F - 5)
Italy Keyboard	(F - 2)	E/D Reserved Wedge Function	(F - 5)
Germany Keyboard	(F - 2)	Inter Scan Code Delay: None	(F - 6)
France Keyboard	(F - 2)	Inter Scan Code Delay: 800 $\mu$ sec (micro)	(F - 6)
UK Keyboard	(F - 2)	Inter Scan Code Delay: 7.5 msec (milli)	(F - 6)
Belgium Keyboard(Swiss)	(F - 3)	Inter Scan Code Delay: 15 msec	(F - 6)
XT Keyboard	(F - 3)	Transmit/Do Not Transmit F0H Break Code	(F - 7)
AT Keyboard	(F - 3)	E/D MS6720 Extended Country Code Table	(F - 7)
PS/2 Keyboard	(F - 3)	E/D MS700i/860i Extended Country Code Table	(F - 8)
IBM 4700 Financial Keyboard	(F - 4)	Stand Alone or Single Ended Wedge Mode	(F - 9)
		E/D Stand Alone	(F - 9)

### Enable Keyboard Wedge Emulation



This option should be selected if the scanner will provide keyboard emulation by converting the scanned bar code data to the PC keyboard scan code equivalent.

### Application Notes:

For most applications, it will be desirable to disable line feed transmission. (Pg. E - 11)

For non-USA keyboards, 10 msec (Pg. C - 11) is probably the best intercharacter delay.

For network system installations, tuning of the intercharacter and inter scan code options may be required.

### \*USA Keyboard



If keyboard emulation is enabled, scan this bar code to enable the keyboard type US/

### Spain Keyboard



If keyboard emulation is enabled, scan this bar code to enable the keyboard type Spa

### Italy Keyboard



If keyboard emulation is enabled, scan this bar code to enable the keyboard type Italy.

### France Keyboard



If keyboard emulation is enabled, scan this bar code to enable the keyboard type France.

### Germany Keyboard



If keyboard emulation is enabled, scan this bar code to enable the keyboard type Germany.

### UK Keyboard



If keyboard emulation is enabled, scan this bar code to enable the keyboard type UK.

### Belgium Keyboard (Swiss)\*



If keyboard emulation is enabled, scan this bar code to enable the keyboard type Belgium.  
\*(scan this code and enable extended country code table bar code pg. F-7 to activate Swiss Keyboard mode).

### \*AT Keyboard



If using an AT computer, scan the above.  
(includes IBM® PS/2 and compatible models: 55, 60, 80).

### XT Keyboard



If using an XT computer, scan the above.

### PS/2 Keyboard



If using a PS/2 computer, scan the above.  
(includes IBM® PC and compatible models: 70, 8556).



### IBM® 4700 Financial Keyboard



If using an IBM® 4700 Financial Keyboard, scan the above.

### Reserved Keyboard



### Enable Caps Lock



AT Mode Automatically detects Caps Locks status

PS/2 or XT Mode User-defined Caps Lock status

These modes may not work with all applications.

### \*Disable Caps Lock



When this option is disabled, the Caps Lock feature is not supported.

### Enable Alt Mode



When this option is enabled, the scanner will duplicate this keyboard sequence: Hold down the Alt key; Type the decimal number that corresponds to the appropriate character.

### Enable Reserved Wedge Function



### \*Disable Alt Mode



Caution: If the host software application uses the Alt key as a "Hot" key, make sure Alt mode is disabled.

### \*Disable Reserved Wedge Function



**Inter Scan Code Delay: None**



If an inter scan code delay is not required, choose this option.

**Inter Scan Code Delay: 7.5 msec**



The time specified represents the amount of time between individual 9-bit scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.

**\*Inter Scan Code Delay: 800  $\mu$ sec (micro-seconds)**



The time specified represents the amount of time between individual 9-bit scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.

**Inter Scan Code Delay: 15 msec**



The time specified represents the amount of time between individual 9-bit scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.

**Do Not Transmit F0H Break Code  
(AT and PS/2 keyboards)**



When enabled, the scanner will not transmit the F0H in the break-code sequence.

**\*Transmit F0H Break Code  
(AT and PS/2 keyboards)**



When this option is chosen, the scanner will transmit the F0H in the break-code sequence.

**Enable MS6720 Extended Country Code**

Table



When this option is enabled, the scanner will access the extended country code table when used with a corresponding primary country code.

**Disable MS6720 Extended Country Code**

Table



### Enable MS700i/860i Extended Country Code Table



When this option is enabled, the scanner will access the extended country code table when used with a corresponding primary country code.

### Disable MS700i/860i Extended Country Code Table



### Stand Alone or Single Ended Wedge Mode\*

Some installations require a keyboard wedge scanner to connect to a PC compatible keyboard port without an external keyboard. A cable that has only the male keyboard connector that plugs into the motherboard would be typically used. Enabling this mode allows the scanner to send keyboard diagnostic completion codes and maintain the status of variable keyboard functions such as num lock, caps lock and scroll lock.

\*At this printing, this feature is not available for the MS6720.

This method was first developed to work through the auxiliary keyboard port of an IBM 4614 Sure One POS terminal. It can also be used with some, but not all notebook computers equipped with an external keyboard port.

#### *Application Test Note:*

Due to variations in host systems, Metrologic cannot guarantee that a stand alone scanner in single ended mode will work with your system. A reliable test for compatibility would be to connect an external keyboard to the notebook and power up the unit. If the notebook accepts data from both the external keyboard and the built in keyboard, the notebook is likely to work with the scanner in single ended mode.

### Enable Stand Alone



If keyboard emulation is enabled, scan this bar code to enable the Stand Alone mode.

### Disable Stand Alone



## Section G

---

### Reserved Features

This section provides bar codes to select pre-encoded reserved functions. They execute a variety of special software features. However, they should not be selected without written instructions from Metrologic.

E/D = Enable/Disable

E/D Reserved Code 4	(G - 1)	E/D Reserved Code 30	(G - 9)	E/D Reserved Code 47	(G - 18)
E/D Reserved Code 8	(G - 1)	E/D Reserved Code 31	(G - 10)	E/D Reserved Code 48	(G - 18)
E/D Reserved Code 9 (	G - 2)	E/D Reserved Code 32	(G - 10)	E/D Reserved Code 49	(G - 19)
E/D Reserved Code 14	(G - 2)	E/D Reserved Code 33	(G - 11)	E/D Reserved Code 50	(G - 19)
E/D Reserved Code 17	(G - 3)	E/D Reserved Code 34	(G - 11)	E/D Reserved Code 51	(G - 20)
E/D Reserved Code 18	(G - 3)	E/D Reserved Code 35	(G - 12)	E/D Reserved Code 52	(G - 20)
E/D Reserved Code 19	(G - 4)	E/D Reserved Code 36	(G - 12)	E/D Reserved Code 53	(G - 21)
E/D Reserved Code 20	(G - 4)	E/D Reserved Code 37	(G - 13)	E/D Reserved Code 54	(G - 21)
E/D Reserved Code 21	(G - 5)	E/D Reserved Code 38	(G - 13)	E/D Reserved Code 55	(G - 22)
E/D Reserved Code 22	(G - 5)	E/D Reserved Code 39	(G - 14)	E/D Reserved Code 56	(G - 22)
E/D Reserved Code 23	(G - 6)	E/D Reserved Code 40	(G - 14)	E/D Reserved Code 57	(G - 23)
E/D Reserved Code 24	(G - 6)	E/D Reserved Code 41	(G - 15)	E/D Reserved Code 58	(G - 23)
E/D Reserved Code 25	(G - 7)	E/D Reserved Code 42	(G - 15)	E/D Reserved Code 59	(G - 24)
E/D Reserved Code 26	(G - 7)	E/D Reserved Code 43	(G - 16)	E/D Reserved Code 60	(G - 24)
E/D Reserved Code 27	(G - 8)	E/D Reserved Code 44	(G - 16)	E/D Reserved Code 61	(G - 25)
E/D Reserved Code 28	(G - 8)	E/D Reserved Code 45	(G - 17)	E/D Reserved Code 62	(G - 25)
E/D Reserved Code 29	(G - 9)	E/D Reserved Code 46	(G - 17)	E/D Reserved Code 63	(G - 26)
				E/D Reserved Code 64	(G - 26)
				E/D Reserved Code 65	(G - 27)

**Enable Reserved Code 4**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 8**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 4**



**\*Disable Reserved Code 8**





**Enable Reserved Code 9**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 14**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 9**



**\*Disable Reserved Code 14**



**Enable Reserved Code 17**



This option should not be enabled without written instructions from Metrologic.

**\*Enable Reserved Code 18**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 17**



**Disable Reserved Code 18**



**Enable Reserved Code 19**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 20**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 19**



**\*Disable Reserved Code 20**



**Enable Reserved Code 21**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 22**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 21**



**\*Disable Reserved Code 22**



**Enable Reserved Code 23**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 24**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 23**



**\*Disable Reserved Code 24**



**Enable Reserved Code 25**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 26**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 25**



**\*Disable Reserved Code 26**



**Enable Reserved Code 27**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 28**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 27**



**\*Disable Reserved Code 28**



**Enable Reserved Code 29**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 30**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 29**



**\*Disable Reserved Code 30**





**Enable Reserved Code 31**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 32**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 31**



**\*Disable Reserved Code 32**



**Enable Reserved Code 33**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 34**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 33**



**\*Disable Reserved Code 34**



**Enable Reserved Code 35**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 36**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 35**



**\*Disable Reserved Code 36**



**Enable Reserved Code 37**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 38**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 37**



**\*Disable Reserved Code 38**



**Enable Reserved Code 39**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 40**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 39**



**\*Disable Reserved Code 40**



**Enable Reserved Code 41**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 42**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 41**



**\*Disable Reserved Code 42**



**Enable Reserved Code 43**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 44**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 43**



**\*Disable Reserved Code 44**



**Enable Reserved Code 45**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 46**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 45**



**\*Disable Reserved Code 46**





**Enable Reserved Code 47**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 48**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 47**



**\*Disable Reserved Code 48**



**Enable Reserved Code 49**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 50**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 49**



**\*Disable Reserved Code 50**



**Enable Reserved Code 51**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 52**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 51**



**\*Disable Reserved Code 52**



**Enable Reserved Code 53**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 54**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 53**



**\*Disable Reserved Code 54**



**Enable Reserved Code 55**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 56**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 55**



**\*Disable Reserved Code 56**



**Enable Reserved Code 57**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 58**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 57**



**\*Disable Reserved Code 58**



**Enable Reserved Code 59**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 60**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 59**



**\*Disable Reserved Code 60**



**Enable Reserved Code 61**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 62**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 61**



**\*Disable Reserved Code 62**





**Enable Reserved Code 63**



This option should not be enabled without written instructions from Metrologic.

**Enable Reserved Code 64**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 63**



**\*Disable Reserved Code 64**



**Enable Reserved Code 65**



This option should not be enabled without written instructions from Metrologic.

**\*Disable Reserved Code 65**



## Section H

---

### Supplemental/UCC Codes

This section provides bar codes to select the proper supplemental requirements for the system. Supplementals/add ons are the 2/5 digit bar codes attached to books, coupons, and magazines. UPC/EAN must be enabled in order for the scanner to recognize the supplemental requirements chosen from this section. Furthermore, the scanner must contain special software to support these features.

E/D = Enable/Disable

E/D Two Digit Supplements	(H - 1)	200 msec to Find Supplement	(H - 4)
E/D Five Digit Supplements	(H - 1)	100 msec to Find Supplement	(H - 4)
E/D Bookland	(H - 2)	E/D Code 128 Coupon Extended Code	(H - 5)
E/D 977 (2 digit) Supp. Requirement	(H - 2)	E/D Code 128 J̄C1 Extended Code Format	(H - 5)
Supplements are Required	(H - 3)	E/D ISBN Formatting	(H - 6)
Supplements are not Required	(H - 3)	E/D Bookland to ISBN Conversion	(H - 6)
E/D Two Digit Redundancy	(H - 3)	E/D ISBN Check Digit	(H - 7)
E/D Five Digit Redundancy	(H - 4)		

### Enable Two Digit Supplements



When this option is enabled, the scanner will scan 2 digit supplementals.

### Enable Five Digit Supplements



When this option is enabled, the scanner will scan 5 digit supplementals.

### \*Disable Two Digit Supplements



When this option is chosen, the scanner will not scan 2 digit supplementals.

### \*Disable Five Digit Supplements



When this option is chosen, the scanner will not scan 5 digit supplementals.

### Enable Bookland



When this option is enabled, the scanner will require that a 5 digit supplement be scanned whenever an EAN-13 code begins with 978.

### \*Disable Bookland



When this option is chosen, the scanner will not require that a 5 digit supplement be scanned whenever an EAN-13 code begins with 978.

### Enable 977 (2 digit) Supplemental Requirement



When this option is enabled, the scanner will require that a 2 digit supplement be scanned whenever an EAN-13 code begins with 97

### \*Disable 977 (2 digit) Supplemental Requirement



When this option is chosen, the scanner will not require that a 2 digit supplement be scanned whenever an EAN-13 code begins with 977.

### Supplements are Required



When this option is chosen, all UPC/EAN labels that are scanned must have a supplement.

### \*Enable Two Digit Redundancy



When this option is enabled, the scanner will scan the bar code plus the 2 digit add on twice before accepting the data as valid information.

### \*Supplements are not Required



When this option is chosen, all UPC/EAN labels that are scanned do not require a supplement.

### Disable Two Digit Redundancy



When this option is chosen, the scanner will not implement the two digit redundancy feature.

### Enable Five Digit Redundancy



When this option is enabled, the scanner will scan the bar code plus the 5 digit add on twice before accepting the data as valid information.

### \*Disable Five Digit Redundancy



When this option is chosen, the scanner will not implement the five digit redundancy feature.

### 200 msec to Find Supplement



When this option is chosen, the scanner will allot 200 milliseconds to "find" an add on after a main UPC/EAN bar code has been scanned.

### \*100 msec to Find Supplement



When this option is chosen, the scanner will allot 100 milliseconds to "find" an add on after a main UPC/EAN bar code has been scanned.

**Enable Code 128 Coupon Extended Code**



When this option is enabled, the scanner will scan the Code 128 coupon extended bar codes.

**\*Disable Code 128 Coupon Extended Code**



When this option is disabled, scanning of Code 128 coupon codes is not supported.

**Enable Code 128 Jc1 Extended Code F**



When this option is enabled, the scanner will transmit an Jc1 at the beginning of the Code 128 portion of the coupon code.

**\*Disable Code 128 Jc1 Extended Code Format**



When this option is disabled, the scanner will not transmit an Jc1 at the beginning of the Code 128 portion of the coupon code.



**Enable ISBN Formatting**



(Not available with all models)

**Enable Bookland to ISBN Conversion**



(Not available with all models)

**Disable ISBN Formatting**



**Disable Bookland to ISBN Cover**



**Enable ISBN Check Digit**



(Not available with all models)

**Disable ISBN Check Digit**



## Section I

---

### Code Bytes

This section contains a sequential list of code bytes. To enable an option, first scan the ITF Symbol Length, Minimum Symbol Length, Symbol Length Lock found in section A or Programmable Prefix/Suffix Character bar code found in section E and then scan a code byte from this section. Since each code byte has a different assigned function depending upon which option is chosen, use the key below to determine which option has been performed. Following the list of code bytes, will be Programmable Prefix/Suffix (1, 2) Extended Modes (Extended Key Codes and Function Keys) and code byte reference tables.

A = ITF symbol length

B = Minimum symbol length

C = Symbol length lock

D = Prefix/suffix character select

**Code Byte 000 (000H)**



- A = ITF Variable length
- B = Allow any length
- C = Variable length
- D = No prefix/suffix

**Code Byte 002 (002H)**



- A = Scan 2 digit ITF
- B = Scan 3 digit or > bar codes
- C = Scan 2 digit only
- D = ASCII <Ctrl> - <B> (STX) prefix/suffix

**Code Byte 001 (001H)**



- A = Not applicable for ITF symbol length
- B = Scan 2 digit or > bar codes
- C = Scan 1 character bar codes only
- D = ASCII <Ctrl> - <A> (SOH) for prefix/suffix

**Code Byte 003 (003H)**



- A = Scan 3 digit ITF
- B = Scan 4 digit or > bar codes
- C = Scan 3 digit only
- D = ASCII <Ctrl> - <C> (ETX) prefix/suffix

**Code Byte 004 (004H)**



- A = Scan 4 digit ITF
- B = Scan 5 digit or > bar codes
- C = Scan 4 digit only
- D = ASCII <Ctrl> - <D> (EOT) prefix/suffix

**Code Byte 006 (006H)**



- A = Scan 6 digit ITF
- B = Scan 7 digit or > bar codes
- C = Scan 6 digit only
- D = ASCII <Ctrl> - <F> (ACK) prefix/suffix

**Code Byte 005 (005H)**



- A = Scan 5 digit ITF
- B = Scan 6 digit or > bar codes
- C = Scan 5 digit only
- D = ASCII <Ctrl> - <E> (ENQ) for prefix/suffix

**Code Byte 007 (007H)**



- A = Scan 7 digit ITF
- B = Scan 8 digit or > bar codes
- C = Scan 7 digit only
- D = ASCII <Ctrl> - <G> (DEL) prefix/suffix

**Code Byte 008 (008H)**



- A = Scan 8 digit ITF bar codes
- B = Scan 9 digit or > bar codes
- C = Scan only 8 digit bar codes
- D = ASCII <Ctrl> - <H> (Backspace) prefix/suffix

**Code Byte 009 (009H)**



- A = Scan 9 digit ITF bar codes
- B = Scan 10 digit or > bar codes
- C = Scan only 9 digit bar codes
- D = ASCII <Ctrl> - <I> (Tab) prefix/suffix

**Code Byte 010 (00AH)**



- A = Scan 10 digit ITF bar codes
- B = Scan 11 digit or > bar codes
- C = Scan only 10 digit bar codes
- D = ASCII <Ctrl> - <J> (Line Feed) prefix/suffix

**Code Byte 011 (00BH)**



- A = Scan 11 digit ITF bar codes
- B = Scan 12 digit or > bar codes
- C = Scan only 11 digit bar codes
- D = ASCII <Ctrl> - <K> (Vertical Tab) prefix/suffix

**Code Byte 012 (00CH)**



- A = Scan 12 digit ITF bar codes
- B = Scan 13 digit or > bar codes
- C = Scan only 12 digit bar codes
- D = ASCII <Ctrl> - <L> (Form Feed) prefix/suffix

**Code Byte 014 (00EH)**



- A = Scan 14 digit ITF bar codes
- B = Scan 15 digit or > bar codes
- C = Scan only 14 digit bar codes
- D = ASCII <Ctrl> - <N> (Shift Out) prefix/suffix

**Code Byte 013 (00DH)**



- A = Scan 13 digit ITF bar codes
- B = Scan 14 digit or > bar codes
- C = Scan only 13 digit bar codes
- D = ASCII <Ctrl> - <M> (Carriage Return) prefix/suffix

**Code Byte 015 (00FH)**



- A = Scan 15 digit ITF bar codes
- B = Scan 16 digit or > bar codes
- C = Scan only 15 digit bar codes
- D = ASCII <Ctrl> - <O> (Shift In) prefix/suffix

**Code Byte 016 (010H)**



- A = Scan 16 digit ITF bar codes
- B = Scan 17 digit or > bar codes
- C = Scan only 16 digit bar codes
- D = ASCII <Ctrl> - <P> (DLE) prefix/suffix

**Code Byte 018 (012H)**



- A = Scan 18 digit ITF bar codes
- B = Scan 19 digit or > bar codes
- C = Scan only 18 digit bar codes
- D = ASCII <Ctrl> - <R> (Tape On) prefix/suf

**Code Byte 017 (011H)**



- A = Scan 17 digit ITF bar codes
- B = Scan 18 digit or > bar codes
- C = Scan only 17 digit bar codes
- D = ASCII <Ctrl> - <Q> (XON) prefix/suffix

**Code Byte 019 (013H)**



- A = Scan 19 digit ITF bar codes
- B = Scan 20 digit or > bar codes
- C = Scan only 19 digit bar codes
- D = ASCII <Ctrl> - <S> (XOFF) prefix/suffix



**Code Byte 020 (014H)**



- A = Scan 20 digit ITF bar codes
- B = Scan 21 digit or > bar codes
- C = Scan only 20 digit bar codes
- D = ASCII <Ctrl> - <T> (Tape Off) prefix/suffix

**Code Byte 022 (016H)**



- A = Scan 22 digit ITF bar codes
- B = Scan 23 digit or > bar codes
- C = Scan only 22 digit bar codes
- D = ASCII <Ctrl> - <V> (SYNC) prefix/suffix

**Code Byte 021 (015H)**



- A = Scan 21 digit ITF bar codes
- B = Scan 22 digit or > bar codes
- C = Scan only 21 digit bar codes
- D = ASCII <Ctrl> - <U> (NAK) prefix/suffix

**Code Byte 023 (017H)**



- A = Scan 23 digit ITF bar codes
- B = Scan 24 digit or > bar codes
- C = Scan only 23 digit bar codes
- D = ASCII <Ctrl> - <W> (ETB) prefix/suffix

**Code Byte 024 (018H)**



- A = Scan 24 digit ITF bar codes
- B = Scan 25 digit or > bar codes
- C = Scan only 24 digit bar codes
- D = ASCII <Ctrl> - <X> (CAN) prefix/suffix

**Code Byte 026 (01AH)**



- A = Scan 26 digit ITF bar codes
- B = Scan 27 digit or > bar codes
- C = Scan only 26 digit bar codes
- D = ASCII <Ctrl> - <2> (SUB) prefix/suffix

**Code Byte 025 (019H)**



- A = Scan 25 digit ITF bar codes
- B = Scan 26 digit or > bar codes
- C = Scan only 25 digit bar codes
- D = ASCII <Ctrl> - <Y> (EOM) prefix/suffix

**Code Byte 027 (01BH)**



- A = Scan 27 digit ITF bar codes
- B = Scan 28 digit or > bar codes
- C = Scan only 27 digit bar codes
- D = ASCII <ESC> prefix/suffix

**Code Byte 028 (01CH)**



- A = Scan 28 digit ITF bar codes
- B = Scan 29 digit or > bar codes
- C = Scan only 28 digit bar codes
- D = ASCII FS (File Separator) prefix/suffix

**Code Byte 030 (01EH)**



- A = Scan 30 digit ITF bar codes
- B = Scan 31 digit or > bar codes
- C = Scan only 30 digit bar codes
- D = ASCII RS (Record Separator) prefix/suf

**Code Byte 029 (01DH)**



- A = Scan 29 digit ITF bar codes
- B = Scan 30 digit or > bar codes
- C = Scan only 29 digit bar codes
- D = ASCII GS (Group Separator) prefix/suffix

**Code Byte 031 (01FH)**



- A = Scan 31 digit ITF bar codes
- B = Scan 32 digit or > bar codes
- C = Scan only 31 digit bar codes
- D = ASCII VS (Record Separator) prefix/suf

**Code Byte 032 (020H)**



- A = Scan 32 digit ITF bar codes
- B = Scan 33 digit or > bar codes
- C = Scan only 32 digit bar codes
- D = ASCII Space prefix/suffix

**Code Byte 034 (022H)**



- A = Scan 34 digit ITF bar codes
- B = Scan 35 digit or > bar codes
- C = Scan only 34 digit bar codes
- D = ASCII " prefix/suffix

**Code Byte 033 (021H)**



- A = Scan 33 digit ITF bar codes
- B = Scan 34 digit or > bar codes
- C = Scan only 33 digit bar codes
- D = ASCII ! prefix/suffix

**Code Byte 035 (023H)**



- A = Scan 35 digit ITF bar codes
- B = Scan 36 digit or > bar codes
- C = Scan only 35 digit bar codes
- D = ASCII # prefix/suffix

**Code Byte 036 (024H)**



- A = Scan 36 digit ITF bar codes
- B = Scan 37 digit or > bar codes
- C = Scan only 36 digit bar codes
- D = ASCII \$ prefix/suffix

**Code Byte 038 (026H)**



- A = Scan 38 digit ITF bar codes
- B = Scan 39 digit or > bar codes
- C = Scan only 38 digit bar codes
- D = ASCII & prefix/suffix

**Code Byte 037 (025H)**



- A = Scan 37 digit ITF bar codes
- B = Scan 38 digit or > bar codes
- C = Scan only 37 digit bar codes
- D = ASCII % prefix/suffix

**Code Byte 039 (027H)**



- A = Scan 39 digit ITF bar codes
- B = Scan 40 digit or > bar codes
- C = Scan only 39 digit bar codes
- D = ASCII ' (apostrophe) prefix/suffix

**Code Byte 040 (028H)**



- A = Scan 40 digit ITF bar codes
- B = Scan 41 digit or > bar codes
- C = Scan only 40 digit bar codes
- D = ASCII ( prefix/suffix

**Code Byte 042 (02AH)**



- A = Scan 42 digit ITF bar codes
- B = Scan 43 digit or > bar codes
- C = Scan only 42 digit bar codes
- D = ASCII \* prefix/suffix

**Code Byte 041 (029H)**



- A = Scan 41 digit ITF bar codes
- B = Scan 42 digit or > bar codes
- C = Scan only 41 digit bar codes
- D = ASCII ) prefix/suffix

**Code Byte 043 (02BH)**



- A = Scan 43 digit ITF bar codes
- B = Scan 44 digit or > bar codes
- C = Scan only 43 digit bar codes
- D = ASCII + prefix/suffix

**Code Byte 044 (02CH)**



- A = Scan 44 digit ITF bar codes
- B = Scan 45 digit or > bar codes
- C = Scan only 44 digit bar codes
- D = ASCII , (comma) prefix/suffix

**Code Byte 046 (02EH)**



- A = Scan 46 digit ITF bar codes
- B = Scan 47 digit or > bar codes
- C = Scan only 46 digit bar codes
- D = ASCII . (period) prefix/suffix

**Code Byte 045 (02DH)**



- A = Scan 45 digit ITF bar codes
- B = Scan 46 digit or > bar codes
- C = Scan only 45 digit bar codes
- D = ASCII - (minus) prefix/suffix

**Code Byte 047 (02FH)**



- D = ASCII / prefix/suffix

**Code Byte 048 (030H)**



D = ASCII 0 (zero) prefix/suffix

**Code Byte 050 (032H)**



D = ASCII 2 prefix/suffix

**Code Byte 049 (031H)**



D = ASCII 1 (one) prefix/suffix

**Code Byte 051 (033H)**



D = ASCII 3 prefix/suffix



**Code Byte 052 (034H)**



D = ASCII 4 prefix/suffix

**Code Byte 054 (036H)**



D = ASCII 6 prefix/suffix

**Code Byte 053 (035H)**



D = ASCII 5 prefix/suffix

**Code Byte 055 (037H)**



D = ASCII 7 prefix/suffix

**Code Byte 056 (038H)**



D = ASCII 8 prefix/suffix

**Code Byte 058 (03AH)**



D = ASCII : (colon) prefix/suffix

**Code Byte 057 (039H)**



D = ASCII 9 prefix/suffix

**Code Byte 059 (03BH)**



D = ASCII ; (semicolon) prefix/suffix

**Code Byte 060 (03CH)**



**Code Byte 062 (03EH)**



**Code Byte 061 (03DH)**



**Code Byte 063 (03FH)**



**Code Byte 064 (040H)**



**Code Byte 066 (042H)**



**Code Byte 065 (041H)**



**Code Byte 067 (043H)**



**Code Byte 068 (044H)**



**Code Byte 070 (046H)**



**Code Byte 069 (045H)**



**Code Byte 071 (047H)**



**Code Byte 072 (048H)**



D = ASCII H prefix/suffix

**Code Byte 074 (04AH)**



D = ASCII J prefix/suffix

**Code Byte 073 (049H)**



D = ASCII I prefix/suffix

**Code Byte 075 (04BH)**



D = ASCII K prefix/suffix

**Code Byte 076 (04CH)**



**Code Byte 078 (04EH)**



**Code Byte 077 (04DH)**



**Code Byte 079 (04FH)**



**Code Byte 080 (050H)**



D = ASCII P prefix/suffix

**Code Byte 082 (052H)**



D = ASCII R prefix/suffix

**Code Byte 081 (051H)**



D = ASCII Q prefix/suffix

**Code Byte 083 (053H)**



D = ASCII S prefix/suffix



**Code Byte 084 (054H)**



**Code Byte 086 (056H)**



**Code Byte 085 (055H)**



**Code Byte 087 (057H)**



**Code Byte 088 (058H)**



D = ASCII X prefix/suffix

**Code Byte 090 (05AH)**



D = ASCII Z prefix/suffix

**Code Byte 089 (059H)**



D = ASCII Y prefix/suffix

**Code Byte 091 (05BH)**



D = ASCII [ prefix/suffix

**Code Byte 092 (05CH)**



**Code Byte 094 (05EH)**



**Code Byte 093 (05DH)**



**Code Byte 095 (05FH)**



**Code Byte 096 (060H)**



D = ASCII ` (accent grave) prefix/suffix

**Code Byte 098 (062H)**



D = ASCII b prefix/suffix

**Code Byte 097 (061H)**



D = ASCII a prefix/suffix

**Code Byte 099 (063H)**



D = ASCII c prefix/suffix

**Code Byte 100 (064H)**



**Code Byte 102 (066H)**



**Code Byte 101 (065H)**



**Code Byte 103 (067H)**



**Code Byte 104 (068H)**



**Code Byte 106 (06AH)**



**Code Byte 105 (069H)**



**Code Byte 107 (06BH)**



**Code Byte 108 (06CH)**



**Code Byte 110 (06EH)**



**Code Byte 109 (06DH)**



**Code Byte 111 (06FH)**



**Code Byte 112 (070H)**



**Code Byte 114 (072H)**



**Code Byte 113 (071H)**



**Code Byte 115 (073H)**





**Code Byte 116 (074H)**



**Code Byte 118 (076H)**



**Code Byte 117 (075H)**



**Code Byte 119 (077H)**



**Code Byte 120 (078H)**



**Code Byte 122 (07AH)**



**Code Byte 121 (079H)**



**Code Byte 123 (07BH)**



**Code Byte 124 (07CH)**



**Code Byte 126 (07EH)**



**Code Byte 125 (07DH)**



**Code Byte 127 (07FH)**



## PC Keyboard Wedge Programmable Prefix/ Suffix (1, 2) Extended Modes (Extended Key Codes and Function Keys)

Reference the Extended Key Code and Function Key Tables in this section, to locate the desired code byte value. While in program mode, scan the code byte value listed in the far right column into the desired Programmable Prefix/Suffix. Then scan the corresponding Prefix/ Suffix Extended Mode Code. Exit program mode.

**Example:** The desired prefix is the 'F4' Key. Scan the following sequence of codes:

Enter/Exit  
Programmable Prefix 1 (section E)  
Code Byte 19 (this section)  
Programmable Prefix 1 Extended Mode (this section)  
Enter/Exit

See the following pages for the bar codes.

**Set Programmable Prefix 1 Extended Mode**



**Set Programmable Suffix 1 Extended Mode**



**Set Programmable Prefix 2 Extended Mode**



**Set Programmable Suffix 2 Extended Mode**



## Code Byte Tables

While in program mode, scan the code byte value listed in the far right column into the desired Programmable Prefix/Suffix. Then scan the corresponding Prefix/Suffix Extended Mode Code. Exit program mode.

### Extended Reference Key Code Table

KEY	AT SCAN CODE	XT/PS2 SCAN CODE	PREFIX/SUFFIX VALUE		CODE BYTE
			HEX	DECIMAL	
UP ARROW	75H	48H	80H	= 128	000
DOWN ARROW	72H	50H	81H	= 129	001
RIGHT ARROW	74H	4DH	82H	= 130	002
LEFT ARROW	6BH	4BH	83H	= 131	003
INSERT KEY	70H	52H	84H	= 132	004
DELETE KEY	71H	53H	85H	= 133	005
HOME KEY	6CH	47H	86H	= 134	006
END KEY	69H	4FH	87H	= 135	007
PAGE UP KEY	7DH	49H	88H	= 136	008
PAGE DOWN KEY	7AH	51H	89H	= 137	009
RIGHT ALT KEY	11H	38H	8AH	= 138	010
RIGHT CTRL KEY	14H	1DH	8BH	= 139	011
RESERVED	00H	00H	8CH	= 140	012
RESERVED	00H	00H	8DH	= 141	013
NUMERIC <ENTER>	5AH	1CH	8EH	= 142	014
NUMERIC /	4AH	35H	8FH	= 143	015

**Function keys F1 - F12 and other keys (No E0H required)**

KEY	AT SCAN CODE	XT/PS2 SCAN CODE	PREFIX/SUFFIX VALUE HEX DECIMAL	CODE BYTE
F1	05H	3BH	90H = 144	016
F2	06H	3CH	91H = 145	017
F3	04H	3DH	92H = 146	018
F4	0CH	3EH	93H = 147	019
F5	03H	3FH	94H = 148	020
F6	0BH	40H	95H = 149	021
F7	83H	41H	96H = 150	022
F8	0AH	42H	97H = 151	023
F9	01H	43H	98H = 152	024
F10	09H	44H	99H = 153	025
F11	78H	57H	9AH = 154	026
F12	07H	58H	9BH = 155	027
NUMERIC +	79H	4EH	9CH = 156	028
NUMERIC -	7BH	4AH	9DH = 157	029
NUMERIC *	7CH	37H	9EH = 158	030
CAPS LOCK	58H	3AH	9FH = 159	031
NUM LOCK	77H	45H	A0H = 160	032
LEFT ALT KEY	11H	38H	A1H = 161	033
LEFT CTRL KEY	14H	1DH	A2H = 162	034
LEFT SHIFT	12H	2AH	A3H = 163	035
RIGHT SHIFT	59H	36H	A4H = 164	036

## Section J

---

### 6720 Specific Codes

All of the options in this section are available with the 6720 scanner.

DOF = Depth of Field

Projection vs Hand Held Scanner Modes and IR Sensor	(J - 1)	Close DOF out of Stand IR Short Range	(J - 5)
Hand Held Scanner Operation Mode	(J - 2)	Optional DOF out of Stand IR Long Range	(J - 5)
*Scanner Projection Mode	(J - 2)	MS6720 with 4680 IO Processor	(J - 6)
*10 Minutes IR Time-outs - Projection 5 Second Laser Off - Hand Held	(J - 2)	IBM 468x RS-485 SIOC Scanner Emulation	(J - 7)
2 Minutes IR Time-outs - Projection 2 Second Laser Off - Hand Held	(J - 2)	IBM 1520 Emulation	(J - 7)
30 Minutes IR Time-outs 10 Second Laser Off - Hand Held	(J - 3)	IBM 4500 CCD Emulation	(J - 7)
No IR Time-outs - Projection and Hand Held	(J - 3)	IBM 3687-2 Emulation	(J - 7)
Depth of Field /IR Range Sensor Switch	(J - 3)	MS6720 - Light Pen/Wand Emulation Units	(J - 8)
*Normal DOF in the Stand IR Long Range	(J - 3)	10x Border	(J - 8)
Extended DOF in the Stand IR Long Range	(J - 4)	*50x Border	(J - 9)
Close DOF in the Stand IR Short Range	(J - 4)	.15ms Narrow Element	(J - 9)
Optional DOF in the Stand IR Long Range	(J - 4)	0.3ms Narrow Element	(J - 9)
*Normal DOF out of Stand IR Long Range	(J - 4)	0.5ms Narrow Element	(J - 9)
Extended DOF out of Stand IR Long Range	(J - 5)	1.0ms Narrow Element	(J - 10)



## Projection vs Hand Held Scanner - Modes and IR Sensor

When the Projection Scanner (default) Mode bar code is chosen the scanner will behave like an MS700. The IR sensor is used to “wake” the scanner up for an extended period of time. These bar codes have the following features:

<b>Bar Code</b>	<b>Laser Off/Motor Off</b>
10 min IR Timeout	10 mins
2 min IR Timeout	2 mins
30 min IR Timeout	30 mins
No IR Timeout	Always On

When the Hand Held Scanner Operation Mode bar code is chosen, the scanner will behave like an MS951. It will look for data only after the IR sensor has been activated. These bar codes have the following features:

<b>Bar Code</b>	<b>Laser Off</b>
10 min IR Timeout	5 secs
2 min IR Timeout	2 secs
30 min IR Timeout	10 secs
No IR Timeout	Always On

### Hand Held Scanner Operation Mode



When this option is chosen, the scanner will behave like an MS951. It will look for data in response to an IR sensor activation.

### \*Scanner Projection Mode



When this option is chosen, the scanner will behave like an MS700. It will look for bar code data as long as the scanner is awake, regardless of the IR sensor status.

### \*10 Minutes IR Time-outs - Projection 5 Second Laser Off - Hand Held



This time represents the duration of time of inactivity from the last scan until the scanner enters a “standby” mode. The scanner will not return scanning until an object is waved in front of IR sensor.

### 2 Minutes IR Time-outs - Projection 2 Second Laser Off - Hand Held



This time represents the duration of time of inactivity from the last scan until the scanner enters a “standby” mode. The scanner will return to scanning until an object is waved in front of the IR sensor.

**30 Minutes IR Time-outs - Projection**  
**10 Second Laser Off - Hand held**



This time represents the duration of time of inactivity from the last scan until the scanner enters a “standby” mode. The scanner will not return to scanning an object is waved in front of the IR sensor.

**No IR Time-outs - Projection and Hand Held**



When this option is chosen, the scanner will not enter a “standby” mode. When using a Tech scanner, select this option since these units do not have an IR sensor or a touchplate.

**Depth of Field/IR Range Sensor Switch**

The scanning process can be initiated by an infrared (IR) device that is below the output window. The depth of field for the scanner is 8”. The following bar codes are 8 combinations of the Depth of Field/IR Activation operation currently available. With these bar codes, the scanner can:

- a.) sense when it is in or out of the stand
- b.) adjust the scanning depth of field
- c.) adjust the depth of field in which the IR sensor activates

**\*Normal Depth of Field in the Stand IR Long Range**



When this option is selected, the scanner will be configured for Normal Depth of Field and Long Range IR when operated in the stand.

### Extended Depth of Field in the Stand IR Long Range



When this option is selected, the scanner will be configured for Extended Depth of Field and Long Range IR when operated in the stand.

### Optional Depth of Field in the Stand IR Long Range



Do not scan this bar code unless instructed to do so by a Metrologic representative.

### Close Depth of Field in the Stand IR Short Range



When this option is selected, the scanner will be configured for Close Range Depth of Field and Short Range IR when operated in the stand.

### \*Normal Depth of Field out of Stand IR Long Range



When this option is selected, the scanner will be configured for Normal Depth of Field and Long Range IR when operated out of the stand.

### Extended Depth of Field out of Stand IR Long Range



When this option is selected, the scanner will be configured for Extended Depth of Field and Long Range IR when operated out of the stand.

### Optional Depth of Field out of Stand IR Range



Do not scan this bar code unless instructed to do so by a Metrologic representative.

### Close Depth of Field out of Stand IR Short Range



When this option is selected, the scanner will be configured for Close Depth of Field and Short Range IR when operated out of the stand.

## **MS6720 with 4680 IO Processor**

This unit converts decoded bar code data to an IBM 468X/469X operating system compatible data format. It supports IBM 1520/Port 5b, IBM 4500/Port 9b CCD, and IBM 3687-2/Port 17 emulations.

To implement this mode, power the terminal down and then up between scanner configuration sequences to make sure the auto-sensing device drivers for some IBM 468X and 469X SIOC platforms are correctly initialized.

Configure the unit for 4680 communications by scanning Enter/Exit Program Mode, Load Defaults, Enable IBM 4680 Communication, select the emulation mode from page J-7 and Enter/Exit Program Mode bar codes. **Reference page B-1 of this guide to find the Enable IBM 4680 Communication bar code.**

**NOTE:** IBM 468X/469X systems will look for the UPC-E version "0" number system digit and check digit being transmitted. These digits are automatically turned on when the 4680 interface is enabled. These differ from standard defaults.

### IBM 468x RS-485 SIOC Scanner Emulations

These bar codes allow the user to select various IBM serial input/output channel (SIOC) scanner/part emulation modes for scanners equipped with the IBM RS-485 interface.

### IBM 1520 Emulation



Scan this bar code to select IBM 1520 emulation for scanners equipped with the IBM RS-485 interface.

### IBM 4500 CCD Emulation



Scan this bar code to select IBM 4500 CCD emulation for scanners equipped with the IBM RS-485 interface.

### IBM 3687-2 Emulation



Scan this bar code to select IBM 3687-2 emulation for scanners equipped with the IBM RS-485 interface.

**Reserved**



This option should not be enabled without written instructions from Metrologic.

**Reserved**



This option should not be enabled without written instructions from Metrologic.

**MS6720 - Light Pen/Wand Emulation Unit**

Beginning with the MS6720 revision D scan the speed at which Light Pen/Wand data car transmitted is user selectable. The user can f set the border size to 10x or 50x then select specific "x" or narrow element size used by th scanner to send data. Refer to the bar codes the following pages for selection options.

**10x Border**



This bar code allows the transmission of Ligh Pen/Wand emulation using a 10x border. Fo a specific scalable narrow element, select a bar code from page J - 9 or J - 10.



**\*50x Border**



This bar code allows the transmission of Light Pen/Wand emulation using a 50x border. For a specific scalable narrow element, select a bar code from this page or the following page.

**0.3ms Narrow Element**



This bar code allows the transmission of Light Pen/Wand emulation using a 0.3ms narrow element "x" dimension.

**.15ms Narrow Element**



This bar code allows the transmission of Light Pen/Wand emulation using a .15ms narrow element "x" dimension.

**0.5ms Narrow Element**



This bar code allows the transmission of Light Pen/Wand emulation using a 0.5ms narrow element "x" dimension.

**1.0ms Narrow Element**



This bar code allows the transmission of Light Pen/Wand emulation using a 1.0ms narrow element "x" dimension.

**Enter/Exit Program Mode**



### Load Defaults

