



MiniScan MS XX07 Series



Integration Guide



MiniScan MS XX07 Series Integration Guide

72-67135-01

Revision A

February 2004



© 2004 by Symbol Technologies, Inc. All rights reserved.

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission in writing from Symbol. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an “as is” basis. All software, including firmware, furnished to the user is on a licensed basis. Symbol grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Symbol. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Symbol. The user agrees to maintain Symbol’s copyright notice on the licensed programs delivered hereunder, and to include the same on any authorized copies it makes, in whole or in part. The user agrees not to decompile, disassemble, decode, or reverse engineer any licensed program delivered to the user or any portion thereof.


Symbol reserves the right to make changes to any software or product to improve reliability, function, or design.

Symbol does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any Symbol Technologies, Inc., intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in Symbol products.

Symbol, Spectrum One, and Spectrum24 are registered trademarks of Symbol Technologies, Inc. Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, New York 11742-1300
<http://www.symbol.com>

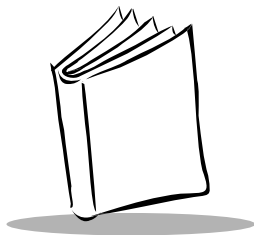

Contents

About This Manual


Chapter Descriptionsxi
Notational Conventions	xii
Related Documents	xiii
Service Information	xiii
Symbol Support Center	xiii

Chapter 1. Introduction

Overview	1-1
MS XX07 Series Features	1-3
Typical Applications	1-3
Block Diagram	1-4
Miniscan Block Diagram Descriptions	1-4

Chapter 2. Installation

Overview	2-1
Unpacking	2-1
Mounting	2-2
MS 1207FZY/MS 1207WA/MS 2207/MS 2207VHD Mounting Dimensions	2-2
MS 3207 Mounting Dimensions	2-3
Mounting the Scanner on the Optional Stand	2-4
Mounting the Scanner on the Optional Mounting Bracket	2-6
Connecting the MiniScan	2-8
Location and Positioning	2-10
Using the MiniScan as an Embedded Scanner	2-10
Conveyor Applications	2-13
Accessories	2-16
Application Notes	2-18
TTL RS-232	2-18

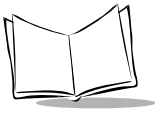

USB Warning - Potential Host Side Issues 2-18

Chapter 3. Scanning

Overview 3-1

MiniScan Scan Patterns 3-1

 MS 1207FZY and MS 1207WA Scan Pattern 3-1

 MS 2207 and MS 2207VHD Scan Patterns 3-2

 MS 3207 Scan Patterns 3-3

Scan Angle Selection 3-4

 Operation in Blink Mode 3-4

Scanning Tips 3-5

 Scan the Entire Symbol 3-5

 Position at an Angle 3-5

Trigger Options 3-6

 Continuous (Default) 3-6

 Level Trigger 3-6

 Pulse Trigger 3-6

 Blink 3-7

 Host Trigger 3-7

Beeper and LED Definitions 3-8

Chapter 4. MS 1207FZY Specifications

Overview 4-1

MS 1207FZY Electrical Interface 4-2

MS 1207FZY Mechanical Drawings 4-3

MS 1207WA Technical Specifications 4-5

MS 1207FZY Decode Zone 4-8

 Usable Scan Length 4-10

Chapter 5. MS 1207WA Specifications

Overview 5-1

MS 1207WA Electrical Interface 5-2

MS 1207WA Mechanical Drawings 5-4

MS 1207WA Technical Specifications 5-6

MS 1207WA Decode Zone 5-9

 Usable Scan Length 5-10

Chapter 6. MS 2207 Specifications

Overview	6-1
MS 2207 Electrical Interface	6-2
MS 2207 Mechanical Drawings	6-4
MS 2207 Technical Specifications	6-6
MS 2207 Decode Zones	6-9
MS 2207 1D Decode Zone	6-9
MS 2207 1D Decode Distances	6-10
MS 2207 2D Decode Zone	6-11
MS 2207 2D Decode Distances	6-12
Usable Scan Length	6-12

Chapter 7. MS 2207VHD Specifications


Overview	7-1
MS 2207VHD Electrical Interface	7-2
MS 2207VHD Mechanical Drawings	7-3
MS 2207VHD Technical Specifications	7-5
MS 2207VHD Decode Zones	7-8
MS 2207VHD 1D Decode Zone	7-8
MS 2207VHD 1D Decode Distances	7-9
MS 2207VHD 2D Decode Zone	7-10
MS 2207VHD 2D Decode Distances	7-11
Usable Scan Length	7-11

Chapter 8. MS 3207 Specifications

Overview	8-1
MS 3207 Electrical Interface	8-2
MS 3207 Mechanical Drawings	8-4
MS 3207 Technical Specifications	8-6
MS 3207 Decode Zones	8-9
Omnidirectional Decode Distances	8-9
2D Slab/Raster Decode Distances	8-11
Usable Scan Length	8-12

Chapter 9. Maintenance and Troubleshooting


Overview	9-1
Maintenance	9-1
Troubleshooting	9-1



Chapter 10. Parameter Menus

Operational Parameters	10-1
Default Table	10-1
Set Default Parameter	10-10
Scanning Options	10-11
Beeper Volume	10-11
Beeper Tone	10-12
Beeper Frequency Adjustment	10-13
Laser On Time	10-14
Scan Angle	10-15
Power Mode	10-16
Trigger Mode	10-17
Scanning Mode	10-18
Aiming Mode	10-19
Programmable Raster Height and Raster Expansion Speed	10-20
Timeout Between Decodes	10-21
Beep After Good Decode	10-22
Transmit "No Read" Message	10-23
Parameter Scanning	10-24
Linear Code Type Security Level	10-25
Bi-directional Redundancy	10-27
UPC/EAN	10-28
Enable/Disable UPC-A	10-28
Enable/Disable UPC-E	10-29
Enable/Disable UPC-E1	10-30
Enable/Disable EAN-8	10-31
Enable/Disable EAN-13	10-32
Enable/Disable Bookland EAN	10-33
UPC/EAN Coupon Code	10-34
Decode UPC/EAN Supplementals	10-35
Transmit UPC-A Check Digit	10-38
Transmit UPC-E Check Digit	10-39
Transmit UPC-E1 Check Digit	10-40
UPC-A Preamble	10-41
UPC-E Preamble	10-42
UPC-E1 Preamble	10-43
Convert UPC-E to UPC-A	10-44
Convert UPC-E1 to UPC-A	10-45
EAN Zero Extend	10-46
UPC/EAN Security Level	10-47
Linear UPC/EAN Decode	10-49
UPC Half Block Stitching	10-50
Code 128	10-51

Enable/Disable Code 128	10-51
Enable/Disable UCC/EAN-128	10-52
Enable/Disable ISBT 128	10-53
Lengths for Code 128	10-53
Code 128 Decode Performance	10-54
Code 128 Decode Performance Level	10-55
Code 39	10-56
Enable/Disable Code 39	10-56
Enable/Disable Trioptic Code 39	10-57
Convert Code 39 to Code 32	10-58
Code 32 Prefix	10-59
Set Lengths for Code 39	10-60
Code 39 Check Digit Verification	10-62
Transmit Code 39 Check Digit	10-63
Enable/Disable Code 39 Full ASCII	10-64
Code 39 Decode Performance	10-65
Code 39 Decode Performance Level	10-66
Code 93	10-67
Enable/Disable Code 93	10-67
Set Lengths for Code 93	10-68
Code 11	10-70
Enable/Disable Code 11	10-70
Set Lengths for Code 11	10-71
Code 11 Check Digit Verification	10-73
Transmit Code 11 Check Digit	10-74
Interleaved 2 of 5	10-75
Enable/Disable Interleaved 2 of 5	10-75
Set Lengths for Interleaved 2 of 5	10-76
I 2 of 5 Check Digit Verification	10-78
Transmit I 2 of 5 Check Digit	10-79
Convert I 2 of 5 to EAN-13	10-80
Discrete 2 of 5	10-81
Enable/Disable Discrete 2 of 5	10-81
Set Lengths for Discrete 2 of 5	10-82
Codabar	10-84
Enable/Disable Codabar	10-84
Set Lengths for Codabar	10-85
CLSI Editing	10-87
NOTIS Editing	10-88
MSI Plessey	10-89
Enable/Disable MSI Plessey	10-89
Set Lengths for MSI Plessey	10-90
MSI Plessey Check Digits	10-92
Transmit MSI Plessey Check Digit	10-93

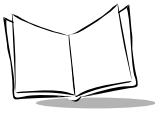

MSI Plessey Check Digit Algorithm	10-94
PDF417/MicroPDF417	10-95
Enable/Disable PDF417	10-95
Enable/Disable MicroPDF417	10-96
MicroPDF Performance	10-97
Code 128 Emulation	10-98
RSS Codes	10-99
RSS-14	10-99
RSS-Limited	10-100
RSS-Expanded	10-101
Convert RSS to UPC/EAN	10-102
Composite	10-103
Composite CC-C	10-103
Composite CC-A/B	10-104
Composite TLC-39	10-105
UPC Composite Mode	10-106
Data Options	10-107
Transmit Code ID Character	10-107
Prefix/Suffix Values	10-109
Scan Data Transmission Format	10-111
Event Reporting	10-113
Decode Event	10-114
Boot Up Event	10-115
Parameter Event	10-116
Macro PDF Features	10-117
Transmit Symbols in Codeword Format	10-117
Transmit Unknown Codewords	10-119
Escape Characters	10-120
Delete Character Set ECIs	10-121
ECI Decoder	10-122
Transmit Macro PDF User-Selected Fields	10-123
Transmit File Name	10-123
Transmit Block Count	10-124
Transmit Time Stamp	10-125
Transmit Sender	10-126
Transmit Addressee	10-127
Transmit Checksum	10-128
Transmit File Size	10-129
Transmit Macro PDF Control Header	10-130
Last Blocker Marker	10-131
Numeric Bar Codes	10-132
Cancel	10-134

Chapter 11. RS-232 Interface


Introduction	11-1
RS-232 Default Parameters.....	11-2
RS-232 Host Parameters.....	11-4
RS-232 Host Types	11-6
Baud Rate.....	11-8
Parity	11-10
Stop Bit Select	11-12
Data Bits.....	11-12
Check Receive Errors.....	11-13
Hardware Handshaking	11-14
Software Handshaking	11-16
Host Serial Response Time-out	11-19
RTS Line State	11-20
Beep on <BEL>	11-20
Intercharacter Delay	11-21
Nixdorf Beep/LED Options	11-22
Ignore Unknown Characters.....	11-23

Chapter 12. USB Interface

Introduction	12-1
Connecting a USB Interface	12-2
USB Default Parameters	12-3
USB Host Parameters	12-4
USB Device Type	12-4
USB Country Keyboard Types (Country Codes)	12-5
USB Keystroke Delay	12-8
USB CAPS Lock Override	12-9
USB Ignore Unknown Characters.....	12-10
Emulate Keypad	12-11
USB Keyboard FN 1 Substitution	12-11
Function Key Mapping	12-12
Simulated Caps Lock	12-12
Convert Case	12-13

Chapter 13. Advanced Data Formatting

Introduction	13-1
Rules: Criteria Linked to Actions	13-1
Using ADF Bar Codes	13-2
ADF Bar Code Menu Example.....	13-3
Rule 1: The Code 128 Scanning Rule	13-4

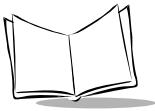

- Rule 2: The UPC Scanning Rule 13-4
- Alternate Rule Sets 13-4
- Rules Hierarchy (in Bar Codes) 13-6
- Default Rules 13-7
- Special Commands 13-8
 - Pause Duration 13-8
 - Begin New Rule 13-8
 - Save Rule 13-9
 - Erase 13-9
 - Quit Entering Rules 13-10
 - Disable Rule Set 13-11
- Criteria 13-12
 - Code Types 13-12
 - Code Lengths 13-15
 - Message Containing A Specific Data String 13-20
- Actions 13-24
 - Send Data 13-24
 - Setup Field(s) 13-27
 - Modify Data 13-32
 - Pad Data with Spaces 13-34
 - Pad Data with Zeros 13-38
 - Beeps 13-42
 - Send Keystroke 13-43
 - Send Right Control Key 13-73
 - Send Graphic User Interface (GUI) Characters 13-73
 - Turn On/Off Rule Sets 13-79
- Alphanumeric Keyboard 13-80

Chapter 14. Mounting Template


- Overview 14-1
 - MS 1207FZY/MS 1207WA/MS 2207/MS 2207VHD Mounting Template 14-1
 - MS 3207 Mounting Template 14-2

Appendix A. ASCII Character Sets

- RS-232 ASCII Character Set A-1
- USB ASCII Character Set A-7

Glossary

Index

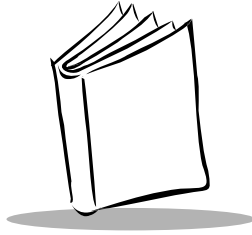

About This Manual

The *MiniScan MS XX07 Series Integration Guide* provides general instructions for mounting, setting up, and programming the following MiniScan models:


- MS 1207FZY
- MS 1207WA
- MS 2207
- MS 2207VHD
- MS 3207.

Note: *It is recommended that an opto-mechanical engineer perform an opto-mechanical analysis prior to integration.*

Chapter Descriptions

Topics covered in this guide are as follows:

- **Chapter 1, Introduction**, provides an overview of the MiniScan scanners and features, and provides a block diagram of the scanner.
- **Chapter 2, Installation**, describes how to mount and install the MiniScan scanner.
- **Chapter 3, Scanning**, provides information on scan patterns, scanning, triggering options, and beeper and LED definitions.
- **Chapter 4, MS 1207FZY Specifications**, provides the technical and scanning specifications for the **MS 1207FZY scanner**.
- **Chapter 5, MS 1207WA Specifications**, provides the technical and scanning specifications for the **MS 1207WA scanner**.

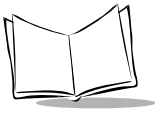

- **Chapter 6, MS 2207 Specifications**, provides the technical and scanning specifications for the **MS 2207 scanner**.
- **Chapter 7, MS 2207VHD Specifications**, provides the technical and scanning specifications for the **MS 2207VHD scanner**.
- **Chapter 8, MS 3207 Specifications**, provides the technical and scanning specifications for the **MS 3207 scanner**.
- **Chapter 9, Maintenance and Troubleshooting** provides information on maintaining and troubleshooting the MiniScan scanners.
- **Chapter 10, Parameter Menus** describes the programmable parameters and provides bar codes for programming.
- **Chapter 11, RS-232 Interface** describes how to set up the scanner for RS-232 operation.
- **Chapter 12, USB Interface** describes how to set up the scanner for USB operation.
- **Chapter 13, Advanced Data Formatting** (ADF) describes how to customize scanned data before transmitting to the host.
- **Chapter 14, Mounting Template**, provides mounting templates for the MiniScan scanners.
- **Appendix A, ASCII Character Sets**, provides prefix and suffix values that can be assigned for ASCII character data transmission.

Notational Conventions

The following conventions are used in this document:

- Bullets indicate:
 - action items
 - lists of alternatives
 - lists of required steps that are not necessarily sequential
- Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

Related Documents

The following document provides more information for MiniScan Series scanners.

- *MiniScan Family of Scanners Quick Reference Guide, p/n 72-58809-xx*

Service Information

If you have a problem with your equipment, contact the [Symbol Support Center](#). Before calling, have the model number, serial number, and several of your bar code symbols at hand.

Call the Support Center from a phone near the scanning equipment so that the service person can try to talk you through your problem. If the equipment is found to be working properly and the problem is symbol readability, the Support Center will request samples of your bar codes for analysis at our plant.

If your problem cannot be solved over the phone, you may need to return your equipment for servicing. If that is necessary, you will be given specific directions.

Note: *Symbol Technologies is not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty. If the original shipping container was not kept, contact Symbol to have another sent to you.*

Symbol Support Center


For service information, warranty information or technical assistance contact or call the Symbol Support Center in:

United States

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, New York 11742-1300
1-800-653-5350

Canada

Symbol Technologies Canada, Inc.
2540 Matheson Boulevard East
Mississauga, Ontario, Canada L4W 4Z2
905-629-7226

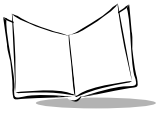

United Kingdom

Symbol Technologies
Symbol Place
Winnersh Triangle, Berkshire RG41 5TP
United Kingdom
0800 328 2424 (Inside UK)
+44 118 945 7529 (Outside UK)

Australia

Symbol Technologies Pty. Ltd.
432 St. Kilda Road
Melbourne, Victoria 3004
1-800-672-906 (Inside Australia)
+61-3-9866-6044 (Outside Australia)

Denmark/Danmark

Symbol Technologies AS
Dr. Neergaardsvej 3
2970 Hørsholm
7020-1718 (Inside Denmark)
+45-7020-1718 (Outside Denmark)

Finland/Suomi

Oy Symbol Technologies
Kaupintie 8 A 6
FIN-00440 Helsinki, Finland
9 5407 580 (Inside Finland)
+358 9 5407 580 (Outside Finland)

Asia/Pacific

Symbol Technologies Asia, Inc (Singapore Branch)
230 Victoria Street #05-07/09
Bugis Junction Office Tower
Singapore 188024
Tel : +65-6796-9600
Fax : +65-6337-6488

Austria/Österreich

Symbol Technologies Austria GmbH
Prinz-Eugen Strasse 70 / 2.Haus
1040 Vienna, Austria
01-5055794-0 (Inside Austria)
+43-1-5055794-0 (Outside Austria)

Europe/Mid-East Distributor Operations

Contact your local distributor or call
+44 118 945 7360

France

Symbol Technologies France
Centre d'Affaire d'Antony
3 Rue de la Renaissance
92184 Antony Cedex, France
01-40-96-52-21 (Inside France)
+33-1-40-96-52-50 (Outside France)

Germany/Deutschland

Symbol Technologies GmbH
Waldstrasse 66
D-63128 Dietzenbach, Germany
6074-49020 (Inside Germany)
+49-6074-49020 (Outside Germany)

Latin America Sales Support

2730 University Dr.
Coral Springs, FL 33065 USA
1-800-347-0178 (Inside United States)
+1-954-255-2610 (Outside United States)
954-340-9454 (Fax)

Netherlands/Nederland

Symbol Technologies
Kerkplein 2, 7051 CX
Postbus 24 7050 AA
Varsseveld, Netherlands
315-271700 (Inside Netherlands)
+31-315-271700 (Outside Netherlands)

South Africa

Symbol Technologies Africa Inc.
Block B2
Rutherford Estate
1 Scott Street
Waverly 2090 Johannesburg
Republic of South Africa
11-809 5311 (Inside South Africa)
+27-11-809 5311 (Outside South Africa)

Italy/Italia

Symbol Technologies Italia S.R.L.
Via Cristoforo Colombo, 49
20090 Trezzano S/N Naviglio
Milano, Italy
2-484441 (Inside Italy)
+39-02-484441 (Outside Italy)

Mexico/México

Symbol Technologies Mexico Ltd.
Torre Picasso
Boulevard Manuel Avila Camacho No 88
Lomas de Chapultepec CP 11000
Mexico City, DF, Mexico
5-520-1835 (Inside Mexico)
+52-5-520-1835 (Outside Mexico)

Norway/Norge


Symbol's registered and mailing address:
Symbol Technologies Norway
Hoybratenveien 35 C
N-1055 OSLO, Norway

Symbol's repair depot and shipping address:
Symbol Technologies Norway
Enebakkveien 123
N-0680 OSLO, Norway

+47 2232 4375

Spain/España

Symbol Technologies S.L.
Avenida de Bruselas, 22
Edificio Sauce
Alcobendas, Madrid 28108
Spain
Telephone: +34.91.324.4000
Service Telephone: +34.91.324.4000
Fax: +34.91.324.4010

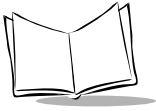

Sweden/Sverige

“Letter” address:

Symbol Technologies AB

Box 1354

S-171 26 SOLNA

Sweden

Visit/shipping address:

Symbol Technologies AB

Solna Strandväg 78

S-171 54 SOLNA

Sweden

Switchboard: 08 445 29 00 (domestic)


Call Center: +46 8 445 29 29 (international)

Support E-Mail:

Sweden.Support@se.symbol.com

If you purchased your Symbol product from a Symbol Business Partner, contact that Business Partner for service.

For the latest version of this guide go to:<http://www.symbol.com/manuals>.

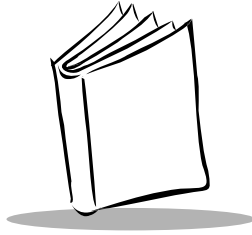

Chapter 1

Introduction



Caution

Use of controls, adjustments or procedures other than those specified here can result in hazardous laser light exposure.

Overview

The MiniScan family of industrial fixed-mount scanners are specifically designed for stand-alone applications, and OEM applications such as kiosks.

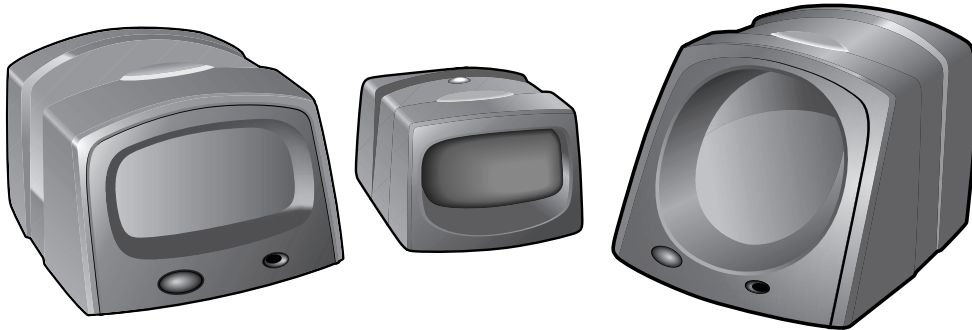
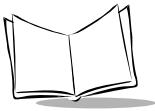


Figure 1-1. MiniScan Family of Scanners

MS XX07 Series scanners provide easy and flexible integration of bar code scanning into a host device, and include the following models:

- The **MS 1207FZY** offers fuzzy logic for premium scanning performance on all types of 1D bar codes including poorly printed and low contrast symbols. The MS 1207FZY features a compact design for superior performance and durability in a form factor that easily integrates into OEM devices for embedded applications such as medical instruments, diagnostic equipment, vending machines, and gaming. As a fixed-mount scanner, the MS 1207FZY is ideal for applications requiring unattended scanning such as manufacturing, warehouse and shipping, conveyor belts, library and document tracking systems.
- The **MS 1207WA** Wide Angle Scanner features a broad 60° scan angle to accommodate large 1D bar codes within extremely close range. This scanner is ideal for high-volume, near-contact scanning applications such as kiosks, ATMs, assembly lines, warehouse and shipping.
- The **MS 2207** and **MS 2207VHD** offer a "smart" raster pattern optimized for 2D applications and poorly printed 1D bar codes. The high scan rate ensures fast and reliable data on all 1D symbols, and 2D codes such as PDF417, MicroPDF, RSS and composite codes. These scanners are perfect for automated data entry applications that require high-speed scanning, performance, and small size, such as conveyor belts, manufacturing and warehouse, gas pumps, and security/ID verification.
- The **MS 3207** features a high-speed omnidirectional scan pattern that makes it easy and intuitive for consumers to scan bar codes at the point of activity. The omnidirectional scan pattern reads bar codes quickly and accurately, minimizing

the need for precise positioning of linear 1D bar codes. The MS 3207 provides an easy and cost-effective way to enhance existing OEM devices with high-performance 1D and 2D scanning, making it the ideal solution for applications that require fast, accurate scanning such as kiosks, ATMs, listening stations, lottery machines, and vending machines.

MS XX07 Series Features

- Stand-alone or OEM applications
- Quick and easy integration for OEM devices
- Excellent scanning performance on all types of bar codes (MS 1207FZY and MS 1207WA support 1D bar codes only)
- Rugged IP54 sealed housing with integrated beeper
- Multi-interface (USB, Synapse, TTL RS-232)
- Easy programming and configuration
- Flexible mounting options
- LEDs and an integrated beeper indicating scanner power status and successful decodes.

Typical Applications


MiniScan is the perfect solution for the following applications:

Fixed Mount Standalone Applications

- Manufacturing / warehouse
- Conveyer belts
- Security / ID verification
- POS
- Library tracking
- Document control.

OEM Applications

- Kiosks / ATMs
- Music listening stations
- Security / ID verification
- Lottery terminals / gaming.

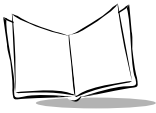

Block Diagram

The MiniScan block diagram illustrates the functional relationship of the MiniScan components. A detailed description of each component in the block diagram is also provided.

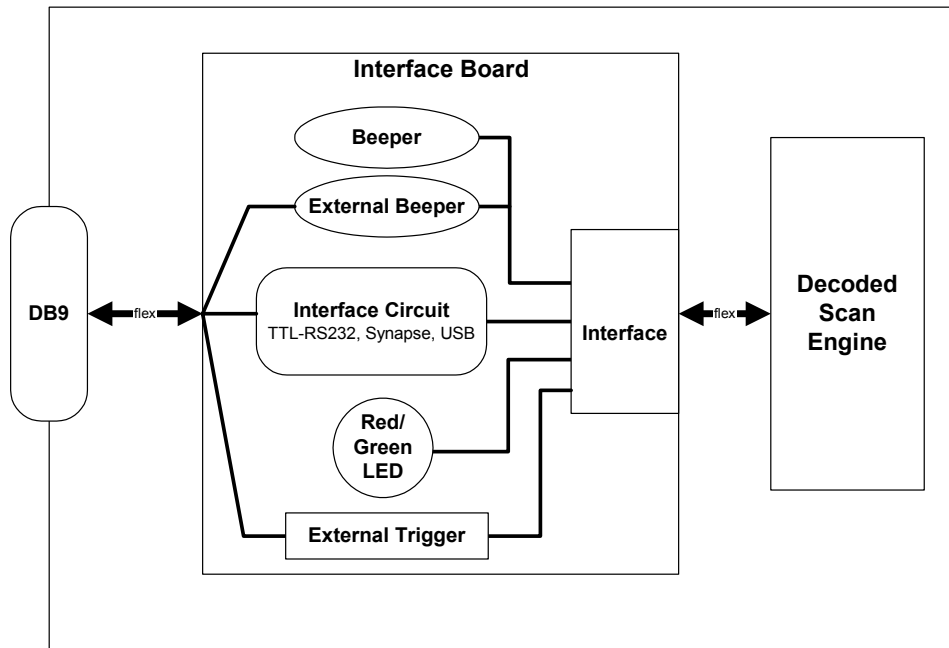


Figure 1-2. MiniScan Block Diagram


Miniscan Block Diagram Descriptions

Decoded Scan Engine - The scan engine emits a beam of laser light that reflects off the bar code to be decoded. Black bars absorb light, white spaces reflect light. The scan engine collects the reflected light and processes the signal through several analog filters. The filtered signal is digitized into a Digitized Barcode Pattern (DBP). Timing information is analyzed by the decoder micro-controller to decode and transmit the data contained in the bar code. Data transmission is carried out using Symbol's proprietary SSI Interface.


Interface Board - The interface board adapts the scan engine's interface into usable signals and data for the intended host. It also contains a beeper and red/green LED for audio/visual feedback, and provides for an external trigger and external beeper.

The interface board converts the scan engine's data to Synapse, USB, or TTL level RS-232. A separate host adapter cable (p/n 25-62186-xx) is available to convert the TTL level RS-232 output to standard RS-232 levels. All interface types are auto-detected based on the host cable attached.

DB9 - The DB9 connector provides a sealed outlet for the various interface signals used between a MiniScan scanner and the host. It also maintains pin compatibility with the previous generation LS 1220 MiniScan host cables.



MS XX07 Series Integration Guide

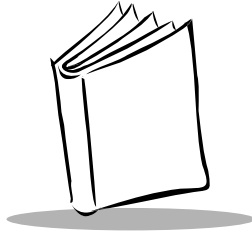

Chapter 2

Installation


Overview

This chapter provides information on unpacking, mounting, and installing the MiniScan.

Unpacking

Remove the MiniScan from its packing and inspect for damage. If the scanner is damaged, call the [Symbol Support Center](#) at the telephone number listed on [page xiii](#).

KEEP THE PACKING. It is the approved shipping container and should be used if the equipment needs to be returned for servicing.



Mounting

There are three mounting holes (threaded inserts) on the bottom of the chassis.

The following figures provide mounting dimensions for the MiniScan scanner housings. For a mounting template, see *Mounting Template* on page 14-1.

Note: Use only non-magnetic M3x.5 screws with a maximum length of 3.6M to mount the MiniScan scanner chassis.

MS 1207FZY/MS 1207WA/MS 2207/MS 2207VHD Mounting Dimensions


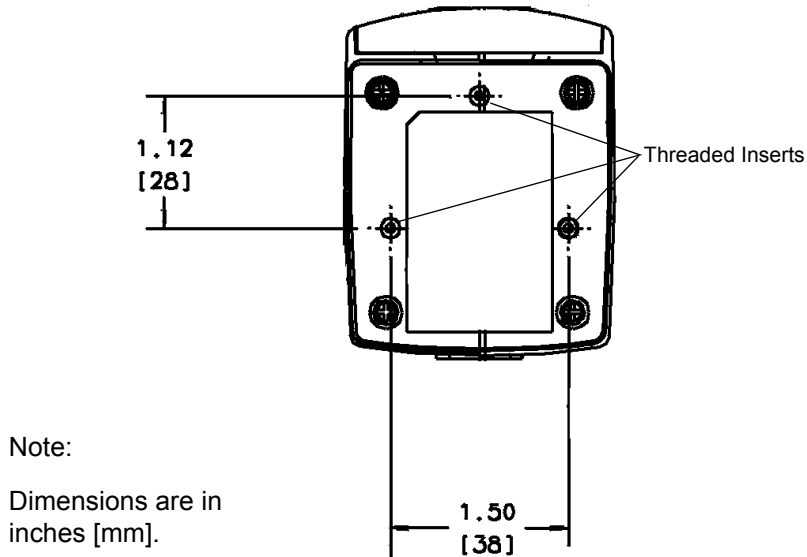


Figure 2-1. MS 1207FZY/MS 1207WA/MS 2207/MS 2207VHD Mounting Dimensions


MS 3207 Mounting Dimensions

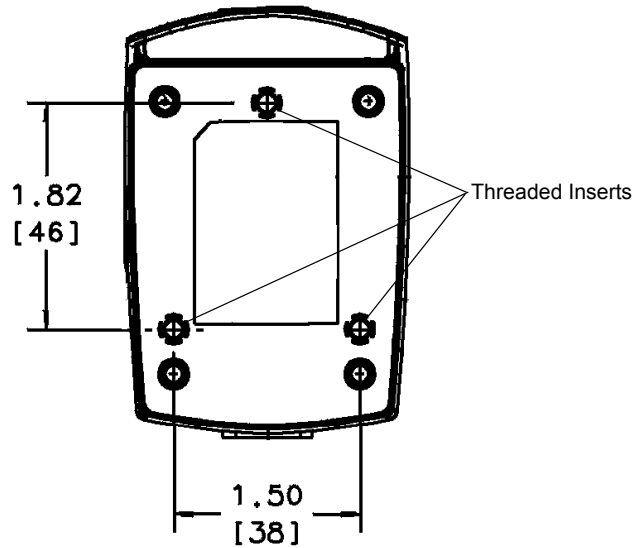

Note:

Dimensions are in inches [mm].

Figure 2-2. MS 3207 Mounting Dimensions

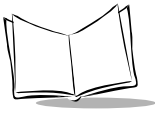


Mounting the Scanner on the Optional Stand

To mount the scanner on the optional stand:

1. Place the bottom of the scanner on the stand's scanner mount, aligning the scanner's center threaded insert (beneath the scan window) with the center mounting hole on the front of the stand. The two rear threaded inserts on the bottom of the scanner will align with the proper mounting holes on the stand.
2. Secure the scanner to the stand using the three screws provided with the stand.

Assembling the Stand

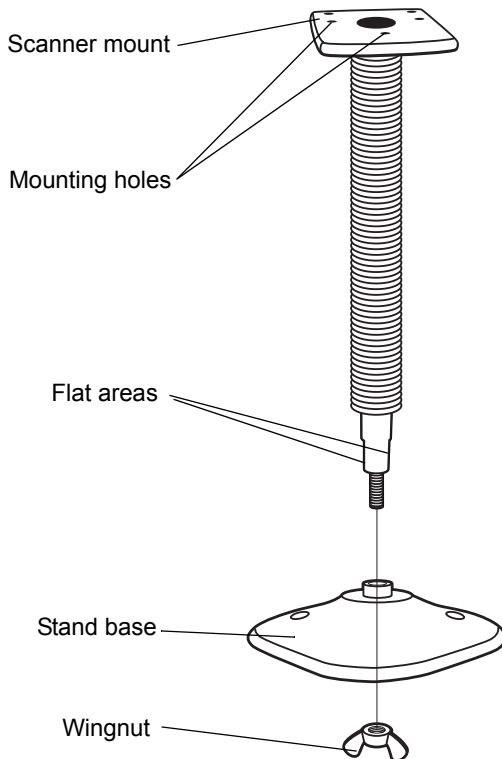

1. Unscrew the wingnut from the bottom of the one-piece scanner mount.
2. Fit the bottom of the neck piece into the opening on the top of the stand base.
3. Tighten the wingnut underneath the base to secure the cup and neck piece (see the note below).
4. Bend the neck to the desired position for scanning.

Figure 2-3. Assembling the Stand

Note: Before tightening the wingnut under the base, ensure that the flat areas on the flexible neck fit securely in the grooves in the base.

Mounting the Stand (optional)

You can attach the base of the scanner's stand to a flat surface using two screws or double-sided tape (not provided).

Screw Mount

1. Position the assembled base on a flat surface.
2. Screw one #10 wood screw into each screw-mount hole until the base of the stand is secure.

Tape Mount

1. Peel the paper liner off one side of each piece of tape and place the sticky surface over each of the three rectangular tape areas.
2. Peel the paper liner off the exposed sides of each piece of tape and press the stand on a flat surface until it is secure.


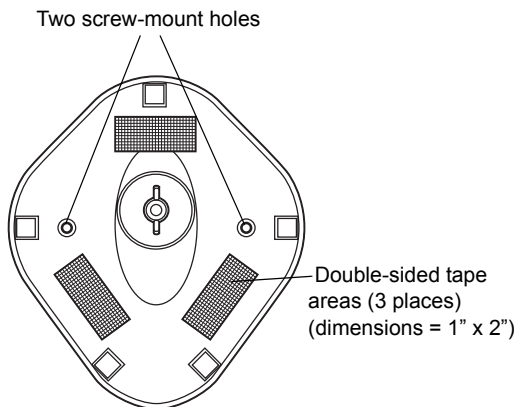


Figure 2-4. Mounting the Stand



Mounting the Scanner on the Optional Mounting Bracket

The optional mounting bracket kit consists of a scanner bracket, a mounting bracket, and the hardware required to mount the scanner. The bracket kit accommodates adjustable angles for optimal positioning of the scanner.

To mount the MiniScan scanner on the bracket, first secure the scanner to the scanner bracket, then attach the mounting bracket to the wall (see [Figure 2-5 on page 2-7](#)):

1. Tilt the scanner bracket forward to access the center scanner mounting hole on the bracket.
2. Place the bottom of the scanner on the scanner bracket, aligning the scanner's center threaded insert (beneath the scan window) with the center mounting hole on the scanner bracket.
3. Insert one of the screws provided through the mounting hole and into the scanner's center threaded insert.

For the MS 1207FZY, MS 1207WA, MS 2207, and MS 2207VHD, use a #0 Phillips screwdriver; for the MS 3207, use a #1 Phillips screwdriver.

4. Tilt the scanner bracket in the opposite direction to access the rear scanner mounting holes (which are aligned with the rear inserts on the bottom of the scanner), then insert the remaining two screws provided through the two rear mounting holes and into the scanner's threaded inserts.
5. Secure the mounting bracket to a flat surface by inserting 1/8" or smaller fasteners through the surface and into the bracket's mounting holes. There are four mounting holes on the bottom of the mounting bracket for horizontal mounting, and six holes on the side for vertical mounting.


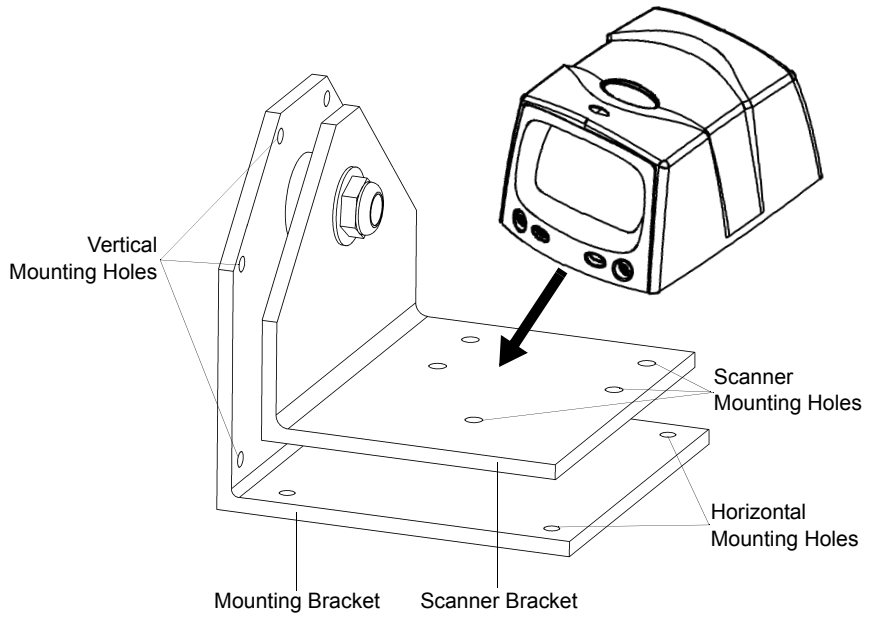


Figure 2-5. Mounting the Scanner and Bracket



Connecting the MiniScan

To connect the MiniScan to the host, connect the scanner cables in the order shown in [Figure 2-6](#).

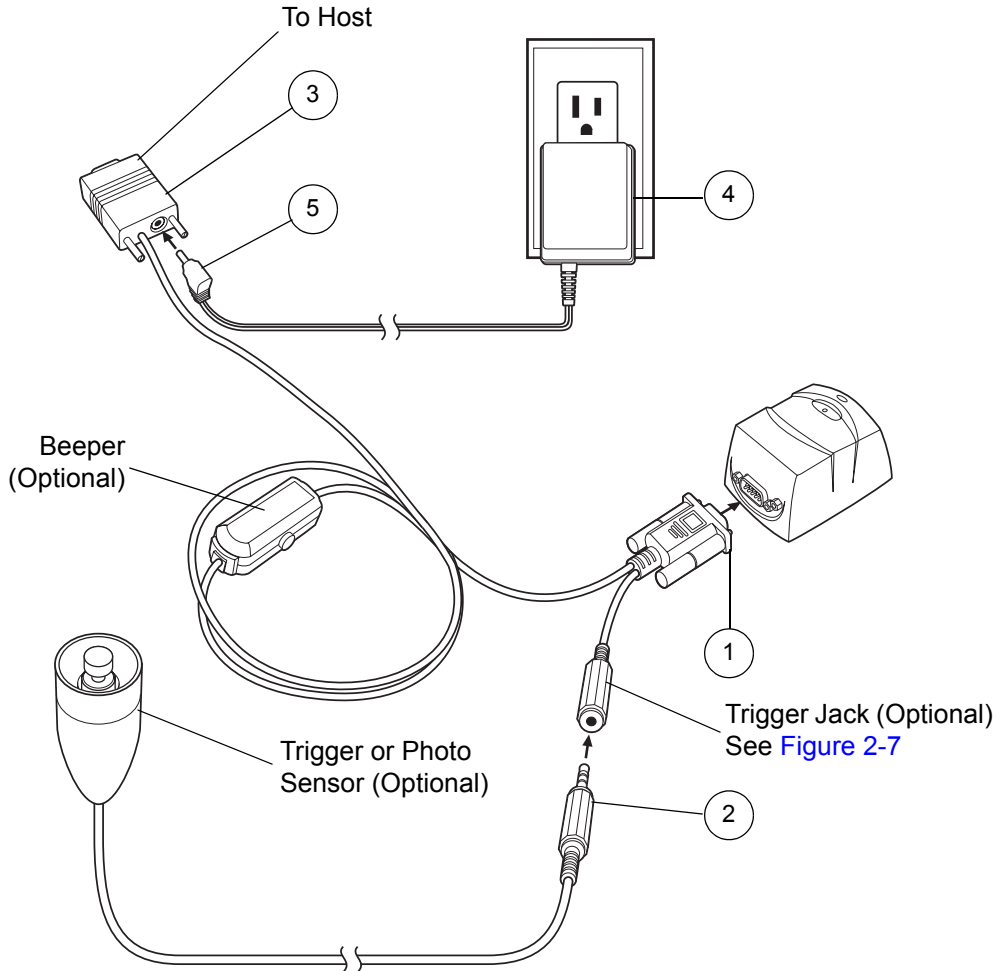


Figure 2-6. Typical Connection Diagram


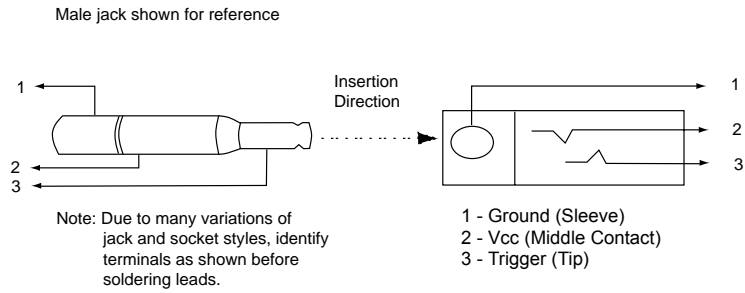


Figure 2-7. Trigger Jack Connector Pins

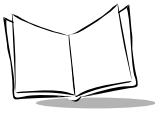

Location and Positioning

Caution

The location and positioning guidelines provided do not consider unique application characteristics. It is recommended that an opto-mechanical engineer perform an opto-mechanical analysis prior to integration.

Note: *Integrate the scanner in an environment no more extreme than the product's specification, where the scanner will not exceed its temperature range. For instance, do not mount the scanner onto or next to a large heat source. When placing the scanner with another device, ensure there is proper convection or venting for heat. Follow these suggestions to ensure product longevity, warranty, and overall satisfaction with the scanner.*

Using the MiniScan as an Embedded Scanner

The MiniScan can be mounted to read symbols that are automatically presented, or that are presented in a pre-determined location. In these applications, MiniScan positioning with respect to the symbol is critical. Failure to properly position the MiniScan can result in unsatisfactory scanning performance. A thermal analysis is also recommended.

Two methods of positioning the scanner are provided:

- Use the [Calculating the Usable Scan Length Method](#) on page 2-11 with consistently good quality symbols. This provides a mathematical solution to find the usable scan length.
- The [Testing the Usable Scan Length Method](#) on page 2-12 uses real situation testing to adjust the usable scan length to fit the application conditions.

Calculating the Usable Scan Length Method

Calculate usable scan length as follows (see [Figure 2-8 on page 2-12](#)):

$$L = 1.8 \times (D+d+B) \times \tan (A/2)$$

Table 2-1. Calculation Constants

Constants	B	A
MS 1207FZY (Default Mode)	1.17	42°
MS 1207FZY (Alternate Mode)	1.17	30°
MS 1207WA	1.17	60°
MS 2207	1.53	34°
MS 2207VHD	1.53	34°
MS 3207	1.93	34°

where:

D = Distance (in inches) from the front edge of the host housing to the bar code.

d = The host housing's internal optical path from the edge of the housing to the front of the MiniScan scanner.

B = Internal optical path from the scan mirror to the front edge of the MiniScan scanner.

A = Scan angle in degrees.

Note: Usable scan length determined by this formula, or 90% of scan line at any working distance. This formula is based on good quality symbols in the center of the working range and length of bar code.

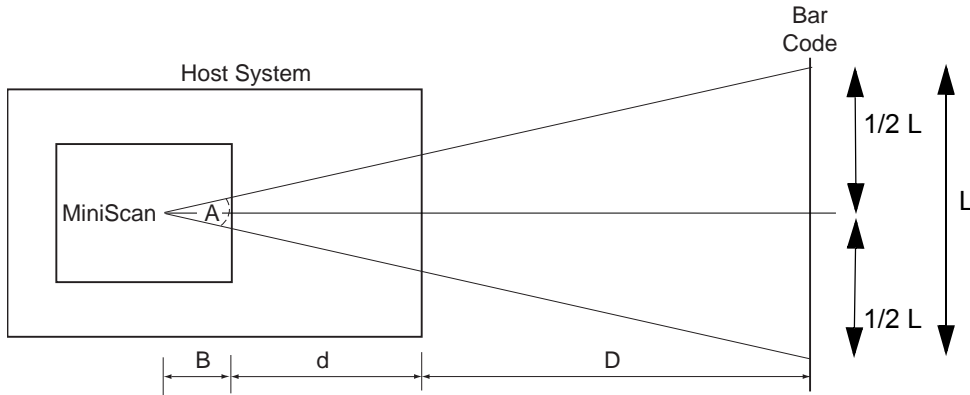
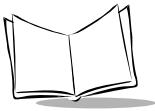


Figure 2-8. Usable Scan Length Diagram

Testing the Usable Scan Length Method

Due to the variety of symbol sizes, densities, print quality, etc., there is no simple way to calculate the ideal symbol distance. To optimize performance, use the *Testing The Usable Scan Length* positioning method:

1. Measure the maximum and minimum distances at which the symbols can be read.
2. Check the near and far range on several symbols. If they are not reasonably consistent there may be a printing quality problem that can degrade the performance of the system. Symbol Technologies can provide advice on how to improve the installation.


Note: *Poor quality symbols (from bad printing, wear, or damage) may not decode well when placed in the center of the depth of field (especially higher density codes). The scan beam has a minimum width in the central area, and when the scanner tries to read all symbol imperfections in this area it may not decode. After a preliminary spot is determined using good quality symbols, test several reduced quality symbols and adjust the spot for the best overall symbol position.*

3. Locate the scanner so the symbol is near the middle of the near/far range.

4. Center the symbol (left to right) in the scan line whenever possible.
5. Position the symbol so that the scan line is as near as possible to perpendicular to the bars and spaces in the symbol.
6. Avoid specular reflection (glare) off the symbol by tilting the top or bottom of the symbol away from the scanner. The exact angle is not critical, but it must be large enough so that if a mirror were inserted in the symbol location, the reflected scan line would miss the front surface of the scanner. For the maximum allowable angles refer to the Skew, Pitch and Roll angles listed in each MiniScan *Technical Specifications* table.
7. If an additional window is to be placed between the scanner and the symbol, determine the optimum symbol location using a representative window in the desired window position.
8. Give the scanner time to dwell on the symbol for several scans. When first enabled, the MiniScan may take two or three scans before it reaches maximum performance. Enable the MiniScan before the symbol is presented, if possible.

Conveyor Applications

Conveyor applications require setting the conveyor velocity to optimize the scanner's ability to read symbols. Also consider the orientation of the symbol with respect to the conveyor direction. [Figure 2-9 on page 2-14](#) illustrates the relationship of the conveyor velocity with respect to a symbol positioned perpendicular to the conveyor direction and [Figure 2-10 on page 2-15](#) illustrates the relationship of the conveyor velocity with respect to a symbol positioned parallel to the conveyor direction.



Symbol is Perpendicular to Conveyor Movement

With the symbol bars perpendicular to the conveyor belt direction (Picket Fence presentation) the relationship is:

$$V = (R \times (F - W)) / N$$

- where:
- V = Velocity of the conveyor (inches/second)
 - R = Scan Rate (see technical specifications)
 - F = 80% of width of scan beam
 - W = Symbol Width (inches)
 - N = Number of scans over symbol (minimum of 10 scans)

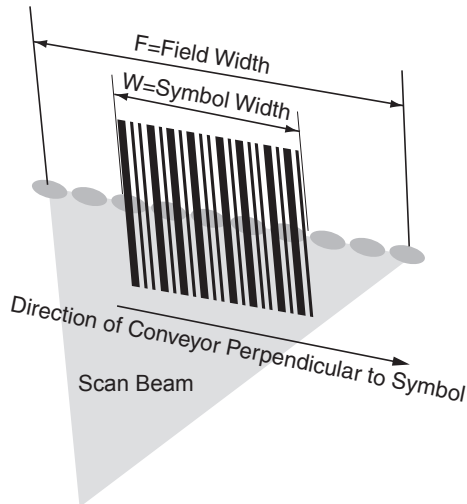


Figure 2-9. Symbol Perpendicular To Conveyor Movement

Example

R = 640 scans per second

F = 80% of 6 in.

W = 4 in.

N = 10

$V = (640 \times ((0.8 \times 6) - 4)) / 10 = 51.2 \text{ in./sec}$

Symbol is Parallel to Conveyor Movement

With the symbol bars parallel to the conveyor belt direction (ladder presentation) the relationship is:

$$V = (R \times H) / N$$

where: V = Velocity of the conveyor (inches/second)
 R = Scan Rate of scanner (see technical specifications)
 H = Symbol height
 N = Number of scans over symbol (minimum of 10 scans)

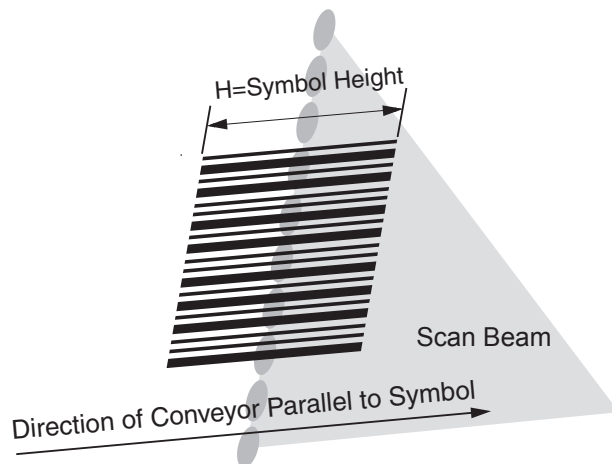


Figure 2-10. Symbol Parallel To Conveyor Movement

Example


Use the previous formula to calculate the number of scans for a specific bar code, scanner, and conveyor speed; **a minimum of 10 scans per symbol is recommended.**

R = 640 scans/sec

H = 60 mil

N = 10 scans

$V = (640 \times .060) / 10 = 3.84 \text{ in./sec}$

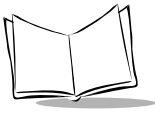

Accessories

The following accessories are available for the MiniScan scanner, and can be found in Symbol's Solution Builder (ordering guide).

- **For power connection**

- 110V power supply, US, p/n 50-14000-008
- 220V power supply, Europe, p/n 50-14000-009
- 100V power supply, Asia, p/n 50-14000-010
- 264V Universal power supply (also order cables below), p/n 50-14001-001
 - DC line cord (power supply to scanner), p/n 50-16002-009
 - AC line cord (wall outlet to power supply), p/n 23844-00-00

- **RS-232**

- TTL RS-232 to True RS-232 conversion cable, p/n 25-62186-XX
- Female DB9 with straight connector to RS-232 host (female DB9), with trigger jack and no beeper, p/n 25-13227-XX
- Female DB9 with straight connector to RS-232 host (female DB9), with trigger jack and beeper, p/n 25-13228-XX
- Female DB9 with straight connector to RS-232 host (female DB9), p/n 25-58918-XX
- Female DB9 with right angle connector to RS-232 host (female DB9), p/n 25-58919-XX
- Female DB9 with straight connector to RS-232 host (female DB9), with trigger jack and no hardware handshaking, p/n 25-63736-XX


- **USB**

- Female DB9 with straight connector with trigger jack and beeper to USB (Type A connector), p/n 25-58925-XX
- Female DB9 with right angle connector to USB host (Type A connector), p/n 25-58923-XX
- Female DB9 straight to USB, p/n 25-58926-XX

- **Synapse Adapter**

- Female DB9 with straight connector to Synapse Adapter Cable (6 ft. straight), p/n 25-58921-XX

- **Cable Adapters**
 - Female 25 pin D, TxD on pin 2, p/n 50-12100-378
 - Female 25 pin D, TxD on pin 3, p/n 50-12100-377
 - Male 25 pin D, TxD on pin 2, p/n 50-12100-380
 - Male 25 pin D, TxD on pin 3, p/n 50-12100-379
- **Optional Accessories**
 - Push button trigger cable, p/n 25-04950-XX
 - Photo sensor trigger cable, p/n 25-13176-XX
 - Fixed-mount stand, p/n 20-60136-XX
 - Mounting bracket, p/n KT-65578-01

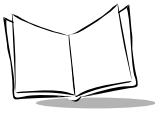

Application Notes

TTL RS-232

Standard RS-232 voltage levels typically range between +12V and -12V to ensure adequate noise rejection over long distances. Devices which support TTL level RS-232 signaling typically drive signals between 0V and +5V. Extensive testing has shown that TTL levels are interpreted correctly by the majority of standard RS-232 hosts over cable distances of six feet or less, even in extreme conditions.

Multi-interface Miniscan products fall into the TTL RS-232 device category. All standard RS-232 cables available from Symbol for the Miniscan family measure six feet or less, and should not present a problem. If a particular host does not support TTL levels, a separate conversion cable is available (25-62186-xx) which contains electronics to adapt the TTL levels of a multi-interface Miniscan into standard RS-232 levels.


USB Warning - Potential Host Side Issues

The Universal Serial Bus provides a smart plug-and-play interface for easy integration. In USB communication, the root hub located on the host controls all traffic. USB hosts in general react poorly in certain harsh environments compared to traditional host interfaces such as RS-232. These environments include areas with high ESD levels or situations in which the system is subject to Electrical Fast Transients (EFT).

Typical symptoms of these environments are:

- Frequent scanner resets
- Scanner occasionally loses power (due to host initiated shutdown)
- Occasional host lockups.

Because multi-interface Miniscan products are often exposed to these environments due to the nature of scanner placement, they have been safeguarded as much as possible to prevent physical damage. Despite design precautions, testing has shown that some USB hosts cannot tolerate these environments. In this case, try placing a self-powered USB hub close to the host, between the scanner and host, as a buffer to the host against the harsh environment. This may not be a valid solution in all cases.

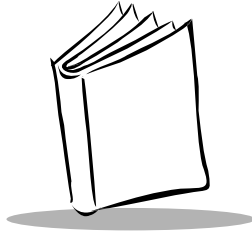

Chapter 3

Scanning

Overview

This chapter provides information on scan patterns, scanning, triggering options, and beeper and LED definitions.


MiniScan Scan Patterns

MS 1207FZY and MS 1207WA Scan Pattern

MS 1207FZY and MS 1207WA scanners emit a single scan line to quickly decode 1D bar codes.



Figure 3-1. Single Scan Line Scan Pattern



MS 2207 and MS 2207VHD Scan Patterns

The MS 2207 and MS 2207VHD generate different scan patterns (Smart Raster and High Density Single Scan Line) based on the software command received at the interface. The raster pattern can be used to read 1D bar codes and PDF417 symbols.

Note: *The MS 2207 and MS 2207VHD also support omnidirectional and semi-omnidirectional scan patterns, but are not optimized for these patterns.*

Smart Raster Scan Pattern

The MS 2207 and MS 2207VHD can create a single line which opens vertically to read PDF417 symbols using the Smart Raster feature. This feature autodetects the type of bar code being scanned and adjusts its pattern accordingly, providing optimal performance on 1D, PDF417, RSS, and Composite codes.

Stage 1: "Slab" Raster Pattern



Stage 2: Open Raster Pattern

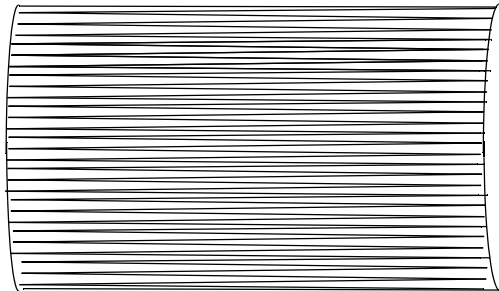


Figure 3-2. Raster Scan Pattern

High Density Single Scan Line Scan Pattern

The High Density single scan line appears as a "mini" raster and scans multiple areas of 1D codes to swiftly and accurately capture data on poorly printed and damaged bar codes.



Figure 3-3. High Density Single Scan Line Scan Pattern

MS 3207 Scan Patterns

The MS 3207 generates four scan patterns based on the software command received at the interface. These patterns are Smart Raster, Semi-omnidirectional, Omnidirectional, and High Density Single Scan Line. The raster pattern can be used to read 1D bar codes and PDF417 symbols. The omnidirectional pattern reads 1D bar codes in an omnidirectional manner.

Smart Raster Scan Pattern

The MS 3207 can create a single line which opens vertically to read PDF417 symbols using the Smart Raster feature. This feature autodetects the type of bar code being scanned and adjusts its pattern accordingly, providing optimal performance on 1D, PDF417, RSS, and Composite codes.

Stage 1: "Slab" Raster Pattern



Stage 2: Open Raster Pattern

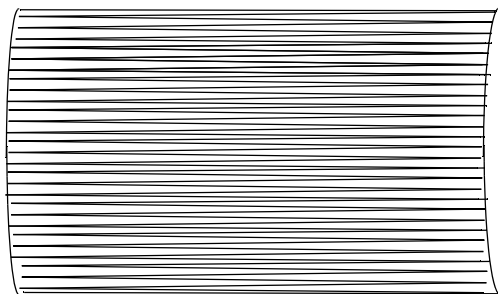


Figure 3-4. Raster Scan Pattern

Semi-omnidirectional Scan Pattern

The semi-omnidirectional pattern is an alternative to the full omnidirectional pattern that scans highly truncated 1D and RSS bar codes. Present bar codes horizontally with no more than a 20° tilt.


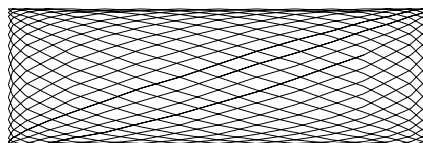


Figure 3-5. Semi-omnidirectional Scan Pattern

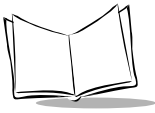

Omnidirectional Scan Pattern

The high-speed rotating omnidirectional scan pattern provides aggressive performance on 1D bar codes because there are no “holes” in the pattern. This ensures fast throughput at the point of activity and the ability to read 1D symbols in 360° of rotation, eliminating the need to orient the bar code in the field of view.

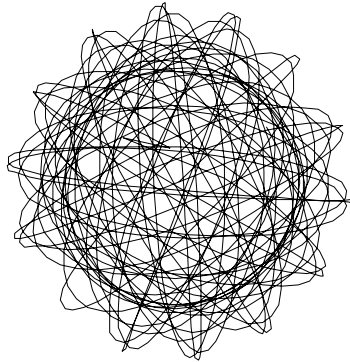


Figure 3-6. Omnidirectional Scan Pattern

High Density Single Scan Line Scan Pattern

The High Density single scan line appears as a "mini" raster and scans multiple areas of 1D codes to swiftly and accurately capture data on poorly printed and damaged bar codes.



Figure 3-7. High Density Single Scan Line Scan Pattern

Scan Angle Selection

The MS 1207FZY scanner supports two scan angles (see [Table 4-2 on page 4-5](#) for these angles). To set the scan angle, scan a parameter bar code (see [Scan Angle](#) on page 10-15). Once the parameter bar code is scanned, that scan angle setting is retained.

Operation in Blink Mode

The scan angle during Blink Mode is determined by the scan angle system parameter.

Scanning Tips

When scanning, make sure the symbol to be scanned is within the scanning range. See [Calculating the Usable Scan Length Method](#) on page 2-11. Align the bar code with the scan beam. The green decode LED lights to indicate a successful decode.


Scan the Entire Symbol

- The scan beam must cross every bar and space on the symbol.
- The larger the symbol, the farther away the scanner should be positioned.
- Position the scanner closer for symbols with bars that are close together.



Position at an Angle

Do not position the scanner exactly perpendicular to the bar code. In this position, light can bounce back into the scanner's exit window and prevent a successful decode.



Trigger Options

Continuous (Default)

The laser is enabled continuously and decode processing is continuously active. The scanner can be configured to scan and transmit a bar code, and then not decode the same bar code or any bar code for a set period of time. See [Timeout Between Decodes](#) on page 10-21 to customize the application to the rate at which bar codes are presented.



Continuous

Note: *This option is not recommended during scanner programming via bar code menus.*

Level Trigger

The laser is enabled and decode processing begins when the trigger line is activated. Decode processing continues until a good decode occurs, the trigger is released, or the Laser On Time expires. The laser is disabled once decode processing is complete. The next decode attempt will not occur until the trigger line is released and then reactivated.



Level

Pulse Trigger

The laser is enabled and decode processing begins when the trigger line is activated. Decode processing continues regardless of the trigger line until a good decode occurs, or until the Laser On Time expires. The laser is disabled once decode processing is complete. The next decode attempt will not occur until the trigger line is released and then reactivated.



Pulse

Blink

Note: *This option is supported by the MS 1207FZY and MS 1207WA only.*

The laser blinks at a 25% duty cycle (reduced to 10% after 30 seconds of inactivity), until a bar code is presented. When a bar code is presented, the laser remains on until either the bar code is decoded or removed, or the session timeout expires. Once the bar code is decoded, the scanner will not decode it again until the bar code is removed.




Blink

Host Trigger

A host command issues the triggering signal. The scanner interprets an actual trigger pull as a Level triggering option. Decode processing continues until a good decode occurs or the Laser On Time expires. The laser is disabled once decode processing is complete.



Host



Beeper and LED Definitions


Table 3-1 provides standard beeper definitions, and Table 3-2 provides LED definitions.

Table 3-1. Standard Beeper Definitions

Beeper Sequence	Indication
Standard Use	
1 Beep - short high tone	A bar code symbol was decoded (if decode beeper is enabled).
1 Beep - long high tone	Thermal shutdown.
3 Beeps - short high tone (MS 2207/2207VHD/3207 only)	Power-on or reset. Occurs immediately after the scanner is turned on, indicating that the system software is working properly. If three beeps occur during normal operation, it is due to a reset and any work in progress is lost. If this occurs often, contact the Symbol Support Center.
Parameter Menu Scanning	
2 Beeps- short high tone	Correct entry scanned or correct menu sequence performed.
1 Beep- hi/lo/hi/lo tone	Successful program exit with change in the parameter setting.
2 Beeps - lo/hi tone	Input error, incorrect bar code, or <i>Cancel</i> scanned, wrong entry, incorrect bar code programming sequence; remain in program mode.
Communication	
4 Beeps - short high tone	Communication error.
4 Beeps - hi/hi/hi/lo	Receive error.
3 Beeps - lo/hi/lo	ADF transmit error.

Table 3-2. LED Definitions

LED	Indication
Red	Scanner is on.
Green	A bar code was successfully decoded.

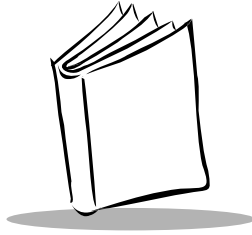


Chapter 4

MS 1207FZY Specifications

Overview

This chapter provides the technical specifications for the MS 1207FZY scanner.

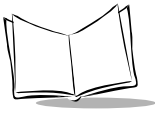

MS 1207FZY Electrical Interface

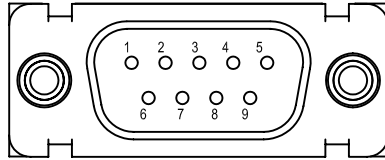


Figure 4-1. MiniScan Connector


Table 4-1 lists the pin functions of the MiniScan MS 1207FZY interface.

Table 4-1. MS 1207FZY Electrical Interface

Pin No.	Pin Name	Type*	Function
1	Trigger	I	Signals scanner to begin scanning session.
2	TXD	O	Serial data transmit output. Drives the serial data receive input on the device communicating with the scanner.
3	RXD	I	Serial data receive input. Driven by the serial data transmit output on the device communicating with the scanner.
4	Not used		
5	Ground		Power supply ground input and signal ground reference.
6	Power	I	5.0 VDC \pm 10%
7	CTS	I	Clear-to-send handshaking input line, used only in conjunction with the RTS line. Optionally used by another device to signal the scanner to begin transmitting data.
8	RTS	O	Request-to-send handshaking output line, used only in conjunction with the CTS line. Optionally used by the scanner to signal another device that data is available to send.
9	Beeper/ Download	I/O	During normal operation this signal functions as an external beeper drive line. This signal can sink 50 mA of current to drive an external beeper, and is normally pulled up. This signal is also used to begin Flash Download operation when grounded externally during power up.

*I = Input O = Output

MS 1207FZY Mechanical Drawings

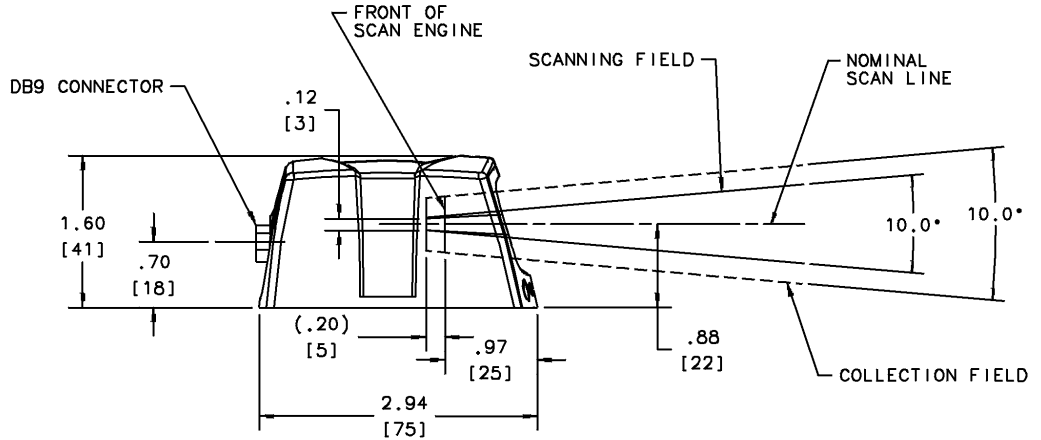

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.



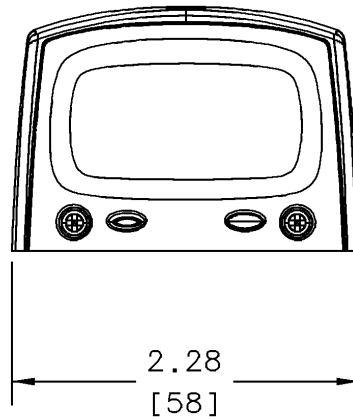


Figure 4-2. MS 1207FZY Mechanical Drawing

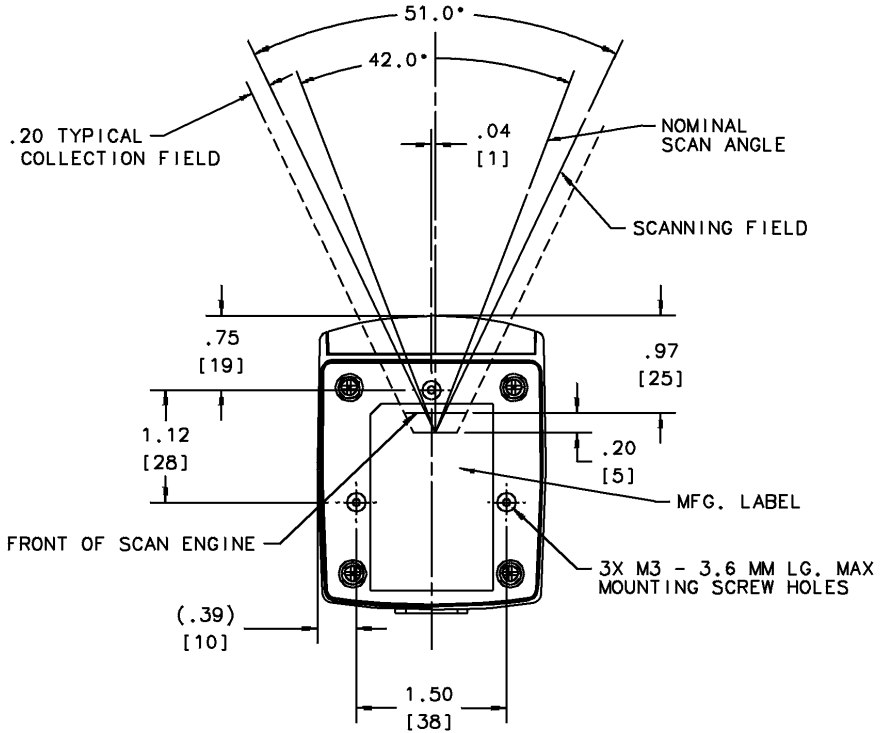

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.

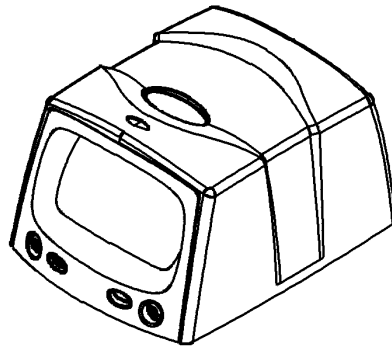


Figure 4-3. MS 1207FZY Mechanical Drawing

MS 1207WA Technical Specifications

Table 4-2 provides the MS 1207FZY technical specifications.

Table 4-2. MS 1207FZY Technical Specifications @ 23°C

Item	Description
Power Requirements Input Voltage Scanning Current Standby Current V _{cc} Noise Level	5.0 VDC ±10% 160 mA ±40 mA 20 mA ±5 mA typical 200 mV peak-to-peak max.
Laser Power	1.0 mW ± 0.12 mW, λ = 650 nm nominal
Scan Rate	36 (± 5) scans/sec (bidirectional)
Print Contrast	Minimum 25% absolute dark/light reflectance measured at 650 nm.
Scan Angle	Default (Wide): 42° ± 2° Alternate (Narrow): 30° ± 2°
Scan Pattern	Single scan line
Skew Tolerance	± 50° from normal (see Figure 4-4 on page 4-7)
Pitch Angle	± 65° from normal (see Figure 4-4 on page 4-7)
Roll	± 20° from vertical (see Figure 4-4 on page 4-7)
Decode Depth of Field	See Figure 4-5 on page 4-8
Ambient Light Immunity Sunlight Artificial Light	8,000 ft. candles (86,112 lux) 450 ft. candles (4,844 lux)
Drop	Multiple 30" drops
Vibration	Unpowered scanner withstands a random vibration along each of the X, Y and Z axes for a period of one hour per axis, defined as follows: 20 to 80 Hz Ramp up to 0.04 G ² /Hz at the rate of 3dB/octave. 80 to 350 Hz 0.04 G ² /Hz 350 to 2000 Hz Ramp down at the rate of 3 dB/octave.
Note: Environmental and/or tolerance parameters are not cumulative.	




Table 4-2. MS 1207FZY Technical Specifications @ 23°C (Continued)

Item	Description
ESD	± 20kV air discharge ± 8kV indirect discharge
Sealing	IP54
Operating Temperature	-4° to 122°F (-20° to 50°C)
Storage Temperature	-40° to 158°F (-40° to 70°C)
Humidity	5% to 95% non-condensing
Laser Class	CDRH Class II, IEC Class 2
Height	1.60 in. (4.06 cm)
Width	2.28 in. (5.79 cm)
Depth	2.94 in. (7.47 cm)
Weight	4.45 oz. (126 gm)
Note: Environmental and/or tolerance parameters are not cumulative.	



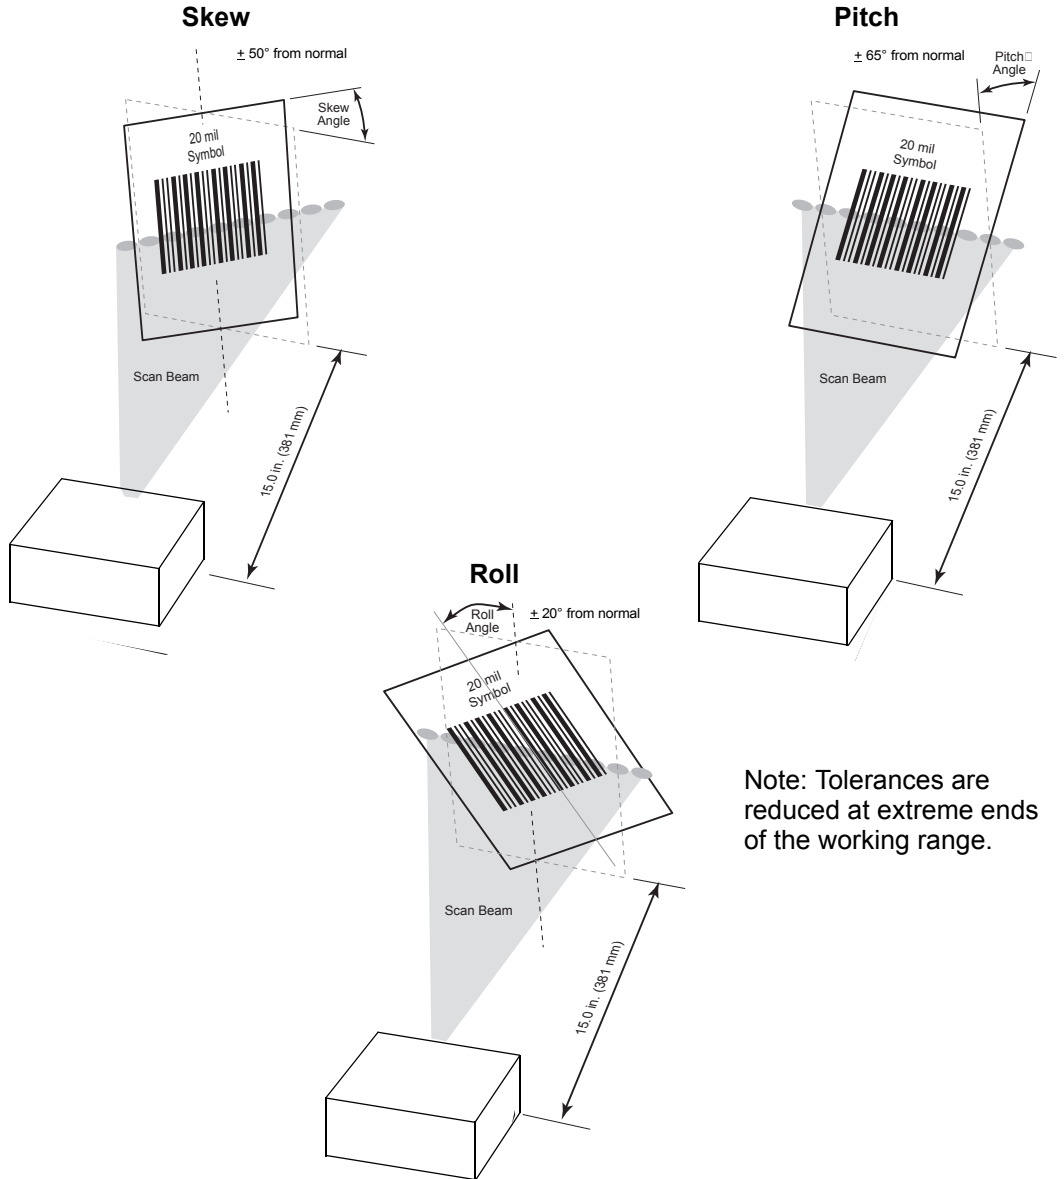


Figure 4-4. Skew, Pitch and Roll

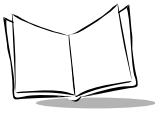

MS 1207FZY Decode Zone

The scanner has a selectable scan angle of either 30° or 42°. The 42° symbol decodes are shown in Figure 4-5. The figures shown are typical values. Table 4-3 on page 4-9 lists the typical and guaranteed distances for the 42° scan angle for selected bar code densities. The minimum element width (or “symbol density”) is the width in mils of the narrowest element (bar or space) in the symbol. The maximum usable length of a symbol at any given range is shown below. To calculate this distance, see *Calculating the Usable Scan Length Method* on page 2-11.

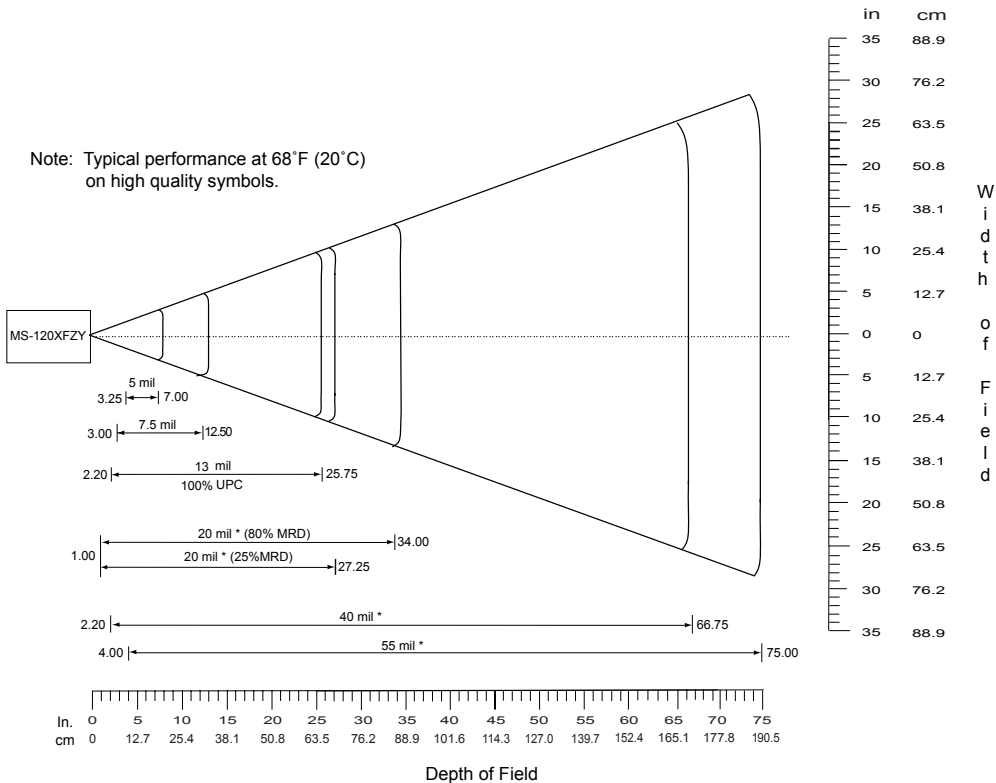


*Minimum distance determined by symbol length and scan angle

Figure 4-5. MS 1207FZY Typical Decode Zone (42° Scan Angle)

Table 4-3. MS 1207FZY Decode Distances (42° Scan Angle)


Symbol Density/ Symbol p/n / Bar Code Type/ W-N Ratio	Bar Code Content/ Contrast ¹	Typical Working Ranges ³		Guaranteed Working Ranges ³	
		Near	Far	Near	Far
5.0 mil 64-17453-01 Code 39; 2.5:1	ABCDEFGH 80% MRD	3.25 in. 8.26 cm	7.00 in. 17.78 cm	4.75 in. 12.07 cm	5.25 in. 13.34 cm
7.5 mil 64-17452-01 Code 39; 2.5:1	ABCDEF 80% MRD	3.00 in. 7.62 cm	12.50 in. 31.75 cm	4.75 in. 12.07 cm	9.00 in. 22.86 cm
13 mil 64-05303-01 100% UPC	012345678905 80% MRD	2.20 in. 5.59 cm	25.75 in. 65.41 cm	Note 2	19.00 in. 48.26 cm
20 mil 60-01429-01 Code 39; 2.2:1	123 80% MRD	1.00 in. 2.54 cm (Note 2)	34.00 in. 86.36 cm	Note 2	24.00 in. 60.96 cm
20 mil 60-02710-01 Code 39; 2.2:1	123 25% MRD	1.00 in. 2.54 cm (Note 2)	27.25 in. 69.22 cm	Note 2	22.00 in. 55.88 cm
40 mil 64-17457-01 Code 39; 2.2:1	AB 80% MRD	2.20 in. 5.59 cm (Note 2)	66.75 in. 169.55 cm	Note 2	49.00 in. 124.46 cm
55 mil 64-17458-01 Code 39; 2.2:1	CD 80% MRD	4.00 in. 10.16 cm (Note 2)	75.00 in. 190.50 cm	Note 2	55.00 in. 139.70 cm
Notes:					
1. Contrast measured as Mean Reflective Difference (MRD) at 650 nm.					
2. Near ranges on lower densities largely depend on the width of the bar code and the scan angle.					
3. Working range specifications: Photographic quality symbols, pitch = 10°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C.					



Usable Scan Length

The decode zone is a function of various symbol characteristics including density, print contrast, wide-to-narrow ratio, and edge accuracy. Consider the width of the scan line at any given distance when designing a system.

[Calculating the Usable Scan Length Method](#) on page 2-11 describes how to calculate the usable scan length. The scan angle is provided in [Table 4-2 on page 4-5](#).

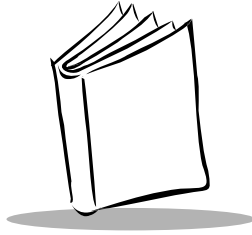


Chapter 5

MS 1207WA Specifications

Overview

This chapter provides the technical specifications for the MS 1207WA scanner.

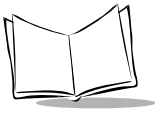

MS 1207WA Electrical Interface

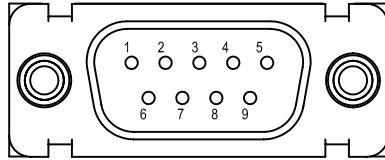


Figure 5-1. MiniScan Connector


Table 5-1 lists the pin functions of the MS 1207WA.

Table 5-1. MS 1207WA Electrical Interface


Pin No.	Pin Name	Type*	Function
1	Trigger	I	Signals scanner to begin scanning session.
2	TXD	O	Serial data transmit output. Drives the serial data receive input on the device communicating with the scanner.
3	RXD/D+	I/O	<i>RS-232 Mode:</i> Serial data receive input. Driven by the serial data transmit output on the device communicating with the scanner. <i>USB Mode:</i> D+ signal. During USB operation this signal is pulled up by a 1.5k Ohm resistor to begin USB enumeration. In this mode it is a differential bi-directional signal.
4	SYN_CLK	I/O	<i>Synapse Mode:</i> Synapse Clock line. Signal used as a clock by a Symbol Synapse host. Pin is shorted to RTS/SYN_DAT in USB cables to allow auto-detection of USB mode via signal loopback.
5	Ground		Power supply ground input and signal ground reference.
6	Power		5.0 VDC \pm 10%
7	CTS/D-	I/O	<i>RS-232 Mode:</i> Clear-to-send handshaking input line, used only in conjunction with the RTS line. Optionally used by another device to signal the scanner to begin transmitting data. <i>USB Mode:</i> D- signal. During USB operation this signal works in conjunction with the D+ signal as a differential bi-directional signal.

Table 5-1. MS 1207WA Electrical Interface (Continued)

Pin No.	Pin Name	Type*	Function
8	RTS/SYN_DAT	I/O	<i>RS-232 Mode:</i> Request-to-send handshaking output line, used only in conjunction with the CTS line. Optionally used by the scanner to signal another device that data is available to send. <i>Synapse Mode:</i> Synapse Data line. Used to transmit data to and from a Symbol Synapse host.
9	Beeper/ Download	I/O	During normal operation this signal functions as an external beeper drive line. This signal can sink 50mA of current to drive an external beeper, and is normally pulled up. This signal is also used to begin Flash Download operation when grounded externally during power up.
*I = Input O = Output			



MS 1207WA Mechanical Drawings

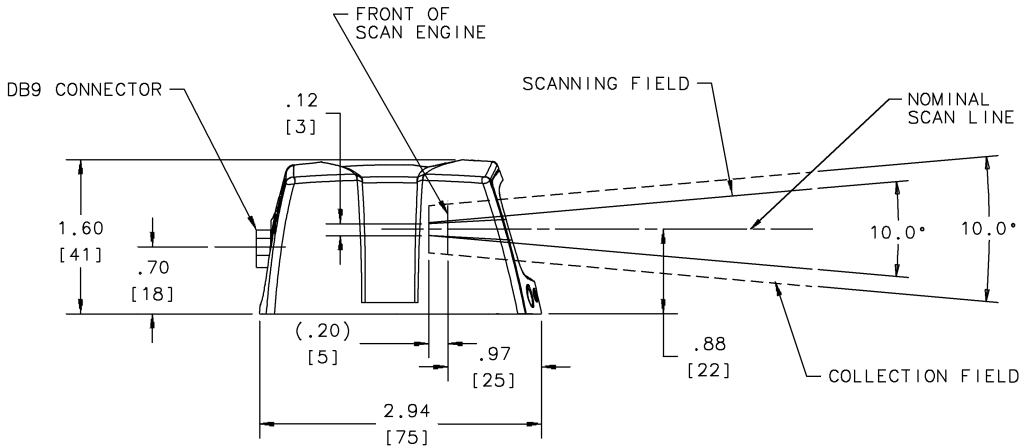

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.


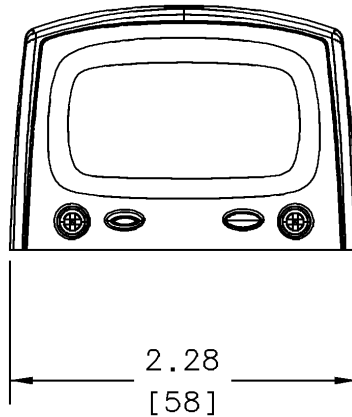


Figure 5-2. MS 1207WA Mechanical Drawing

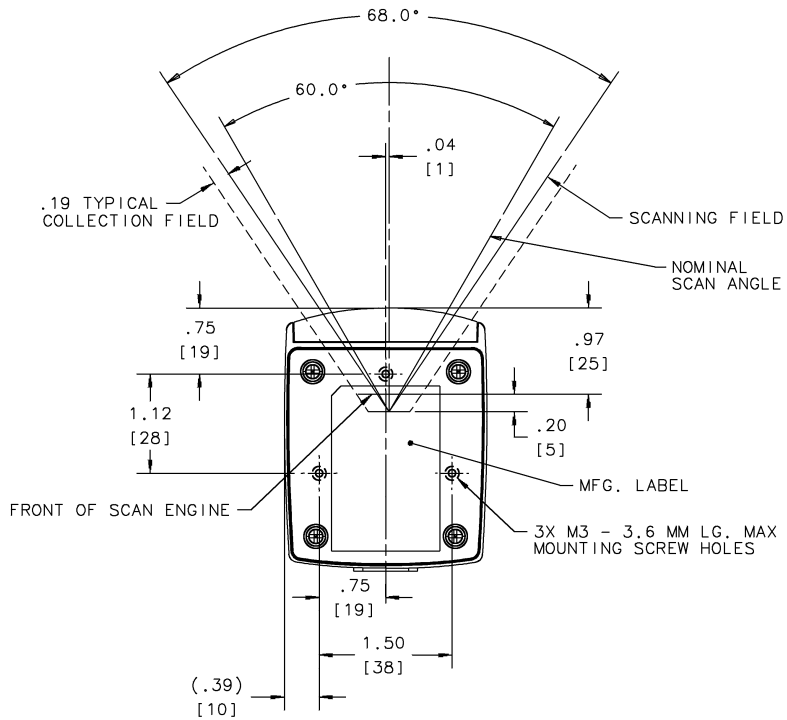

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.


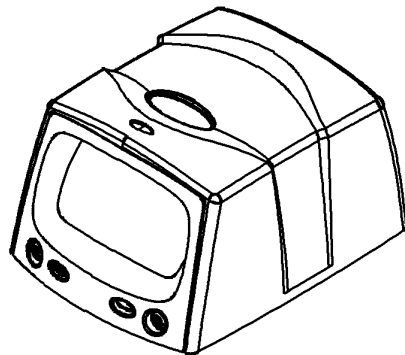


Figure 5-3. MS 1207WA Mechanical Drawing



MS 1207WA Technical Specifications



Table 5-2 provides the MS 1207WA technical specifications.

Table 5-2. MS 1207WA Technical Specifications @ 23°C

Item	Description
Power Requirements	
Input Voltage	5.0 VDC \pm 10%
Scanning Current	110 mA \pm 30mA
Standby Current	40 mA \pm 5 mA typical
V_{CC} Noise Level	200 mV peak-to-peak max.
Laser Power	0.48 mW \pm 0.05 mW, λ = 670 nm nominal
Scan Rate	36 (\pm 5) scans/sec (bidirectional)
Print Contrast	Minimum 20% absolute dark/light reflectance measured at 670 nm.
Scan Angle	60° \pm 2°
Scan Pattern	Single scan line
Skew Tolerance	\pm 65° from normal (see Figure 5-4 on page 5-8)
Pitch Angle	\pm 55° from normal (see Figure 5-4 on page 5-8)
Roll	\pm 20° from vertical (see Figure 5-4 on page 5-8)
Decode Depth of Field	See Figure 5-5 on page 5-9
Ambient Light Immunity	
Sunlight	8,000 ft. candles (86,112 lux)
Artificial Light	450 ft. candles (4,844 lux)
Drop	Multiple 30" drops
Vibration	Withstands a sinusoidal vibration of 1 G along each of the 3 mutually perpendicular axes for a period of 1 hr per axis, over a frequency range of 5 Hz to 2000Hz.
ESD	\pm 20kV air discharge \pm 8kV indirect discharge
Sealing	IP54
Note: Environmental and/or tolerance parameters are not cumulative.	

Table 5-2. MS 1207WA Technical Specifications @ 23°C (Continued)

Item	Description
Operating Temperature	32° to 104°F (0° to 40°C)
Storage Temperature	-40° to 140°F (-40° to 60°C)
Humidity	5% to 95% non-condensing
Laser Class	CDRH Class II, IEC Class 2
Height	1.60 in. (4.06 cm)
Width	2.28 in. (5.79 cm)
Depth	2.94 in. (7.47 cm)
Weight	4.45 oz. (126 gm)
Note: Environmental and/or tolerance parameters are not cumulative.	

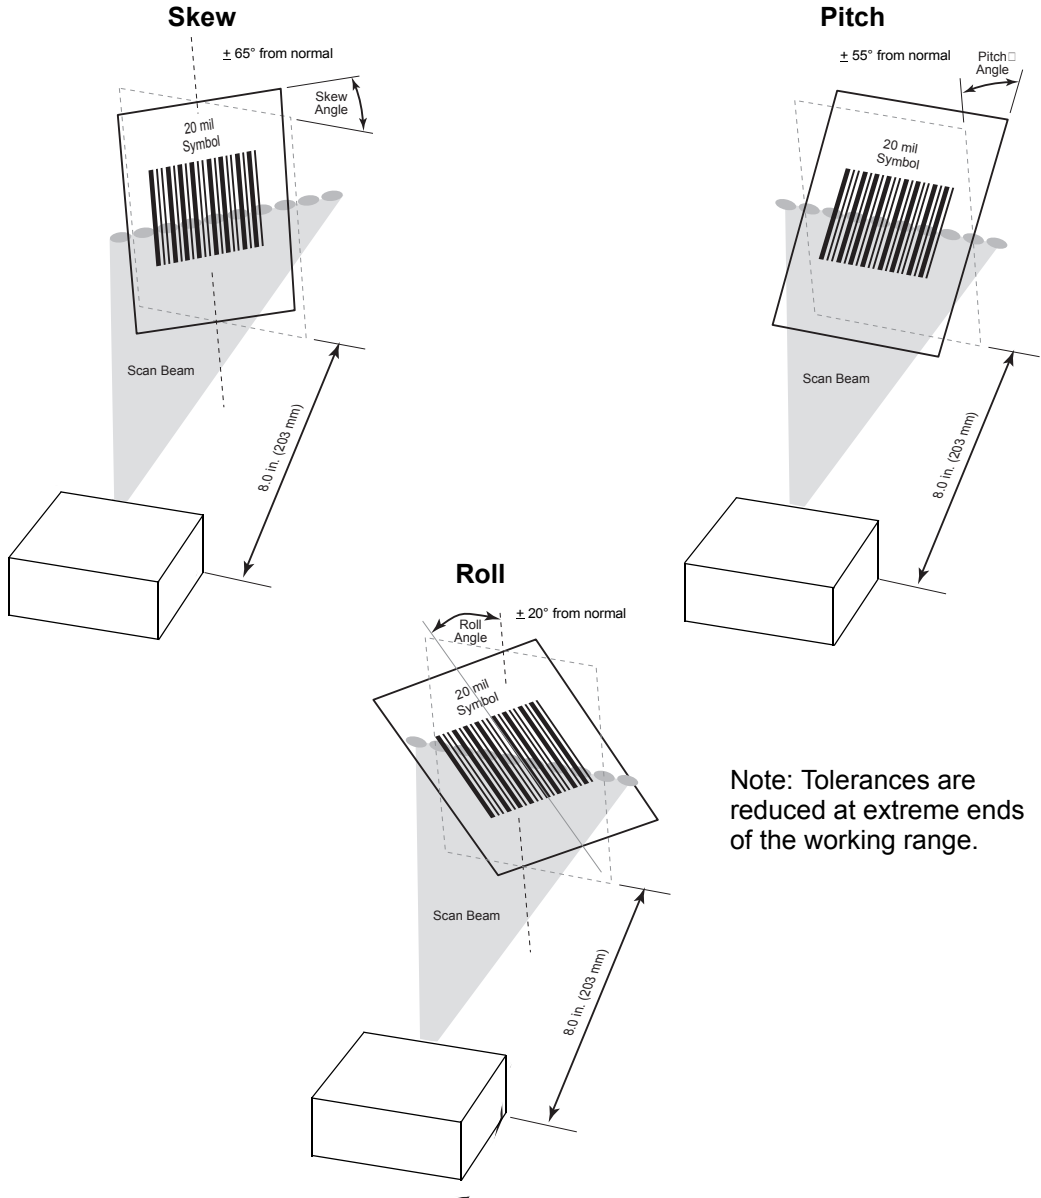


Note: Tolerances are reduced at extreme ends of the working range.

Figure 5-4. Skew, Pitch and Roll

MS 1207WA Decode Zone

The MS 1207WA Wide Angle decodes symbols as shown in [Figure 5-5](#). Typical values are shown. [Table 5-3 on page 5-10](#) lists the typical and guaranteed distances for selected bar code densities. The minimum element width (or “symbol density”) is the width in mils of the narrowest element (bar or space) in the symbol. The maximum usable length of a symbol at any given range is shown below. To calculate this distance, see [Calculating the Usable Scan Length Method](#) on page 2-11.

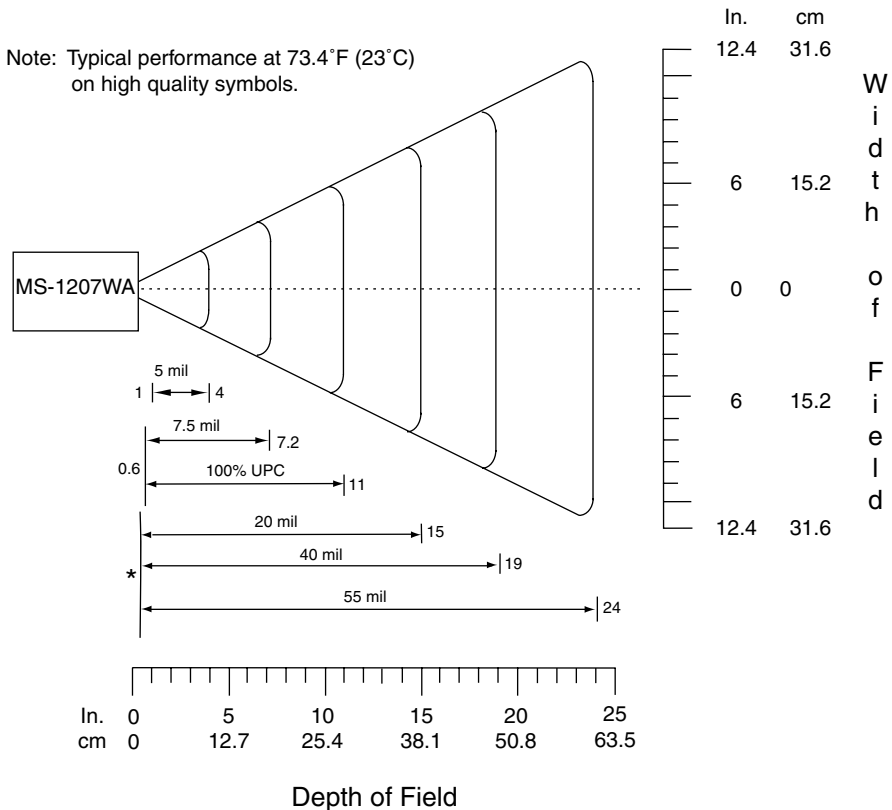

*Minimum distance determined by symbol length and scan angle

Figure 5-5. MS 1207WA Decode Zone (Typical)





Table 5-3. MS 1207WA Decode Distances

Symbol Density/ Symbol p/n / Bar Code Type/ W-N Ratio	Bar Code Content/ Contrast ¹	Typical Working Ranges		Guaranteed Working Ranges	
		Near	Far	Near	Far
5 mil 64-17453-01 Code 39; 2.5:1	ABCDEFGH 80% MRD	1.0 in. 2.54 cm	4.0 in. 10.16 cm	1.2 in. 3.05 cm	3.0 in. 7.62 cm
7.5 mil 64-17452-01 Code 39; 2.5:1	ABCDEF 80% MRD	0.6 in. 1.52 cm	7.2 in. 18.29 cm	0.9 in. 2.29 cm	6.0 in. 15.24 cm
13 mil 64-05303-01 100% UPC	1234567890 80% MRD	0.6 in. 1.52 cm	11.0 in. 27.94 cm	0.9 in. 2.29 cm	9.0 in. 22.86 cm
20 mil 60-01429-01 Code 39; 2.2:1	123 80% MRD	Note 2	15.0 in. 38.10 cm	Note 2	13.0 in. 33.02 cm
40 mil 64-17457-01 Code 39; 2.2:1	AB 80% MRD	Note 2	19.0 in. 48.26 cm	Note 2	17.0 in. 43.18 cm
55 mil 64-17458-01 Code 39; 2.2:1	CD 80% MRD	Note 2	24.0 in. 60.96 cm	Note 2	22.0 in. 55.88 cm
1. Contrast measured as Mean Reflective Difference (MRD) at 670 nm. 2. Near ranges on lower densities (not specified) largely depend on the width of the bar code and the scan angle. 3. Working range specifications at ambient temperature 23 °C.					

Usable Scan Length

The decode zone is a function of various symbol characteristics including density, print contrast, wide-to-narrow ratio, and edge acuity. Consider width of decode zone at any given distance when designing a system.

[Calculating the Usable Scan Length Method](#) on page 2-11 describes how to calculate the usable scan length. The scan angle is provided in [Table 5-2 on page 5-6](#).

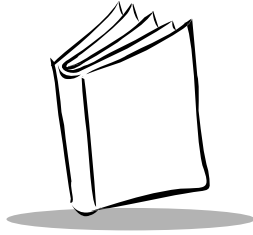


Chapter 6

MS 2207 Specifications

Overview

This chapter provides the technical specifications for the MS 2207 scanner.



MS 2207 Electrical Interface

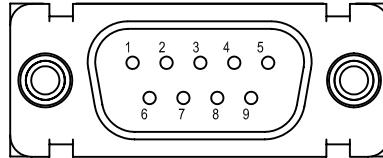


Figure 6-1. MiniScan Connector

Table 6-1 lists the pin functions of the MiniScan MS 2207 interface.


Table 6-1. MS 2207 Electrical Interface

Pin No.	Pin Name	Type*	Function
1	Trigger	I	Signals scanner to begin scanning session.
2	TXD	O	Serial data transmit output. Drives the serial data receive input on the device communicating with the scanner.
3	RXD/D+	I/O	<i>RS232 Mode:</i> Serial data receive input. Driven by the serial data transmit output on the device communicating with the scanner. <i>USB Mode:</i> D+ signal. During USB operation this signal is pulled up by a 1.5k Ohm resistor to begin USB enumeration. In this mode it is a differential bi-directional signal.
4	SYN_CLK	I/O	<i>Synapse Mode:</i> Synapse Clock line. Signal used as a clock by a Symbol Synapse host. Pin is shorted to RTS/SYN_DAT in USB cables to allow autodetection of USB mode via signal loopback.
5	Ground		Power supply ground input and signal ground reference.
6	Power		5.0 VDC \pm 10%
7	CTS/D-	I/O	<i>RS232 Mode:</i> Clear-to-send handshaking input line, used only in conjunction with the RTS line. Optionally used by another device to signal the scanner to begin transmitting data. <i>USB Mode:</i> D- signal. During USB operation this signal works in conjunction with the D+ signal as a differential bi-directional signal.


*I = Input O = Output

Table 6-1. MS 2207 Electrical Interface (Continued)

Pin No.	Pin Name	Type*	Function
8	RTS/SYN_DAT	I/O	<i>RS232 Mode:</i> Request-to-send handshaking output line, used only in conjunction with the CTS line. Optionally used by the scanner to signal another device that data is available to send. <i>USB Mode:</i> Synapse Data line. Signal is used to transmit data to and from a Symbol Synapse host.
9	Beeper/ Download	I/O	During normal operation this signal functions as an external beeper drive line. This signal can sink 50mA of current to drive an external beeper, and is normally pulled up. This signal is also used to begin Flash Download operation when grounded externally during power up.
*I = Input O = Output			



MS 2207 Mechanical Drawings

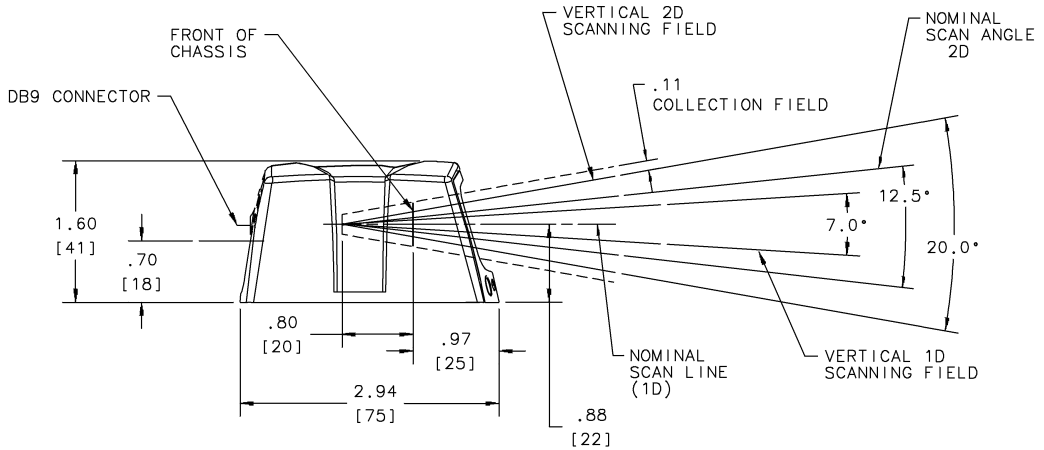

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.


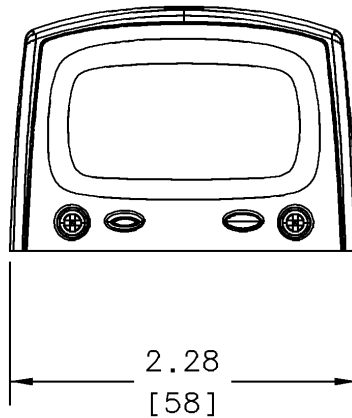


Figure 6-2. MS 2207 Mechanical Drawing

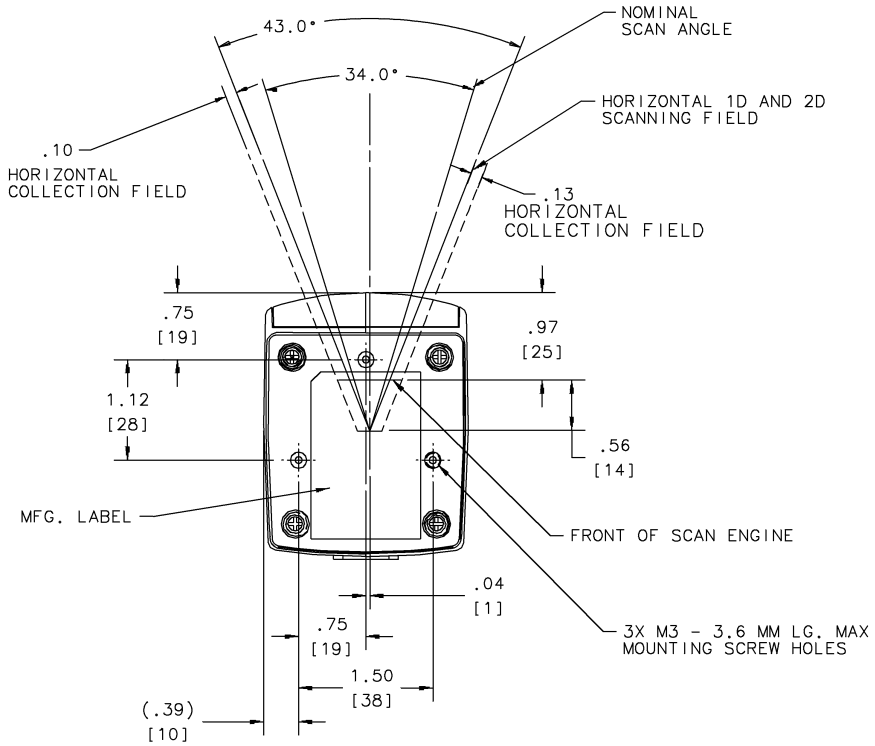

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.


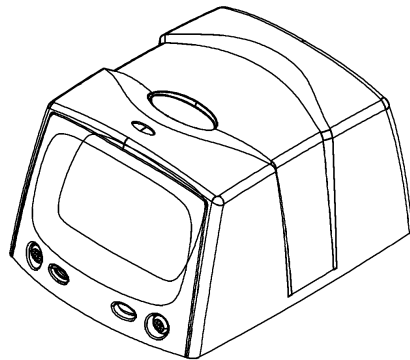


Figure 6-3. MS 2207 Mechanical Drawing



MS 2207 Technical Specifications



Table 6-2 provides the MS 2207 technical specifications

Table 6-2. MS 2207 Technical Specifications @ 23°C

Item	Description
Power Requirements	
Input Voltage	5.0 VDC \pm 10%
Scanning Current	250 \pm 30 mA typical
Standby Current	45 \pm 5 mA typical
V_{CC} Noise Level	200 mV peak-to-peak max.
Laser Power	0.95 mW \pm 0.1 mW, λ = 650 nm nominal
Scan Rate	640 scans/sec.
Scan Frequency: Horizontal	320 Hz \pm 5 Hz
Scan Frequency: Vertical	282 Hz \pm 5 Hz
Frame Rate	24 frames/sec. 12 Hz \pm 1 Hz (vertical)
Print Contrast	Minimum 35% absolute dark/light reflectance differential
Scan Angle	Horizontal: 34° \pm 1.5° Vertical: 34° \pm 1.5°
Scan Pattern	Smart raster, high density single scan line
Start Time	0.065 sec. to 75% of steady state horizontal amplitude
Skew Tolerance	\pm 15° from plane parallel to symbol (see Figure 6-4 on page 6-8)
Pitch Angle	\pm 30° from normal (see Figure 6-4 on page 6-8)
Roll	\pm 4° from (for scanning benchmark label, assuming 3:1 codeword aspect ratio) (see Figure 6-4 on page 6-8)
Decode Depth of Field	See Figure 6-4 on page 6-8
Beam Deviation (offset from the nominal)	Horizontal: \pm 3.0° Vertical: \pm 3.0° Horizontal tilt: \pm 2°

Table 6-2. MS 2207 Technical Specifications @ 23°C (Continued)

Item	Description
Ambient Light Immunity Sunlight Artificial Light	8,000 ft. candles (86,112 lux) 450 ft. candles (4,844 lux)
Drop	Multiple 30" drops
Vibration	Unpowered scanner withstands a random vibration along each of the X, Y and Z axes for a period of one hour per axis, defined as follows: 20 to 80 Hz Ramp up to 0.04 G ² /Hz at the rate of 3dB/octave. 80 to 350 Hz 0.04 G ² /Hz 350 to 2000 Hz Ramp down at the rate of 3 dB/octave.
ESD	± 20kV air discharge ± 8kV indirect discharge
Sealing	IP54
Operating Temperature	-4° to 122°F (-20° to 50°C)
Storage Temperature	-40° to 158°F (-40° to 70°C)
Humidity	5% to 95% non-condensing
Laser Class	CDRH Class II, IEC Class 2
Height	1.60 in. (4.06 cm)
Width	2.28 in. (5.79 cm)
Depth	2.94 in. (7.47 cm)
Weight	4.73 oz. (134 gm)

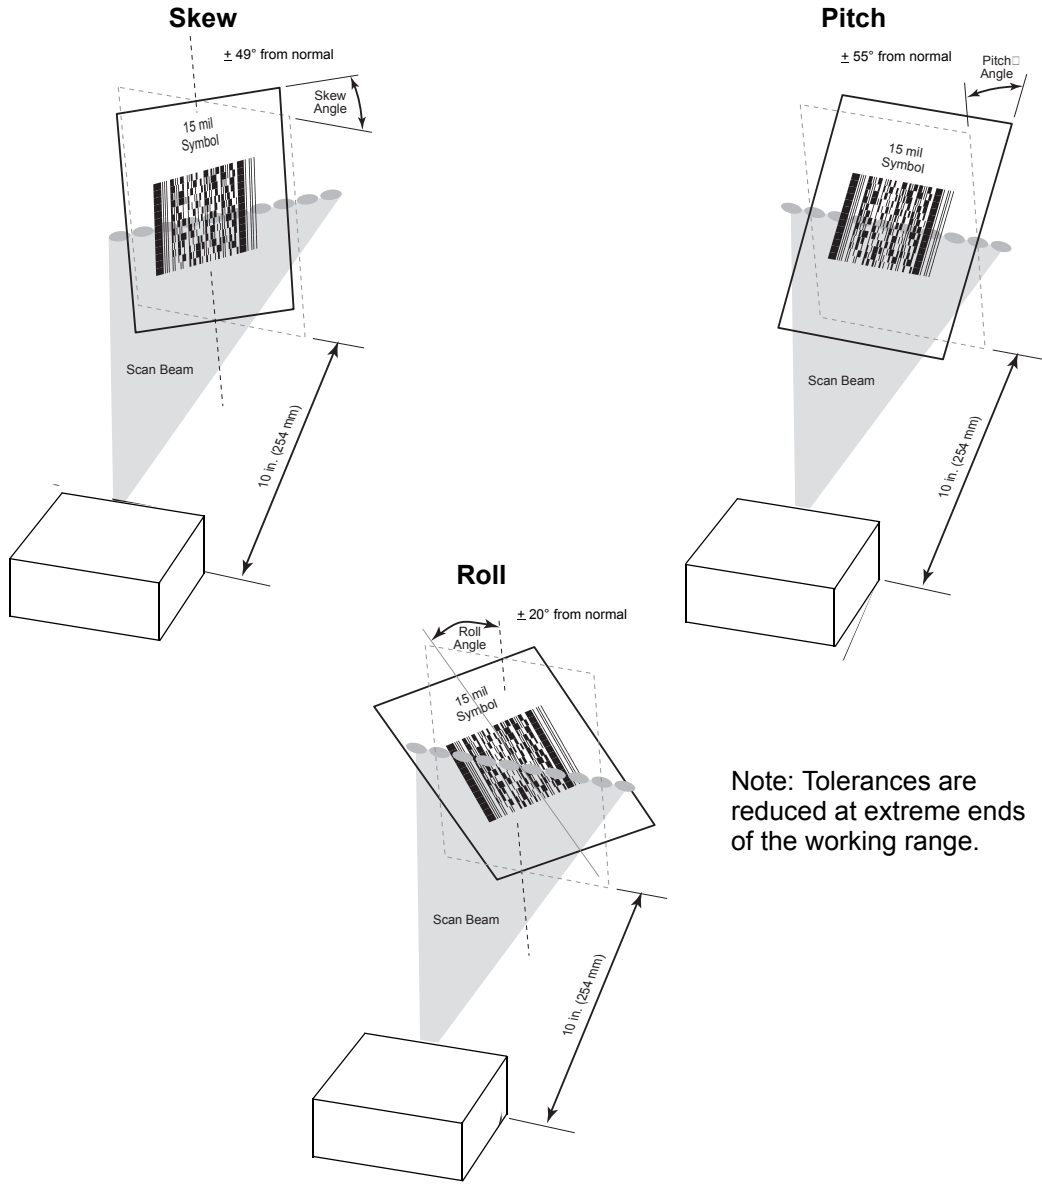

Note: Tolerances are reduced at extreme ends of the working range.


Figure 6-4. Skew, Pitch and Roll

MS 2207 Decode Zones

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acurity. Typical values are shown. [Table 6-3 on page 6-10](#) and [Table 6-4 on page 6-12](#) list the typical and guaranteed distances for selected bar code densities. The minimum element width (or “symbol density”) is the width in mils of the narrowest element (bar or space) in the symbol. The maximum usable length of a symbol at any given range is shown below. To calculate this distance, see [Calculating the Usable Scan Length Method](#) on page 2-11.


MS 2207 1D Decode Zone

Note: Typical performance at 68°F (20°C)
on high quality symbols in normal room light.
Vcc = 5V

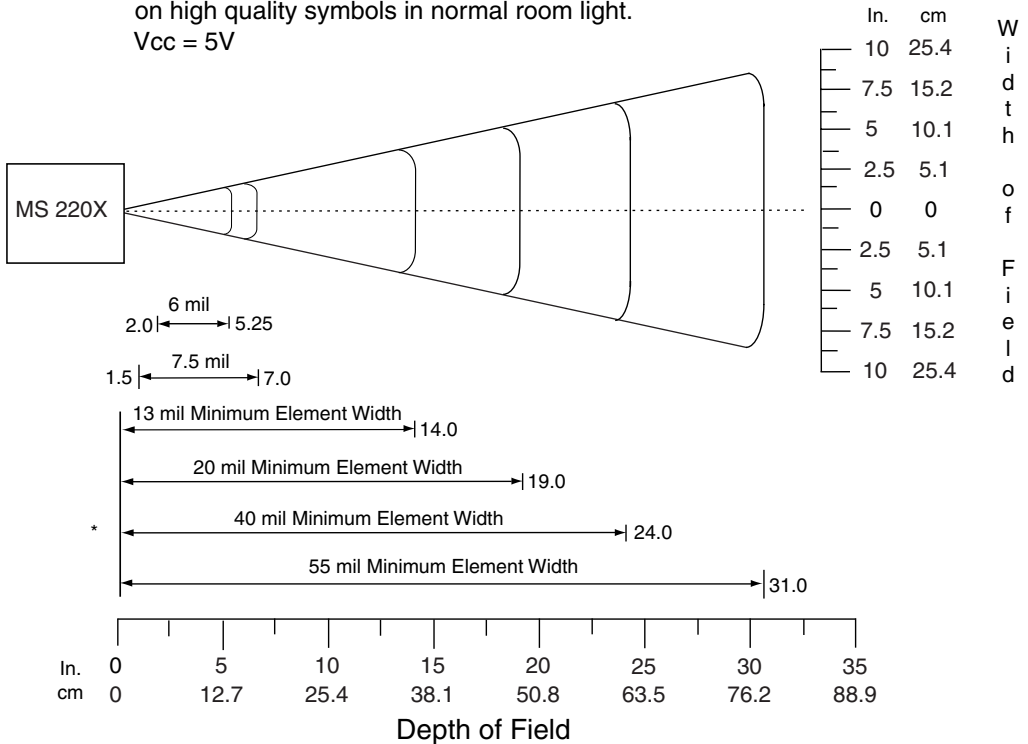

* Minimum distance determined by symbol length and scan angle.

Figure 6-5. MS 2207 1D Decode Distances



MS 2207 1D Decode Distances

Table 6-3. MS 2207 1D Decode Distances

Symbol Density/ Symbol p/n / Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges ³		Guaranteed Working Ranges ³	
		Near	Far	Near	Far
6.0 mil 60-01755-01 Code 39	123 80% MRD	2.0 in. 5.08 cm	5.25 in. 13.34 cm	2.75 in. 7.00 cm	4.0 in. 10.16 cm
7.5 mil 64-17452-01 Code 39	ABCDEF 80% MRD	1.5 in. 3.81 cm	7.0 in. 17.78 cm	2.25 in. 5.72 cm	5.0 in. 12.7 cm
13 mil 64-05303-01 100% UPC	012345678905 80% MRD	Note 2	14.0 in. 35.56 cm	N/A	10.5 in. 26.67 cm
20 mil 64-17456-01 Code 39	123 80% MRD	Note 2	19.0 in. 48.26 cm	N/A	14.0 in. 35.56 cm
40 mil 64-17457-01 Code 39	AB 80% MRD	Note 2	24.0 in. 60.96 cm	N/A	18.0 in. 45.72 cm
55 mil 60-01601-01 Code 39	A 80% MRD	Note 2	31.0 in. 78.74 cm	Note 2	25.0 in. 63.50 cm

Notes:

1. Contrast measured as Mean Reflective Difference (MRD) at 650 nm.
2. Near ranges on lower densities largely depend on the width of the bar code and the scan angle.
3. Working range specifications: Photographic quality symbols, pitch = 10°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C.

MS 2207 2D Decode Zone

Note: Typical performance at 68°F (20°C) on high quality symbols in normal room light. Y-module dimension = 3X.

Vcc = 5V


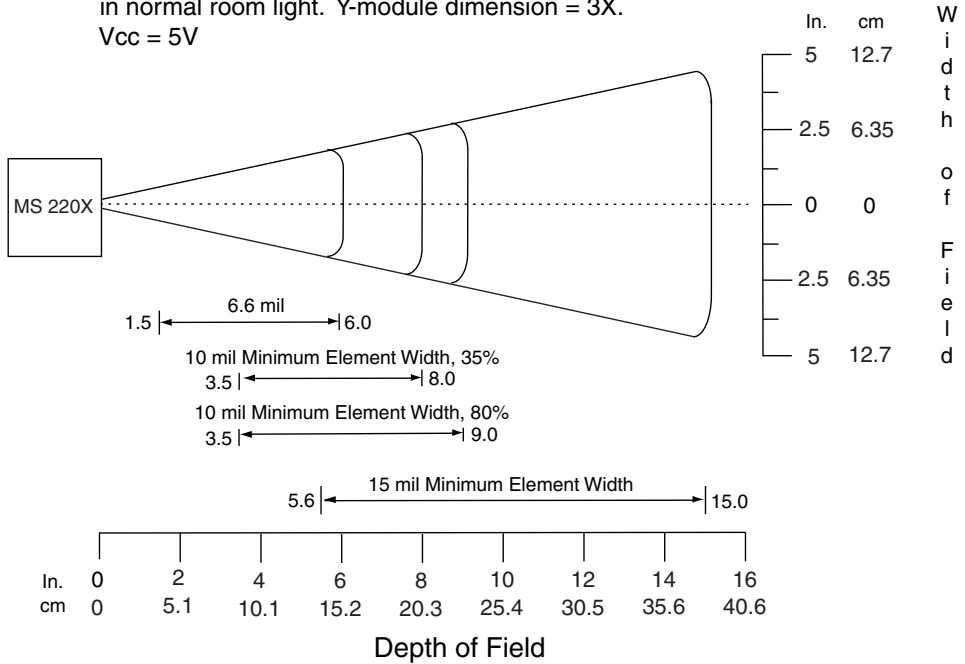


Figure 6-6. MS 2207 2D Slab/Raster Decode Distances

Note: Not optimized for omnidirectional mode.



MS 2207 2D Decode Distances

Table 6-4. MS 2207 2D Slab/Raster Decode Distances

Symbol Density/ Symbol p/n / Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges ³		Guaranteed Working Ranges ³	
		Near	Far	Near	Far
6.6 mil 64-14035-01 PDF417	ABCDEF 80% MRD	1.5 in. 3.81 cm	6.00 in. 15.24 cm	Note 2	4.75 in. 12.07 cm
10 mil 64-14937-01 PDF417	012345678905 35% MRD	3.5 in. 8.89 cm	8.0 in. 20.32 cm	Note 2	5.0 in. 12.7 cm
10 mil 64-14037-01 PDF417	80% MRD	3.5 in. 8.89 cm	9.0 in. 22.86 cm	Note 2	7.5 in. 19.05 cm
15 mil 64-14038-01 PDF417	80% MRD	5.6 in. 14.22 cm	15.0 in. 38.10 cm	Note 2	13.0 in. 33.02 cm

Notes:


1. Contrast measured as Mean Reflective Difference (MRD) at 650 nm.
2. Near ranges on lower densities largely depend on the width of the bar code and the scan angle.
3. Working range specifications: Photographic quality symbols, pitch = 10°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C.

Note: Not optimized for omnidirectional mode.

Usable Scan Length

The decode zone is a function of various symbol characteristics including density, print contrast, wide-to-narrow ratio, and edge acuity. Consider width of decode zone at any given distance when designing a system.

[Calculating the Usable Scan Length Method](#) on page 2-11 describes how to calculate the usable scan length.

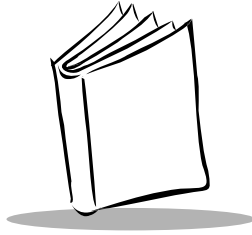


Chapter 7

MS 2207VHD Specifications

Overview

This chapter provides the technical specifications for the MS 2207VHD scanner.

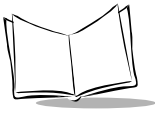

MS 2207VHD Electrical Interface

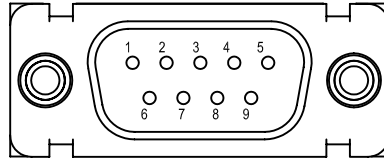


Figure 7-1. MiniScan Connector


Table 7-1 lists the pin functions of the MS 2207VHD.

Table 7-1. MS 2207VHD Electrical Interface

Pin No.	Pin Name	Type*	Function
1	Trigger	I	Signals scanner to begin scanning session.
2	TXD	O	Serial data transmit output. Drives the serial data receive input on the device communicating with the scanner.
3	RXD	I	Serial data receive input. Driven by the serial data transmit output on the device communicating with the scanner.
4	Not used		
5	Ground		Power supply ground input and signal ground reference.
6	Power	I	5.0 VDC \pm 10%
7	CTS	I	Clear-to-send handshaking input line, used only in conjunction with the RTS line. Optionally used by another device to signal the scanner to begin transmitting data.
8	RTS	O	Request-to-send handshaking output line, used only in conjunction with the CTS line. Optionally used by the scanner to signal another device that data is available to send.
9	Beeper/ Download	I/O	During normal operation this signal functions as an external beeper drive line. This signal can sink 50mA of current to drive an external beeper, and is normally pulled up. This signal is also used to begin Flash Download operation when grounded externally during power up.

*I = Input O = Output

MS 2207VHD Mechanical Drawings

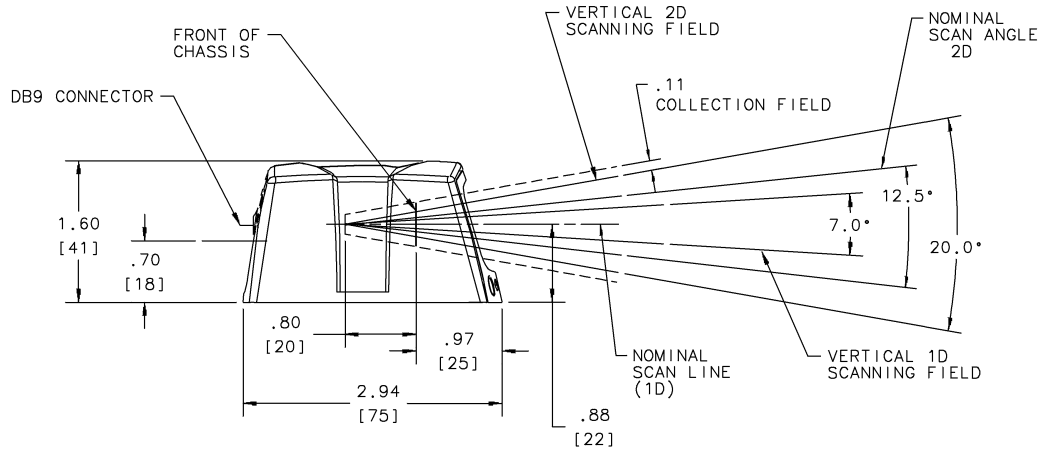

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.



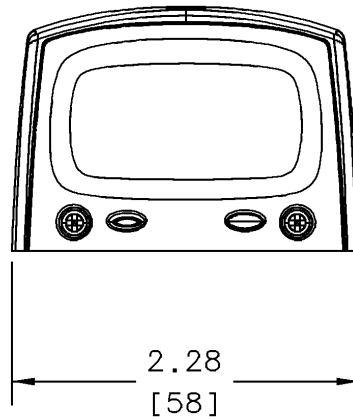


Figure 7-2. MS 2207VHD Mechanical Drawing

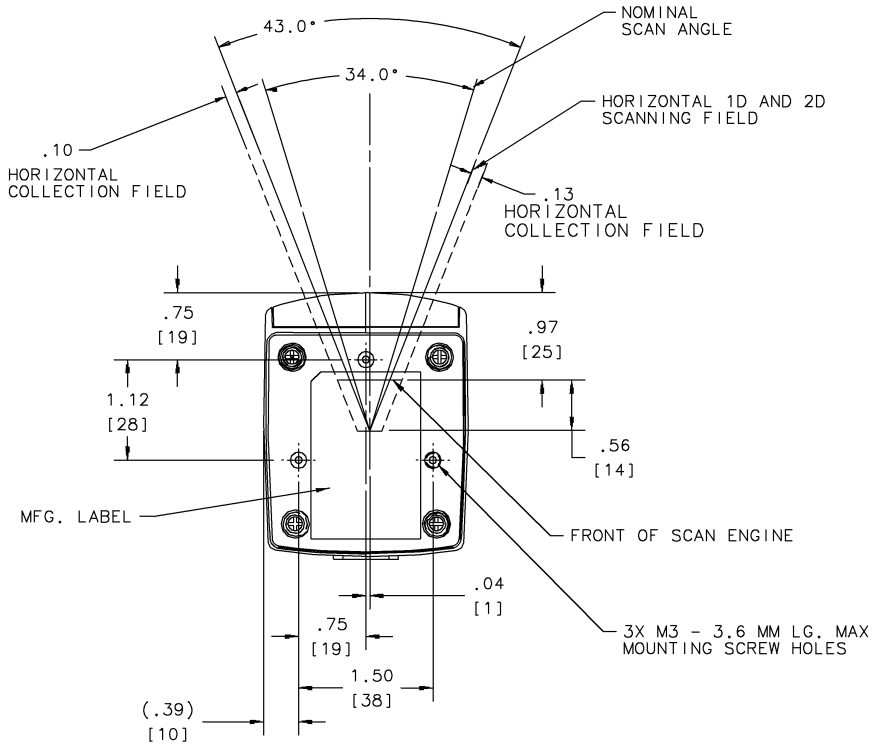

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.

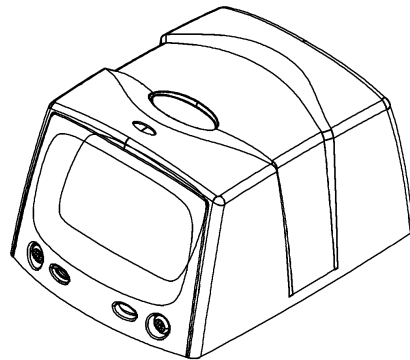


Figure 7-3. MS 2207VHD Mechanical Drawing

MS 2207VHD Technical Specifications

Table 7-2 provides the MS 2207VHD technical specifications.

Table 7-2. MS 2207VHD Technical Specifications @ 23°C

Item	Description
Power Requirements	
Input Voltage	5.0 VDC \pm 10%
Scanning Current	250 \pm 30 mA typical
Standby Current	25 \pm 5 mA typical
V_{CC} Noise Level	200 mV peak-to-peak max.
Laser Power	0.7 mW \pm 0.1 mW, λ = 650 nm nominal
Scan Rate	640 scans/sec.
Scan Frequency: Horizontal	320 Hz \pm 5 Hz
Scan Frequency: Vertical	282 Hz \pm 5 Hz
Frame Rate	24 frames/sec. 12 Hz \pm 1 Hz (vertical)
Print Contrast	Minimum 35% absolute dark/light reflectance differential
Scan Angle	Horizontal: 34° \pm 3° Vertical: 12.5° \pm 3°
Scan Pattern	Smart raster, high density single scan line
Start Time	0.065 sec. to 75% of steady state horizontal amplitude
Skew Tolerance	\pm 15° from plane parallel to symbol (see Figure 7-4 on page 7-7)
Pitch Angle	\pm 30° from normal (see Figure 7-4 on page 7-7)
Roll	\pm 4° (for scanning benchmark label, assuming 3:1 codeword aspect ratio) (see Figure 7-4 on page 7-7)
Decode Depth of Field	See Figure 7-5 on page 7-8 and Figure 7-6 on page 7-10
Beam Deviation (offset from the nominal)	Horizontal: \pm 3.0° Vertical: \pm 3.0° Horizontal tilt: \pm 2°
Additional Post Shock Beam Deviation (2000G Shock)	Horizontal: \pm 3.0° max Vertical: \pm 6.0° max






Table 7-2. MS 2207VHD Technical Specifications @ 23°C (Continued)

Item	Description
Ambient Light Immunity Sunlight Artificial Light	8,000 ft. candles (86,112 lux) 450 ft. candles (4,844 lux)
Drop	Multiple 30" drops
Vibration	Unpowered scanner withstands a random vibration along each of the X, Y and Z axes for a period of one hour per axis, defined as follows: 20 to 80 Hz Ramp up to 0.04 G ² /Hz at the rate of 3dB/octave. 80 to 350 Hz 0.04 G ² /Hz 350 to 2000 Hz Ramp down at the rate of 3 dB/octave.
ESD	± 20kV air discharge ± 8kV indirect discharge
Sealing	IP54
Operating Temperature	-4° to 122°F (-20° to 50°C)
Storage Temperature	-40° to 158°F (-40° to 70°C)
Humidity	5% to 95% non-condensing
Laser Class	CDRH Class II, IEC Class 2
Height	1.60 in. (4.06 cm)
Width	2.28 in. (5.79 cm)
Depth	2.94 in. (7.47 cm)
Weight	4.73 oz. (134 gm)

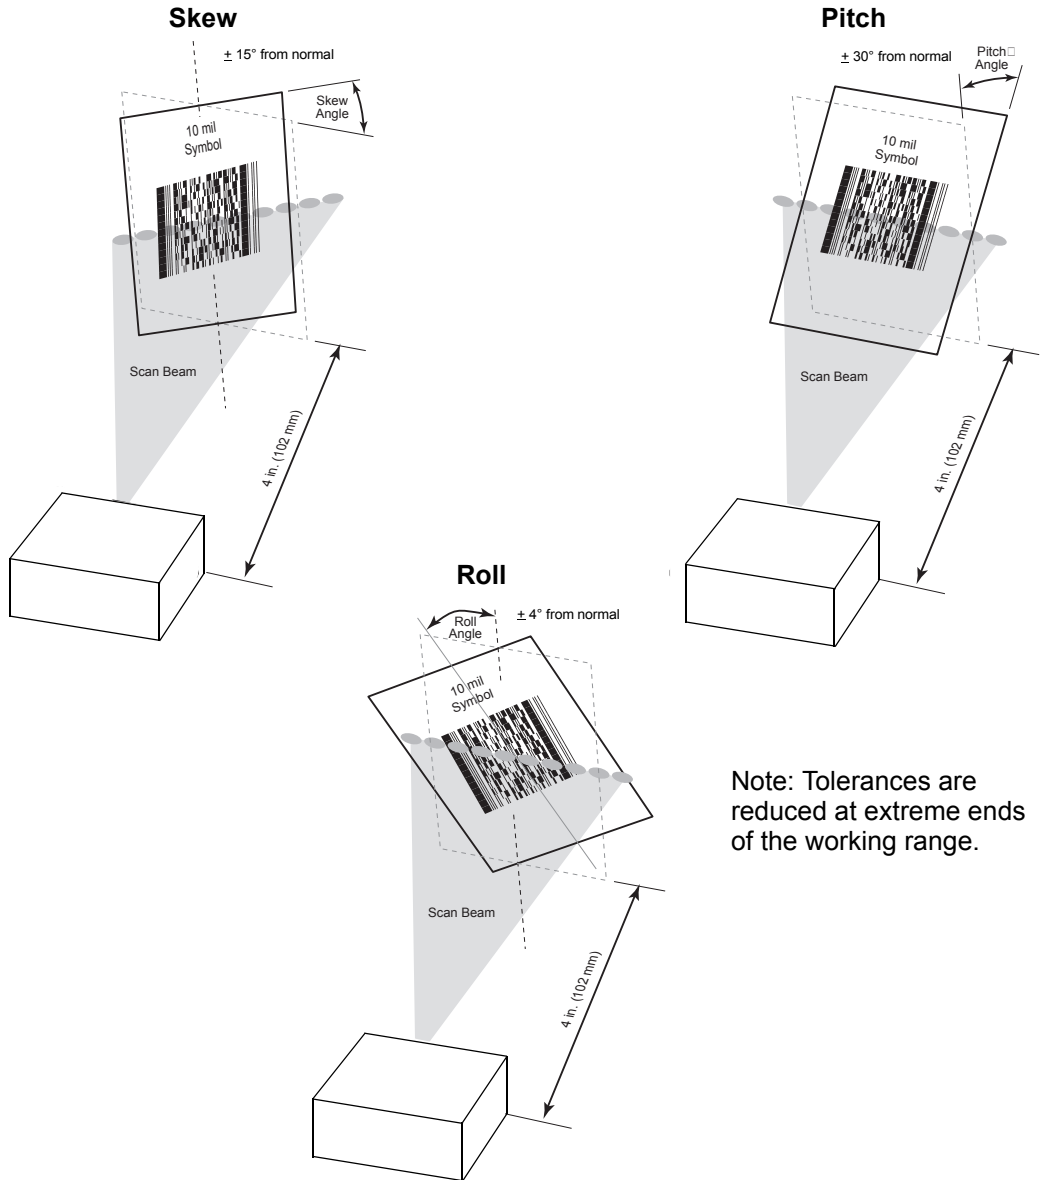

Note: Tolerances are reduced at extreme ends of the working range.

Figure 7-4. Skew, Pitch and Roll

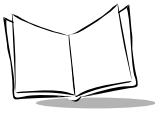


MS 2207VHD Decode Zones

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acurity. Typical values are shown. [Table 7-3 on page 7-9](#) and [Table 7-4 on page 7-11](#) list the typical and guaranteed distances for selected bar code densities. The minimum element width (or “symbol density”) is the width in mils of the narrowest element (bar or space) in the symbol. The maximum usable length of a symbol at any given range is shown below. To calculate this distance, see [Calculating the Usable Scan Length Method](#) on page 2-11.

MS 2207VHD 1D Decode Zone

Note: Typical performance at 68°F (20°C)
on high quality symbols in normal room light.
Vcc = 5V

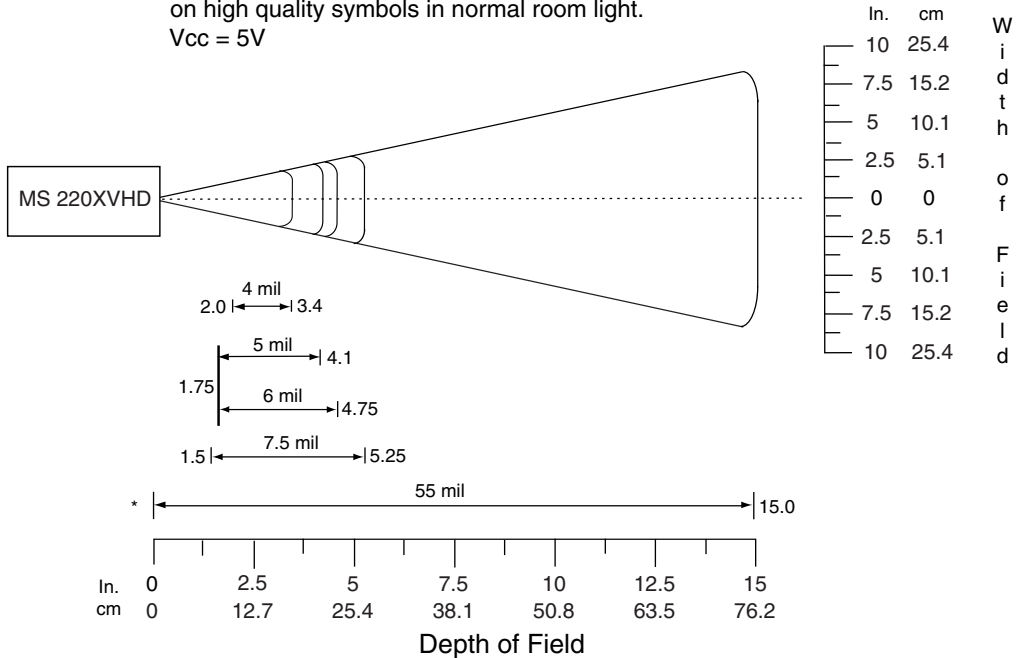


* Minimum distance determined by symbol length and scan angle.

Figure 7-5. MS 2207VHD 1D Slab/Raster Decode Distances

MS 2207VHD 1D Decode Distances**Table 7-3. MS 2207VHD 1D Decode Distances**

Symbol Density/ Symbol p/n / Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges ³		Guaranteed Working Ranges ³	
		Near	Far	Near	Far
4 mil 64-15660-01 Code 39	STI4026 80% MRD	2.0 in. 5.08 cm	3.4 in. 8.64 cm	2.75 in. 7.00 cm	2.8 in. 7.11 cm
5 mil 64-18779-01 Code 39	STI5025 80% MRD	1.75 in. 4.45 cm	4.1 in. 10.41 cm	2.25 in. 5.72 cm	3.5 in. 8.89 cm
6 mil 64-01755-01 Code 39	123 80% MRD	1.75 in. 4.45 cm	4.75 in. 12.07 cm	2.25 in. 5.72 cm	4.0 in. 10.16 cm
7.5 mil 63-04191-01 Code 39	STI30F4 80% MRD	1.50 in. 3.81 cm	5.25 in. 13.34 cm	2.00 in. 5.08 cm	4.75 in. 12.07 cm
55 mil 60-01601-01 Code 39	A 80% MRD	Note 2	15.0 in. 38.10 cm	Note 2	12.5 in. 31.75 cm
Notes:					
1. Contrast measured as Mean Reflective Difference (MRD) at 650 nm.					
2. Near ranges on lower densities largely depend on the width of the bar code and the scan angle.					
3. Working range specifications: Photographic quality symbols, pitch = 10°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C.					

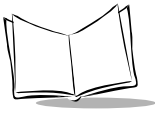

MS 2207VHD 2D Decode Zone

Note: Typical performance at 68°F (20°C) on high quality symbols in normal room light. Y-module dimension = 3X.
Vcc = 5V

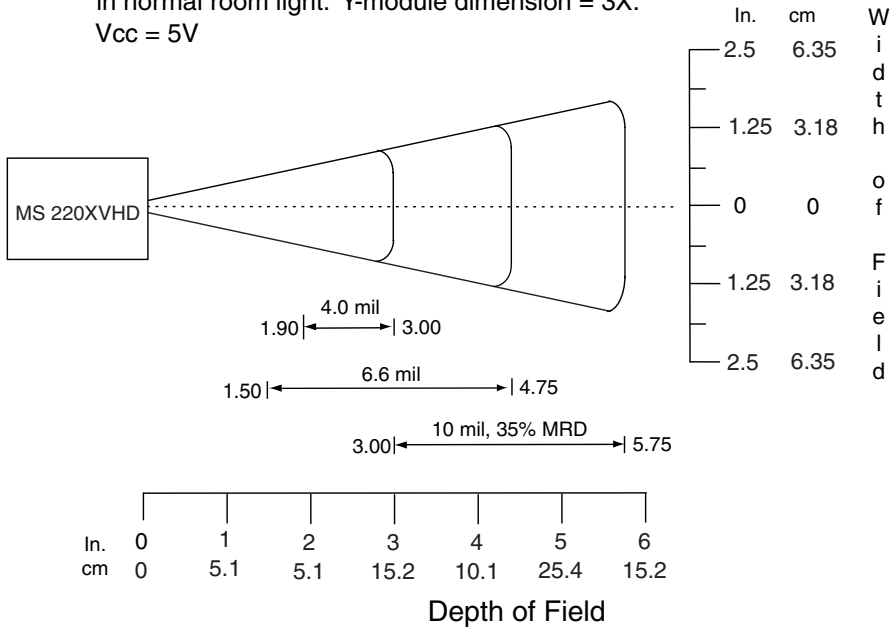


Figure 7-6. MS 2207VHD 2D Slab/Raster Decode Distances

Note: Not optimized for omnidirectional mode.

MS 2207VHD 2D Decode Distances

Table 7-4. MS 2207VHD 2D Slab/Raster Decode Distances

Symbol Density/ Symbol p/n / Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges ³		Guaranteed Working Ranges ³	
		Near	Far	Near	Far
4 mil 64-17025-01 PDF417	123 80% MRD	1.90 in. 4.83 cm	3.00 in. 7.62 cm	2.20 in. 5.59 cm	2.70 in. 6.89 cm
6.6 mil 64-14035-01 PDF417	ABCDEF 80% MRD	1.50 in. 3.81 cm	4.75 in. 12.07 cm	2.00 in. 5.08 cm	4.50 in. 11.43 cm
10 mil 64-14937-01 PDF417	012345678905 80% MRD	3.00 in. 7.62 cm	5.75 in. 14.61 cm	4.25 in. 10.80 cm	5.00 in. 12.72 cm

Notes:


1. Contrast measured as Mean Reflective Difference (MRD) at 650 nm.
2. Near ranges on lower densities largely depend on the width of the bar code and the scan angle.
3. Working range specifications: Photographic quality symbols, pitch = 10°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C.

Note: Not optimized for omnidirectional mode.

Usable Scan Length

The decode zone is a function of various symbol characteristics including density, print contrast, wide-to-narrow ratio, and edge acuity. Consider width of decode zone at any given distance when designing a system.

[Calculating the Usable Scan Length Method](#) on page 2-11 describes how to calculate the usable scan length. The scan angle is provided in the [Usable Scan Length Diagram](#) on page 2-12.

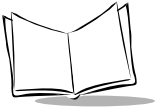

MS XX07 Series Integration Guide




Chapter 8

MS 3207 Specifications

Overview

This chapter provides the technical specifications for the MS 3207 scanner.

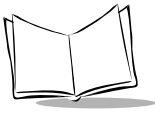

MS 3207 Electrical Interface

This section describes the pin functions of the MS 3207 interface.

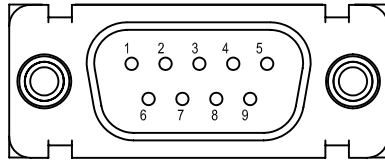



Figure 8-1. MS 3207 Connector

Table 8-1. MS 3207 Electrical Interface


Pin No.	Pin Name	Type*	Function
1	Trigger	I	Signals to scanner to begin scanning session.
2	TXD	O	Serial data transmit output. Drives the serial data receive input on the device communicating with the scanner.
3	RXD/D+	I/O	RS-232 Mode: Serial data receive input. Driven by the serial data transmit output on the device communicating with the scanner. USB Mode: D+ signal. During USB operation this signal is pulled up by a 1.5k Ohm resistor to begin USB enumeration. In this mode it is a differential bi-directional signal.
4	SYN_CLK	I/O	Synapse Mode: Synapse Clock line. Signal used as a clock by a Symbol Synapse host. Pin is shorted to RTS/SYN_DAT in USB cables to allow for auto-detection of USB mode via signal loopback.
5	Ground		Power supply ground input and signal ground reference.
6	Power		5.0 VDC \pm 10%

Table 8-1. MS 3207 Electrical Interface (Continued)

Pin No.	Pin Name	Type*	Function
7	CTS/D-	I/O	<p>RS-232 Mode: Clear-to-send handshaking input line, used only in conjunction with the RTS line. Optionally used by another device to signal the scanner to begin transmitting data.</p> <p>USB Mode: D- signal. During USB operation this signal works in conjunction with the D+ signal as a differential bi-directional signal.</p>
8	RTS/SYN_DAT	I/O	<p>RS-232 Mode: Request-to-send handshaking output line, used only in conjunction with the CTS line. Optionally used by the scanner to signal another device that data is available to send.</p> <p>Synapse Mode: Synapse Data line. Signal is used to transmit data to and from a Symbol Synapse host.</p>
9	Beeper/ Download	I/O	<p>During normal operation this signal functions as an external beeper drive line. This signal can sink 50mA of current to drive an external beeper, and is normally pulled up. This signal is also used to begin Flash Download operation when grounded externally during power up.</p>
*I = Input O = Output			



MS 3207 Mechanical Drawings

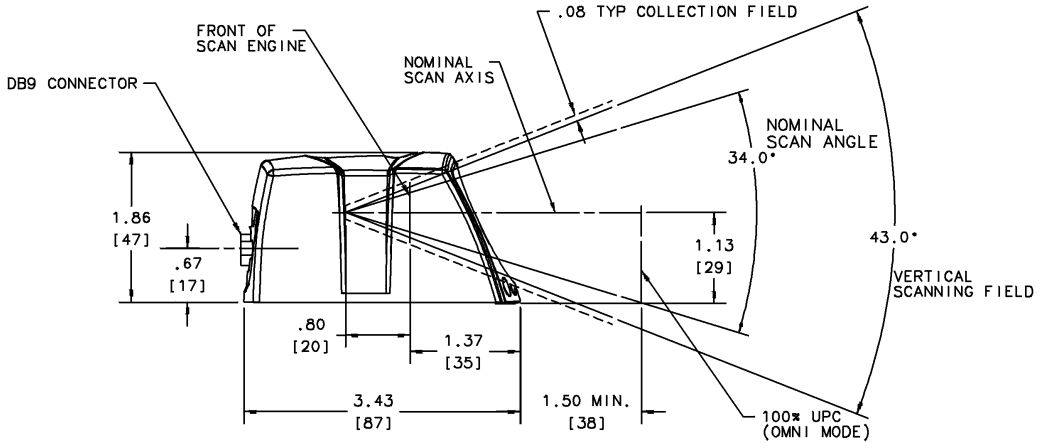

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.


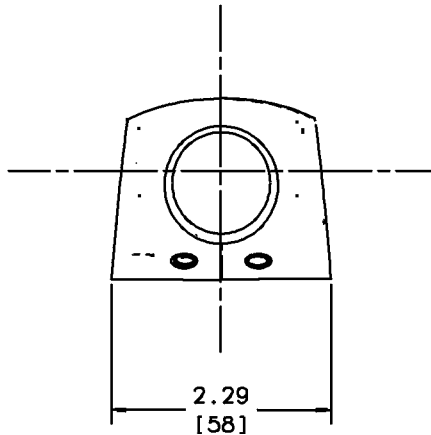


Figure 8-2. MS 3207 Mechanical Drawing

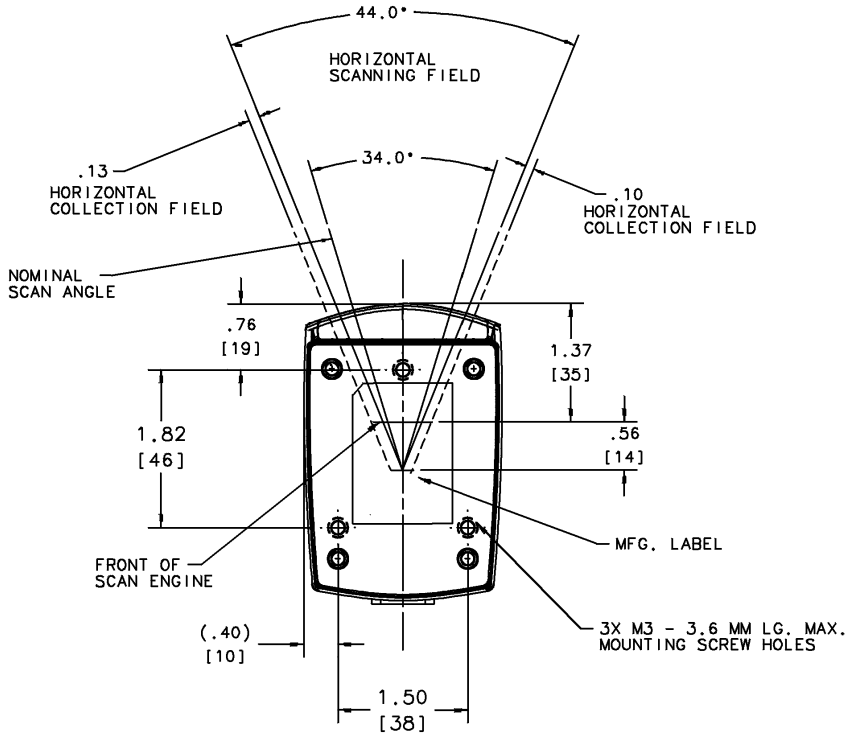

Notes:

Unless otherwise specified:

- Dimensions are in inches, dimensions in [] are mm.
- User mounting tolerances are not included.


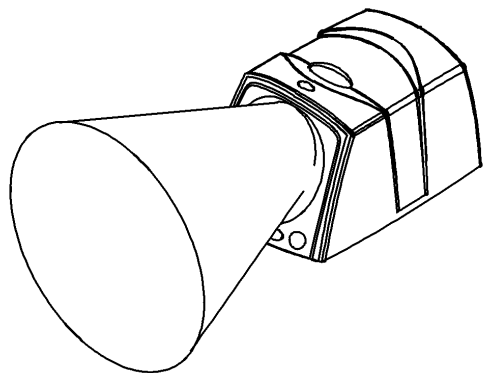


Figure 8-3. MS 3207 Mechanical Drawing



MS 3207 Technical Specifications

Table 8-2. MS 3207 Technical Specifications @ 23°C

Item	Description
Power Requirements	
Input Voltage	+5.0 VDC \pm 10%
Scanning Current	250 \pm 30 mA typical
Standby Current	45 \pm 10 mA typical
V_{CC} Noise Level	200 mV peak-to-peak max.
Laser Power	0.7 mW typical, 0.8 mW maximum @ 650 nm
Scan Rate	640 scans/second
Scan Frequency: Horizontal	320 Hz \pm 5 Hz
Scan Frequency: Vertical	282 Hz \pm 5 Hz
Frame Rate	24 frames/sec. 12 Hz \pm 1 Hz (vertical)
Print Contrast	Minimum 35% absolute dark/light reflectance differential (PDF); 35% absolute dark/light reflectance differential (1-D)
Scan Angle	Horizontal: 34° \pm 1.5° Vertical: 34° \pm 1.5°
Scan Pattern	Omnidirectional, semi-omnidirectional, smart raster, high density single scan line
Start Time	0.065 sec. to 75% of steady state horizontal amplitude
Skew Tolerance	\pm 15° from normal (see Figure 8-4 on page 8-8)
Pitch Angle	\pm 30° from normal (see Figure 8-4 on page 8-8)
Roll	\pm 4° from vertical (see Figure 8-4 on page 8-8) (For scanning benchmark label, assuming 3:1 codeword aspect ratio). Note that this is dependent on the decoder.
Decode Depth of Field	See Figure 8-5 on page 8-9 and Figure 8-6 on page 8-11
Beam Deviation (offset from the nominal)	Horizontal: \pm 3.0° Vertical: \pm 3.0° Horizontal tilt: \pm 2°
Additional Post Shock Beam Deviation (2000G Shock)	Horizontal: \pm 3.0° max Vertical: \pm 6.0° max

Table 8-2. MS 3207 Technical Specifications @ 23°C (Continued)

Item	Description
Ambient Light Immunity Sunlight Artificial Light	8,000 ft. candles (86,112 lux) 450 ft. candles (4,844 lux)
Drop	30 inch drop
Vibration	Unpowered scanner withstands a random vibration along each of the X, Y and Z axes for a period of one hour per axis, defined as follows: 20 to 80 Hz Ramp up to 0.04 G ² /Hz at the rate of 3dB/octave. 80 to 350 Hz 0.04 G ² /Hz 350 to 2000 Hz Ramp down at the rate of 3 dB/octave.
ESD	± 20kV air discharge ± 8kV indirect discharge
Sealing	IP54
Operating Temperature	-86 °F to 122 °F (-30 °C to 50 °C)
Storage Temperature	-104 °F to 158 °F (-40 °C to 70 °C)
Humidity	5% to 95% non-condensing
Laser Class	CDRH Class II, IEC Class 2
Height	1.89 in. (4.80 cm)
Width	2.31 in. (5.87 cm)
Depth	3.50 in. (8.89 cm)
Weight	4.97 oz. (142 g)

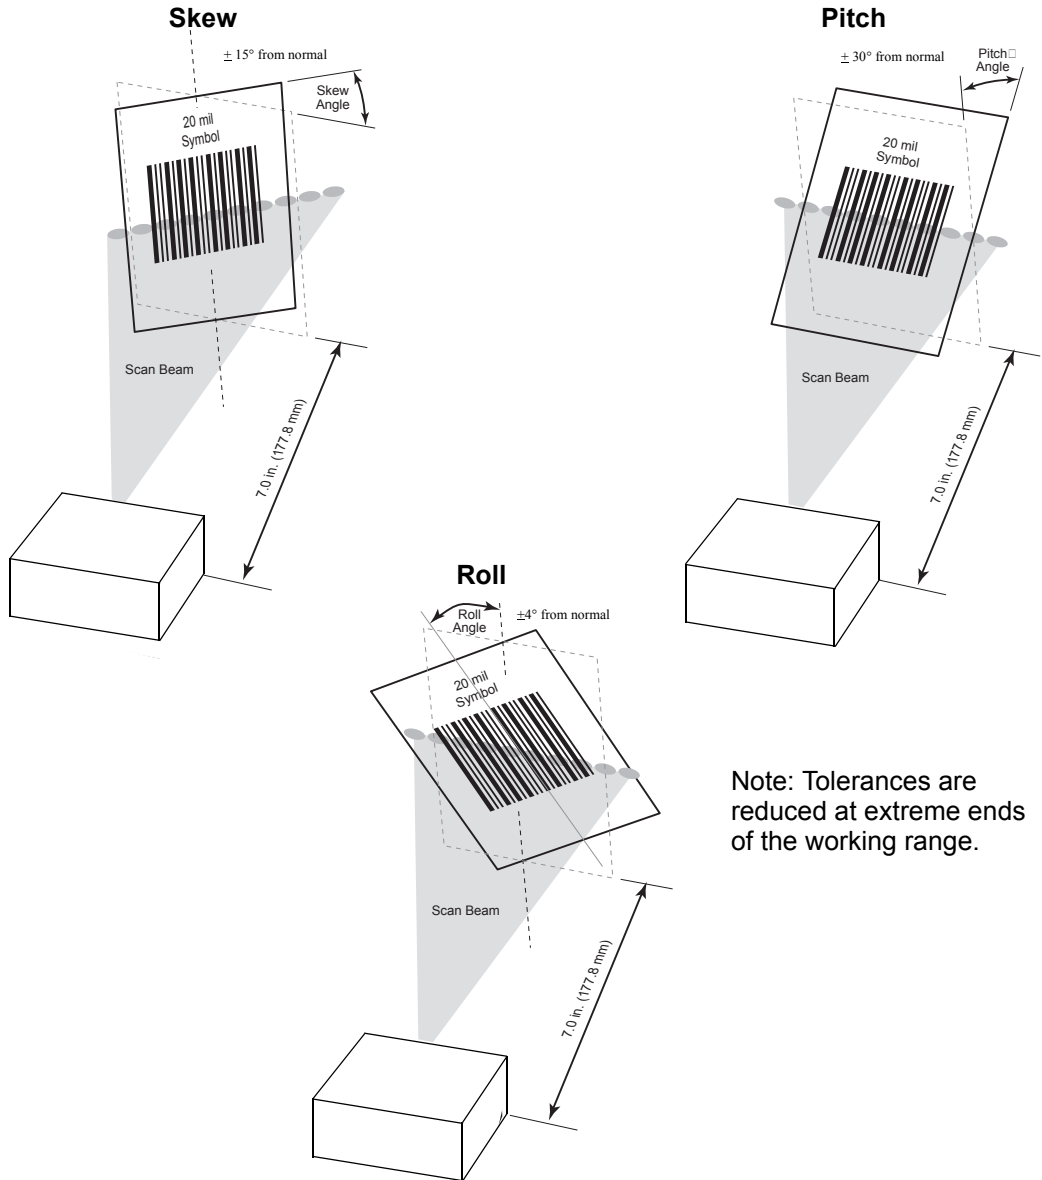




Figure 8-4. Skew, Pitch and Roll

MS 3207 Decode Zones

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. The figures shown are typical values. [Table 8-3 on page 8-10](#) and [Table 8-4 on page 8-12](#) list the typical and guaranteed distances for selected bar code densities. The minimum element width (or “symbol density”) is the width in mils of the narrowest element (bar or space) in the symbol. The maximum usable length of a symbol at any given range is shown below. To calculate this distance, see [Calculating the Usable Scan Length Method](#) on page 2-11.

Omnidirectional Decode Distances

Note: Typical performance at 68°F (20°C)
on high quality symbols in normal room light.
Vcc = 5V

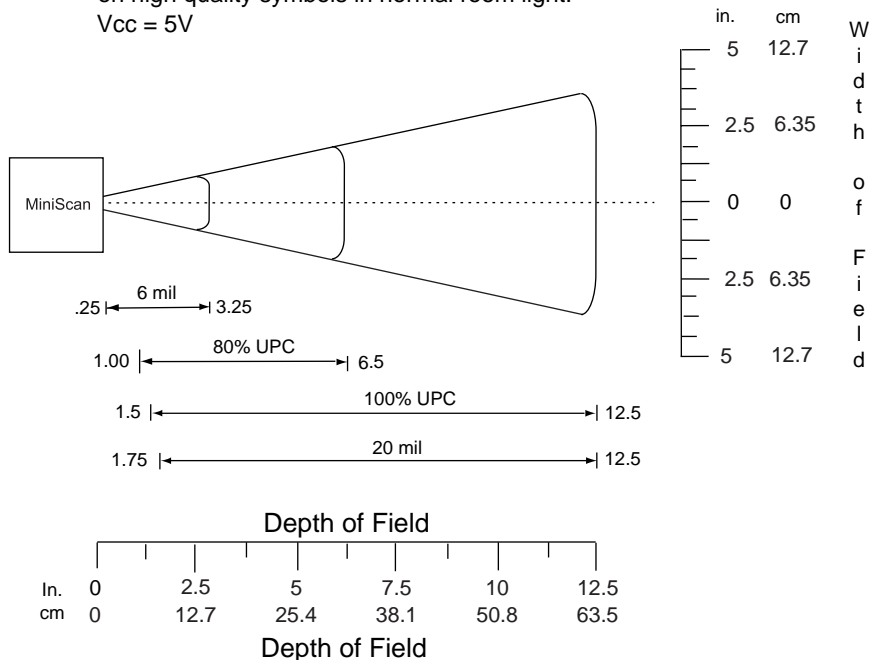

* Minimum distance determined by symbol length and scan angle.

Figure 8-5. MS 3207 Omnidirectional Decode Zone (Typical)





Table 8-3. MS 3207 Omnidirectional Decode Distances

Symbol Density/ Symbol p/n / Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges ³		Guaranteed Working Ranges ³	
		Near	Far	Near	Far
6.0 mil 60-01755-01 Code 39	123 80% MRD	0.25 in. 0.64 cm	3.25 in. 8.3 cm	0.75 in. 1.9 cm	2.25 in. 5.7 cm
64-06629-01 80% UPC	0080015 85% MRD	1.0 in. 2.5 cm	6.5 in. 16.5 cm	1.5 in. 3.8 cm	4.5 in. 11.4 cm
13 mil 64-05303-01 100% UPC	012345678905 80% MRD	1.5 in. 3.8 cm	12.5 in. 31.2 cm	Note 2	9.5 in. 24.1 cm
20 mil 1D 60-02710-03 LC 35%	123 80% MRD	1.75 in. 4.4 cm	12.5 in. 31.8 cm	Note 2	10.0 in. 25.4 cm
<p>Notes:</p> <ol style="list-style-type: none"> 1. Contrast measured as Mean Reflective Difference (MRD) at 650 nm. 2. Near ranges on largely depend on the width of the bar code and the scan angle. 3. Working range specifications: Photographic quality symbols, pitch = 15°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C, Vcc = 5V. 4. Measured from the front of the scanner. 					

2D Slab/Raster Decode Distances

Note: Typical performance at 68°F (20°C)
on high quality symbols in normal room light.
Vcc = 5V

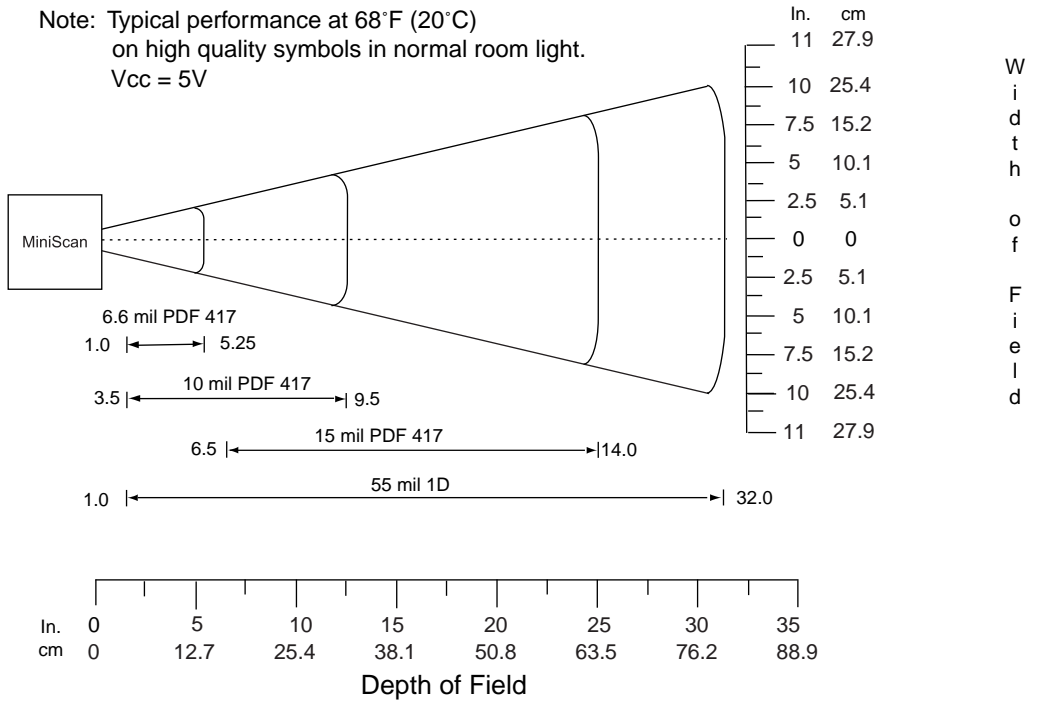

* Minimum distance determined by symbol length and scan angle.

Figure 8-6. MS 3207 2D Slab/Raster Decode Zone





Table 8-4. MS 3207 2D Slab/Raster Decode Distances

Symbol Density/ Symbol p/n / Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges ³		Guaranteed Working Ranges ³	
		Near	Far	Near	Far
6.6 mil 64-14035-01 2D	123 80% MRD	1.0 in. 2.54 cm	5.25 in. 13.34 cm	1.5 in. 3.8 cm	3.75 in. 9.5 cm
10 mil 64-14037-01 2D	ABCDEF 80% MRD	3.5 in. 8.89 cm	9.5 in. 24.13 cm	5.0 in. 12.7 cm	7.5 in. 9.5 cm
15 mil 64-14038-01 2D	012345678905 80% MRD	6.5 in. 16.51 cm	14.0 in. 35.6 cm	Note 2	11.0 in. 24.1 cm
55 mil 64-17458-01 1D	CD 80% MRD	1.0 in. 2.54 cm	32 in. 81.3 cm	Note 2	22.0 in. 55.9 cm
Notes: 1. Contrast measured as Mean Reflective Difference (MRD) at 650 nm. 2. Near ranges on largely depend on the width of the bar code and the scan angle. 3. Working range specifications: Photographic quality symbols, pitch = 15°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C, Vcc = 5V. 4. Measured from the front of the scanner.					

Usable Scan Length

The decode zone is a function of various symbol characteristics including density, print contrast, wide-to-narrow ratio, and edge acuity. Width of decode zone at any given distance must be considered when designing a system.

[Calculating the Usable Scan Length Method](#) on page 2-11 provides a detailed description of how to calculate the usable scan length. The scan angle is provided in [Table 8-2 on page 8-6](#).

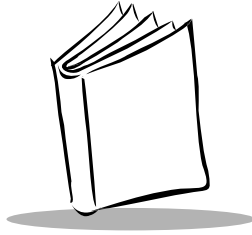

Chapter 9

Maintenance and Troubleshooting

Overview


The chapter provides information on maintenance and troubleshooting.

Maintenance

Cleaning the exit window is the only maintenance required. Do not allow any abrasive material to touch the window. Clean the scan window with a damp cloth and, if necessary, a non-ammonia based detergent.

Troubleshooting

Problem	Possible Cause	Possible Solutions
No red LED or nothing happens during a scan attempt.	No power to the scanner.	Check the system power. Confirm that the correct host interface cable is used.
		Connect the power supply.
		Re-connect loose cables.

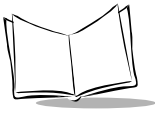

Problem	Possible Cause	Possible Solutions
Scanner cannot read the bar code.	Interface/power cables are loose.	Re-connect loose cables.
	Scanner is not programmed for the correct bar code type.	Make sure the scanner is programmed to read the type of bar code to be scanned. Try scanning other bar code(s) and other bar code types.
	Incorrect communication parameters.	Set the correct communication parameters (baud rate, parity, stop bits, etc.)
	Bar code symbol is unreadable.	Check the symbol to make sure it is not defaced. Try scanning similar symbols of the same code type.
	Inappropriately hot environment.	Remove the scanner from the hot environment, and allow it to cool down.
Laser activates, followed by a beep sequence.	Beeper is configured.	Refer to Table 3-1 on page 3-8 for beeper indication descriptions.
Scanner configured to USB host and does not scan.	Incorrect trigger mode selected.	Unplug scanner from USB host. Present Continuous trigger mode bar code on page 3-6 and plug unit in. Upon power up the scanner scans briefly, decodes, and switches to continuous trigger mode.

Note: *If after performing these checks the symbol still does not scan, contact the distributor or call the [Symbol Support Center](#) at the telephone number listed on [page xiii](#).*



Chapter 10 Parameter Menus

This chapter describes the programmable parameters, and provides bar codes for programming and hexadecimal equivalents for host download programming.

Throughout the programming bar code menus, default values are indicated with asterisks (*).



Operational Parameters

MiniScan scanners are shipped with the default settings shown in [Table 10-1 on page 10-2](#). These default values are stored in non-volatile memory and are preserved even when the scanner is powered down.

To change the default values, scan the appropriate bar codes in this chapter. These new values replace the standard default values in memory. To recall the default parameter values, scan the [Set All Defaults](#) bar code on page [10-10](#).

Default Table

[Table 10-1](#) lists the defaults for all parameters, and the page number each parameter appears on. To change any option, scan the appropriate bar code(s).




Table 10-1. Default Table

Parameter	Parameter Number	Default	Page Number
Set Default Parameter		All Defaults	10-10
Scanning Options			
Beeper Volume	8Ch	High Volume	10-11
Beeper Tone	91h	High Frequency	10-12
Beeper Frequency Adjustment	F0h 91h	2500 Hz	10-13
Laser On Time	88h	MS 120X: 3.0 sec MS 220X/3207: 5.0 sec	10-14
Scan Angle (MS 1207FZY only)	BFh	Wide	10-15
Power Mode	80h	Low Power	10-16
Trigger Mode	8Ah	Continuous	10-17
Scanning Mode (MS 2207, MS 2207VHD, and MS 3207 only)	8Dh	Smart Raster	10-18
Aiming Mode	F0h 7Eh	Disabled	10-18
Raster Height (MS 2207, MS 2207VHD, and MS 3207 only)	E4h	15	10-20
Raster Expansion Rate (MS 2207, MS 2207VHD, and MS 3207 only)	E5h	11	10-20
Time-out Between Same Symbol	89h	0.6 sec	10-21
Time-out Between Different Symbols	90h	0.0 sec	10-21
Beep After Good Decode	38h	Enable	10-22
Transmit "No Read" Message	5Eh	Disable	10-23
Parameter Scanning	ECh	Enable	10-24

Table 10-1. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
Linear Code Type Security Levels	4Eh	MS 120X: 1 MS 220X/MS 3207: 2	10-25
Bi-directional Redundancy	43h	Disable	10-27
UPC/EAN			
UPC-A	01h	Enable	10-28
UPC-E	02h	Enable	10-28
UPC-E1	0Ch	Disable	10-30
EAN-8	04h	Enable	10-31
EAN-13	03h	Enable	10-32
Bookland EAN	53h	Disable	10-33
UPC/EAN Coupon Code	55h	Disable	10-34
Decode UPC/EAN Supplementals	10h	Ignore	10-35
Decode UPC/EAN Supplemental Redundancy	50h	20	10-37
Transmit UPC-A Check Digit	28h	Enable	10-38
Transmit UPC-E Check Digit	29h	Enable	10-39
Transmit UPC-E1 Check Digit	2Ah	Enable	10-40
UPC-A Preamble	22h	System Character	10-41
UPC-E Preamble	23h	System Character	10-42
UPC-E1 Preamble	24h	System Character	10-43
Convert UPC-E to A	25h	Disable	10-44




Table 10-1. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
Convert UPC-E1 to A	26h	Disable	10-45
EAN-8 Zero Extend	27h	Disable	10-46
UPC/EAN Security Level	4Dh	0	10-47
Linear UPC/EAN Decode	44h	Disable	10-49
UPC Half Block Stitching (MS 2207, MS 2207VHD, and MS 3207 only)	4Ah	Disable	10-50
Code 128			
Code 128	08h	Enable	10-51
UCC/EAN-128	0Eh	Enable	10-52
ISBT 128	54h	MS 120X: Enable MS 220X/MS 3207: Disable	10-53
Code 128 Decode Performance (MS 2207, MS 2207VHD, and MS 3207 only)	48h	Enable	10-54
Code 128 Decode Performance Level (MS 2207, MS 2207VHD, and MS 3207 only)	49h	Level 3	10-55
Code 39			
Code 39	00h	Enable	10-56
Trioptic Code 39	0Dh	Disable	10-57
Convert Code 39 to Code 32	56h	MS 120X/MS 3207: Disable MS 220X: Enable	10-58

Table 10-1. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
Code 32 Prefix	E7h	Enable	10-59
Set Length(s) for Code 39	12h 13h	Length within Range: MS 120X: 2-55 MS 220X/MS 3207: 1-55	10-60
Code 39 Check Digit Verification	30h	Disable	10-62
Transmit Code 39 Check Digit	2Bh	Disable	10-63
Code 39 Full ASCII Conversion	11h	Disable	10-64
Code 39 Decode Performance (MS 2207, MS 2207VHD, and MS 3207 only)	46h	Enable	10-65
Code 39 Decode Performance Level (MS 2207, MS 2207VHD, and MS 3207 only)	47h	Level 3	10-66
Code 93			
Code 93	09h	Disable	10-67
Set Length(s) for Code 93	1Ah 1Bh	Length within Range: 04-55	10-68
Code 11			
Code 11	0Ah	Disable	10-70
Set Length(s) for Code 11	1Ch, 1Dh	Length within Range: 04-55	10-71
Code 11 Check Digit Verification	34h	Disable	10-73
Transmit Code 11 Check Digits	2Fh	Disable	10-74




Table 10-1. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
Interleaved 2 of 5			
Interleaved 2 of 5	06h	MS 120X: Enable MS 220X/MS 3207: Disable	10-75
Set Length(s) for I 2 of 5	16h 17h	1 Discrete Length: 14	10-76
I 2 of 5 Check Digit Verification	31h	Disable	10-78
Transmit I 2 of 5 Check Digit	2Ch	Disable	10-79
Convert I 2 of 5 to EAN 13	52h	Disable	10-80
Discrete 2 of 5			
Discrete 2 of 5	05h	Disable	10-81
Set Length(s) for D 2 of 5	14h 15h	1 Discrete Length: 12	10-82
Codabar			
Codabar	07h	Disable	10-84
Set Lengths for Codabar	18h 19h	Length within Range: 05-55	10-85
CLSI Editing	36h	Disable	10-87
NOTIS Editing	37h	Disable	10-88
MSI Plessey			
MSI Plessey	0Bh	Disable	10-89
Set Length(s) for MSI Plessey	1Eh 1Fh	Length Within Range: 06 - 55	10-90

Table 10-1. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
MSI Plessey Check Digits	32h	One	10-92
Transmit MSI Plessey Check Digit	2Eh	Disable	10-93
MSI Plessey Check Digit Algorithm	33h	Mod 10/Mod 10	10-94
PDF417/MicroPDF417 (MS 2207, MS 2207VHD, and MS 3207 Only)			
PDF417	0fh	MS 220X: Enable MS 3207: Disable	10-95
MicroPDF417	E3h	Disable	10-96
MicroPDF Performance	F0h 65h	Standard	10-97
Code 128 Emulation	7Bh	Disable	10-98
RSS			
RSS-14	F0h 52h	Disable	10-99
RSS Limited	F0h 53h	Disable	10-100
RSS Expanded	F0h 54h	Disable	10-101
Convert RSS to UPC/EAN (MS 1207FZY and MS 1207WA only)	F0h 8Dh	Disable	10-101
Composite (MS 2207, MS 2207VHD and MS 3207 only)			
CC-C	F0h 55h	Disable	10-103
CC-AB	F0h 56h	Disable	10-104
TLC-39	F0h 73h	Disable	10-105
UPC Composite Mode	F0h 58h	Always Linked	10-106





Table 10-1. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
Data Options			
Transmit Code ID Character	2Dh	None	10-107
Prefix/Suffix Values			10-109
Prefix	69h	NULL	
Suffix 1	68h	CR	
Suffix 2	6Ah	LF	
Scan Data Transmission Format	N/A	Data as is	10-111
Event Reporting			
Decode Event	F0h 00h	Disable	10-114
Boot Up Event	F0h 02h	Disable	10-115
Parameter Event	F0h 03h	Disable	10-116
Macro PDF (MS 2207, MS 2207VHD, and MS 3207 only)			
Transmit Symbols in Codeword Format	Afh	Disable	10-117
Transmit Unknown Codewords	BAh	Disable	10-119
Escape Character	E9h	None	10-120
ECI (MS 2207, MS 2207VHD, and MS 3207 only)			
Delete Character Set ECIs	E6h	Enable	10-121
ECI Decoder	E8h	Enable	10-122
Transmit Macro PDF User-Selected Field (MS 2207, MS 2207VHD, and MS 3207 only)			
Transmit File Name	B0h	Disable	10-123
Transmit Block Count	B1h	Disable	10-124


Table 10-1. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
Transmit Time Stamp	B2h	Disable	10-125
Transmit Sender	B3h	Disable	10-126
Transmit Addressee	B4h	Disable	10-127
Transmit Checksum	B6h	Disable	10-128
Transmit File Size	B5h	Disable	10-129
Transmit Macro PDF Control Header	B7h	Disable	10-130
Last Block Marker	B9h	Disable	10-131



Set Default Parameter

Scan this bar code to return all parameters to the values listed in [Table 10-1 on page 10-2](#).



Set All Defaults

Scanning Options

Beeper Volume

Parameter # 8Ch

To select a decode beep volume, scan the **Low Volume**, **Medium Volume**, or **High Volume** bar code.




Low Volume



Medium Volume




***High Volume**



Beeper Tone

Parameter # 91h

To select a decode beep frequency (tone), scan the appropriate bar code.




Low Frequency

(02h)



Medium Frequency

(01h)



***High Frequency**

(00h)

Beeper Frequency Adjustment

Parameter # F0h 91H

This parameter adjusts the frequency of the high beeper tone from the nominal 2500 Hz to another frequency matching the resonances of the installation. It is programmable in 10 Hz increments from 1220 Hz to 3770 Hz.


To increase the frequency, scan the bar code below, then scan three numeric bar codes beginning on [page 10-132](#) that correspond to the desired frequency adjustment divided by 10. For example, to set the frequency to 3000 Hz (an increase of 500 Hz), scan numeric bar codes 0, 5, 0, corresponding to 50, or (500/10).

To decrease the frequency, scan the bar code below, then scan three numeric bar codes beginning on [page 10-132](#) that correspond to the value (256 - desired adjustment/10). For example, to set the frequency to 2000 Hz (a decrease of 500 Hz), scan numeric bar codes 2, 0, 6, corresponding to 206, or (256 - 500/10).



Beeper Frequency Adjustment

(Default: 2500 Hz)



Laser On Time

Parameter # 88h

This parameter sets the maximum time decode processing continues during a scan attempt. It is programmable in 0.1 second increments from 0.5 to 9.9 seconds.

To set a Laser On Time, scan the bar code below. Next scan two numeric bar codes beginning on [page 10-132](#) that correspond to the desired on time. Times less than 1.0 second must have a leading zero. For example, to set an on time of 0.5 seconds, scan the bar code below, then scan the *0* and *5* bar codes. To change the selection or to cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



Laser On Time

Scan Angle

Parameter # BFh


Note: This option is supported by the MS 1207FZY only.

This parameter sets the scan angle to the default or alternate angle.




***Default Angle**

(06h)



Alternate Angle

(05h)



Power Mode

Parameter # 80h

This parameter determines whether or not power remains on after a decode attempt. In Low Power mode, the scanner enters into a low power consumption mode when possible, provided all WAKEUP signals are released. In Continuous On mode, power remains on after each decode attempt.



Continuous On

(00h)



***Low Power**

(01h)

Trigger Mode

Parameter # 8Ah

- **Level** - A trigger pull activates the laser and decode processing. The laser remains on and decode processing continues until a trigger release, a valid decode, or the Laser On Time-out is reached.
- **Pulse** - A trigger pull activates the laser and decode processing. The laser remains on and decode processing continues until a valid decode or the Laser On Time-out is reached.
- **Continuous** - The laser is always on and decoding.
- **Blink** - This trigger mode is used for triggerless ScanStand operation. Scanning range is reduced in this mode. This mode is only supported by MS 1207FZY models.
- **Host** - A host command issues the triggering signal. The scanner interprets an actual trigger pull as a Level triggering option.




Level
(00h)



Pulse
(02h)




***Continuous**
(04h)



Blink
(07h)



Host
(08h)



Scanning Mode

Parameter # 8Dh

Note: These options are supported by the MS 2207, MS 2207VHD, and MS 3207 only.

Select one of the following scanning modes:

- Smart Raster
- Slab Only Raster
- Omnidirectional (Cyclone)
- Always Raster
- Programmable Raster
- Semi-Omnidirectional

Note: If Omnidirectional is selected, disabling the following parameters is recommended: PDF417, MicroPDF417, RSS-Limited, CC-C, CC-AB, TLC-39 and Linear UPC.



* Smart Raster
(01h)



Always Raster
(02h)



Programmable Raster
(03h)



Slab Pattern
(04h)



Omnidirectional Pattern
(06h)



Semi-Omni Pattern
(07h)

Aiming Mode

Parameter # F0h 7Eh

For handheld mode only, select an aiming dot to appear for a normal or extended period of time.




***No Aiming Dot
(00h)**



**Aiming Dot
Normal (200 ms) Timeout
(01h)**



**Aiming Dot
Extended (400 ms) Timeout
(02h)**



Programmable Raster Height and Raster Expansion Speed

Parameter # E4h, E5h

Note: These options are supported by the MS 2207, MS 2207VHD, and MS 3207 only.

This parameter selects the laser pattern's height and rate of expansion, and is only used when Programmable Raster or Always Raster is enabled. This parameter is intended for very specific applications, and is usually not necessary.

To select the laser pattern's height and/or rate of expansion:

1. Scan the bar code for either **Raster Height** or **Raster Expansion Speed** below.
2. Scan two numeric bar codes beginning on [page 10-132](#) that represent a two-digit value. Valid values are between 01 and 15.

To change the selection or to cancel an incorrect entry, scan the [Cancel](#) bar code on [page 10-134](#).



Raster Height (Default 15)



Raster Expansion Speed (Default 11)

Timeout Between Decodes

Timeout Between Decodes, Same Symbol

Parameter # 89h

When in Continuous triggering mode, this parameter sets the minimum duration of not decoding data before the scanner decodes a second bar code identical to one just decoded. This reduces the risk of accidentally scanning the same symbol twice. It is programmable in 0.1 second increments from 0.0 to 9.9 seconds. The recommended interval is 0.6 seconds

Timeout Between Decodes, Different Symbol

Parameter # 90h

This option sets the minimum duration of not decoding data before the scanner decodes a second (different) bar code. This is used in Continuous mode to prevent the scanner from decoding when a different symbol appears in the scanner's field of view before the timeout period between decodes expires. This is programmable in 0.1 second increments from 0.0 to 9.9 seconds. The recommended value is 0.0 seconds.

Select the timeout between decodes for the same or different symbols.

1. Scan the option bar code you wish to set.
2. Scan two numeric bar codes beginning on [page 10-132](#) which correspond to the desired interval, in 0.1 second increments.


To change the selection or to cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



**Timeout Between Decodes -
Same Symbol**



**Timeout Between Decodes -
Different Symbols**



Beep After Good Decode

Parameter # 38h


Scan this symbol to set the scanner to beep after a good decode.



***Beep After Good Decode**

(01h)

Scan this symbol to set the scanner not to beep after a good decode. The beeper still operates during parameter menu scanning and indicates error conditions.



Do Not Beep After Good Decode

(00h)

Transmit “No Read” Message

Parameter # 5Eh

Enable this option to transmit “NR” if a 1-D symbol does not decode, and “FR” if a 2-D symbol does not decode. Any enabled prefix or suffixes are appended around this message.



Enable No Read


(01h)

When the parameter is disabled, and a symbol can not be decoded, no message is sent to the host.



***Disable No Read**

(00h)



Parameter Scanning

Parameter # ECh

To disable the decoding of parameter bar codes, scan the bar code below. The **Set Defaults** parameter bar code can still be decoded. To enable decoding of parameter bar codes, either scan **Enable Parameter Scanning*, *Set All Defaults* or set this parameter to 01h via a serial command.



***Enable Parameter Scanning**

(01h)



Disable Parameter Scanning

(00h)

Linear Code Type Security Level

Parameter # 4Eh

Note: Does not apply to Code 128.


MiniScan scanners offer four levels of decode security for linear code types (e.g., Code 39, Interleaved 2 of 5). Select higher security levels for decreasing levels of bar code quality. As security levels increase, the scanner's aggressiveness decreases.

Select the security level appropriate for bar code quality.

Linear Security Level 1

The following code types must be successfully read twice before being decoded:

Code Type	Length
Codabar	All
MSI Plessey	4 or less
D 2 of 5	8 or less
I 2 of 5	8 or less




Linear Security Level 1
(01h)

Linear Security Level 2

All code types must be successfully read twice before being decoded.



*Linear Security Level 2
(02h)



Linear Security Level 3

Code types other than the following must be successfully read twice before being decoded.
The following codes must be read three times:

Code Type	Length
MSI Plessey	4 or less
D 2 of 5	8 or less
I 2 of 5	8 or less




Linear Security Level 3

(03h)

Linear Security Level 4

All code types must be successfully read three times before being decoded.



Linear Security Level 4

(04h)

Bi-directional Redundancy

Parameter # 43h

This parameter is only valid when a [Linear Code Type Security Level](#) is enabled (see [page 10-25](#)). When this parameter is enabled, a bar code must be successfully scanned in both directions (forward and reverse) before being decoded.




Enable Bi-directional Redundancy

(01h)



***Disable Bi-directional Redundancy**

(00h)



UPC/EAN

Enable/Disable UPC-A

Parameter # 01h

To enable or disable UPC-A, scan the appropriate bar code below.



***Enable UPC-A**

(01h)



Disable UPC-A

(00h)

Enable/Disable UPC-E


Parameter # 02h

To enable or disable UPC-E, scan the appropriate bar code below.




***Enable UPC-E**

(01h)



Disable UPC-E

(00h)



Enable/Disable UPC-E1

Parameter # 0Ch

To enable or disable UPC-E1, scan the appropriate bar code below.



Enable UPC-E1

(01h)




***Disable UPC-E1**

(00h)

Enable/Disable EAN-8


Parameter # 04h

To enable or disable EAN-8, scan the appropriate bar code below.




***Enable EAN-8**

(01h)



Disable EAN-8


(00h)



Enable/Disable EAN-13


Parameter # 03h

To enable or disable EAN-13, scan the appropriate bar code below.



***Enable EAN-13**

(01h)



Disable EAN-13

(00h)

Enable/Disable Bookland EAN

Parameter # 53h

To enable or disable EAN Bookland, scan the appropriate bar code below.




Enable Bookland EAN

(01h)



***Disable Bookland EAN**

(00h)



UPC/EAN Coupon Code

Parameter # 55h

When enabled, this parameter decodes UPC-A bar codes starting with digit '5', EAN-13 bar codes starting with digit '99', and UPC-A/EAN-128 Coupon Codes. UPC-A, EAN-13 and EAN-128 must be enabled to scan all types of Coupon Codes.



**Enable UPC/EAN
Coupon Code**



***Disable UPC/EAN
Coupon Code**

Note: Use the Decode UPC/EAN Supplemental Redundancy parameter to control autodiscrimination of the EAN-128 (right half) of a coupon code.

Decode UPC/EAN Supplementals

Parameter # 10h

Supplementals are appended characters (2 or 5) according to specific code format conventions (e.g., UPC A+2, UPC E+2, EAN 8+2). Three options are available.

- If **UPC/EAN with supplemental characters** is selected, the scanner does not decode UPC/EAN symbols without supplemental characters.
- If **UPC/EAN without supplemental characters** is selected, and the MiniScan is presented with a UPC/EAN plus supplemental symbol, the scanner decodes the UPC/EAN and ignores the supplemental characters.
- If **autodiscriminate** is selected, scan [Decode UPC/EAN Supplemental Redundancy](#) on [page 10-37](#), then select a value from the numeric bar codes beginning on [page 10-132](#). A value of 5 or more is recommended.
- If **Enable 378/379 Supplemental Mode** is selected, the scanner identifies supplementals for EAN-13 bar codes starting with a '378' or '379' prefix only. All other UPC/EAN bar codes are decoded immediately and the supplemental characters ignored.
- If **Enable 978 Supplemental Mode** is selected, the scanner identifies supplementals for EAN-13 bar codes starting with a '978' prefix only. All other UPC/EAN bar codes are decoded immediately and the supplemental characters ignored.
- If **Enable Smart Supplemental Mode** is selected, the scanner identifies supplementals for EAN-13 bar codes starting with a '378', '379', or '978' prefix only. All other UPC/EAN bar codes are decoded immediately and the supplemental characters ignored.


Note: *To minimize the risk of invalid data transmission, we recommend selecting either read or ignore supplemental characters.*

Select the desired option by scanning one of the following bar codes.



Decode UPC/EAN With Supplementals

(01h)




Decode UPC/EAN Supplementals (continued)




***Ignore UPC/EAN With Supplementals**

(00h)



Autodiscriminate UPC/EAN Supplementals

(02h)



Enable 378/379 Supplemental Mode

(04h)



Enable 978 Supplemental Mode

(05h)



Enable Smart Supplemental Mode


(03h)

Decode UPC/EAN Supplemental Redundancy


Parameter # 50h

With *Autodiscriminate UPC/EAN Supplementals* selected, this option adjusts the number of times (from 2 to 30) a symbol without supplementals is decoded before transmission. Five or above is recommended when decoding a mix of UPC/EAN symbols with and without supplementals, and the autodiscriminate option is selected.

Scan the bar code below to select a decode redundancy value. Next scan two numeric bar codes beginning on [page 10-132](#). Enter a leading zero for single digit numbers. To change the selection or to cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).




**Decode UPC/EAN
Supplemental Redundancy**



Transmit UPC-A Check Digit

Parameter # 28h

Scan the appropriate bar code below to transmit the symbol with or without the UPC-A check digit.



***Transmit UPC-A Check Digit**

(01h)




Do Not Transmit UPC-A Check Digit

(00h)

Transmit UPC-E Check Digit


Parameter # 29h

Scan the appropriate bar code below to transmit the symbol with or without the UPC-E check digit.




***Transmit UPC-E Check Digit**

(01h)



Do Not Transmit UPC-E Check Digit

(00h)



Transmit UPC-E1 Check Digit

Parameter # 2Ah

Scan the appropriate bar code below to transmit the symbol with or without the UPC-E1 check digit.



***Transmit UPC-E1 CHECK DIGIT**

(01h)



Do Not Transmit UPC-E1 Check Digit

(00h)

UPC-A Preamble

Parameter # 22h

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-A symbol. Select one of the following options for transmitting UPC-A preamble to the host device: transmit system character only, transmit system character and country code ("0" for USA), or transmit no preamble.




No Preamble
(<DATA>)

(00h)




***System Character**
(<SYSTEM CHARACTER> <DATA>)

(01h)



System Character & Country Code
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)


(02h)



UPC-E Preamble


Parameter # 23h

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-E symbol. Select one of the following options for transmitting UPC-E preamble to the host device: transmit system character only, transmit system character and country code ("0" for USA), or transmit no preamble.



No Preamble
(<DATA>)

(00h)



***System Character**
(<SYSTEM CHARACTER> <DATA>)

(01h)



System Character & Country Code
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)

(02h)

UPC-E1 Preamble

Parameter # 24h

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-E1 symbol. Select one of the following options for transmitting UPC-E1 preamble to the host device: transmit system character only, transmit system character and country code ("0" for USA), or transmit no preamble.



No Preamble
(<DATA>)

(00h)




***System Character**
(<SYSTEM CHARACTER> <DATA>)

(01h)



System Character & Country Code
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)

(02h)




Convert UPC-E to UPC-A

Parameter # 25h


This parameter converts UPC-E (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Scan **DO NOT CONVERT UPC-E TO UPC-A** to transmit UPC-E (zero suppressed) decoded data.



**Convert UPC-E To UPC-A
(Enable)**

(01h)



***Do Not Convert UPC-E To UPC-A
(Disable)**

(00h)

Convert UPC-E1 to UPC-A

Parameter # 26h

Enable this parameter to convert UPC-E1 (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Scan **DO NOT CONVERT UPC-E TO UPC-A** to transmit UPC-E1 (zero suppressed) decoded data.




**Convert UPC-E1 To UPC-A
(Enable)**

(01h)



***Do Not Convert UPC-E1 To UPC-A
(Disable)**

(00h)




EAN Zero Extend

Parameter # 27h


When this parameter is enabled, five leading zeros are added to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols.

Disable this parameter to transmit EAN-8 symbols as is.



Enable EAN Zero Extend

(01h)



***Disable EAN Zero Extend**

(00h)


UPC/EAN Security Level

Parameter # 4Dh

MiniScan scanners offer four levels of decode security for UPC/EAN bar codes. Select higher levels of security for decreasing levels of bar code quality. Increasing security decreases the scanner's aggressiveness, so choose only that level of security necessary for the application.

UPC/EAN Security Level 0

This default setting allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding "in-spec" UPC/EAN bar codes.



***UPC/EAN Security Level 0**

(00h)


UPC/EAN Security Level 1

Select this option if misdecodes occur. This security level eliminates most misdecodes.



UPC/EAN Security Level 1

(01h)



UPC/EAN Security Level 2

Select this option if Security level 1 fails to eliminate misdecodes.




UPC/EAN Security Level 2

(02h)

UPC/EAN Security Level 3

If misdecodes still occur after selecting Security Level 2, select this security level. Be advised, selecting this option is an extreme measure against misdecoding severely out of spec bar codes. Selecting this level of security significantly impairs the decoding ability of the scanner. If this level of security is necessary, try to improve the quality of the bar codes.




UPC/EAN Security Level 3

(03h)

Linear UPC/EAN Decode


Parameter # 44h

This option applies to code types containing two adjacent blocks (e.g., UPC-A, EAN-8, EAN-13). When enabled, a bar code is transmitted only when both the left and right blocks are successfully decoded within one laser scan. Enable this option when bar codes are in proximity to each other.




Enable Linear UPC/EAN Decode

(01h)



***Disable Linear UPC/EAN Decode**

(00h)




UPC Half Block Stitching

Parameter # 4Ah


Note: *This option is supported by the MS 2207, MS 2207VHD and MS 3207 only.*

This parameter enables UPC Half Block Stitching.



Enable UPC Half Block Stitching

(01h)



***Disable UPC Half Block Stitching**


(00h)

Code 128

Enable/Disable Code 128


Parameter # 08h

To enable or disable Code 128, scan the appropriate bar code below.




***Enable Code 128**

(01h)



Disable Code 128


(00h)



Enable/Disable UCC/EAN-128


Parameter # 0Eh

To enable or disable UCC/EAN-128, scan the appropriate bar code below.



***Enable UCC/EAN-128**

(01h)



Disable UCC/EAN-128

(00h)

Enable/Disable ISBT 128

Parameter # 54h

To enable or disable ISBT 128, scan the appropriate bar code below.



Enable ISBT 128

(01h)




***Disable ISBT 128**

(00h)

Lengths for Code 128

No length setting is required for Code 128.



Code 128 Decode Performance

Parameter # 48h

Note: This option is supported by the MS 2207, MS 2207VHD, and MS 3207 only.

This option offers three levels of decode performance or “aggressiveness” for Code 128 symbols. Increasing the performance level reduces the amount of required bar code orientation, which is useful when scanning very long and/or truncated bar codes. Increased levels reduce decode security.

If you enable this option, you can select a Decode Performance level from the next page to suit performance needs.



***Enable Code 128 Decode Performance**

(01h)



Disable Code 128 Decode Performance


(00h)

Code 128 Decode Performance Level

Parameter # 49h

Note: *This option is supported by the MS 2207, MS 2207VHD, and MS 3207 only.*

Select a level of decode performance.




Code 128 Decode Performance Level 1

(03h)




Code 128 Decode Performance Level 2

(02h)



***Code 128 Decode Performance Level 3**

(01h)




Code 39

Enable/Disable Code 39


Parameter # 00h

To enable or disable Code 39, scan the appropriate bar code below.



***Enable Code 39**

(01h)



Disable Code 39

(00h)

Enable/Disable Trioptic Code 39

Parameter # 0Dh

Trioptic Code 39 is a variant of Code 39 used in marking computer tape cartridges. Trioptic Code 39 symbols always contain six characters. Do not enable Trioptic Code 39 and Code 39 Full ASCII simultaneously.

To enable or disable Trioptic Code 39, scan the appropriate bar code below.




Enable Trioptic Code 39

(01h)



***Disable Trioptic Code 39**

(00h)



Convert Code 39 to Code 32

Parameter # 56h

Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Scan the appropriate bar code below to enable or disable converting Code 39 to Code 32.

Note: Code 39 must be enabled for this parameter to function.



**Convert Code 39 To Code 32
(Enable)**

(01h)



**Do Not Convert Code 39 To Code 32
(Disable)**

(00h)

Code 32 Prefix

Parameter # E7h

Enable this parameter to add the prefix character "A" to all Code 32 bar codes. [Convert Code 39 to Code 32](#) must be enabled for this parameter to function.




***Enable Code 32 Prefix**

(01h)



Disable Code 32 Prefix

(00h)



Set Lengths for Code 39

Parameter # L1 = 12h, L2 = 13h


The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Lengths for Code 39 may be set for any length, one or two discrete lengths, or lengths within a specific range. If Code 39 Full ASCII is enabled, **Length Within a Range** or **Any Length** are the preferred options.

One Discrete Length - This option limits decodes to only those Code 39 symbols containing a selected length. Lengths are selected from the numeric bar codes beginning on [page 10-132](#). For example, to decode only Code 39 symbols with 14 characters, scan **Code 39 - One Discrete Length**, then scan **1** followed by **4**. To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



Code 39 - One Discrete Length

Two Discrete Lengths - This option limits decodes to only those Code 39 symbols containing either of two selected lengths. Lengths are selected from the numeric bar codes beginning on [page 10-132](#). For example, to decode only those Code 39 symbols containing either 2 or 14 characters, select **Code 39 - Two Discrete Lengths**, then scan **0**, **2**, **1**, and then **4**. To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



Code 39 - Two Discrete Lengths

Length Within Range - This option limits decodes to only those Code 39 symbols within a specified range. The range is selected using the numeric bar codes beginning on [page 10-132](#). For example, to decode Code 39 symbols containing between 4 and 12 characters, first scan **Code 39 Length Within Range**. Then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).




***Code 39 - Length Within Range**

Any Length - Scan this option to decode Code 39 symbols containing any number of characters.




Code 39 - Any Length



Code 39 Check Digit Verification


Parameter # 30h

When this feature is enabled, the scanner checks the integrity of all Code 39 symbols to verify that the data complies with specified check digit algorithm. Only those Code 39 symbols which include a modulo 43 check digit are decoded.



Enable Code 39 Check Digit

(01h)



***Disable Code 39 Check Digit**

(00h)

Transmit Code 39 Check Digit

Parameter # 2Bh

Scan this symbol to transmit the check digit with the data.



**Transmit Code 39 Check Digit
(Enable)**


(01h)

Scan this symbol to transmit data without the check digit.



***Do Not Transmit Code 39 Check Digit
(Disable)**

(00h)



Enable/Disable Code 39 Full ASCII

Parameter # 11h

To enable or disable Code 39 Full ASCII, scan the appropriate bar code below.

When enabled, the ASCII character set assigns a code to letters, punctuation marks, numerals, and most control keystrokes on the keyboard.

The first 32 codes are non-printable and are assigned to keyboard control characters such as BACKSPACE and RETURN. The other 96 are called printable codes because all but SPACE and DELETE produce visible characters.

Code 39 Full ASCII interprets the bar code special character (\$ + % /) preceding a Code 39 character and assigns an ASCII character value to the pair. For example, when Code 39 Full ASCII is enabled and a **+B** is scanned, it is interpreted as **b**, **%J** as **?**, and **\$H** emulates the keystroke **BACKSPACE**. Scanning **ABC\$M** outputs the keystroke equivalent of **ABC ENTER**.

Do not enable Code 39 Full ASCII and Trioptic Code 39 simultaneously.

The scanner does not autodiscriminate between Code 39 and Code 39 Full ASCII.



Enable Code 39 Full ASCII

(01h)



***Disable Code 39 Full ASCII**

(00h)

Code 39 Decode Performance


Parameter # 46h

Note: *This option is supported by the MS 2207, MS 2207VHD, and MS 3207 only.*

This option offers three levels of decode performance or “aggressiveness” for Code 39 symbols. Increasing the performance level reduces the amount of required bar code orientation, which is useful when scanning very long and/or truncated bar codes. Increased levels reduce decode security.


If you enable this option, you can select a Decode Performance level from the next page to suit performance needs.

Note: *This option only works with Code 39 One Discrete Length.*




***Enable Code 39 Decode Performance**

(01h)



Disable Code 39 Decode Performance

(00h)




Code 39 Decode Performance Level

Parameter # 47h


Note: This option is supported by the MS 2207, MS 2207VHD, and MS 3207 only.

Select a level of decode performance.




Code 39 Decode Performance Level 1

(03h)



Code 39 Decode Performance Level 2

(02h)



***Code 39 Decode Performance Level 3**

(01h)

Code 93

Enable/Disable Code 93

Parameter # 09h

To enable or disable Code 93, scan the appropriate bar code below.




Enable Code 93

(01h)



***Disable Code 93**

(00h)



Set Lengths for Code 93

Parameter # L1 = 1Ah, L2 = 1Bh

The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Lengths for Code 93 can be set for any length, one or two discrete lengths, or lengths within a specific range.

One Discrete Length - Select this option to decode only those codes containing a selected length. For example, select **Code 93 One Discrete Length**, then scan **1, 4**, to limit decoding to only Code 93 symbols containing 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



Code 93 - One Discrete Length

Two Discrete Lengths - Select this option to decode only those codes containing two selected lengths. For example, select **Code 93 Two Discrete Lengths**, then scan **0, 2, 1, 4**, to limit the decoding to only Code 93 symbols containing 2 or 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



Code 93 - Two Discrete Lengths

Length Within Range - Select this option to decode only those codes within a specified range. For example, to decode Code 93 symbols containing between 4 and 12 characters, first scan **Code 93 Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).




***Code 93 - Length Within Range**

Any Length - Scan this option to decode Code 93 symbols containing any number of characters.



Code 93 - Any Length




Code 11

Enable/Disable Code 11


Parameter # 0Ah

To enable or disable Code 11, scan the appropriate bar code below.



Enable Code 11

(01h)



***Disable Code 11**


(00h)

Set Lengths for Code 11

Parameter # L1 = 1Ch, L2 = 1Dh


The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. Lengths for Code 11 can be set for any length, one or two discrete lengths, or lengths within a specific range.

One Discrete Length - Select this option to decode only those codes containing a selected length. For example, select **Code 11 One Discrete Length**, then scan **1, 4**, to limit the decoding to only Code 11 symbols containing 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the **Cancel** bar code on [page 10-134](#).

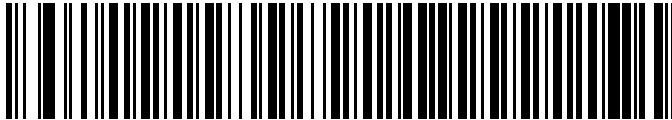


Code 11 - One Discrete Length

Two Discrete Lengths - Select this option to decode only those codes containing two selected lengths. For example, select **Code 11 Two Discrete Lengths**, then scan **0, 2, 1, 4**, to limit the decoding to only Code 11 symbols containing 2 or 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the **Cancel** bar code on [page 10-134](#).

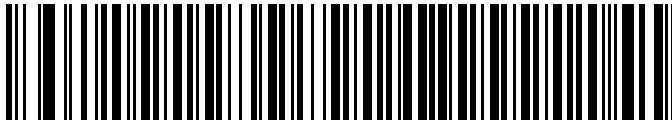

Code 11 - Two Discrete Lengths



Length Within Range - Select this option to decode only those codes within a specified range. For example, to decode Code 11 symbols containing between 4 and 12 characters, first scan **Code 11 Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



***Code 11 - Length Within Range**

Any Length - Scan this option to decode Code 11 symbols containing any number of characters.




Code 11 - Any Length

Code 11 Check Digit Verification


Parameter # 34h

When enabled, this parameter checks the integrity of a Code 11 symbol to ensure it complies with a specified check digit algorithm. Select either to check for one check digit, check for two check digits, or to disable the feature.



***Disable**

(00h)




One Check Digit

(01h)



Two Check Digits


(02h)



Transmit Code 11 Check Digit

Parameter # 2Fh


Scan this symbol to transmit the check digit with the data.



**Transmit Code 11 Check Digit
(Enable)**

(01h)

Scan this symbol to transmit data without the check digit.



***Do Not Transmit Code 11 Check Digit
(Disable)**


(00h)

Interleaved 2 of 5

Enable/Disable Interleaved 2 of 5


Parameter # 06h

To enable or disable Interleaved 2 of 5, scan the appropriate bar code below.




Enable Interleaved 2 of 5

(01h)



***Disable Interleaved 2 of 5**

(00h)



Set Lengths for Interleaved 2 of 5

Parameter # L1 = 16h, L2 = 17h

The length of a code refers to the number of characters (i.e., human readable characters) the code contains, and includes check digits. Lengths for I 2 of 5 can be set for any length, one or two discrete lengths, or lengths within a specific range.

One Discrete Length - Select this option to decode only those codes containing a selected length. For example, select **I 2 of 5 One Discrete Length**, then scan **1, 4**, to decode only I 2 of 5 symbols containing 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



***I 2 of 5 - One Discrete Length**

Two Discrete Lengths - Select this option to decode only those codes containing two selected lengths. For example, select **I 2 of 5 Two Discrete Lengths**, then scan **0, 2, 1, 4**, to decode only I 2 of 5 symbols containing 2 or 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



I 2 of 5 - Two Discrete Lengths

Length Within Range - Select this option to decode only codes within a specified range. For example, to decode I 2 of 5 symbols containing between 4 and 12 characters, first scan **I 2 of 5 Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).




I 2 of 5 - Length Within Range

Any Length - Scan this option to decode I 2 of 5 symbols containing any number of characters.

Note: *Selecting this option can lead to misdecodes for I 2 of 5 codes.*



I 2 of 5 - Any Length



I 2 of 5 Check Digit Verification

Parameter # 31h

When enabled, this parameter checks the integrity of an I 2 of 5 symbol to ensure it complies with a specified algorithm, either USS (Uniform Symbology Specification), or OPCC (Optical Product Code Council).



***Disable**

(00h)



USS Check Digit

(01h)



OPCC Check Digit

(02h)

Transmit I 2 of 5 Check Digit

Parameter # 2Ch

Scan this symbol to transmit the check digit with the data.



**Transmit I 2 of 5 Check Digit
(Enable)**


(01h)

Scan this symbol to transmit data without the check digit.



***Do Not Transmit I 2 of 5 Check Digit
(Disable)**

(00h)



Convert I 2 of 5 to EAN-13

Parameter # 52h

This parameter converts a 14 character I 2 of 5 code into EAN-13, and transmits to the host as EAN-13. To accomplish this, I 2 of 5 must be enabled, one length must be set to 14, and the code must have a leading zero and a valid EAN-13 check digit.



**Convert I 2 of 5 to EAN-13
(Enable)**

(01h)



***Do Not Convert I 2 of 5 to EAN-13
(Disable)**

(00h)

Discrete 2 of 5

Enable/Disable Discrete 2 of 5

Parameter # 05h

To enable or disable Discrete 2 of 5, scan the appropriate bar code below.




Enable Discrete 2 of 5

(01h)



***Disable Discrete 2 of 5**

(00h)



Set Lengths for Discrete 2 of 5

Parameter # L1 = 14h, L2 = 15h

The length of a code refers to the number of characters (i.e., human readable characters) the code contains, and includes check digits. Lengths for D 2 of 5 can be set for any length, one or two discrete lengths, or lengths within a specific range.

One Discrete Length - Select this option to decode only those codes containing a selected length. For example, select **D 2 of 5 One Discrete Length**, then scan **1, 4**, to decode only D 2 of 5 symbols containing 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



*D 2 of 5 - One Discrete Length

Two Discrete Lengths - Select this option to decode only those codes containing two selected lengths. For example, select **D 2 of 5 Two Discrete Lengths**, then scan **0, 2, 1, 4**, to decode only D 2 of 5 symbols containing 2 or 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



D 2 of 5 - Two Discrete Lengths

Length Within Range - Select this option to decode codes within a specified range. For example, to decode D 2 of 5 symbols containing between 4 and 12 characters, first scan **D 2 of 5 Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must be preceded by a leading zero). Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).




D 2 of 5 - Length Within Range

Any Length - Scan this option to decode D 2 of 5 symbols containing any number of characters.

Note: *Selecting this option can lead to misdecodes of D 2 of 5 codes.*



D 2 of 5 - Any Length



Codabar

Enable/Disable Codabar


Parameter # 07h

To enable or disable Codabar, scan the appropriate bar code below.



Enable Codabar

(01h)



***Disable Codabar**

(00h)

Set Lengths for Codabar

Parameter # L1 = 18h, L2 = 19h

The length of a code refers to the number of characters (i.e., human readable characters) the code contains, including start or stop characters. Lengths for Codabar may be set for any length, one or two discrete lengths, or lengths within a specific range.

One Discrete Length - Select this option to decode only those codes containing a selected length. For example, select **Codabar One Discrete Length**, then scan **1, 4**, to decode only Codabar symbols containing 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the [Cancel](#) bar code on [page 10-134](#).




Codabar - One Discrete Length

Two Discrete Lengths - Select this option to decode only those codes containing two selected lengths. For example, select **Codabar Two Discrete Lengths**, then scan **0, 2, 1, 4**, to decode only Codabar symbols containing 2 or 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the [Cancel](#) bar code on [page 10-134](#).



Codabar - Two Discrete Lengths



Length Within Range - Select this option to decode a code within a specified range. For example, to decode Codabar symbols containing between 4 and 12 characters, first scan **Codabar Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



***Codabar - Length Within Range**

Any Length - Scan this option to decode Codabar symbols containing any number of characters.




Codabar - Any Length

CLSI Editing

Parameter # 36h


When enabled, this parameter strips the start and stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar symbol.

Note: *Symbol length does not include start and stop characters.*




Enable CLSI Editing

(01h)



***Disable CLSI Editing**


(00h)



NOTIS Editing


Parameter # 37h

When enabled, this parameter strips the start and stop characters from decoded Codabar symbol.



Enable NOTIS Editing

(01h)



***Disable NOTIS Editing**

(00h)

MSI Plessey

Enable/Disable MSI Plessey

Parameter # 0Bh

To enable or disable MSI Plessey, scan the appropriate bar code below.




Enable MSI Plessey

(01h)



***Disable MSI Plessey**

(00h)

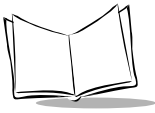

Set Lengths for MSI Plessey

Parameter # L1 = 1Eh, L2 = 1Fh

The length of a code refers to the number of characters (i.e., human readable characters) the code contains, and includes check digits. Lengths for MSI Plessey can be set for any length, one or two discrete lengths, or lengths within a specific range.

One Discrete Length - Select this option to decode only those codes containing a selected length. For example, select **MSI Plessey One Discrete Length**, then scan **1, 4**, to decode only MSI Plessey symbols containing 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



MSI Plessey - One Discrete Length

Two Discrete Lengths - Select this option to decode only those codes containing two selected lengths. For example, select **MSI Plessey Two Discrete Lengths**, then scan **0, 2, 1, 4**, to decode only MSI Plessey symbols containing 2 or 14 characters. Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).



MSI Plessey - Two Discrete Lengths

Length Within Range - Select this option to decode codes within a specified range. For example, to decode MSI Plessey symbols containing between 4 and 12 characters, first scan **MSI Plessey Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 10-132](#). To change the selection or cancel an incorrect entry, scan the *Cancel* bar code on [page 10-134](#).




***MSI Plessey - Length Within Range**

Any Length - Scan this option to decode MSI Plessey symbols containing any number of characters.

Note: *Selecting this option can cause misdecodes for MSI Plessey codes.*



MSI Plessey - Any Length



MSI Plessey Check Digits

Parameter # 32h

These check digits at the end of the bar code verify the integrity of the data. At least one check digit is required. Check digits are not automatically transmitted with the data.



***One MSI Plessey Check Digit**

(00h)

If two check digits is selected, also select an [MSI Plessey Check Digit Algorithm](#). See [page 10-94](#).



Two MSI Plessey Check Digit

(01h)

Transmit MSI Plessey Check Digit

Parameter # 2Eh

Scan this symbol to transmit the check digit with the data.



**Transmit MSI Plessey Check Digit
(Enable)**


(01h)

Scan this symbol to transmit data without the check digit.



***Do Not Transmit MSI Plessey Check Digit
(Disable)**

(00h)



MSI Plessey Check Digit Algorithm

Parameter # 33h

When the Two MSI Plessey check digits option is selected, an additional verification is required to ensure integrity. Select one of the following algorithms.



MOD 10/ MOD 11

(00h)



***MOD 10/ MOD 10**

(01h)

PDF417/MicroPDF417

Note: *These options are supported by the MS 2207, MS 2207VHD, and MS 3207 only.*

Enable/Disable PDF417

Parameter # 0Fh

To enable or disable PDF417, scan the appropriate bar code below.




Enable PDF417

(01h)



Disable PDF417

(00h)



Enable/Disable MicroPDF417

Parameter # E3h

To enable or disable MicroPDF417, scan the appropriate bar code below.



Enable MicroPDF417

(01h)




***Disable MicroPDF417**

(00h)

MicroPDF Performance


Parameter # F0h 65h

If there are problems decoding MicroPDF symbols, select Selective Performance. F0h 65h
This can decrease decoding aggressiveness on some symbols.




***Standard Performance for MicroPDF**

(00h)



Selective Performance for MicroPDF

(03h)

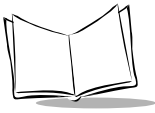

Code 128 Emulation

Parameter # 7Bh

When this parameter is enabled, the scanner transmits data from certain MicroPDF417 symbols as if it was encoded in Code 128 symbols. Transmit AIM Symbology Identifiers must be enabled for this parameter to work.

If Code 128 Emulation is enabled, these MicroPDF417 symbols are transmitted with one of the following prefixes:

- JC1 if the first codeword is 903-907, 912, 914, 915
- JC2 if the first codeword is 908 or 909
- JC0 if the first codeword is 910 or 911

If disabled, they are transmitted with one of the following prefixes:

- JL3 if the first codeword is 903-907, 912, 914, 915
- JL4 if the first codeword is 908 or 909
- JL5 if the first codeword is 910 or 911

Scan a bar code below to enable or disable Code 128 Emulation.



Enable Code 128 Emulation

(01h)



***Disable Code 128 Emulation**


(00h)

RSS Codes

RSS-14

Parameter # F0h 52h


To enable or disable RSS-14, scan the appropriate bar code below.



**Enable RSS-14
(01h)**




***Disable RSS-14
(00h)**




RSS-Limited

Parameter # F0h 53h

To enable or disable RSS-Limited, scan the appropriate bar code below.



**Enable RSS-Limited
(01h)**




***Disable RSS-Limited
(00h)**


RSS-Expanded

Parameter # F0h 54h


To enable or disable RSS-Expanded, scan the appropriate bar code below.



**Enable RSS-Expanded
(01h)**



***Disable RSS-Expanded
(00h)**



Convert RSS to UPC/EAN

Parameter # F0h 8Dh

Note: This option is supported by the MS 1207FZY and MS 1207WA only.

This parameter only applies to RSS-14 and RSS Limited symbols not decoded as part of a Composite symbol. When this conversion is enabled, RSS-14 and RSS Limited symbols encoding a single zero as the first digit have the leading '010' stripped and the bar code reported as EAN-13.

Bar codes beginning with two or more zeros but not six zeros have the leading '0100' stripped and the bar code reported as UPC-A. The UPC-A Preamble parameter to transmit the system character and country code applies to converted bar codes. Note that neither the system character nor the check digit can be stripped.



Enable Convert RSS to UPC/EAN



***Disable Convert RSS to UPC/EAN**


Composite

Note: *These options are supported by the MS 2207, MS 2207VHD, and MS 3207 only.*

Composite CC-C

Parameter # F0h 55h


Scan a bar code below to enable or disable Composite bar codes of type CC-C.



**Enable CC-C
(01h)**



***Disable CC-C
(00h)**




Composite CC-A/B

Parameter # F0h 56h

Scan a bar code below to enable or disable Composite bar codes of type CC-A/B.



**Enable CC-A/B
(01h)**




***Disable CC-A/B
(00h)**

Composite TLC-39

Parameter # F0h 73h


Scan a bar code below to enable or disable Composite bar codes of type TLC-39.



**Enable TLC39
(01h)**



***Disable TLC39
(00h)**




UPC Composite Mode

Parameter # F0h 58h


UPC symbols can be “linked” with a 2D symbol during transmission as if they were one symbol. Three options are offered for these symbols:

- Select **UPC Never Linked** to transmit UPC bar codes regardless of whether a 2D symbol is detected.
- Select **UPC Always Linked** to transmit UPC bar codes and the 2D portion. If 2D is not present, the UPC bar code does not transmit.
- If **Autodiscriminate UPC Composites** is selected, the scanner determines if there is a 2D portion, then transmits the UPC, as well as the 2D portion if present.




UPC Never Linked

(00h)



***UPC Always Linked**

(01h)



Autodiscriminate UPC Composites

(02h)

Data Options

Transmit Code ID Character


Parameter # 2Dh

A code ID character identifies the code type of a scanned bar code. This can be useful when decoding more than one code type. The code ID character is inserted between the prefix character (if selected) and the decoded symbol.

Select no code ID character, a Symbol Code ID character, or an AIM Code ID character. The Symbol Code ID characters are listed below.

Table 10-2. Symbol Code ID Characters

Code Type	Symbol Identifier
UPC-A, UPC-E, UPC-E1, EAN-13, EAN-8	A
Code 39, Code 32	B
Codabar	C
Code 128, ISBT 128	D
Code 93	E
Interleaved 2 of 5	F
Discrete 2 of 5, D 2of 5 IATA	G
Code 11	H
MSI Plessey	J
UCC/EAN 128	K
Bookland EAN	L
Trioptic Code 39	M
Coupon Code	N
RSS (all variants)	R
Composite*	T
Scanlet	W
PDF417, Micro PDF417, Macro PDF417, Micro MacroPDF417	X
*Note: UPC/EAN Composite is transmitted in two portions, each with a "T" prefix.	




Transmit Code ID Character (continued)




Symbol Code ID Character

(02h)



AIM Code ID Character

(01h)



***None**

(00h)


Prefix/Suffix Values

Parameter # P = 69h, S1 = 68h, S2 = 6Ah

A prefix and/or one or two suffixes can be appended to scan data for use in data editing. To set a value for a prefix or suffix, scan a four-digit number (i.e., four bar codes; see [Numeric Bar Codes](#) beginning on [page 10-132](#)) that corresponds to that value. See [Table A-1](#) on [page A-1](#) for the four-digit codes.

To change the selection or cancel an incorrect entry, scan the [Cancel](#) bar code on [page 10-134](#).

Note: *In order to use Prefix/Suffix values, first set the [Scan Data Transmission Format](#) on [page 10-111](#).*




Prefix/Suffix Values (continued)



Scan Prefix

(07h)



Scan Suffix 1

(06h)



Scan Suffix 2

(08h)



Data Format Cancel

Scan Data Transmission Format

To change the Scan Data Transmission Format, scan the **Scan Options** bar code below, then select one of four options:


- Data As Is
- <DATA> <SUFFIX>
- <PREFIX> <DATA>
- <PREFIX> <DATA> <SUFFIX>

Note: To set values for the prefix and/or suffix, see [Prefix/Suffix Values](#) on page 10-109.

After making a selection, scan the **Enter** bar code on page 10-112. To change the selection or to cancel an incorrect entry, scan the **Data Format Cancel** bar code on page 10-112.

To add a carriage return/enter after each bar code scanned, scan the following bar codes in order:


1. <SCAN OPTIONS>
2. <DATA> <SUFFIX>
3. Enter (on page 10-112).




Scan Options




***Data As Is**



Scan Data Transmission Format (continued)



<DATA> <SUFFIX>



<PREFIX> <DATA>



<PREFIX> <DATA> <SUFFIX>



Enter




Data Format Cancel

Event Reporting

The host can request the decoder to provide certain information (events) relative to the decoder's behavior. Enable or disable the events listed in [Table 10-3](#) by scanning the appropriate bar codes on the following pages. Parameter number format for these parameters follows those shown in the *Simple Serial Interface (SSI) Programmer's Guide* for parameters numbered 256 or higher.

Table 10-3. Event Codes

Event Class	Event	Code Reported
Decode Event	Non-parameter decode	01h
Boot Up Event	System power-up	03h
Parameter Event	Parameter entry error	07h
	Parameter stored	08h
	Defaults set (and parameter event is enabled by default)	0Ah
	Number expected	0Fh



Decode Event

Parameter # F0h 00h

When enabled, the scanner sends a message to the host whenever a bar code is successfully decoded. When disabled, no message is sent.



Enable

(01h)



***Disable**

(00h)

Boot Up Event

Parameter # F0h 02h

When enabled, the sends a message a message to the host whenever power is applied.
When disabled, no message is sent.




Enable

(01h)



***Disable**

(00h)



Parameter Event

Parameter # F0h 03h

When enabled, the scanner sends a message to the host when one of the events specified in [Table 10-3 on page 10-113](#) occurs. When disabled, no message is sent.



Enable

(01h)



***Disable**

(00h)

Macro PDF Features

Note: *These options are supported by the MS 2207, MS 2207VHD, and MS 3207 only.*

Transmit Symbols in Codeword Format

Parameter # Afh


Enable this to transmit each PDF symbol as directly decoded data codewords, whether or not that symbol is part of a macro PDF sequence. Note that data is output as codeword values, not as interpreted data.

“Codeword values” is an ASCII representation of a number from 000 to 928 for each codeword, preceded by an escape character. This escape character is a backslash by default, but you can change this value. For example, the codeword value 005 is sent to the host in the form of \005 for GLIs, and \C005C for ECIs. This output format is based on the AIM USA Uniform Symbology Specification for PDF417 (1994).

All output codewords are exactly 4 characters for GLIs and 6 characters for ECIs. However, there can be non-decodable characters in the PDF symbol, such as a GLI sequence. This special codeword sequence activates a certain kind of interpretation to the encoded data. Non-decodable codewords like GLIs are embedded in the output stream like any other codeword, e.g., \927\001.

Because GLIs are indistinguishable from other codewords in the output data stream, the host must recognize them as GLIs and process their interpretations.

Note that when a macro PDF sequence is transmitted, the last character in the last block of data transmitted is always \922 (if selected). This indicates the end of that macro PDF transmission.



Transmit Symbols in Codeword Format (continued)

Scan the appropriate bar code to enable or disable this.



Enable Transmit In Codeword Format

(01h)



***Disable Transmit In Codeword Format**

(00h)

Transmit Unknown Codewords

Parameter # BAh

Select **Transmit Unknown Codewords** to use the output codeword format for transmitting any non-GLI or non-macro PDF codeword. Select **Do Not Transmit Unknown Codewords** to sound a decode error beep when an unknown codeword is found.




Transmit Unknown Codewords

(01h)



***Do Not Transmit Unknown Codewords**

(00h)



Escape Characters

Parameter # E9h

This enables the backslash (\) character as an Escape character for systems that can process transmissions containing special data sequences. Scan a bar code below to either format special data (e.g., GLI escapes, MacroPDF417 Control Block optional fields) according to the GLI (Global Label Identifier) protocol or the ECI (Extended Channel Interpretation) protocol, or to disable this parameter.



ECI Protocol

(01h)



GLI Protocol

(02h)



***None**

(00h)

Delete Character Set ECIs

Parameter # E6h

Select **Delete Character Set ECIs** to delete any escape sequences representing Character Set ECIs (also known as GLIs) from its buffer before transmission. In many receiving systems, Character Set ECIs can be removed without affecting the way data is displayed or processed.

Select **Transmit Character Set ECIs** to transmit data from PDF417 and MicroPDF417 bar codes containing Character Set ECIs, even when the ECI Protocol is disabled.

Scan a bar code to delete or transmit character set ECIs.




Delete Character Set ECIs

(01h)



***Transmit Character Set ECIs**

(00h)



ECI Decoder

Parameter # E8h

This parameter enables the scanner to interpret any Extended Channel Interpretations (ECIs) that are supported by the scanner firmware. This does not affect symbols not encoded using ECIs. This version of the product supports ECIs 000900 through 000913, used for efficient encoding of Common Data Syntax Format 00-99. If this parameter is disabled, and a symbol is scanned that was encoded using an ECI escape, the scanner transmits the ECI escape followed by the uninterpreted data.

Scan a bar code to enable or disable this option.



***Enable ECI Decoder**

(01h)



Disable ECI Decoder

(00h)

Transmit Macro PDF User-Selected Fields

Note: *These options are supported by the MS 2207, MS 2207VHD, and MS 3207 only.*

Enable or disable each of the following parameters to indicate whether or not to transmit the specified field in subsequently scanned Macro PDF417 symbols. The options cannot be changed in the middle of a Macro PDF set entry. All user-selected fields are prefixed by \923 for GLIs, and \C923C for ECIs. Tags and examples in the following parameters demonstrate GLI protocol, but the ECI tag (\C923C) can be used instead if ECI protocol is enabled.

Transmit File Name

Parameter # B0h

Transmit File Name activates transmission of the file name field. The field character tag is \923\000. For example, the filename MANHOURS.WK1 is sent as:
\923\000MANHOURS.WK1.




Enable File Name Transmit

(01h)



***Disable File Name Transmit**

(00h)



Transmit Block Count

Parameter # B1h

Transmit Block Count activates transmission of the block count field. The field character tag is \923\001. For example, the field may be: \923\0011856.



Enable Transmit Block Count

(01h)



***Disable Transmit Block Count**

(00h)

Transmit Time Stamp

Parameter # B2h

Transmit Time Stamp activates transmission of the time stamp field. The field character tag is \923\002. For example, the field may be: \923\0022123443243234.




Enable Transmit Time Stamp

(01h)



***Disable Transmit Time Stamp**

(00h)



Transmit Sender

Parameter # B3h

Transmit Sender activates transmission of the sender field. The field character tag is \923\003. For example, the field may be: \923\003Symbol Technologies Holtsville, NY.



Enable Sender Transmit

(01h)



***Disable Sender Transmit**

(00h)

Transmit Addressee

Parameter # B4h

Transmit Addressee activates transmission of the addressee field. The field character tag is \923\004. For example, the field may be: \923\004AIM USA.




Enable Addressee Transmit

(01h)



***Disable Addressee Transmit**

(00h)



Transmit Checksum

Parameter # B6h

Transmit Checksum activates transmission of the checksum field. The field character tag is \923\006. For example, the field may be: \923\00663823.



Enable Checksum Transmit

(01h)



***Disable Checksum Transmit**

(00h)

Transmit File Size

Parameter # B5h

Transmit File Size activates transmission of the file size field. The field character tag is \923\005. For example, the field may be: \923\005179234.




Enable File Size Transmit

(01h)



***Disable File Size Transmit**

(00h)



Transmit Macro PDF Control Header

Parameter # B7h

Transmit Macro PDF Control Header activates transmission of the control header, which contains the segment index and the file ID. For example, the field can be: \92800000\725\120\343. The five digits after the \928 are the segment index (or block index), and \725\120\343 is the file ID.



Enable Macro PDF Control Header Transmit

(01h)



***Disable Macro PDF Control Header Transmit**

(00h)

Last Blocker Marker

Parameter # B9h

Enable Last Block Marker marks the last block in the set by the codeword \922.




Enable Last Block Marker

(01h)




***Disable Last Block Marker**

(00h)



Numeric Bar Codes

For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).



0



1



2



3

Numeric Bar Codes (continued)



4




5



6



7



Numeric Bar Codes (continued)



8



9

Cancel

To change a selection or cancel an incorrect entry, scan the bar code below.



Cancel



Chapter 11

RS-232 Interface



Introduction

This chapter provides RS-232 host information for setting up the MiniScan XX07 Series scanner. The RS-232 interface is used to attach the MiniScan scanner to point-of-sale devices, host computers, or other devices with an available RS-232 port (e.g., com port).

If your host is not listed in [Table 11-2](#), set the communication parameters to match the host device. Refer to the documentation for the host device.


This scanner uses TTL RS-232 levels which interfaces with all PC's with no additional hardware.

Note: *Particularly noisy electrical environments may require a cable with an RS-232 transceiver. To obtain this cable contact the Symbol Support Center.*

Throughout the programming bar code menus, asterisks (*) indicate default values.



* Indicates Default — * **Baud Rate 9600** — Feature/Option



RS-232 Default Parameters

Table 11-1 lists the defaults for RS-232 host parameters. To change any option, scan the appropriate bar code(s) provided in the Parameter Descriptions section beginning on page 11-6.

Note: See [Chapter 9, Maintenance and Troubleshooting](#) for all user preferences, hosts, symbologies, and miscellaneous parameters.


Table 11-1. RS-232 Host Default Table

Parameter	Default	Page Number
RS-232 Host Parameters		
RS-232 Host Types	Standard ¹	11-6
Baud Rate	9600	11-9
Parity Type	None	11-11
Stop Bit Select	1 Stop Bit	11-12
Data Bits	8-Bit	11-12
Check Receive Errors	Enable	11-13
Hardware Handshaking	None	11-15
Software Handshaking	None	11-16
Host Serial Response Time-out	2 Sec	11-19
RTS Line State	Low RTS	11-20
Beep on <BEL>	Disable	11-20
Intercharacter Delay	0 msec	11-21
Nixdorf Beep/LED Options	Normal Operation	11-22

¹User selection is required to configure this interface; this is the most common selection.

**Table 11-1. RS-232 Host Default Table (Continued)**

Parameter	Default	Page Number
Ignore Unknown Characters	Send Bar Code	11-23
¹ User selection is required to configure this interface; this is the most common selection.		



RS-232 Host Parameters

Various RS-232 hosts are configured with their own parameter default settings (Table 11-2). Selecting the ICL, Fujitsu, Wincor-Nixdorf Mode A, Wincor-Nixdorf Mode B, Olivetti, Omron, or standard sets the defaults listed below.

Table 11-2. Terminal Specific RS-232

Parameter	Standard (Default)	ICL	Fujitsu	Wincor-Nixdorf Mode A	Wincor-Nixdorf Mode B/ OPOS	Olivetti	Omron
Transmit Code ID	No	Yes	Yes	Yes	Yes	Yes	Yes
Data Transmission Format	Data as is	Data/ Suffix	Data/ Suffix	Data/Suffix	Data/Suffix	Prefix/Data/ Suffix	Data/Suffix
Suffix	CR/LF (7013)	CR (1013)	CR (1013)	CR (1013)	CR (1013)	ETX (1003)	CR (1013)
Baud Rate	9600	9600	9600	9600	9600	9600	9600
Parity	None	Even	None	Odd	Odd	Even	None
Hardware Handshaking	None	RTS/CTS Option 3	None	RTS/CTS Option 3	RTS/CTS Option 3	None	None
Software Handshaking	None	None	None	None	None	Ack/Nak	None
Serial Response Time-out	2 Sec.	9.9 Sec.	2 Sec.	9.9 Sec.	9.9 Sec.	9.9 Sec.	9.9 Sec.
Stop Bit Select	One	One	One	One	One	One	One
ASCII Format	8-Bit	8-Bit	8-Bit	8-Bit	8-Bit	7-Bit	8-Bit
Beep On <BEL>	Disable	Disable	Disable	Disable	Disable	Disable	Disable
RTS Line State	Low	High	Low	Low	Low = No data to send	Low	High
Prefix	None	None	None	None	None	STX (1002)	None

*In the Nixdorf Mode B, if CTS is Low, scanning is disabled. When CTS is High, the user can scan bar codes.

**If Nixdorf Mode B is scanned without the scanner connected to the proper host, the scanner may not be able to scan. If this happens, scan a different RS-232 host type within 5 seconds of cycling power to the scanner.




RS-232 Host Parameters (continued)

Selecting the ICL, Fujitsu, Wincor-Nixdorf Mode A, Wincor-Nixdorf Mode B, OPOS, Olivetti, or Omron terminal enables the transmission of code ID characters listed in [Table 11-3](#). These code ID characters are not programmable and are separate from the Transmit Code ID feature. Do not enable the Transmit Code ID feature for these terminals.

Table 11-3. Terminal-Specific Code ID Characters


Parameter	ICL	Fujitsu	Wincor-Nixdorf Mode A	Wincor-Nixdorf Mode B/OPOS	Olivetti	Omron
UPC-A	A	A	A	A	A	A
UPC-E	E	E	C	C	C	E
EAN-8/JAN-8	FF	FF	B	B	B	FF
EAN-13/JAN-13	F	F	A	A	A	F
Code 39	C <len>	None	M	M	M <len>	C <len>
Codabar	N <len>	None	N	N	N <len>	N <len>
Code 128	L <len>	None	K	K	K <len>	L <len>
I 2 of 5	I <len>	None	I	I	I <len>	I <len>
Code 93	None	None	L	L	L <len>	None
D 2 of 5	H <len>	None	H	H	H <len>	H <len>
UCC/EAN 128	L <len>	None	P	P	P <len>	L <len>
MSI	None	None	O	O	O <len>	None
Bookland EAN	F	F	A	A	A	F
Trioptic	None	None	None	None	None	None
Code 11	None	None	None	None	None	None
IATA	H <len>	None	H	H	None	None
Code 32	None	None	None	None	None	None



RS-232 Host Types

To select an RS-232 host interface, scan one of the following bar codes.

Note: *You must select an interface as there is no default; Standard RS-232 is the most common selection.*




Standard RS-232



ICL RS-232



Wincor-Nixdorf RS-232 Mode A




Wincor-Nixdorf RS-232 Mode B




RS-232 Host Types (continued)




Olivetti ORS450




Omron



OPOS/JPOS



Fujitsu RS-232




Baud Rate


Baud rate is the number of bits of data transmitted per second. The scanner's baud rate setting should match the baud rate setting of the host device. If not, data may not reach the host device or may reach it in distorted form.




Baud Rate 600



Baud Rate 1200



Baud Rate 2400



Baud Rate 4800



Baud Rate (continued)




***Baud Rate 9600**



Baud Rate 19,200



Baud Rate 38,400



Parity

A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

Select **Odd** parity and the parity bit value is set to 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.



Odd

Select **Even** parity and the parity bit value is set to 0 or 1, based on data, to ensure that an even number of 1 bits are contained in the coded character.



Even

Select **Mark** parity and the parity bit is always 1.



Mark



Parity (continued)

Select **Space** parity and the parity bit is always 0.




Space

Select **None** when no parity bit is required.



***None**




Stop Bit Select

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. Select the number of stop bits (one or two) the host device is programmed to accommodate.



***1 Stop Bit**



2 Stop Bits

Data Bits

This parameter allows the scanner to interface with devices requiring a 7-bit or 8-bit ASCII protocol.



7-Bit



***8-Bit**




Check Receive Errors


Select whether or not the parity, framing, and overrun of received characters are checked. The parity value of received characters is verified against the parity parameter selected earlier.



***Check For Received Errors**



Do Not Check For Received Errors



Hardware Handshaking

The data interface consists of an RS-232 port designed to operate either with or without the hardware handshaking lines, *Request to Send* (RTS), and *Clear to Send* (CTS).

If Standard RTS/CTS handshaking is not selected, scan data is transmitted as it becomes available. Select Standard RTS/CTS handshaking to transmit scan data according to the following sequence:

- The scanner reads the CTS line for activity. If CTS is asserted, the scanner waits up to the Host Serial Response Time-out for the host to negate the CTS line. If, after the Host Serial Response Time-out (default), the CTS line is still asserted, the scanner sounds a transmit error and discards any scanned data.
- When the CTS line is negated, the scanner asserts the RTS line and waits up to the Host Serial Response Time-out for the host to assert CTS. When the host asserts CTS, the scanner transmits the data. If, after the Host Serial Response Time-out (default), the CTS line is not asserted, the scanner sounds a transmit error, and discards the data.
- When data transmission is complete, the scanner negates RTS 10 msec after sending the last character.
- The host responds by negating CTS. The scanner checks for a negated CTS upon the next transmission of data.

During data transmission, the CTS line should be asserted. If CTS is deasserted for more than 50 ms between characters, the transmission is aborted, the scanner sounds a transmission error, and the data is discarded.

If this communications sequence fails, the scanner issues an error indication. In this case, the data is lost and must be rescanned.


If Hardware Handshaking and Software Handshaking are both enabled, Hardware Handshaking takes precedence.

Note: *The DTR signal is jumpered to the active state.*



None


Scan the bar code below if no Hardware Handshaking is desired.



***None**

Standard RTS/CTS


Scan the bar code below to select Standard RTS/CTS Hardware Handshaking.



Standard RTS/CTS

RTS/CTS Option 1

When RTS/CTS Option 1 is selected, the scanner asserts RTS before transmitting and ignores the state of CTS. The scanner de-asserts RTS when the transmission is complete.




RTS/CTS Option 1

RTS/CTS Option 2

When Option 2 is selected, RTS is always high or low (user-programmed logic level). However, the scanner waits for CTS to be asserted before transmitting data. If CTS is not asserted within the Host Serial Response Time-out (default), the scanner issues an error indication and discards the data.




RTS/CTS Option 2



RTS/CTS Option 3

When Option 3 is selected, the scanner asserts RTS prior to any data transmission, regardless of the state of CTS. The scanner waits up to the Host Serial Response Time-out (default) for CTS to be asserted. If CTS is not asserted during this time, the scanner issues an error indication and discards the data. The scanner de-asserts RTS when transmission is complete.



RTS/CTS Option 3

Software Handshaking

This parameter offers control of the data transmission process in addition to, or instead of, that offered by hardware handshaking. There are five options.

If Software Handshaking and Hardware Handshaking are both enabled, Hardware Handshaking takes precedence.

None

When this option is selected, data is transmitted immediately.



***None**



ACK/NAK

When this option is selected, after transmitting data, the scanner expects either an ACK or NAK response from the host. When the scanner receives a NAK, it re-transmits the data and waits for either an ACK or NAK. After three unsuccessful attempts to send data, the scanner issues an error indication and discards the data.


The scanner waits up to the programmable Host Serial Response Time-out to receive an ACK or NAK. If the scanner does not get a response in this time, it issues an error indication and discards the data. There are no retries when a time-out occurs.




ACK/NAK

ENQ

When this option is selected, the scanner waits for an ENQ character from the host before transmitting data. If the scanner does not receive an ENQ within the Host Serial Response Time-out, it issues an error indication and discards the data. The host must transmit an ENQ character at least every Host Serial Response Time-out to prevent transmission errors.



ENQ



ACK/NAK with ENQ

This combines the two previous options.




ACK/NAK with ENQ

XON/XOFF

An XOFF character turns the scanner transmission off until the scanner receives an XON character. There are two situations for XON/XOFF:

- XOFF is received before the scanner has data to send. When the scanner has data to send, it waits up to Host Serial Response Time-out for an XON character before transmission. If the scanner does not receive an XON within this time, it issues an error indication and discards the data.
- XOFF is received during a transmission. Data transmission then stops after sending the current byte. When the scanner receives an XON character, it sends the rest of the data message. The scanner waits indefinitely for the XON.



XON/XOFF




Host Serial Response Time-out

This parameter specifies how long the scanner waits for an ACK, NAK, or CTS before determining that a transmission error has occurred. This only applies when an ACK/NAK Software Handshaking mode or RTS/CTS Hardware Handshaking is enabled.




***Minimum: 2 Sec**



Low: 2.5 Sec




Medium: 5 Sec



High: 7.5 Sec



Maximum: 9.9 Sec



RTS Line State

This parameter sets the idle state of the Serial Host RTS line. Scan a bar code below to select **Low RTS** or **High RTS** line state.




***Host: Low RTS**



Host: High RTS

Beep on <BEL>

When this parameter is enabled, the scanner issues a beep when a <BEL> character is detected on the RS-232 serial line. <BEL> is issued to gain a user's attention to an illegal entry or other important event.



**Beep On <BEL> Character
(Enable)**



***Do Not Beep On <BEL> Character
(Disable)**



Intercharacter Delay

This parameter specifies the intercharacter delay inserted between character transmissions.



***Minimum: 0 msec**



Low: 25 msec




Medium: 50 msec



High: 75 msec




Maximum: 99 msec




Nixdorf Beep/LED Options

When Nixdorf Mode B is selected, this indicates when the scanner beeps and turns on its LED after a decode.



***Normal Operation**
(Beep/LED immediately after decode)



Beep/LED After Transmission




Beep/LED After CTS Pulse



Ignore Unknown Characters


Unknown characters are characters the host does not recognize. When Send Bar Codes with Unknown Characters is selected, all bar code data is sent except for unknown characters, and no error beeps sound on the scanner. When Do Not Send Bar Codes With Unknown Characters is selected, bar code data is sent up to the first unknown character, then four (error) beeps sound on the scanner.

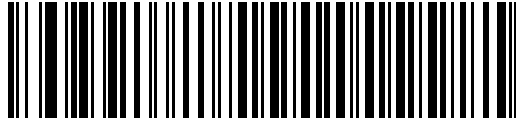


***Send Bar Code
(with unknown characters)**



**Do Not Send Bar Codes
(with unknown characters)**




MS XX07 Series Integration Guide

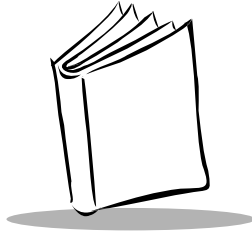

Chapter 12

USB Interface

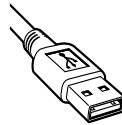

Introduction

This chapter describes how to connect and configure the MS XX07 Series scanner with a USB host. The MiniScan attaches directly to a USB host, or a powered USB hub, which powers it. No additional power supply is required.


Throughout the programming bar code menus, asterisks (*) indicated default values.



***North American, Standard USB Keyboard**

* Indicates Default

Feature/Option



Connecting a USB Interface

The scanner connects with USB hosts including:

- Desktop PCs and Notebooks
- Apple™ iMac, G4, iBooks (North America only)
- IBM SurePOS terminals
- Sun, IBM, and other network computers that support more than one keyboard.

The following operating systems support the scanner through USB:

- Windows 98, 2000, ME, XP
- MacOS 8.5 and above
- IBM 4690 OS.

The scanner also interfaces with other USB hosts that support USB Human Interface Devices (HID). For more information on USB technology, hosts, and peripheral devices, visit www.symbol.com/usb.




USB Default Parameters

Table 12-1 lists the defaults for USB host parameters. To change any option, scan the appropriate bar code(s) provided in *USB Host Parameters* on page 12-4.

Note: See *Chapter 9, Maintenance and Troubleshooting* for all user preferences, hosts, symbologies, and miscellaneous default parameters.

Table 12-1. USB Host Parameters Default Table

Parameter	Default	Page Number
USB Device Type	HID Keyboard Emulation	12-4
USB Country Keyboard Types (Country Codes)	North American	12-5
USB Keystroke Delay	No Delay	12-8
USB CAPS Lock Override	Disable	12-9
USB Ignore Unknown Characters	Enable	12-10
Emulate Keypad	Disable	12-11
USB FN1 Substitution	Disable	12-11
Function Key Mapping	Disable	12-12
Simulated Caps Lock	Disable	12-12
Convert Case	None	12-13




USB Host Parameters

USB Device Type

Select the desired USB device type.

Note: *When changing USB Device Types, the scanner automatically restarts and issues the standard startup beep sequences.*



***HID Keyboard Emulation**



IBM Table Top USB



IBM Hand-Held USB




USB Country Keyboard Types (Country Codes)


Scan the bar code corresponding to the keyboard type. This setting applies only to the USB HID Keyboard Emulation device.




***North American Standard USB Keyboard**



German Windows




French Windows



USB Country Keyboard Types (continued)




French Canadian Windows 95/98



French Canadian Windows 2000/XP



Spanish Windows



Italian Windows



USB Country Keyboard Types (continued)



Swedish Windows




UK English Windows



Japanese Windows (ASCII)



Portuguese-Brazilian Windows




USB Keystroke Delay

This parameter sets the delay, in milliseconds, between emulated keystrokes. Scan a bar code below to increase the delay when hosts require a slower transmission of data.



***No Delay**



Medium Delay (20 msec)




Long Delay (40 msec)




USB CAPS Lock Override


This option applies only to the HID Keyboard Emulation device. When enabled, the case of the data is preserved regardless of the state of the caps lock key. This setting is always enabled for the *Japanese, Windows (ASCII)* keyboard type.



**Override Caps Lock Key
(Enable)**



***Do Not Override Caps Lock Key
(Disable)**




USB Ignore Unknown Characters

This option applies only to the HID Keyboard Emulation device and IBM device. Unknown characters are characters the host does not recognize. Select **Send Bar Codes With Unknown Characters** to send all bar code data except for unknown characters. No error beeps sound. When **Do Not Send Bar Codes With Unknown Characters** is selected, bar codes containing at least one unknown character are not sent to the host, and an error beep sounds.




***Send Bar Codes With Unknown Characters
(Transmit)**




**Do Not Send Bar Codes with Unknown Characters
(Disable)**

Emulate Keypad

When enabled, all characters are sent as ASCII sequences over the numeric keypad. For example ASCII A is sent as “ALT make” 0 6 5 “ALT Break”.




***Disable Keypad Emulation**




Enable Keypad Emulation

USB Keyboard FN 1 Substitution


This option applies only to the USB HID Keyboard Emulation device. Enable this to replace any FN 1 characters in an EAN 128 bar code with a Key Category and value.



Enable



***Disable**



Function Key Mapping

ASCII values under 32 are normally sent as a control-key sequences (see [Table A-2 on page A-7](#)). When this parameter is enabled, the keys in bold are sent in place of the standard key mapping. Table entries that do not have a bold entry remain the same whether or not this parameter is enabled.




***Disable Function Key Mapping**



Enable Function Key Mapping

Simulated Caps Lock

When enabled, the scanner inverts upper and lower case characters on the scanner bar code as if the Caps Lock state is enabled on the keyboard. This is done regardless of the current state of the keyboard's Caps Lock state.



***Disable Simulated Caps Lock**



Enable Simulated Caps Lock



Convert Case


When enabled, the scanner converts all bar code data to the selected case.




***No Case Conversion**




Convert All to Upper Case



Convert All to Lower Case



MS XX07 Series Integration Guide

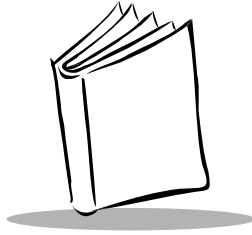

Chapter 13

Advanced Data Formatting

Introduction

Advanced Data Formatting (ADF) is a means of customizing data before transmission to a host device. Scan data can be edited to suit particular requirements.

ADF can be implemented in the scanner through scanning a related series of bar codes, which begin on page [13-8](#).

Rules: Criteria Linked to Actions


In ADF, data is customized through **rules**. These rules perform detailed actions when the data meets certain criteria. One rule can consist of single or multiple criteria applied to single or multiple actions.

For instance, a data formatting rule can be:

- Criteria:** *When scan data is Code 39, length 12, and data at the start position is the string "129",*
- Actions:** *pad all sends with zeros to length 8,
send all data up to X,
send a space.*

If a Code 39 bar code of 1299X1559828 is scanned, the scanner transmits: 00001299<space>.

If a Code 39 bar code of 1299X15598 is scanned, this rule is ignored because the length criteria is not met.



The rule specifies the editing conditions and requirements before data transmission occurs.

Using ADF Bar Codes

When programming a rule, make sure the rule is logically correct. Plan ahead before scanning.

To program each data formatting rule:

- **Start the Rule.** Scan the **Begin New Rule** bar code on page 13-8.
- **Criteria.** Scan the bar codes for all pertinent criteria. Criteria can include code type (e.g., Code 128), code length, or data that contains a specific character string (e.g., the digits “129”). These options are described in [Criteria](#) on page 13-12.
- **Actions.** Scan all actions related to, or affecting, these criteria. The actions of a rule specify how to format the data for transmission. These options are described in [ADF Bar Code Menu Example](#) on page 13-3.
- **Save the Rule.** Scan the **Save Rule** bar code on page 13-9. This places the rule in the “top” position in the rule buffer.
- If you make errors during this process, some special-purpose bar codes can be useful: **Erase Criteria and Start Again**, **Erase Actions and Start Again**, **Erase Previously Saved Rule**, etc.

Erase criteria, actions, and entire rules by scanning the appropriate bar code (see page 13-9).

[Standard Beeper Definitions](#) on page 3-8 help guide you through the programming steps.

ADF Bar Code Menu Example

This section provides an example of how to enter and use ADF rules for scan data.

An auto parts distribution center wants to encode manufacturer ID, part number, and destination code into their own Code 128 bar codes. The distribution center also has products that carry UPC bar codes applied by the manufacturer. The Code 128 bar codes are in the format:

MMMMMPPPPDD

Where: M = Manufacturer ID
 P = Part Number
 D = Destination Code


The distribution center uses a PC with dedicated control characters for manufacturer ID <CTRL M>, part number <CTRL P>, and destination code <CTRL D>. At this center the UPC data is treated as a manufacturer ID code.

The following rules need to be entered:

When scanning data of code type Code 128, send the next 5 characters, send the manufacturer ID key <CTRL M>, send the next 5 characters, send the part number key <CTRL P>, send the next 2 characters, send the destination code key <CTRL D>.

When scanning data of code type UPC/EAN, send all data, send the manufacturer ID key <CTRL M>.

To enter these rules, use the following steps:



Rule 1: The Code 128 Scanning Rule

Step	Bar Code	On Page	Beep Indication
1	Begin New Rule	13-8	High High
2	Code 128	13-12	High High
3	Send next 5 characters	13-24	High High
4	Send <CTRL M>	13-44	High High
5	Send next 5 characters	13-24	High High
6	Send <CTRL P>	13-45	High High
7	Send next 2 characters	13-24	High High
8	Send <CTRL D>	13-43	High High
9	Save Rule	13-9	High Low High Low

Rule 2: The UPC Scanning Rule

Step	Bar Code	On Page	Beep Indication
1	Begin New Rule	13-8	High High
2	UPC/EAN	13-13	High High
3	Send all remaining data	13-24	High High
4	Send <CTRL M>	13-44	High High
5	Save Rule	13-9	High Low High Low

If you make a mistake while entering this rule, scan the [Quit Entering Rules](#) bar code on page 13-10. If you already saved the rule, scan the [Erase Previously Saved Rule](#) bar code on page 13-9.

Alternate Rule Sets

ADF rules can be grouped into one of four alternate sets which can be turned on and off when needed. This is useful to format the same message in different ways. For example, a Code 128 bar code contains the following information:

Class (2 digits), Stock Number (8) digits, Price (5 digits)

This bar code might look like:

245671243701500

where:

Class = 24

Stock Number = 56712437

Price = 01500

Ordinarily you would send this data as follows:

24 (class key)

56712437 (stock key)

01500 (enter key)

But, when there is a sale, you may want to send only the following:

24 (class key)

56712437 (stock key)

and the cashier keys the price manually.

To implement this, first enter an ADF rule that applies to the normal situation, such as:

When scanning a bar code of length 15, send the next 2 characters, send the class key, send the next 8 characters, send the stock key, send the data that remains, send the Enter key.

Then enter the “sale” rule, such as:


Scan Rule Belongs to Set 1. When scanning a bar code of length 15, send the next 2 characters, send the class key, send the next 8 characters, send the stock key.

To switch between the two sets of rules, program a “switching” rule that specifies what type of bar code must be scanned to switch between the rule sets. For example, in the case of the “sale” rule, the rule programmer wants the cashier to scan the bar code “M” before a sale. To do this, a rule can be entered as follows:

When scanning a bar code of length 1 that begins with “M”, select rule set number 1.

Another rule could be programmed to switch back:

When scanning a bar code of length 1 that begins with “N”, turn off rule set number 1.

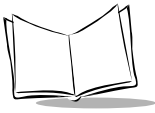

The switching back to normal rules can also be done in the “sale” rule. For example:

When scanning a bar code of length 15, send the next 2 characters, send the class key, send the next 8 characters, send the stock key, turn off rule set 1.

It is recommended that you scan the **Disable All Rule Sets** bar code on page 13-11 after programming a rule belonging to an alternate rule set.

In addition to enabling and disabling rule sets within the rules, you can enable or disable them by scanning the appropriate bar codes on [13-11](#).

Rules Hierarchy (in Bar Codes)

The order of programming individual rules is important. Program the most general rule last.

All programmed rules are stored in a buffer. As they are programmed, they are stored at the “top” of a rules list. If three rules are created, the list is configured as follows:

Third Rule

Second Rule

First Rule

When data is scanned, the rules list is checked from top to bottom to determine if the criteria matches (and therefore, if the actions occur). Input is modified into the data format specified by the first matching set of criteria it finds. Program the most general rule last.

For example, if the THIRD rule states:

When scanning a bar code of any length, send all data, then send the ENTER key.

and the SECOND rule states:

When scanning a Code 128 bar code of length 12, send the first four characters, then send the ENTER key, then send all remaining data.

and a Code 128 bar code of length 12 is scanned, the THIRD rule takes effect and the SECOND rule appears to not function.


Note that ADF rules are also created when using the standard data editing functions. Scan options and prefix/suffix programming in the parameter *Scan Data Transmission Format* are entered as ADF rules. The hierarchy mentioned above also applies to them. These rules reside in the same “rule list” as ADF Rules, so the order of their creation is also important.

Default Rules

Every unit has a default rule to send all scan data. Units with custom software can have one or more default rules. The rules hierarchy checks user programmable rules first, then the default rules. To disable default rules, enter the following general rule in the user programmable buffer:

When receiving scan data, send all data.

Since this rule always applies, ADF never goes into the default rules.



Special Commands

Pause Duration

This parameter along with [Send Pause](#) on page 13-28 inserts a pause in the data transmission. To set a pause, which is measured in 0.1 second intervals, scan a two-digit number (i.e., two numeric bar codes). For example, scanning bar codes **0** and **1** inserts a 0.1 second pause; **0** and **5** inserts a 0.5 second delay. Numeric bar codes begin on page [10-132](#). To change the selection or to cancel an incorrect entry, scan [Cancel](#) on page 10-134.



Pause Duration

Begin New Rule

Scan this bar code to start entering a new rule.



Begin New Rule

Save Rule

Scan this bar code to save the entered rule.



Save Rule

Erase

Use these bar codes to erase criteria, actions, or rules.



**Erase Criteria And
Start Again**




**Erase Actions And
Start Again**



**Erase Previously
Saved Rule**



Erase All Rules



Quit Entering Rules

Scan this bar code to quit entering rules.



Quit Entering Rules

Disable Rule Set

Use these bar codes to disable rule sets.



Disable Rule Set 1



Disable Rule Set 2




Disable Rule Set 3



Disable Rule Set 4



Disable All Rule Sets



Criteria

Code Types

Select any number of code types to be affected. Scan all selected codes in succession, prior to selecting other criteria. *If you don't select a code type, all code types are affected.*



Code 39



Codabar



RSS 14



RSS Limited



RSS Expanded



Code 128

Scan the bar codes for all code types desired before selecting other criteria.



D 2 OF 5



IATA 2 OF 5



I 2 OF 5



Code 93



UPC-A




UPC-E



EAN-8



EAN-13



Code Types (continued)



MSI



UCC/EAN 128



UPC-E1



Bookland EAN



Trioptic Code 39



PDF417

Code Lengths

Scan these bar codes to define the number of characters the selected code type must contain. *If you don't select a code length, selected code types of any length are affected.*

Select one length per rule only.



1 Character



2 Characters



3 Characters




4 Characters



5 Characters



6 Characters



Code Lengths (continued)



7 Characters



8 Characters



9 Characters



10 Characters



11 Characters



12 Characters

Code Lengths (continued)



13 Characters



14 Characters



15 Characters




16 Characters



17 Characters



18 Characters



Code Lengths (continued)



19 Characters



20 Characters



21 Characters



22 Characters



23 Characters



24 Characters

Code Lengths (continued)



25 Characters



26 Characters



27 Characters




28 Characters



29 Characters



30 Characters



Message Containing A Specific Data String

Use this feature to select whether the formatting affects data that begins with a specific character or data string, or contains a specific character or data string.

There are 4 features:

- Specific String at Start
- Specific String, Any Location
- Any Message OK
- Rule Belongs to Set

Specific String at Start

To enter the desired character or characters:

1. Scan the following bar code.
2. Enter a string of characters (up to a total of 8) using the [Alphanumeric Keyboard](#) beginning on page 13-80.
3. Scan **End Of Message** on page 13-86.



Specific String At Start

Specific String, Any Location

To enter the *position* (use a leading “zero” if necessary):


1. Scan the following bar code.
2. Enter a location using the *Numeric Keypad* on page 13-22.
3. Enter a string of characters (up to a total of 8) using the *Alphanumeric Keyboard* beginning on page 13-80.
4. Scan **End Of Message** on page 13-86.



Specific String Any Location

Any Message OK

Do not scan a bar code to format all selected code types, regardless of information contained.



Numeric Keypad

Do not confuse these bar codes with those on the alphanumeric keyboard.



0



1



2



3



4



5



6



7



8



9



Cancel

Rule Belongs To Set

Scan a bar code below to select the set a rule belongs to. There are four possible rule sets. Refer to [Alternate Rule Sets](#) on page 13-4 for more information.



Rule Belongs To Set 1




Rule Belongs To Set 2



Rule Belongs To Set 3



Rule Belongs To Set 4



Actions

Select how to format the data for transmission.

Send Data

Scan the following bar codes to send all data that remains, send all data up to a specific character selected from the [Alphanumeric Keyboard](#) on page 13-80, or send the next N characters. N = any number from 1 to 254, selected from the [Alphanumeric Keyboard](#).



**Send Data Up To
Character**



Send All Data That Remains



Send Next Character



**Send Next
2 Characters**



**Send Next
3 Characters**



**Send Next
4 Characters**



**Send Next
5 Characters**

Send Data (continued)



**Send Next
6 Characters**



**Send Next
7 Characters**



**Send Next 8
Characters**



**Send Next
9 Characters**



**Send Next
10 Characters**



**Send Next
11 Characters**



**Send Next
12 Characters**




**Send Next
13 Characters**



**Send Next
14 Characters**



**Send Next
15 Characters**



Send Data (continued)



**Send Next
16 Characters**



**Send Next
17 Characters**



**Send Next
18 Characters**



**Send Next
19 Characters**




**Send Next
20 Characters**

Setup Field(s)

Table 13-1. Setup Field(s) Definitions

Parameter	Description	Page
Move Cursor		
Move Cursor To a Character	Scan the Move Cursor To Character bar code on page 13-28, then any printable ASCII character from the <i>Alphanumeric Keyboard</i> . When this is used, the cursor moves to the position after the matching character. If the character is not there, the rule fails and ADF tries the next rule.	13-28
Move Cursor to Start of Data	Scan this bar code to move cursor to the beginning of the data.	13-28
Move Cursor Past a Character	This parameter moves the cursor past all sequential occurrences of a selected character. For example, if the selected character is 'A', then the cursor moves past 'A', 'AA', 'AAA', etc. Scan the Move Cursor Past Character bar code on page 13-28, then select a character from the <i>Alphanumeric Keyboard</i> . If the character is not there, the cursor does not move (i.e., has no effect).	13-28
Skip Ahead "N" Characters	Scan one of these bar codes to select the number of positions ahead to move the cursor.	13-29
Skip Back "N" Characters	Scan one of these bar codes to select the number of positions back to move the cursor.	13-30
Send Preset Value	Send Values 1 through 6 by scanning the appropriate bar code from <i>Prefix/Suffix Values</i> on page 10-109. These values must be set using the prefix/suffix values in Table A-1 on page A-1 and Table A-2 on page A-7 . Value 2 = Scan Prefix Value 1= Scan Suffix 1 Value 3 = Scan Suffix 2	13-31



Move Cursor

Scan a bar code below to move the cursor in relation to a specified character. Then enter a character by scanning a bar code from the [Alphanumeric Keyboard](#) beginning on page 13-80.

Note: *If there is no match when the rule is interpreted and the rule fails, the next rule is checked.*



**Move Cursor To
Character**



Move Cursor To Start



**Move Cursor Past
Character**

Send Pause

Scan the bar code below to insert a pause in the transmission of data. The length of this pause is controlled by the value of the Pause Duration parameter.




Send Pause

Skip Ahead


Use the following bar codes to skip ahead characters.




**Skip Ahead
1 Character**




**Skip Ahead
2 Characters**



**Skip Ahead
3 Characters**



**Skip Ahead
4 Characters**




**Skip Ahead
5 Characters**



**Skip Ahead
6 Characters**



**Skip Ahead
7 Characters**




**Skip Ahead
8 Characters**



**Skip Ahead
9 Characters**



**Skip Ahead
10 Characters**



Skip Back

Use the following bar codes to skip back characters.



**Skip Back
1 Character**



**Skip Back
2 Characters**



**Skip Back
3 Characters**



**Skip Back
4 Characters**



**Skip Back
5 Characters**



**Skip Back
6 Characters**



**Skip Back
7 Characters**



**Skip Back
8 Characters**



**Skip Back
9 Characters**



**Skip Back
10 Characters**

Send Preset Value

Use these bar codes to send preset values. These values must be set using the prefix/suffix values in [Table A-1 on page A-1](#).



Send Value 1



Send Value 2




Send Value 3



Send Value 4



Send Value 5



Modify Data

The following bar codes modify data in the ways listed. The following actions work for all send commands that follow it within a rule. Programming *pad zeros to length 6, send next 3 characters, stop padding, send next 5 characters*, to add three zeros to the first send; the next send is unaffected by the padding. These options do not apply to **Send Keystroke** or **Send Preset Value**.

Remove All Spaces

To remove all spaces in the send commands that follow, scan this bar code.

Crunch All Spaces

To leave one space between words, scan this bar code. This also removes all leading and trailing spaces.

Stop Space Removal

Scan this bar code to disable space removal.

Remove Leading Zeros

Scan this bar code to remove all leading zeros.

Stop Zero Removal

Scan this bar code to disable the removal of zeros.

Use the bar codes below to modify data.



Remove All Spaces



Crunch All Spaces




Stop Space Removal



**Remove Leading
Zeros**



Stop Zero Removal



Pad Data with Spaces

To pad data to the left, scan the bar code containing the desired number of spaces. This parameter is activated by Send commands.



**Pad Spaces To
Length 1**



**Pad Spaces To
Length 2**



**Pad Spaces To
Length 3**



**Pad Spaces To
Length 4**



**Pad Spaces To
Length 5**



**Pad Spaces To
Length 6**



**Pad Spaces To
Length 7**



**Pad Spaces To
Length 8**

Pad Data with Spaces (continued)



**Pad Spaces To
Length 9**



**Pad Spaces To
Length 10**



**Pad Spaces To
Length 11**



**Pad Spaces To
Length 12**



**Pad Spaces To
Length 13**




**Pad Spaces To
Length 14**



**Pad Spaces To
Length 15**



**Pad Spaces To
Length 16**



Pad Data with Spaces (continued)



**Pad Spaces To
Length 17**



**Pad Spaces To
Length 18**



**Pad Spaces To
Length 19**



**Pad Spaces To
Length 20**



**Pad Spaces To
Length 21**



**Pad Spaces To
Length 22**



**Pad Spaces To
Length 23**



**Pad Spaces To
Length 24**

Pad Data with Spaces (continued)



**Pad Spaces To
Length 25**



**Pad Spaces To
Length 26**



**Pad Spaces To
Length 27**



**Pad Spaces To
Length 28**




**Pad Spaces To
Length 29**



**Pad Spaces To
Length 30**



Stop Pad Spaces



Pad Data with Zeros

To pad data to the left, scan the bar code containing the desired number of zeros. This parameter is activated by Send commands.



**Pad Zeros To
Length 1**



**Pad Zeros To
Length 2**



**Pad Zeros To
Length 3**



**Pad Zeros To
Length 4**



**Pad Zeros To
Length 5**



**Pad Zeros To
Length 6**



**Pad Zeros To
Length 7**



**Pad Zeros To
Length 8**

Pad Data with Zeros (continued)



**Pad Zeros To
Length 9**



**Pad Zeros To
Length 10**



**Pad Zeros To
Length 11**



**Pad Zeros To
Length 12**



**Pad Zeros To
Length 13**




**Pad Zeros To
Length 14**



**Pad Zeros To
Length 15**



**Pad Zeros To
Length 16**



Pad Data with Zeros (continued)



**Pad Zeros To
Length 17**



**Pad Zeros To
Length 18**



**Pad Zeros To
Length 19**



**Pad Zeros To
Length 20**



**Pad Zeros To
Length 21**



**Pad Zeros To
Length 22**



**Pad Zeros To
Length 23**



**Pad Zeros To
Length 24**

Pad Data with Zeros (continued)



**Pad Zeros To
Length 25**



**Pad Zeros To
Length 26**



**Pad Zeros To
Length 27**



**Pad Zeros To
Length 28**




**Pad Zeros To
Length 29**



**Pad Zeros To
Length 30**



Stop Pad Zeros



Beeps

Select a beep sequence for each ADF rule.



Beep Once



Beep Twice



Beep Three Times

Send Keystroke

Control Characters

Scan the bar code representing the keystroke you want to send.



Send Control 2



Send Control A



Send Control B



Send Control C



Send Control D




Send Control E



Send Control F



Send Control G



Control Characters (continued)



Send Control H



Send Control I



Send Control J



Send Control K



Send Control L



Send Control M



Send Control N



Send Control O

Control Characters (continued)



Send Control P



Send Control Q



Send Control R



Send Control S



Send Control T




Send Control U



Send Control V



Send Control W



Control Characters (continued)



Send Control X



Send Control Y



Send Control Z



Send Control [



Send Control \



Send Control]



Send Control 6



Send Control -

Keyboard Characters

Scan the bar code representing the keyboard character you want to send.



Send Space



Send !



Send "



Send #



Send \$




Send %



Send &



Send '



Keyboard Characters (continued)



Send (



Send)



Send *



Send +



Send ,



Send -



Send .



Send /

Keyboard Characters (continued)



Send 0



Send 1



Send 2



Send 3



Send 4




Send 5



Send 6



Send 7



Keyboard Characters (continued)



Send 8



Send 9



Send :



Send ;



Send <



Send =



Send >



Send ?

Keyboard Characters (continued)



Send @



Send A



Send B



Send C



Send D




Send E



Send F



Send G



Keyboard Characters (continued)



Send H



Send I



Send J



Send K



Send L



Send M



Send N



Send O

Keyboard Characters (continued)



Send P



Send Q



Send R



Send S



Send T




Send U



Send V



Send W



Keyboard Characters (continued)



Send X



Send Y



Send Z



Send [



Send \



Send]



Send ^



Send _

Keyboard Characters (continued)



Send `



Send a



Send b



Send c



Send d




Send e



Send f



Send g



Keyboard Characters (continued)



Send h



Send i



Send j



Send k



Send l



Send m



Send n



Send o

Keyboard Characters (continued)



Send p



Send q



Send r



Send s



Send t




Send u



Send v



Send w



Keyboard Characters (continued)



Send x



Send y



Send z



Send {



Send |



Send }



Send ~

Send ALT Characters

Scan the bar code representing the Alt character you want to send.



Send Alt 2



Send Alt A



Send Alt B



Send Alt C



Send Alt D




Send Alt E



Send Alt F



Send Alt G



Send ALT Characters (continued)



Send Alt H



Send Alt I



Send Alt J



Send Alt K



Send Alt L



Send Alt M



Send Alt N



Send Alt O

Send ALT Characters (continued)



Send Alt P



Send Alt Q



Send Alt R



Send Alt S



Send Alt T




Send Alt U



Send Alt V



Send Alt W



Send ALT Characters (continued)



Send Alt X



Send Alt Y



Send Alt Z



Send Alt [



Send Alt \



Send Alt]



Send Alt 6



Send Alt -

Send Keypad Characters

Scan the bar code representing the keypad character you want to send.



Send Keypad *



Send Keypad +



Send Keypad -



Send Keypad .



Send Keypad /



Send Keypad 0



Send Keypad 1




Send Keypad 2



Send Keypad 3



Send Keypad 4



Send Keypad Characters (continued)



Send Keypad 5



Send Keypad 6



Send Keypad 7



Send Keypad 8



Send Keypad 9



Send Keypad Enter



Send Keypad Numlock

Send Keypad Characters (continued)



Send Break Key



Send Delete Key



Send Page Up Key



Send End Key



Send Page Down Key



Send Pause Key



Send Scroll Lock Key




Send Backspace Key



Send Tab Key



Send Print Screen Key



Send Keypad Characters (continued)



Send Insert Key



Send Home Key



Send Enter Key



Send Escape Key



Send Up Arrow Key



Send Down Arrow Key



Send Left Arrow Key



Send Right Arrow Key

Send Function Key

Scan the bar code representing the function key you want to send.



Send F1 Key



Send F2 Key



Send F3 Key



Send F4 Key



Send F5 Key



Send F6 Key



Send F7 Key




Send F8 Key



Send F9 Key



Send F10 Key



Send Function Key (continued)



Send F11 Key



Send F12 Key



Send F13 Key



Send F14 Key



Send F15 Key



Send F16 Key



Send F17 Key



Send F18 Key



Send F19 Key



Send F20 Key

Send Function Key (continued)



Send F21 Key




Send F22 Key



Send F23 Key



Send F24 Key



Send Function Key (continued)



Send PF1 Key



Send PF2 Key



Send PF3 Key



Send PF4 Key



Send PF5 Key



Send PF6 Key



Send PF7 Key



Send PF8 Key



Send PF9 Key



Send PF10 Key

Send Function Key (continued)



Send PF11 Key



Send PF12 Key



Send PF13 Key



Send PF14 Key



Send PF15 Key



Send PF16 Key



Send PF17 Key




Send PF18 Key



Send PF19 Key



Send PF20 Key



Send Function Key (continued)



Send PF21 Key



Send PF22 Key



Send PF23 Key



Send PF24 Key



Send PF25 Key



Send PF26 Key



Send PF27 Key



Send PF28 Key




Send PF29 Key



Send PF30 Key

Send Right Control Key


The Send Right Control Key action sends a tap (press and release) of the Right Control Key.




Send Right Control Key

Send Graphic User Interface (GUI) Characters

The Send Graphic User Interface Character actions tap the specified key while holding the System Dependent Graphic User Interface (GUI) key. The definition of the Graphic User Interface key depends on the attached system:



Send GUI 0




Send GUI 1




Send GUI 2




Send GUI 3




Send Graphic User Interface (GUI) Characters (continued)




Send GUI 4



Send GUI 5



Send GUI 6



Send GUI 7



Send GUI 8




Send GUI 9


Send Graphic User Interface (GUI) Characters (continued)




Send GUI A




Send GUI B




Send GUI C




Send GUI D



Send GUI E




Send GUI F




Send Graphic User Interface (GUI) Characters (continued)




Send GUI G




Send GUI H




Send GUI I



Send GUI J




Send GUI K




Send GUI L


Send Graphic User Interface (GUI) Characters (continued)



Send GUI M



Send GUI N




Send GUI O




Send GUI P



Send GUI Q



Send GUI R



Send Graphic User Interface (GUI) Characters (continued)




Send GUI S




Send GUI T




Send GUI U




Send GUI V




Send GUI W



Send GUI X



Send GUI Y



Send GUI Z

Turn On/Off Rule Sets

Use these bar codes to turn rule sets on and off.



Turn On Rule Set 1



Turn On Rule Set 2



Turn On Rule Set 3



Turn On Rule Set 4



Turn Off Rule Set 1




Turn Off Rule Set 2



Turn Off Rule Set 3



Turn Off Rule Set 4



Alphanumeric Keyboard



Space



#



\$



%



*



+



-
(Dash)



.



/



!

Alphanumeric Keyboard (continued)



“



&



’



(



)



:



;




<



=



>



Alphanumeric Keyboard (continued)



?



@



[



\



]



^



(Underscore)



~

Alphanumeric Keyboard (continued)

Do not confuse bar codes on this page with those on the numeric keypad.



0



1



2



3



4



5



6




7



8



9



Alphanumeric Keyboard (continued)



A



B



C



D



E



F



G



H



I



J

Alphanumeric Keyboard (continued)



K



L



M



N



O



P



Q




R



S



T



Alphanumeric Keyboard (continued)



U



V



W



X



Y



Z



Cancel



End Of Message

Alphanumeric Keyboard (continued)



a



b



c



d



e



f



g




h



i



j



Alphanumeric Keyboard (continued)



k



l



m



n



o



p



q



r



s



t

Alphanumeric Keyboard (continued)



u



v



w



x



y



z



{




|




}



~



MS XX07 Series Integration Guide

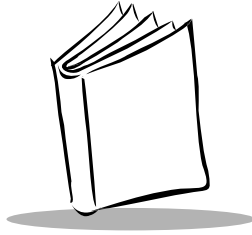

Chapter 14

Mounting Template

Overview

This chapter provides mounting templates for the MiniScan scanners. Copy the page with your MiniScan model's template to aid in mounting.

MS 1207FZY/MS 1207WA/MS 2207/MS 2207VHD Mounting Template


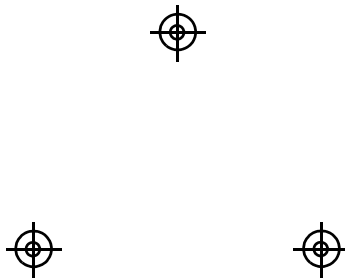


Figure 14-1. MS 1207FZY/MS 1207WA/MS 2207/MS 2207VHD Mounting Template



MS 3207 Mounting Template


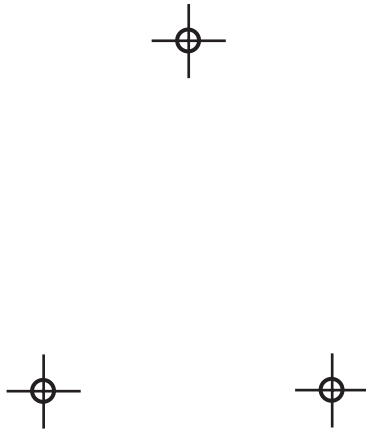


Figure 14-2. MS 3207 Mounting Template

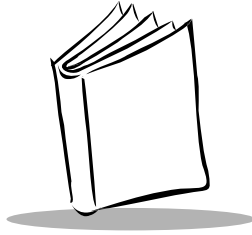

Appendix A

ASCII Character Sets

RS-232 ASCII Character Set

The values in [Table A-1](#) can be assigned as prefixes or suffixes for ASCII character data transmission in an RS-232 environment.

Table A-1. Prefix/Suffix Values

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1000	%U	NUL
1001	\$A	SOH
1002	\$B	STX
1003	\$C	ETX
1004	\$D	EOT
1005	\$E	ENQ
1006	\$F	ACK
1007	\$G	BELL
1008	\$H	BACKSPACE
1009	\$I	HORIZONTAL TAB
1010	\$J	LF/NEW LINE
1011	\$K	VT




Table A-1. Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1012	\$L	FF
1013	\$M	CR/ENTER
1014	\$N	SO
1015	\$O	SI
1016	\$P	DLE
1017	\$Q	DC1
1018	\$R	DC2
1019	\$S	DC3
1020	\$T	DC4
1021	\$U	NAK
1022	\$V	SYN
1023	\$W	ETB
1024	\$X	CAN
1025	\$Y	EM
1026	\$Z	SUB
1027	%A	ESC
1028	%B	FS
1029	%C	GS
1030	%D	RS
1031	%E	US
1032	Space	Space
1033	/A	!
1034	/B	"
1035	/C	#
1036	/D	\$
1037	/E	%

Table A-1. Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1038	/F	&
1039	/G	'
1040	/H	(
1041	/I)
1042	/J	*
1043	/K	+
1044	/L	,
1045	-	-
1046	.	.
1047	/O	/
1048	0	0
1049	1	1
1050	2	2
1051	3	3
1052	4	4
1053	5	5
1054	6	6
1055	7	7
1056	8	8
1057	9	9
1058	/Z	:
1059	%F	;
1060	%G	<
1061	%H	=
1062	%I	>
1063	%J	?




Table A-1. Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1064	%V	@
1065	A	A
1066	B	B
1067	C	C
1068	D	D
1069	E	E
1070	F	F
1071	G	G
1072	H	H
1073	I	I
1074	J	J
1075	K	K
1076	L	L
1077	M	M
1078	N	N
1079	O	O
1080	P	P
1081	Q	Q
1082	R	R
1083	S	S
1084	T	T
1085	U	U
1086	V	V
1087	W	W
1088	X	X
1089	Y	Y

Table A-1. Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1090	Z	Z
1091	%K	[
1092	%L	\
1093	%M]
1094	%N	^
1095	%O	_
1096	%W	`
1097	+A	a
1098	+B	b
1099	+C	c
1100	+D	d
1101	+E	e
1102	+F	f
1103	+G	g
1104	+H	h
1105	+I	i
1106	+J	j
1107	+K	k
1108	+L	l
1109	+M	m
1110	+N	n
1111	+O	o
1112	+P	p
1113	+Q	q
1114	+R	r
1115	+S	s




Table A-1. Prefix/Suffix Values (Continued)

Prefix/Suffix Value	Full ASCII Code 39 Encode Character	ASCII Character
1116	+T	t
1117	+U	u
1118	+V	v
1119	+W	w
1120	+X	x
1121	+Y	y
1122	+Z	z
1123	%P	{
1124	%Q	
1125	%R	}
1126	%S	~
1127		Undefined
7013		ENTER

USB ASCII Character Set

The values in [Table A-2](#) can be used for ASCII character data transmission in a USB environment.

Table A-2. USB ASCII Character Set

Prefix/ Suffix Value	Full ASCII Code 39 Encode Char.	Keystroke
1000	%U	CTRL 2
1001	\$A	CTRL A
1002	\$B	CTRL B
1003	\$C	CTRL C
1004	\$D	CTRL D
1005	\$E	CTRL E
1006	\$F	CTRL F
1007	\$G	CTRL G
1008	\$H	CTRL H / BACKSPACE*
1009	\$I	CTRL I / HORIZONTAL TAB*
1010	\$J	CTRL J
1011	\$K	CTRL K
1012	\$L	CTRL L
1013	\$M	CTRL M / ENTER*
1014	\$N	CTRL N
1015	\$O	CTRL O
1016	\$P	CTRL P
1017	\$Q	CTRL Q
1018	\$R	CTRL R
1019	\$S	CTRL S
1020	\$T	CTRL T

*The keystroke in bold is sent only if Function Key Mapping is enabled.

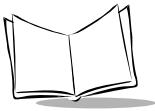


Table A-2. USB ASCII Character Set (Continued)

1021	\$U	CTRL U
1022	\$V	CTRL V
1023	\$W	CTRL W
1024	\$X	CTRL X
1025	\$Y	CTRL Y
1026	\$Z	CTRL Z
1027	%A	CTRL [/ ESC *
1028	%B	CTRL \
1029	%C	CTRL]
1030	%D	CTRL 6
1031	%E	CTRL -
1032	Space	Space
1033	/A	!
1034	/B	“
1035	/C	#
1036	/D	\$
1037	/E	%
1038	/F	&
1039	/G	‘
1040	/H	(
1041	/I)
1042	/J	*
1043	/K	+
1044	/L	,
1045	-	-
1046	.	.

*The keystroke in bold is sent only if Function Key Mapping is enabled.

Table A-2. USB ASCII Character Set (Continued)

1047	/o	/
1048	0	0
1049	1	1
1050	2	2
1051	3	3
1052	4	4
1053	5	5
1054	6	6
1055	7	7
1056	8	8
1057	9	9
1058	/Z	:
1059	%F	;
1060	%G	<
1061	%H	=
1062	%I	>
1063	%J	?
1064	%V	@
1065	A	A
1066	B	B
1067	C	C
1068	D	D
1069	E	E
1070	F	F
1071	G	G
1072	H	H
*The keystroke in bold is sent only if Function Key Mapping is enabled.		




Table A-2. USB ASCII Character Set (Continued)

1073	I	I
1074	J	J
1075	K	K
1076	L	L
1077	M	M
1078	N	N
1079	O	O
1080	P	P
1081	Q	Q
1082	R	R
1083	S	S
1084	T	T
1085	U	U
1086	V	V
1087	W	W
1088	X	X
1089	Y	Y
1090	Z	Z
1091	%K	[
1092	%L	\
1093	%M]
1094	%N	^
1095	%O	_
1096	%W	`
1097	+A	a
1098	+B	b

*The keystroke in bold is sent only if Function Key Mapping is enabled.

Table A-2. USB ASCII Character Set (Continued)

1099	+C	c
1100	+D	d
1101	+E	e
1102	+F	f
1103	+G	g
1104	+H	h
1105	+I	i
1106	+J	j
1107	+K	k
1108	+L	l
1109	+M	m
1110	+N	n
1111	+O	o
1112	+P	p
1113	+Q	q
1114	+R	r
1115	+S	s
1116	+T	t
1117	+U	u
1118	+V	v
1119	+W	w
1120	+X	x
1121	+Y	y
1122	+Z	z
1123	%P	{
1124	%Q	
*The keystroke in bold is sent only if Function Key Mapping is enabled.		




Table A-2. USB ASCII Character Set (Continued)

1125	%R	}
1126	%S	~
ALT Keys	Keystroke	
2064	ALT 2	
2065	ALT A	
2066	ALT B	
2067	ALT C	
2068	ALT D	
2069	ALT E	
2070	ALT F	
2071	ALT G	
2072	ALT H	
2073	ALT I	
2074	ALT J	
2075	ALT K	
2076	ALT L	
2077	ALT M	
2078	ALT N	
2079	ALT O	
2080	ALT P	
2081	ALT Q	
2082	ALT R	
2083	ALT S	
2084	ALT T	
2085	ALT U	
2086	ALT V	
*The keystroke in bold is sent only if Function Key Mapping is enabled.		

Table A-2. USB ASCII Character Set (Continued)

2087	ALT W
2088	ALT X
2089	ALT Y
2090	ALT Z
GUI Shift Keys The Apple™ iMac keyboard has an apple key on either side of the space bar. Windows-based systems have a GUI key to the left of the left ALT key, and to the right of the right ALT key.	
Other Value	Keystroke
3000	Right Control Key
3048	GUI 0
3049	GUI 1
3050	GUI 2
3051	GUI 3
3052	GUI 4
3053	GUI 5
3054	GUI 6
3055	GUI 7
3056	GUI 8
3057	GUI 9
3065	GUI A
3066	GUI B
3067	GUI C
3068	GUI D
3069	GUI E
3070	GUI F
3071	GUI G
3072	GUI H
*The keystroke in bold is sent only if Function Key Mapping is enabled.	




Table A-2. USB ASCII Character Set (Continued)

3073	GUI I
3074	GUI J
3075	GUI K
3076	GUI L
3077	GUI M
3078	GUI N
3079	GUI O
3080	GUI P
3081	GUI Q
3082	GUI R
3083	GUI S
3084	GUI T
3085	GUI U
3086	GUI V
3087	GUI W
3088	GUI X
3089	GUI Y
3090	GUI Z
F Keys	Keystroke
5001	F1
5002	F2
5003	F3
5004	F4
5005	F5
5006	F6
5007	F7
*The keystroke in bold is sent only if Function Key Mapping is enabled.	

Table A-2. USB ASCII Character Set (Continued)

5008	F8
5009	F9
5010	F10
5011	F11
5012	F12
5013	F13
5014	F14
5015	F15
5016	F16
5017	F17
5018	F18
5019	F19
5020	F20
5021	F21
5022	F22
5023	F23
5024	F24
Keypad	Keystroke
6042	*
6043	+
6044	undefined
6045	-
6046	.
6047	/
6048	0
6049	1
*The keystroke in bold is sent only if Function Key Mapping is enabled.	





Table A-2. USB ASCII Character Set (Continued)


6050	2
6051	3
6052	4
6053	5
6054	6
6055	7
6056	8
6057	9
6058	Enter
6059	Num Lock
Extended Keypad	Keystroke
7001	Break
7002	Delete
7003	PgUp
7004	End
7005	Pg Dn
7006	Pause
7007	Scroll Lock
7008	Backspace
7009	Tab
7010	Print Screen
7011	Insert
7012	Home
7013	Enter
7014	Escape
7015	Up Arrow
*The keystroke in bold is sent only if Function Key Mapping is enabled.	

Table A-2. USB ASCII Character Set (Continued)

7016	Down Arrow
7017	Left Arrow
7018	Right Arrow
*The keystroke in bold is sent only if Function Key Mapping is enabled.	

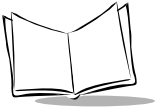


MS XX07 Series Integration Guide

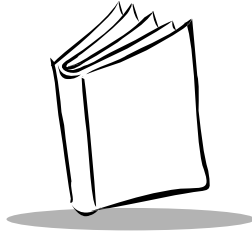


Glossary

Aperture	An opening which limits the amount of light or radiation passing through an optical system.
ASCII	American Standard Code for Information Interchange. A 7 bit-plus-parity code representing 128 letters, numerals, punctuation marks, and control characters. It is a standard data transmission code in the U.S.
Autodiscrimination	The ability of an interface controller to determine the code type of a scanned bar code. After this determination is made, the information content can be decoded.
Bar	The dark element in a printed bar code symbol.
Bar Code Density	The number of characters represented per unit of measurement (e.g., characters per inch).
Bar Height	The dimension of a bar measured perpendicular to the bar width.
Bar Width	Thickness of a bar measured from the edge closest to the symbol start character to the trailing edge of the same bar.
Baud Rate	A measure of the data flow or number of signaling events occurring per second. When one bit is the standard “event,” this is a measure of bits per second (bps). For example, a baud rate of 50 means transmission of 50 bits of data per second.
Bit	Binary digit. One bit is the basic unit of binary information. Generally, eight consecutive bits compose one byte of data. The pattern of 0 and 1 values within the byte determines its meaning.

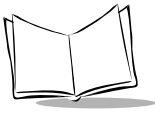


Byte	On an addressable boundary, eight adjacent binary digits (0 and 1) combined in a pattern to represent a specific character or numeric value. Bits are numbered from the right, 0 through 7, with bit 0 the low-order bit. One byte in memory can be used to store one ASCII character.
CDRH	Center for Devices and Radiological Health. A federal agency responsible for regulating laser product safety. This agency specifies various laser operation classes based on power output during operation.
CDRH Class I	This is the lowest power CDRH laser classification. CDRH Class I devices are safe under reasonably foreseeable conditions of operation. Software and other controls to limit exposure to laser light may be required to achieve CDRH Class I operation. The CDRH time base for Class I devices is 10,000 seconds.
CDRH Class II	CDRH Class II devices may not emit more than 1 milliwatt average radiant power. Eye protection for CDRH Class II devices is normally afforded by aversion responses, including the blink reflex.
Character	A pattern of bars and spaces which either directly represents data or indicates a control function, such as a number, letter, punctuation mark, or communications control contained in a message.
Character Set	Those characters available for encodation in a particular bar code symbology.
Check Digit	A digit used to verify a correct symbol decode. The scanner inserts the decoded data into an arithmetic formula and checks that the resulting number matches the encoded check digit. Check digits are required for UPC but are optional for other symbologies. Using check digits decreases the chance of substitution errors when a symbol is decoded.
CLSI Editing	An option which inserts a space after the 1st, 5th, and 10th characters of a 14-character Codabar symbol. Length does not include start and stop characters.
Codabar	A discrete self-checking code with a character set consisting of digits 0 to 9 and six additional characters: (- \$: / , +).
Code 128	A high density symbology which allows the controller to encode all 128 ASCII characters without adding extra symbol elements.

Code 3 of 9 (Code 39)	A versatile and widely used alphanumeric bar code symbology with a set of 43 character types, including all uppercase letters, numerals from 0 to 9, and 7 special characters (- . / + % \$ and space). The code name is derived from the fact that 3 of 9 elements representing a character are wide, while the remaining 6 are narrow.
Code 93	An industrial symbology compatible with Code 39 but offering a full character ASCII set and a higher coding density than Code 39.
Code Length	Number of data characters in a bar code between the start and stop characters, not including those characters.
Continuous Code	A bar code or symbol in which all spaces within the symbol are parts of characters. There are no intercharacter gaps in a continuous code. The absence of gaps allows for greater information density.
CTS	Clear to send.
Dead Zone	An area within a scanner's field of view, in which specular reflection may prevent a successful decode.
Decode	To recognize a bar code symbology (e.g., UPC/EAN) and then analyze the content of the specific bar code scanned.
Decode Algorithm	A decoding scheme that converts pulse widths into data representation of the letters or numbers encoded within a bar code symbol.
Depth of Field	The range between minimum and maximum distances at which a scanner can read a symbol with a certain minimum element width.
Digitized Bar Pattern (DBP)	A digital representation of a decoded bar code.
Discrete 2 of 5	A binary bar code symbology representing each character by a group of five bars, two of which are wide. The location of wide bars in the group determines which character is encoded; spaces are insignificant. Only numeric characters (0 to 9) and START/STOP characters may be encoded.
Discrete Code	A bar code or symbol in which the spaces between characters (intercharacter gaps) are not part of the code.

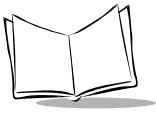


EAN	European Article Number. This European/International version of the UPC provides its own coding format and symbology standards. Element dimensions are specified metrically. EAN is used primarily in retail.
Element	Generic term for a bar or space.
Encoded Area	Total linear dimension occupied by all characters of a code pattern, including start/stop characters and data.
Host Computer	A computer that serves other terminals in a network, providing such services as computation, database access, supervisory programs, and network control.
IEC	International Electrotechnical Commission. This international agency regulates laser safety by specifying various laser operation classes based on power output during operation.
IEC 60825 Class 1	This is the lowest power IEC laser classification. IEC Class 1 devices are safe under reasonably foreseeable conditions of operation. Software and other controls to limit exposure to laser light may be required to achieve IEC Class 1 operation. The IEC time base for Class 1 devices is 100 seconds if intentional viewing of laser light is not required in the design or function of the device. The IEC time base for Class 1 devices is 30,000 seconds where intentional viewing of laser light is inherent in the design or function of the device.
IEC 60825 Class 2	IEC Class 2 devices may not emit more than 1 milliwatt average radiant power. Eye protection for IEC Class 2 devices is normally afforded by aversion responses, including the blink reflex.
Intercharacter Gap	The space between two adjacent bar code characters in a discrete code.
Interleaved Bar Code	A bar code in which characters are paired together, using bars to represent the first character and the intervening spaces to represent the second.
Interleaved 2 of 5	A binary bar code symbology representing character pairs in groups of five bars and five interleaved spaces. Interleaving provides for greater information density. The location of wide elements (bar/spaces) within each group determines which characters are encoded. This continuous code type uses no intercharacter spaces. Only numeric (0 to 9) and START/STOP characters may be encoded.

LASER - Light Amplification by Stimulated Emission of Radiation	The laser is an intense light source. Light from a laser is all the same frequency, unlike the output of an incandescent bulb. Laser light is typically coherent and has a high energy density.
Laser Diode	A gallium-arsenide semiconductor type of laser connected to a power source to generate a laser beam. This laser type is a compact source of coherent light.
LED Indicator	A semiconductor diode (LED - Light Emitting Diode) used as an indicator, often in digital displays. The semiconductor uses applied voltage to produce light of a certain frequency determined by the semiconductor's particular chemical composition.
MIL	1 mil = 1 thousandth of an inch.
Misread (Misdecode)	A condition which occurs when the data output of a reader or interface controller does not agree with the data encoded within a bar code symbol.
MSI Plessey	A numeric-only bar code type. MSI Plessey consists of four bars and four adjacent spaces. Each bar/space pair consists of one information bit. A zero bit consists of a narrow bar followed by a wide space, while one bit consist of a wide bar followed by a narrow bar. The zero bit is one unit bar followed by a two-unit space and the one bit is a two-unit bar followed by a one unit space. The primary application for the MSI Plessey code is marking of retail shelves and subsequent scanning with portable devices for inventory purposes.
Nominal	The exact (or ideal) intended value for a specified parameter. Tolerances are specified as positive and negative deviations from this value.
Nominal Size	Standard size for a bar code symbol. Most UPC/EAN codes can be used over a range of magnifications (e.g., from 0.80 to 2.00 of nominal).
NOTIS Editing	An option that strips the start and stop characters from a decoded Codabar symbol.
Parameter	A variable that can have different values assigned to it.
Percent Decode	The average probability that a single scan of a bar code would result in a successful decode. In a well-designed bar code scanning system, that probability should approach near 100%.

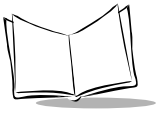


Print Contrast Signal (PCS)	Measurement of the contrast (brightness difference) between the bars and spaces of a symbol. A minimum PCS value is needed for a bar code symbol to be scannable. $PCS = (R_L - R_D) / R_L$, where R_L is the reflectance factor of the background and R_D the reflectance factor of the dark bars.
Programming Mode	The state in which a scanner is configured for parameter values. See <i>Scanning Mode</i> .
Quiet Zone	A clear space, containing no dark marks, which precedes the start character of a bar code symbol and follows the stop character.
Random Access Memory (RAM)	Memory devices where any location in memory can be accessed as quickly as any other location.
Reflectance	Amount of light returned from an illuminated surface.
Resolution	The narrowest element dimension which can be distinguished by a particular reading device or printed with a particular device or method.
RTS	Request to send.
RSS	Reduced Space Symbology: A family of space efficient symbologies developed by UCC.EAN.
RxD	Received data.
Scan Area	Area intended to contain a symbol.

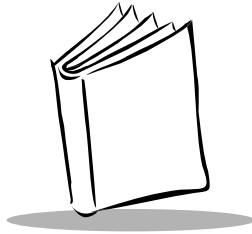

Index

A

accessories	2-16
actions	13-3
ADF	13-1
actions	13-1, 13-24
move cursor	13-28
send data	13-24
setup fields	13-27
alphanumeric keyboard	13-80
alternate rule sets	13-4
bar code menu example	13-3
beep	13-42
code lengths	13-15
code types	13-12
criteria	13-1, 13-12
default rules	13-7
move cursor past a character	13-27
move cursor to a character	13-27
move cursor to start of data	13-27
numeric keypad	13-22
pad spaces	13-34
pad zeros	13-38
rules	13-1
rules hierarchy	13-6
send alt characters	13-59
send control characters	13-43
send function key	13-67
send keyboard characters	13-47
send keypad characters	13-63
send preset value	13-27
send value	13-31
skip ahead characters	13-29
skip ahead "n" characters	13-27
skip back characters	13-30
skip back "n" characters	13-27
space removal	13-32
special commands	13-8
specific data string	13-20
specific string	
any location	13-21
any message ok	13-21
at start	13-20
rule belongs to set	13-23
turn off rule sets	13-79
zero removal	13-32
advanced data formatting	13-1
actions	13-1, 13-24
alphanumeric keyboard	13-80
alternate rule sets	13-4
bar code menu example	13-3
beep	13-42
code lengths	13-15
code types	13-12
criteria	13-1, 13-12
default rules	13-7
numeric keypad	13-22
pad spaces	13-34
pad zeros	13-38
rules	13-1
rules hierarchy	13-6
send alt characters	13-59
send control characters	13-43
send function key	13-67
send keyboard characters	13-47
send keypad characters	13-63
send preset value	13-31
setup fields	13-27
skip ahead characters	13-29

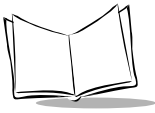

- skip back characters 13-30
- space removal 13-32
- special commands 13-8
- specific data string 13-20
- turn off rule sets 13-79
- zero removal 13-32
- aiming modes 10-19
- applications 1-3
 - fixed mount 1-3
 - OEM 1-3
- ASCII character set A-1
- assembling stand 2-4

B

- bar codes
 - data options
 - pause duration 13-8
 - RS-232
 - baud rate 11-8
 - beep on bel 11-20
 - check receive errors 11-13
 - data bits 11-12
 - default table 11-2
 - hardware handshaking 11-14
 - host serial response time-out .. 11-19
 - host types 11-6
 - intercharacter delay 11-21
 - parity 11-10
 - RTS line state 11-20
 - software handshaking 11-16
 - stop bit select 11-20
 - scan angle 10-15
 - set defaults 10-1
 - USB
 - caps lock override 12-9
 - country keyboard types 12-5
 - default table 12-3
 - device type 12-4
 - keystroke delay 12-8
 - unknown characters 12-10
- beeper
 - definitions 3-8
- beeper definitions 3-8

- block diagram 1-4
- bracket
 - mounting scanner 2-6

C

- code types
 - ADF 13-12
- codewords 10-117
 - transmit unknown 10-119
- conveyor applications
 - applications
 - conveyor 2-13

D

- decode zone
 - MS 1207FZY 4-8
 - MS 1207WA 5-9
 - MS 2207 6-9
 - MS 2207VHD 7-8
 - MS 3207 8-9
- default parameters 10-2
 - RS-232 11-2
 - USB 12-3
- default table 10-2
- dimensions
 - MS 1207FZY 4-6
 - MS 1207WA 5-7
 - MS 2207 6-7
 - MS 2207VHD 7-6
 - MS 3207 8-7

E

- ECI
 - decoder 10-122
 - delete character set ECIs 10-121
- electrical interface
 - MS 1207FZY 4-2
 - MS 1207WA 5-2
 - MS 2207 6-2
 - MS 2207VHD 7-2
 - MS 3207 8-2
- escape characters 10-120

H

host types	
RS-232	11-6
humidity	
MS 1207FZY	4-6
MS 1207WA	5-7
MS 2207	6-7
MS 2207VHD	7-6
MS 3207	8-7

I

information, service	xiii
installation	2-1
connecting MiniScan	2-8
location	2-10
mechanical drawing	
MS 1207FZY	4-3
MS 1207WA	5-4
MS 2207	6-4
MS 2207VHD	7-3
MS 3207	8-4
mounting	2-2
mounting scanner on bracket	2-6
mounting scanner on stand	2-4
mounting stand	2-5
stand	2-4
interface pin-outs	4-2, 5-2, 6-2, 7-2, 8-2

L

laser class	
MS 1207FZY	4-6
MS 1207WA	5-7
MS 2207	6-7
MS 2207VHD	7-6
MS 3207	8-7
laser power	
MS 1207FZY	4-5
MS 1207WA	5-6
MS 2207	6-6
MS 2207VHD	7-5
MS 3207	8-6
LED	
definitions	3-8

M


macro PDF	
delete character set ECIs	10-121
ECI decoder	10-122
escape characters	10-120
last blocker marker	10-131
transmit addressee	10-127
transmit block count	10-124
transmit checksum	10-128
transmit file name	10-123
transmit filesize	10-129
transmit macro PDF control header	10-130
transmit sender	10-126
transmit symbols in codeword	
format	10-117
transmit time stamp	10-125
transmit unknown codewords	10-119
transmit user-selected fields	10-123
maintenance	9-1
mechanical drawing	
MS 1207FZY	4-3
MS 1207WA	5-4
MS 2207	6-4
MS 2207VHD	7-3
MS 3207	8-4
mounting	2-2
mounting bracket	2-6
mounting template	14-1, 14-2

N

notational conventions	xii
------------------------	-----

O

operational parameters	10-1
overview	
MS 1207FZY	4-1
MS 1207WA	5-1
MS 2207	6-1
MS 2207VHD	7-1
MS 3207	8-1



P

parameters

RS-232 11-4

USB 12-4

parameters, operational 10-1

power requirements

MS 1207FZY 4-5

MS 1207WA 5-6

MS 2207 6-6

MS 2207VHD 7-5

MS 3207 8-6

print contrast

MS 1207FZY 4-5

MS 1207WA 5-6

MS 2207 6-6

MS 2207VHD 7-5

MS 3207 8-6

programming bar codes

aiming mode 10-19

beep after good decode 10-22

beeper frequency adjustment 10-13

beeper tone 10-12

beeper volume 10-11

bi-directional redundancy 10-27

cancel 10-134

Codabar 10-84

CLSI editing 10-87

enable/disable 10-84

length 10-85

NOTIS editing 10-88

Code 11 10-70

check digit verification 10-73

lengths 10-71

transmit check digit 10-74

Code 128 10-51

decode performance 10-54

lengths 10-53

UCC/EAN-128 10-52

Code 128 emulation 10-98

Code 39 10-56

check digit verification 10-62

Code 39 full ASCII 10-64

decode performance 10-65

lengths 10-60

transmit check digit 10-63

Trioptic Code 39 10-57

Code 93

lengths 10-68

composite CC-A/B 10-103

composite CC-C 10-103

convert RSS to UPC/EAN 10-102

delete character set ECIs 10-121

Discrete 2 of 5

lengths 10-82

ECI decoder 10-122

escape characters 10-120

event reporting 10-113–10-116

boot up event 10-115

decode event 10-114

parameter event 10-116

Interleaved 2 of 5 10-75

check digit verification 10-78

convert I 2 of 5 to EAN-13 10-80

lengths 10-76

transmit check digit 10-79

ISBT 128

enable/disable 10-53

laser on time 10-14

last blocker marker 10-131

linear code type security 10-25–10-26

linear UPC/EAN decode 10-49

MicroPDF417 10-96

performance 10-97

MSI plessey 10-89

check digit algorithm 10-94

check digits 10-92

lengths 10-90

transmit check digit 10-93

numeric bar codes 10-132–10-134

PDF417 10-95

power mode 10-16

prefix/suffix values 10-109

programmable raster size/

expansion 10-20

RSS-14 10-99

RSS-Limited 10-101

scan data transmission format 10-111

scanning mode 10-18

set defaults	10-10
timeout between decodes	10-21
transmit addressee	10-127
transmit block count	10-124
transmit checksum	10-128
transmit code ID character	10-107
transmit file name	10-123
transmit filesize	10-129
transmit macro PDF control header	10-130
transmit macro PDF user-selected fields	10-123
transmit no read message	10-23, 10-24
transmit sender	10-126
transmit symbols in codeword format	10-117
transmit time stamp	10-125
transmit unknown codewords	10-119
trigger modes	10-17
UPC composite mode	10-106
UPC half block stitching	10-50
UPC/EAN	10-28
bookland EAN	10-33
convert UPC-E to UPC-A	10-44
convert UPC-E1 to UPC-A	10-45
coupon code	10-34
decode supplementals	10-35
EAN zero extend	10-46
EAN-13	10-32
EAN-8	10-31
security level	10-47
supplemental redundancy	10-37
supplementals	10-36
UPC-A	10-28
UPC-A check digit	10-38
UPC-A preamble	10-41
UPC-E	10-29
UPC-E check digit	10-39
UPC-E preamble	10-42
UPC-E1	10-30
UPC-E1 check digit	10-40
UPC-E1 preamble	10-43

R


RS-232 default parameters	11-2
RS-232 parameters	11-4, 11-6

S

scan angle	
MS 1207FZY	4-5
MS 1207WA	5-6
MS 2207	6-6
MS 2207VHD	7-5
MS 3207	8-6
scan patterns	
cyclone omnidirectional	3-4
high density single scan line	3-2
raster	3-1, 3-2
single scan line	3-1
scan rate	
MS 1207FZY	4-5
scanning modes	10-18
scanning tips	3-5
service information	xiii
setup	
connecting a USB interface	12-2
skew, pitch and roll	5-8, 6-8, 7-7, 8-8
MS 1207FZY	4-7
stand	
mounting	2-5
mounting scanner	2-4

T

technical specifications	
MS 1207FZY	4-5
MS 1207WA	5-6
MS 2207	6-6
MS 2207VHD	7-5
MS 3207	8-6
temperature	
MS 1207FZY	4-6
MS 1207WA	5-7
MS 2207	6-7
MS 2207VHD	7-6
MS 3207	8-7
triggering	



host 3-6
troubleshooting 9-1

U

USB connection 12-2
USB default parameters 12-3
USB parameters 12-4

W

weight
MS 1207FZY 4-6
MS 1207WA 5-7
MS 2207 6-7
MS 2207VHD 7-6
MS 3207 8-7

Tell Us What You Think...

We'd like to know what you think about this Manual. Please take a moment to fill out this questionnaire and fax this form to: (631) 738-3318, or mail to:

Symbol Technologies, Inc.
One Symbol Plaza M/S B-4
Holtsville, NY 11742-1300
Attention: Technical Publications Manager

IMPORTANT: If you need product support, please call the appropriate customer support number provided. Unfortunately, we cannot provide customer support at the fax number above.

User's Manual Title: _____
(please include revision level)

How familiar were you with this product before using this manual?

Very familiar Slightly familiar Not at all familiar

Did this manual meet your needs? If not, please explain.

What topics need to be added to the index, if applicable?

What topics do you feel need to be better discussed? Please be specific.

What can we do to further improve our manuals?

Thank you for your input—We value your comments.

MS XX07 Series Integration Guide



72-67135-01
Revision A — February 2004